



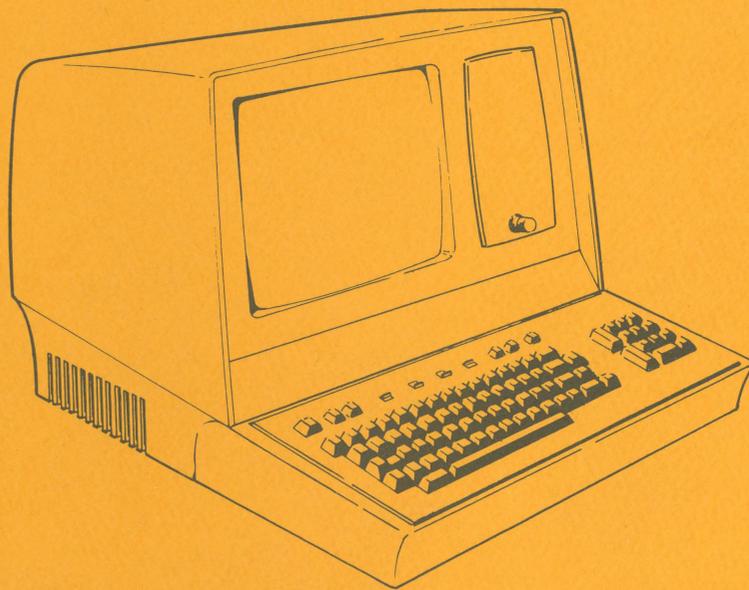

**CDC<sup>®</sup> 752**  
**KEYBOARD DISPLAY TERMINAL**

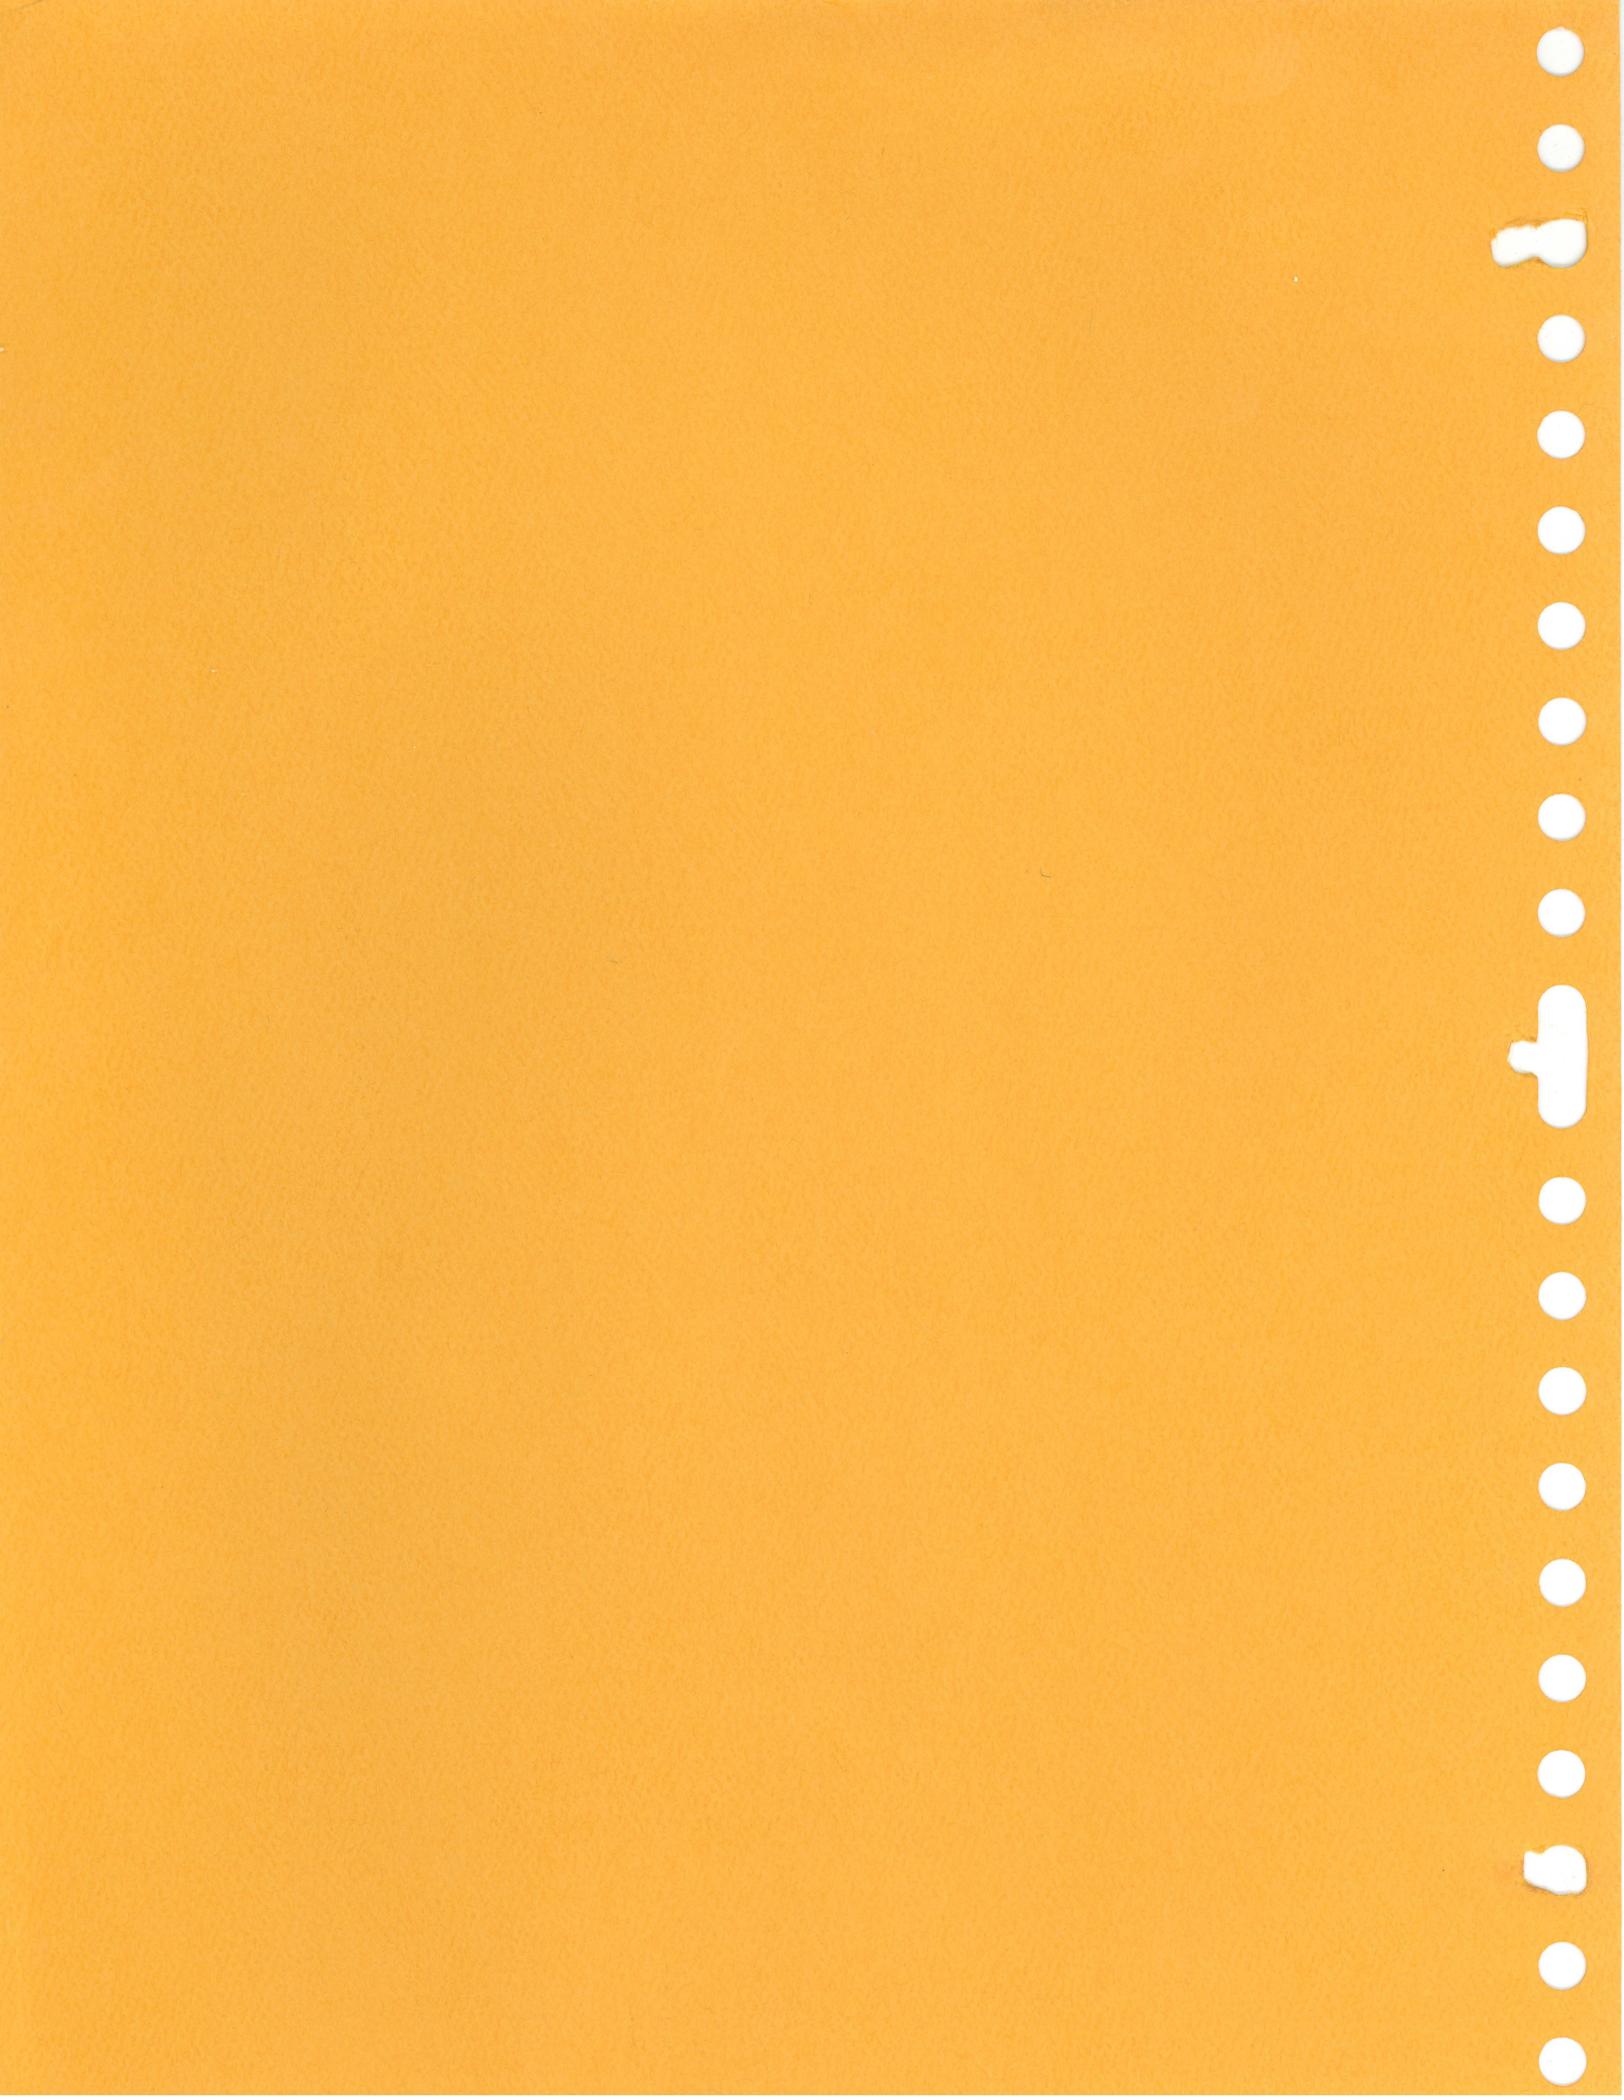



## UPDATES

Send us this page to keep your manual up-to-date!

When you receive this manual fill in this coupon and mail it to us. This ensures that you will automatically receive updates to your manual as soon as they are published. A modular pagination scheme is now in use so that these update pages will not interrupt the continuity of your manual. If extensive revisions are involved you will receive a new manual.

Mail to: Control Data Corporation  
Technical Publications Department  
2401 North Fairview Avenue  
St. Paul, Minnesota 55113

Place me on your list to receive update pages for my copy of the following manual:

Manual Title \_\_\_\_\_

Publication No. \_\_\_\_\_ Revision \_\_\_\_\_

FROM: Name \_\_\_\_\_

Address \_\_\_\_\_

## CONSERVE

Paper is high on the list of endangered by-products. If you no longer require these updates — please complete this form and mail to:

Control Data Corporation  
Technical Publications Department  
2401 North Fairview Avenue  
St. Paul, Minnesota 55113

Manual Title \_\_\_\_\_

Publication No. \_\_\_\_\_ Revision \_\_\_\_\_

FROM: Name \_\_\_\_\_

Address \_\_\_\_\_

## CHANGE OF ADDRESS

If you are automatically receiving updates to this manual and have changed your address — please complete this form and mail to:

Control Data Corporation  
Technical Publications Department  
2401 North Fairview Avenue  
St. Paul, Minnesota 55113

Old Address: Name \_\_\_\_\_

Address \_\_\_\_\_

New Address: Name \_\_\_\_\_

Address \_\_\_\_\_

Manual Title \_\_\_\_\_

Publication No. \_\_\_\_\_ Revision \_\_\_\_\_

# UPDATES

Please use this page to receive update pages for any copies of the following manual:

Manual Title: \_\_\_\_\_

Publication No.: \_\_\_\_\_

FROM: Name: \_\_\_\_\_

Address: \_\_\_\_\_

Send us this page to keep your manual up-to-date!

When you receive this manual fill in the coupon and mail it to us. This ensures that you will automatically receive updates to your manual as soon as they are published. A request registration coupon is now in use so that those update pages will not interrupt the continuity of your manual. In exceptional situations and involved you will receive a new manual.

Mail to: Control Data Corporation  
 Technical Publications Department  
 3901 North Parkview Avenue  
 St. Paul, Minnesota 55110

# CONSERVE

Manual Title: \_\_\_\_\_

Publication No.: \_\_\_\_\_

FROM: Name: \_\_\_\_\_

Address: \_\_\_\_\_

Pages in this or the list of independent publications. If you no longer require these updates, please complete this form and mail to:

Control Data Corporation  
 Technical Publications Department  
 3901 North Parkview Avenue  
 St. Paul, Minnesota 55110

# CHANGE OF ADDRESS

Old Address: Name: \_\_\_\_\_

Address: \_\_\_\_\_

New Address: Name: \_\_\_\_\_

Address: \_\_\_\_\_

If you are not actually receiving updates to this manual and have changed your address, please complete this form and mail to:

Control Data Corporation  
 Technical Publications Department  
 3901 North Parkview Avenue  
 St. Paul, Minnesota 55110

Manual Title: \_\_\_\_\_

Publication No.: \_\_\_\_\_





# MANUAL TO EQUIPMENT LEVEL CORRELATION

This manual reflects the equipment configurations listed below.

**EXPLANATION:** Locate the equipment type and series number, as shown on the equipment FCO log, in the list below. Immediately to the right of the series number is an FCO number. If that number and all of the numbers underneath it match all of the numbers on the equipment FCO log, then this manual accurately reflects the equipment.

EQUIPMENT TYPE	SERIES	WITH FCO'S	COMMENTS
CC555-A	A01	—	ECO 10653 (Release ECO)
CC555-B	A01	—	ECO 10653 (Release ECO)

01987-2

 
# MANUAL TO EQUIPMENT LEVEL CORRELATION (CONTD)

EQUIPMENT TYPE	SERIES	WITH FCO'S	COMMENTS
CC555-C	A01	—	ECO 16053 (Release ECO)
CC555-D	A01	—	ECO 10653 (Release ECO)

01987-3

## MANUAL TO EQUIPMENT LEVEL CORRELATION (CONTD)

EQUIPMENT TYPE	SERIES	WITH FCO'S	COMMENTS
CC555-E	A01	—	ECO 10656 (Release ECO)
CC555-F	A01	—	ECO 10653 (Release ECO)
CA150-A	A01	---	ECO N/A
CA150-B	A01	---	ECO N/A
CA150-C	A01	---	ECO N/A
CA150-D	A01	---	ECO N/A



# LIST OF EFFECTIVE PAGES

New features, as well as changes, deletions, and additions to information in this manual are indicated by bars in the margins or by a dot near the page number if the entire page is affected. A bar by the page number indicates pagination rather than content has changed.

PAGE	SFC †	REV
Front Cover		-
Title Sheet		-
Updates Sheet		-
v		B
vi		A
vii		A
viii		A
ix		B
x		A
xi		A
xii		A
xiii		A
xiv		A
xv		B
xvi		A
xvii		B
xviii		A
xix		A
xx		A
xxi		A
xxii		A
xxiii		A
xxiv		B
xxv		A
xxvi		A
xxvii		A

PAGE	SFC †	REV
xxviii		A
1-1		A
1-2		A
1-3		A
1-4		A
1-5		A
1-6		A
1-7		A
1-8		A
1-9		A
1-10		A
1-11		A
1-12		A
1-13		A
1-14		A
1-15		A
1-16		A
1-17		A
1-18		A
1-19		A
2-1		A
3-1		A
4-1		A
4-2		A
4-3		A
4-4		A

PAGE	SFC †	REV
4-5		A
4-6		A
4-7		A
4-8		A
4-9		A
4-10		A
4-11		A
4-12		A
4-13		A
4-14		A
4-15		A
4-16		A
4-17		A
4-18		A
4-19		A
4-20		A
4-21		A
5-1		A
5-2		A
5-3		A
5-4		A
5-5		A
5-6		A
5-7		A
5-8		A
5-9		A

† SFC Software Feature Change

## LIST OF EFFECTIVE PAGES (CONTD)

PAGE	SFC †	REV
5-10		A
5-11		A
5-12		A
5-13		A
5-14		A
5-15		A
5-16		A
5-17		A
5-18		A
5-19		A
5-20		A
5-21		A
5-22		A
5-23		A
5-24		A
5-25		A
5-26		A
5-27		A
5-28		A
5-29		A
5-30		A
5-31		A
5-32		A
5-33		A
5-34		A
5-35		A
5-36		A
5-37		A
5-38		A

PAGE	SFC †	REV
5-39		A
5-40		A
5-41		A
5-42		A
5-43		A
5-44		A
5-45		A
5-46		A
5-47-		A
5-48		A
5-49		A
5-50		A
5-51		A
5-52		A
5-53		A
5-54		A
5-55		A
5-56		A
5-57		A
5-58		A
5-59		A
5-60		A
6-1		A
6-2		A
6-3		A
6-4		A
6-5		A
6-6		A
6-7		A

PAGE	SFC †	REV
6-8		A
6-9		A
6-10		A
6-11		A
6-12		A
6-13		A
6-14		A
6-15		A
6-16		A
6-17		A
6-18		A
6-19		A
6-20		A
6A-1		A
6A-2		A
6A-3		A
6A-4		A
6A-5		A
6A-6		A
6A-7		A
6A-8		A
6A-9		A
6A-10		A
6A-11		A
6A-12		A
6A-13		A
6A-14		A
6A-15		A
6A-16		A

† SFC Software Feature Change

02092-2

## LIST OF EFFECTIVE PAGES (CONTD)

PAGE	SFC †	REV
6A-17		A
6A-18		A
6A-19		A
6B-1		A
6B-2		A
6B-3		A
6B-4		A
6B-5		A
6B-6		A
6B-7		A
6B-8		A
6B-9		A
6B-10		A
6B-11		A
6B-12		A
6B-13		A
6B-14		A
6B-15		A
6B-16		A
6B-17		A
6B-18		A
6B-19		A
6B-20		A
6B-21		A
6B-22		A
6B-23		A
6B-24		A
6B-25		A
6B-26		A

PAGE	SFC †	REV
6B-27		A
6B-28		A
6B-29		A
6B-30		A
6B-31		A
6B-32		A
6B-33		A
6B-34		A
6B-35		A
6B-36		A
6B-37		A
6B-38		A
6B-39		A
6B-40		A
6B-41		A
6B-42		A
6B-43		A
6B-44		A
6B-45		A
6B-46		A
6B-47		A
6B-48		A
6B-49		A
6B-50		A
6B-51		A
6B-52		A
6B-53		A
6B-54		A
6B-55		A

PAGE	SFC †	REV
6B-56		A
6B-57		A
6B-58		A
6B-59		A
6B-60		A
6B-61		A
6C-1		A
6C-2		A
6C-3		A
6C-4		A
6C-5		A
6C-6		A
6C-7		A
6C-8		A
6C-9		A
6C-10		A
6C-11		A
6C-12		A
6C-13		A
6C-14		A
6C-15		A
6C-16		A
6C-17		A
6C-18		A
6C-19		A
6C-20		A
6C-21		A
6C-22		A
6D-1		A

† SFC Software Feature Change

02002-2

## LIST OF EFFECTIVE PAGES (CONTD)

PAGE	SFC †	REV
6D-2		A
6D-3		A
6D-4		A
6D-5		A
6D-6		A
6D-7		A
6D-8		A
6D-9		A
6D-10		A
6D-11		A
6D-12		A
6D-13		A
6D-14		A
6D-15		A
6D-16		A
6D-17		A
6D-18		A
6D-19		A
6D-20		A
6D-21		A
6D-22		A
6D-23		A
6D-24		A
6D-25		A
6D-26		A
6D-27		A
6D-28		A
6D-29		A
6D-30		A

PAGE	SFC †	REV
6D-31		A
6D-32		A
6D-33		A
6D-34		A
6D-35		A
6D-36		A
6E-1		A
6E-2		A
7-1		A
7-2		A
7-3		B
7-4		A
7-5		A
7-6		A
7-7		A
7-8		A
7-9		A
7-10		A
7-11		A
7-12		A
7-13		A
7-14		A
7-15		A
7-16		A
7-17		A
7-18		A
7-19		A
7-20		A
7-21		A

PAGE	SFC †	REV
7-22		A
7-23		A
7-24		A
7-25		A
7-26		A
7-27		A
7-28		A
7-29		A
7-30		A
7-31		A
7-32		A
7-33		A
7-34		A
7-35		A
7-36		A
7-37		A
7-38		A
7-39		A
7-40		A
7-41		A
7-42		A
7-43		A
7-44		A
7-45		A
7-46		A
7-47		A
7-48		A
7-49		A
7-50		A

† SFC Software Feature Change

02092-2





## PREFACE

---

This manual contains maintenance information for the CDC<sup>®</sup> 752 Keyboard Display Terminal. This terminal is a remote communication device that operates in a conversational mode with a central processor at speeds of 110 to 9600 baud. The terminal is available in different configurations to meet both national and international standards, and to provide compatibility with different types of communication facilities. The genealogy chart in the Parts Data section of this manual provides the equipment configuration for each type of terminal. Additionally, three different types of character printers are also available for use as peripheral devices on the terminal.\*

Maintenance information found in this manual is intended for field service personnel, and for repair center or technical support personnel. Field service maintenance information is found principally in sections 1, 4, 6, and 8 of this manual. Repair center maintenance information is contained in sections 5 and 7. In addition to this manual, field servicing of the terminal requires use of the 752 Keyboard Display Terminal Operators Guide/Reference Manual/Installation Instructions and may require use of the Matrix Printer Reference and Field Service manual if the terminal is configured with an impact printer as a peripheral. Following is a listing of manuals associated with the operation and maintenance of the terminal. With the exception of those manuals previously noted, most of the manuals in the listing are for use by repair center personnel.

<u>Title</u>	<u>Publication Number</u>
752 Keyboard Display Terminal Operators Guide/ Reference Manual/Installation Instructions	62957300
Video Display Unit Hardware Maintenance Manual	62961800
Nonimpact Printer Hardware Maintenance Manual	62952500

Additional copies of this manual or the previously listed manuals are available from:

Control Data Corporation  
Technical Publications Department  
2401 North Fairview Avenue  
St. Paul, Minnesota 55113

\*Two appendixes have been added as interim change packages: 1) appendix C has information on the 82-Key Typewriter Keyboard and Numeric Pad (previously only the 80-Key was mentioned; 2) appendix D, contains DDLT's and Procedures for the 70-LPM Impact Printer. Equipments CA150A-D are included for the new 82-Key Typewriter Keyboard.

<u>Title</u>	<u>Publication Number</u>
Matrix Printer Operator Handbook	76670900
Matrix Printer Reference and Field Service Manual	95390800
Matrix Printer Family Spare Parts List	95366300
Matrix Printer Parts Identification Manual	76671100

These manuals are available from:

Control Data Corporation  
Literature and Distribution Services  
8001 East Bloomington Freeway  
Minneapolis, Minnesota 55420

# CONTENTS

<u>Section</u>		<u>Page</u>
1	— GENERAL DESCRIPTION	
	Functions . . . . .	1-2
	Features . . . . .	1-2
	Display Unit . . . . .	1-3
	Power Supply . . . . .	1-3
	Video Display Assembly . . . . .	1-3
	Logic Module Assembly . . . . .	1-4
	Keyboard Assembly . . . . .	1-4
	Operator Controls . . . . .	1-6
	System Display Terminal Interface . . . . .	1-7
	Nonimpact Printer . . . . .	1-9
	Print Mechanism . . . . .	1-11
	Interface and Control Logic Cards . . . . .	1-11
	Power Supply . . . . .	1-11
	Impact Printer . . . . .	1-11
	Print Mechanism . . . . .	1-13
	Interface and Control Logic Cards . . . . .	1-13
	Power Supply . . . . .	1-13
	Features Summary . . . . .	1-14
	Equipment Characteristics . . . . .	1-15
	Environmental Requirements . . . . .	1-16
	Display Terminal-Electrical . . . . .	1-16
	Nonimpact Printer-Electrical . . . . .	1-16
	Impact Printer-Electrical . . . . .	1-17
	Display Terminal-Physical . . . . .	1-17
	Nonimpact Printer-Physical . . . . .	1-17
	Impact Printer-Physical . . . . .	1-17
2	— OPERATION	2-1
3	— INSTALLATION AND CHECKOUT	3-1
4	— THEORY OF OPERATION	
	Keyboard Assembly . . . . .	4-2
	Video Display Assembly . . . . .	4-5
	Cathode-Ray Tube (CRT) . . . . .	4-5
	Vertical Choke . . . . .	4-5
	Monitor PC Board . . . . .	4-6
	+15-V dc Regulator Assembly . . . . .	4-7
	CRT Yoke and CRT Cap . . . . .	4-8

Section

Page

High-Voltage Transformer . . . . . 4-8  
Logic Module Assembly . . . . . 4-8  
Rear Panel Assembly . . . . . 4-11  
Power Supply Assembly . . . . . 4-12  
Nonimpact Printer . . . . . 4-15  
Impact Printer . . . . . 4-21  
Miscellaneous Terminal Components . . . . . 4-21

5 — DIAGRAMS

Logic Diagram Contents Sheet . . . . . 5-3  
Key To Diagrams Physical Location Codes . . . . . 5-4  
Key To Symbols . . . . . 5-5  
Diagram 100 — Main Timing, Horizontal Scan, and  
Vertical Counters . . . . . 5-6  
Diagram 101 — Horizontal and Vertical Control, Vertical  
Address Counter, and Read/Write Control . . . . . 5-8  
Diagram 102 — Memory Output Latch, Character  
Generator, Video Serializer, Blink Counter, Display  
Cursor Flip-Flop . . . . . 5-10  
Diagram 103 — Y Cursor Counter and Mux, and Video  
Driver Circuit . . . . . 5-14  
Diagram 104 — Cursor Function Decode, Cursor Position  
Decode, Last Line Counter . . . . . 5-16  
Diagram 105 — UART, X Compare, Cursor Compare . . . 5-18  
Diagrams 106 and 107 — Memory Bank A and Memory  
Bank B . . . . . 5-22  
Diagram 108 — Clear Control, Receive, and Keyboard  
Control . . . . . 5-26  
Diagram 109 — Memory Address Conversion, Data  
Decode . . . . . 5-30  
Diagram 110 — Baud Counter, Modem Control . . . . . 5-32  
Diagram 111 — Phase Lock Oscillator, Current Loop  
Receive and Transmit . . . . . 5-34  
Diagram 112 — Internal Switches, Break and Alarm,  
Last-Line Compare . . . . . 5-36  
Diagram 113 — X Cursor Control, Y Cursor Control,  
and X Cursor Counter . . . . . 5-38  
Diagram 114 — Modem Interface, RTS Control . . . . . 5-40  
Diagram 115 — Baud Select, X/Y Position Control . . . . 5-44  
Timing Diagram . . . . . 5-46  
Block Diagram . . . . . 5-49  
AC/DC Power Interconnect Diagram . . . . . 5-50  
Schematic Diagram, Met Pwr Supply . . . . . 5-51  
Interconnection Diagram Signal . . . . . 5-52  
Schematic Diagram, 6CTD-0 (Rear Panel Interconnect) . . . 5-53

<u>Section</u>	<u>Page</u>
Schematic Diagram Video Display Electronics Non Composite Video (6BND-0) . . . . .	5-54
Schematic Diagram 6BND-0 (Non Composite Video Board) . . . . .	5-56
Schematic Diagram Regulator Assy (+15V) . . . . .	5-60

6 — MAINTENANCE

Suggested Emergency Maintenance Procedure . . . . .	6-1
Maintenance Aids . . . . .	6-3
Preventive Maintenance . . . . .	6-3
Keyboard Display PMTs . . . . .	6-3
Keyboard Display PMTPs . . . . .	6-4
Nonimpact Printer PMTs . . . . .	6-5
Nonimpact Printer PMTPs . . . . .	6-6
Impact Printer PMTs . . . . .	6-8
Impact Printer PMTPs . . . . .	6-9
Diagnostic and Corrective Maintenance . . . . .	6-12
Diagnostic Tables . . . . .	6-12
Conditions Quadrant . . . . .	6-13
Situations Quadrant . . . . .	6-13
Sequence Quadrant . . . . .	6-15
Actions Quadrant . . . . .	6-16
General Instructions . . . . .	6-16
DDLTs and Procedures . . . . .	6-16
Procedure TS1 — Turning On Subsystem Power . . .	6A-2
Procedure TS2 — Turning Off Subsystem Power . . .	6A-3
Procedure TS3 — Removing/Replacing Subsystem Cables . . . . .	6A-3
Procedure TS4 — Checking Subsystem Cables . . .	6A-4
Procedure TS5 — Removing/Replacing Subsystem Equipments . . . . .	6A-4
Procedure TS6 — Terminal Subsystem Checkout . .	6A-5
Procedure CRT1 — Turning On Display Terminal Power . . . . .	6B-5
Procedure CRT2 — Turning Off Display Terminal Power . . . . .	6B-5
Procedure CRT3 — Checking the Keyboard . . . . .	6B-5
Procedure CRT4 — Replacing the Keyboard . . . . .	6B-8
Procedure CRT5 — Removing the Display Cabinet Hood . . . . .	6B-9
Procedure CRT6 — Check/Replace Rear Panel Components . . . . .	6B-10
Procedure CRT7 — Check/Replace Power Supply Assembly . . . . .	6B-14

Procedure CRT8 — Check/Replace 15-V Regulator  
Components . . . . . 6B-18

Procedure CRT9 — Measuring Voltages on Monitor  
PC Board . . . . . 6B-21

Procedure CRT10 — Video Monitor Adjustments . . . 6B-22

Procedure CRT11 — Check/Replace Front-Rear  
INTENSITY Control . . . . . 6B-26

Procedure CRT12 — Replacing Monitor  
PC Board . . . . . 6B-27

Procedure CRT13 — Replacing High-Voltage  
Transformer . . . . . 6B-28

Procedure CRT14 — Replacing the Vertical  
Choke . . . . . 6B-29

Procedure CRT15 — Check/Replace CRT Cap . . . . . 6B-30

Procedure CRT16 — Replacing Monitor CRT . . . . . 6B-31

Procedure CRT17 — Replacing CRT Yoke . . . . . 6B-33

Procedure CRT18 — Replacing Video Monitor  
Assembly . . . . . 6B-35

Procedure CRT19 — Check/Replace Audible  
Alarm . . . . . 6B-36

Procedure CRT20 — Replacing Control Logic  
PC Board . . . . . 6B-37

Nonimpact Printer Corrective Maintenance

Procedures — General . . . . . 6C-3

Procedure NIP1 — Paper Loading and Power On . . . 6C-3

Procedure NIP2 — 1-kHz Oscillator Adjustment . . . 6C-4

Procedure NIP3 — Retriggerable One-Shot (ROS)  
Adjustment . . . . . 6C-4

Procedure NIP4 — Brake LED Block and Brake  
One-Shot Adjustment . . . . . 6C-5

Procedure NIP5 — Head Compensating Circuit  
Adjustment . . . . . 6C-6

Procedure NIP6 — Carriage Return LED Block  
Adjustment . . . . . 6C-6

Procedure NIP7 — Printhead Actuation  
Adjustment . . . . . 6C-10

Procedure NIP8 — Print Quality Adjustments . . . . . 6C-12

Procedure NIP9 — Out-of-Paper Switch  
Adjustment . . . . . 6C-12

Procedure NIP10 — Serial Input Clock  
Adjustment . . . . . 6C-13

Procedure NIP11 — Replacing Print Mechanism . . . 6C-14

Procedure NIP12 — Replacing Power Supply . . . . . 6C-15

Procedure NIP13 — Replacing/Adjusting  
Miscellaneous Parts . . . . . 6C-15

<u>Section</u>	<u>Page</u>
Impact Printer Corrective Maintenance	
Procedures — General	6D-5
Procedure IMP1 — Turning On Impact Printer	
Power	6D-6
Procedure IMP2 — Turning Off Impact Printer	
Power	6D-8
Procedure IMP3 — Installing/Aligning Paper Forms	
in Impact Printer	6D-8
Procedure IMP4 — Installing Ribbon in Impact	
Printer	6D-10
Procedure IMP5 — Installing Format Tape in Impact	
Printer	6D-12
Procedure IMP6 — Opening/Removing Impact	
Printer Cabinet	6D-13
Procedure IMP7 — Removing/Replacing Logic	
Chassis PC Boards	6D-14
Procedure IMP8 — Checking/Setting Internal	
Switches and Jumpers	6D-15
Procedure IMP9 — Removing/Replacing Driver	
PC Board	6D-15
Procedure IMP10 — Removing/Replacing Line	
Start PC Board	6D-16
Procedure IMP11 — Removing/Replacing Character	
Start PC Board	6D-16
Procedure IMP12 — Check/Replace Fuses	6D-17
Procedure IMP13 — Removing/Replacing Internal	
Cables	6D-18
Procedure IMP14 — Checking Internal Cables	6D-19
Procedure IMP15 — Mechanism Checks/	
Adjustments	6D-20
Procedure IMP16 — Electrical Checks/	
Adjustments	6D-20
Procedure IMP17 — Parts Replacement	6D-21

INDEX 6E-1

7 — PARTS DATA

Genealogy Chart	7-1
Parts Data	7-1
Spare Parts Data	7-2
Genealogy Chart 752 Display	7-3
752 Display Terminal	7-4
Power Supply Assembly	7-18
P C Card Assembly 6AFD-0 (Met Power Supply)	7-20
Heat Sink Assy	7-22

W/L Heat Sink Assy	7-24
W/L Power Supply	7-25
Cable Assy Kybd Internal	7-26
Ground Wire Assy	7-30
Cable Assy DC Power	7-32
CRT Ground Clip Assy	7-34
Logic Module Assy (61407657)	7-36
P.C. Card Assy, 6CUD-0 (Logic Module)	7-38
Logic Module Assy (61407656)	7-42
P C Card Assy 6CVD-0 (Logic Module with Current Loop)	7-44
Rear Panel Assy 60 Hz	7-48
W/L Rear Panel Assy 60 Hz	7-51
Rear Panel Assy 50 Hz	7-52
W/L Rear Panel Assy 50 Hz	7-55
P C Card Assembly 6 CTD-0 (Rear Panel Signal Wiring)	7-56
Keyboard Assembly 80 Key	7-58
Cable Assy Keyboard External	7-60
Keyboard Assembly 80 Key (Shielded)	7-64
Cable Assy Keyboard External	7-66
Video Display Assembly Non-Composite	7-70
P C Card Assy 6BND-0 (Composite Video)	7-72
Regulator Assy (+15 Volts)	7-76
W/L Regulator Assy (+15V)	7-78
Cable Assy - Yoke	7-80
CRT Socket Assy	7-82
W/L Video Display	7-84
Choke Assy	7-86
High Voltage Transformer Assy	7-88
Cable Assy Video Display	7-92
Front Panel Assembly, Mod 1	7-94
Intensity Control Cable Assy	7-96
Cable Assembly Rear Panel - Monitor	7-98
752 Display Term.	7-102
SPL Printer, Serial, Thermal 60 Hz	7-104
SPL Printer, Serial, Thermal 50 Hz	7-105

8	—	WIRE LISTS	8-1
---	---	------------	-----

## APPENDIXES

A	—	CODES AND CHARACTER SETS	A-1
B	—	MOS CIRCUIT PRECAUTIONS	B-1
C	----	82-Key Typewriter Keyboard and Numeric Pad	C-1
D	----	70-LPM Impact Printer DDLT's and Procedures	D-1

# FIGURES

---

<u>Section</u>	<u>Figure</u>	<u>Page</u>
1	—	GENERAL DESCRIPTION
	1-1	Display Terminal Configurations . . . . . 1-2
	1-2	Display Unit Components . . . . . 1-3
	1-3	Keyboard Layout . . . . . 1-5
	1-4	Display Terminal Rear Panel . . . . . 1-6
	1-5	Nonimpact Printer . . . . . 1-10
	1-6	Nonimpact Printer Components . . . . . 1-10
	1-7	Impact Printer . . . . . 1-12
	1-8	Impact Printer Components . . . . . 1-12
	1-9	Display Terminal Dimensions . . . . . 1-18
	1-10	Nonimpact Printer Dimensions . . . . . 1-19
	1-11	Impact Printer Dimensions . . . . . 1-19
4	—	THEORY OF OPERATION
	4-1	Functional Block Diagram of Display Terminal . . . 4-1
	4-2	Keyboard Module . . . . . 4-2
	4-3	Location of Video Display Subassemblies . . . . . 4-6
	4-4	+15-V dc Regulator Assembly . . . . . 4-7
	4-5	Location of Logic Module Assembly PC Board in Display Terminal . . . . . 4-9
	4-6	Logic Module Assembly PC Board Block Diagram . . . . . 4-10
	4-7	Terminal Rear Panel Location and Layout . . . . . 4-12
	4-8	Top and Front Views of Power Supply Module . . . 4-13
	4-9	Location of Power Supply in Display Terminal . . . 4-14
	4-10	Nonimpact Printer Subassemblies . . . . . 4-15
	4-11	Nonimpact Printer Wiring Harness . . . . . 4-16
	4-12	Nonimpact Printer Block Diagram . . . . . 4-17
	4-13	Nonimpact Printer Print-Mechanism Assembly . . . 4-17
	4-14	Nonimpact Printer Character Print Timing . . . . . 4-18
	4-15	Nonimpact Printer Line Feed Operation Timing . . . . . 4-20
	4-16	Nonimpact Printer Carriage Return Operation Timing . . . . . 4-20

<u>Section</u>	<u>Figure</u>	<u>Page</u>
6	— MAINTENANCE	
6-1	Example of a Diagnostic Decision Logic Table .....	6-14
6-2	Arrangement of Diagnostic and Corrective Maintenance Information .....	6-17
TS1	Terminal Cabling .....	6A-14
TS2	Data Set Connector Pin Assignments for Unipolar, Full-Duplex, Current Loop Communication Channel .....	6A-15
TS3	Data Set Connector Pin Assignments for Unipolar, Half-Duplex, Current Loop Communication Channel .....	6A-15
TS4	Raster Display .....	6A-16
TS5	Impact Printer Test Print Pattern .....	6A-17
CRT1	Keyboard Display Internal Switches and Controls .....	6B- 39
CRT2	Control Code Dot Matrix Formations and Octal Codes .....	6B- 40
CRT3	Keyboard Module Components .....	6B- 41
CRT4	Keyboard Display Cabinet Hood Removal .....	6B-41
CRT5	CP2/CJ2 and Rear Panel Locations .....	6B-42
CRT6	Rear Panel Removal and Connections .....	6B-43
CRT7	Monitor Assembly and Bezel Screw Removal .....	6B-44
CRT8	Power Supply Module Layout and Input/Output Voltages .....	6B-45
CRT9	+15-V dc Regulator Location .....	6B-46
CRT10	+15-V dc Regulator Assembly Detail (Rear View) .....	6B-47
CRT11	Monitor PC Board Voltages .....	6B-48
CRT12	Location of Video Monitor Adjustments .....	6B-48
CRT13	Yoke Adjustments .....	6B-49
CRT14	Monitor PC Board Adjustments .....	6B-49
CRT15	Character Resolution .....	6B-50

<u>Section</u>	<u>Figure</u>	<u>Page</u>
CRT16	Applying Overlay to CRT Screen . . . . .	6B-53
CRT17	Identifying Display Distortion . . . . .	6B-53
CRT18	Attaching Correction Magnet to Dowel . . . . .	6B-53
CRT19	Magnet Placement and Distortion Correction . . .	6B-54
CRT20	Intensity Control Assembly Location . . . . .	6B-55
CRT21	Monitor PC Board Connections . . . . .	6B-56
CRT22	Monitor PC Board Placement . . . . .	6B-56
CRT23	High-Voltage Transformer Installation . . . . .	6B-57
CRT24	CRT Cap Removal . . . . .	6B-58
CRT25	CRT Yoke Assembly . . . . .	6B-58
CRT26	Static Discharge Spring Location . . . . .	6B-59
CRT27	Position of Shielding Sleeve . . . . .	6B-59
CRT28	Monitor Assembly Removal . . . . .	6B-60
CRT29	Location of Audible Alarm and Control Logic PC Board . . . . .	6B-61
NIP1	Paper Loading, Nonimpact Printer . . . . .	6C-16
NIP2	Printer, Front View . . . . .	6C-17
NIP3	Printer, Right Side View . . . . .	6C-18
NIP4	Printer, Right Front View . . . . .	6C-19
NIP5	Printhead Home Position . . . . .	6C-19
NIP6	Guide Bar Arm Travel . . . . .	6C-20
NIP7	Damper Pad Adjustment . . . . .	6C-20
NIP8	Printer, Rear View . . . . .	6C-21
NIP9	Serial Clock Timing . . . . .	6C-21
NIP10	Location of Major Replaceable Modules . . . . .	6C-22
IMP1	Forms Installing/Aligning in Impact Printer . . . .	6D-23
IMP2	Ribbon Path in Impact Printer . . . . .	6D-24
IMP3	Ribbon Positioning on Spools . . . . .	6D-24
IMP4	Format Tape Path in Impact Printer . . . . .	6D-25
IMP5	Format Tape Characteristics . . . . .	6D-25
IMP6	Logic Chassis Board Locations . . . . .	6D-26
IMP7	Internal Switches and Jumpers (RS-232-C Interface Board) . . . . .	6D-27
IMP8	Solenoid Driver Board with Fuse Identification . . . . .	6D-28
IMP9	Power Supply Board with Fuse Identification . . . .	6D-29
IMP10	Impact Printer Major Assemblies . . . . .	6D-30
IMP11	Impact Printer Internal Connectors . . . . .	6D-31
IMP12	60-Hz AC Distribution . . . . .	6D-32
IMP13	Universal AC Distribution . . . . .	6D-33
IMP14	DC Distribution and Ribbon Logic . . . . .	6D-34
IMP15	Configuration Drawing . . . . .	6D-35
IMP16	Chassis Map . . . . .	6D-36

# TABLES

<u>Section</u>	<u>Table</u>	<u>Page</u>
1	— GENERAL DESCRIPTION	
	1-1 Available Terminal Configurations . . . . .	1-1
	1-2 Peripheral Connector Pin Assignments . . . . .	1-7
	1-3 Voltage Level Channel Interface Connector Pin Assignments . . . . .	1-8
4	— THEORY OF OPERATION	
	4-1 Keyboard Interface Signal Lines . . . . .	4-4
5	— DIAGRAMS	
	5-1 Logic Module Assembly Test Point Data . . . . .	5-2
6	— MAINTENANCE	
	6-1 Keyboard Display PMTs . . . . .	6-4
	6-2 Nonimpact Printer PMTs . . . . .	6-5
	6-3 Impact Printer PMTs . . . . .	6-8
	TS1 DDLT for Terminal Subsystem . . . . .	6A-1
	TS2 Voltage Level Channel (RS-232-C/CCITT V.24) Interface Connector Pin Assignments . . . . .	6A-18
	TS3 Peripheral Connector Pin Assignments . . . . .	6A-18
	TS4 Keyboard Interface Signal Lines . . . . .	6A-19
	CRT1 DDLT for Keyboard Display . . . . .	6B-1
	CRT2 DDLT for Keyboard Display . . . . .	6B-2
	CRT3 DDLT for Keyboard Display . . . . .	6B-3
	NIP1 DDLT for Nonimpact Printer . . . . .	6C-1
	NIP2 Print Quality . . . . .	6C-22
	IMP1 DDLT for Impact Printer . . . . .	6D-1
7	— PARTS DATA	
	7-1 Explanation of Column Headings on Assembly Parts Lists . . . . .	7-2

# GENERAL DESCRIPTION

This section describes the general functions, features, and equipment characteristics of the 752 Keyboard Display Terminal and of the two printers that may be associated with the terminal. It includes descriptions of both the basic terminal and its available variations.


The basic terminal is a 50- or 60-Hz terminal with an 80-key keyboard and a modem interface. The user can select 60-Hz versions of the terminal with a current loop interface for connection to a current loop communication facility, or he can select 50-Hz versions with a current loop interface and/or FTZ-approved shielding.\* The features incorporated in each type of 752 Keyboard Display Terminal are indicated with Xs in table 1-1.

TABLE 1-1. AVAILABLE TERMINAL CONFIGURATIONS

TERMINAL TYPE	60 Hz	50 Hz	CURRENT LOOP	FTZ SHIELDING
752-10	X	—	—	—
752-11	X	—	X	—
752-20	—	X	—	X
752-21	—	X	X	X
Undesignated	—	X	—	—
Undesignated	—	X	X	—

Additionally, the display terminal is available with either a nonimpact thermal printer or an impact printer. The display terminal and the two different printers are shown in figure 1-1.

\* FTZ (Fernmelde Technisches Zentralamt) is a German licensing agency that sets limits on the radio frequency emissions generated by electrical and electronic devices. Many European countries have adopted FTZ requirements for the shielding of electronic equipment in order to control the level of stray radio frequencies in the atmosphere.

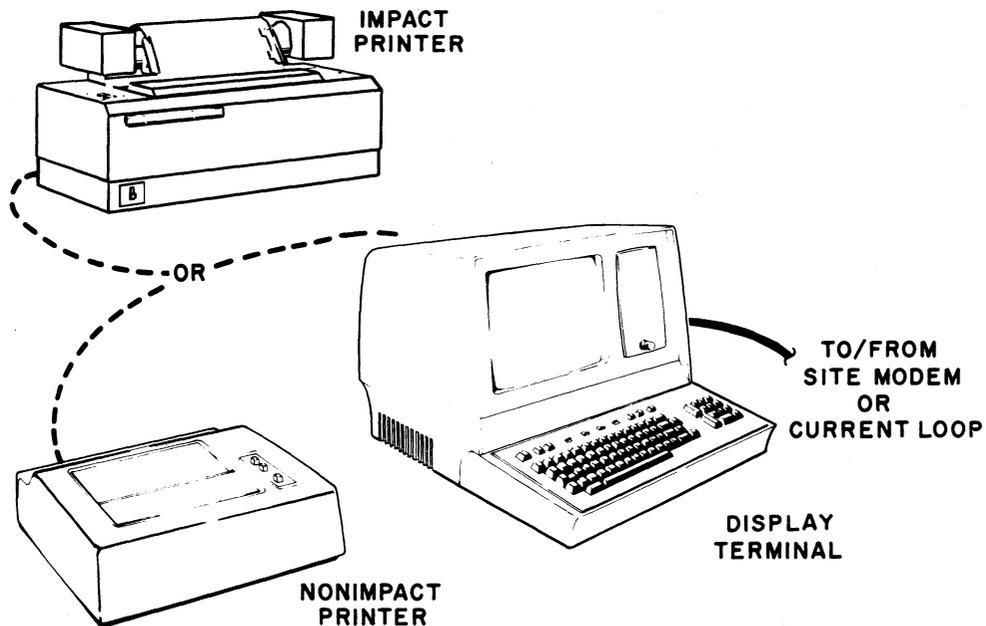

02201

NOTE: BROKEN LINES SHOW INTER-CONNECTING CABLE PATHS.

Figure 1-1. Display Terminal Configurations

## FUNCTIONS

The display terminal functions as a stand-alone, remote input/output device for a computer system. It performs input and terminal control functions via a detachable keyboard assembly, and it monitors both input and output functions on a 12-inch crt display screen. Included within the display terminal are all of the necessary electronics, including an asynchronous, bit-serial, word-serial, communication facility interface, to permit it to operate in conversational mode in the same manner as a teletypewriter unit. The display terminal, however, incorporates many features not commonly found in teletypewriter terminals. The addition of one of the available printer peripherals provides the terminal with hardcopy printout capabilities.

## FEATURES

The following text highlights six major features of the terminal. These are the display unit, keyboard, operator control, system/terminal interface, nonimpact printer, and impact printer. A features summary list follows the six major features. Other portions of this manual describe many of these features in greater detail; this portion of text provides brief descriptions and a features summary to facilitate familiarization and comparison.

## DISPLAY UNIT

The display unit of the terminal is self-contained and includes a video display assembly, a logic module assembly, and a power supply. The keyboard, communication line, and printer unit interfaces are part of the logic PC board. The location of major components within the display unit is shown in figure 1-2.

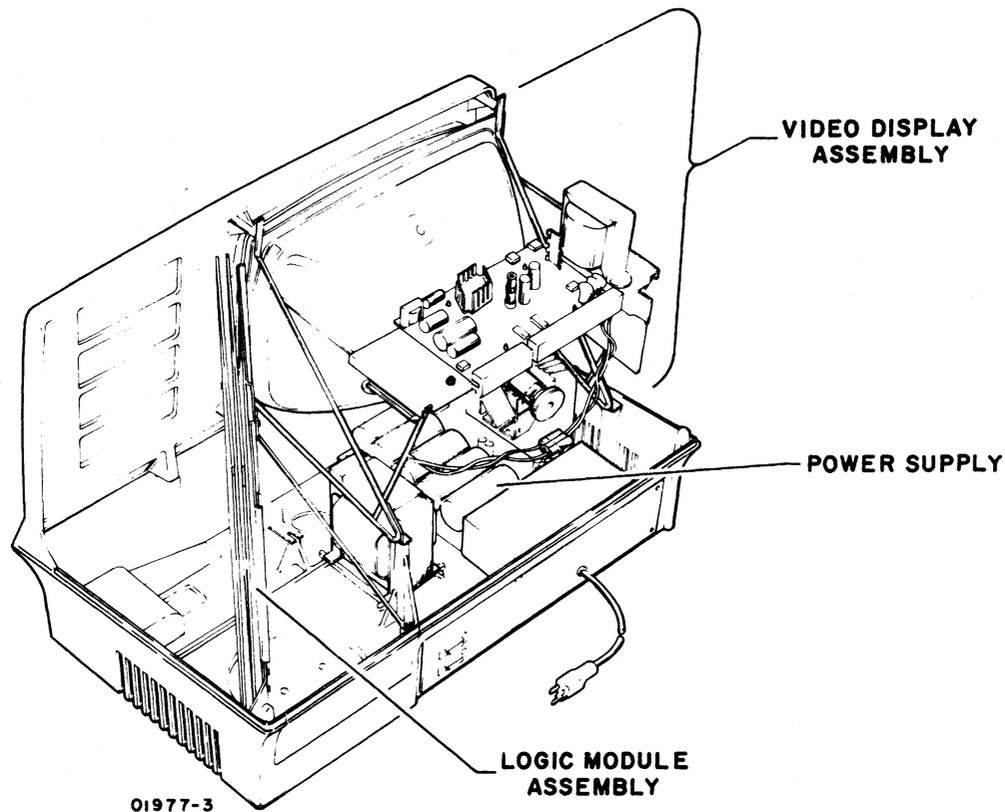


Figure 1-2. Display Unit Components

### Power Supply

The power supply furnishes all necessary voltages for the display unit from either 115 V ac or 220/240 V ac (nominal), 50- or 60-Hz power input sources.

### Video Display Assembly

The video display assembly uses a 12-inch (diagonal measurement) crt, having a P4 white-phosphor coating and a nonglare faceplate. Nominal raster area on the display screen is an area approximately 7.8 in by 5 in (198 mm by 127 mm). This area can display 24 lines of up to 80 characters per line, with each character displayed in a 7- by 9-dot matrix. Character display is accomplished by selectively blanking and unblanking the dots within this matrix. A display character refresh memory holds all the characters for display and refreshes the display screen at a rate equal to the frequency of the ac input power (50 or 60 Hz).

## **Logic Module Assembly**

The display recognizes and generates 128 character codes; the 95 alphanumeric character codes recommended by American National Standards Institute (ANSI) standard X3.4-1968, and the 33 control codes recommended by ANSI standard X3.1973. During actual operation, the unit displays all 95 alphanumeric characters and responds to 13 of the 33 control codes as they are received. This leaves 20 control codes for use in specific functions or operations (refer to appendix of this manual for transmit/receive code set). All 128 codes can be transmitted during normal online operation of the terminal.


Character entries onto the display screen occur upon code reception or are made via the keyboard. To ensure entry at the desired screen location, a blinking cursor underscores the location of the next character entry. During consecutive character entries, the cursor progresses across a display line through all 80 character positions. At character position 73, a beeper signal sounds to warn the operator that the end of a line is approaching. This line-by-line manner of cursor advance continues until the last character position of the last line is reached. As that character is keyed in, the cursor resets to its home position (upper left corner of display area) or causes the display to scroll; that is, the cursor returns to the beginning of the last line while all lines already entered scroll up one line (the first line is lost as it scrolls off the screen).

Construction of the display unit is modular as indicated in figure 1-2. All circuits are solid-state, and with the exception of some of the power supply and high voltage circuits, all use integrated circuit technology. Both the display unit and the keyboard enclosures are made of heavy-gauge, molded, expanded-plastic, foam material covered with a durable vinyl paint. The overall design of the display unit lends itself to reliability, and the modular construction facilitates maintenance procedures.

## **KEYBOARD ASSEMBLY**

The keyboard assembly, hereafter referred to as keyboard, serves as both a terminal control and data input unit for the display terminal operator. The terminal control function of the keyboard is discussed briefly in the following portion of this section and more thoroughly in the operation section of the associated Operators Guide/Reference Manual (see preface). This portion of the text deals principally with the keyboard as a data input unit. The keyboard uses a main key cluster of 67 keys similar in appearance to a standard teletypewriter keyboard. It also has a 13-key numeric-entry cluster, to facilitate making numeric entries, located just to the right of the main key cluster.

All keycaps are wear-resistant plastic with molded-in characters to ensure legibility even after long usage, and all have a matte-finish surface to minimize glare. The layout of the keys on the keyboard is shown in figure 1-3.

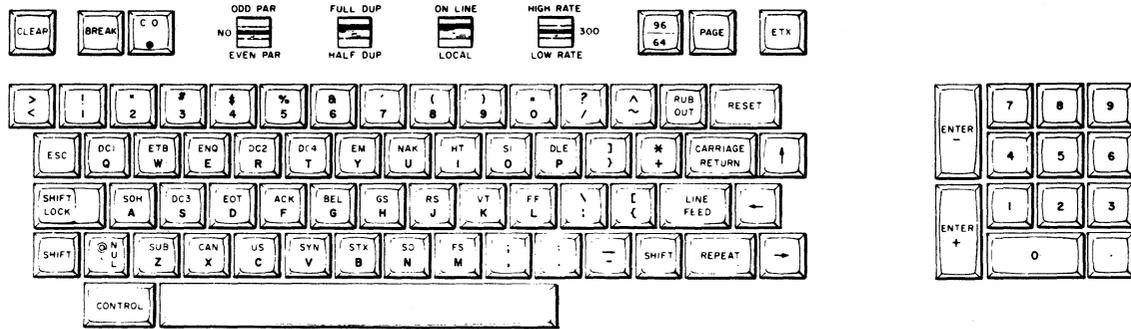

01499-6

Figure 1-3. Keyboard Layout

The keyboard is a modular unit that attaches to the display unit via an interconnecting cable approximately 32 in (813 mm) long. All power required by the keyboard comes from the display unit power supply via this cable, and all data control codes generated by the keyboard are passed on to the logic circuits of the display unit via this same cable.

The keyboard features trilevel operation; that is, it operates in lowercase mode, uppercase mode (SHIFT key actuated), and in control mode (CONTROL and character keys actuated; or SHIFT, CONTROL, and character keys actuated). In this manner, the keyboard can be used to generate a full 128-character, ANSI-compatible code set. The complete character and code sets used in the display terminal are included in the appendix of this manual.

Data entry from the keyboard is accomplished by typing in the desired control codes and/or alphanumeric characters on the keyboard. During online operation, transmission occurs as each key is pressed regardless of the state of any other keys on the keyboard. As a message is typed out and sent in the half-duplex mode of terminal operation, it displays on the screen of the display unit to permit visual verification of proper message format and content. Additional message verification is provided in full-duplex mode operation, which permits only received data to be displayed (such as transmitted data echoed back from the receiving station). Regardless of the transmission mode selected, where the data is displayed on the screen depends on the operating mode selected (page or scroll) and on the position of the cursor as data entry begins.


## OPERATOR CONTROLS

The display terminal has operator controls located on the keyboard and on the front and rear panels of the display unit. The controls most commonly used by the operator during display terminal operation are located on the keyboard assembly. Following is a list of these keyboard controls; their functions are described more thoroughly in the associated Operators Guide/Reference Manual (see preface).

- CO indicator — on terminals having a voltage level interface, this indicator lights to indicate the data set (modem) is ready and a carrier frequency signal is being received from the distant station.
- ODD PAR/NO/EVEN PAR switch — selects odd, even, or no parity check/generate functions of the terminal.
- FULL DUP/HALF DUP switch — directs transmit data to either the communication interface only (FULL DUP) or to both the communication interface and the display/printer interface.
- ON LINE/LOCAL switch — selects online or offline mode of display terminal operation.
- HIGH RATE/300/LOW RATE switch — selects transmit/receive baud rate for the terminal.
- 96/64 switch — selects 96- or 64- character code set for data transmission.
- PAGE switch — selects page or scroll mode of display operation.

Just to the right of the display screen on the front panel is a single control knob. This is the INTENSITY control knob, used to adjust the intensity of the crt display to suit ambient lighting conditions in the area of display terminal installation.

The display terminal rear panel, shown in figure 1-4, has the data set and peripheral connectors, a test switch, the ac power cord, and circuit breaker CBI. CBI serves as the terminal on/off switch, and is used to apply or remove ac power to the terminal. The test switch is for use when testing or checking display terminal operation.

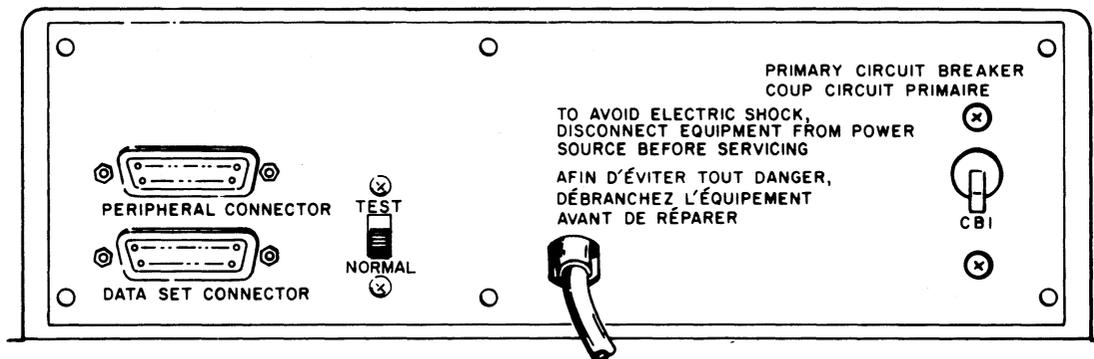

02143

Figure 1-4. Display Terminal Rear Panel

## SYSTEM/DISPLAY TERMINAL INTERFACE

The display terminal has two interface connectors on the rear panel. The PERIPHERAL CONNECTOR is used to connect either the impact printer or the nonimpact printer to the terminal. The DATA SET CONNECTOR is used to connect the terminal to the communication facility. Connector pin assignments for the peripheral connector are shown in table 1-2. Pin assignments for the data set connector vary with the type of communication facility being interfaced, either current loop or voltage level. Pin assignments for voltage level channel connections are shown in table 1-3. Pin assignments for current loop channels are much simpler and are described a little later in this portion of the text.

The printer interface is compatible with RS-232-C and CCITT V.24 recommendations for full- or half-duplex, asynchronous communication facilities. The purpose of the printer interface is to enable hardcopy records of communications to be produced via a peripheral printer. In a manner similar to the display, only received information is routed to the printer during full-duplex, online operation of the terminal; while both received and transmitted information is routed to the printer during half-duplex, online operation. Both the printer and the communication channel baud rate selectors must be set for the same transfer rates.

TABLE 1-2. PERIPHERAL CONNECTOR PIN ASSIGNMENTS

PIN NUMBER	CCITT	EIA	SIGNAL NAME	ORIGIN
1	101	AA	Protective Ground	Printer/Terminal
2	—	—	Not Used	—
3	104	BB	Received Data	Terminal
4	—	—	Not Used	—
5	—	—	Not Used	—
6	107	CC	Data Set Ready (DSR)	Terminal
7	102	AB	Signal Ground	Printer/Terminal
8	109	CF	Received Line Signal Detector (CO)	Terminal
9	—	—	Not Used	—
↓	↓	↓	↓	↓
25	—	—	Not Used	—

**TABLE 1-3. VOLTAGE LEVEL CHANNEL INTERFACE  
CONNECTOR PIN ASSIGNMENTS**

PIN NUMBER	CCITT	EIA	SIGNAL NAME	ORIGIN
1	101	AA	Protective Ground	Modem/Terminal
2	103	BA	Transmitted Data	Terminal
3	104	BB	Received Data	Modem
4	105	CA	Request to Send (RTS)	Terminal
5	106	CB	Clear to Send (CTS)	Modem
6	107	CC	Data Set Ready (DSR)	Modem
7	102	AB	Signal Ground	Modem/Terminal
8	109	CF	Received Line Signal Detector (CO)	Modem
9	—	—	Not Used	—
10	—	—	Not Used	—
11	—	—	Secondary Request to Send (SRTS)*	—
12	122	SCF	Secondary Received Line Signal Detector (SCO)	Not Used
13	121	SCB	Secondary Clear to Send (SCTS)	Not Used
14	118	SBA	Secondary Transmitted Data	Not Used
15	114	DB	Transmission Signal Element Timing	Not Used
16	119	SBB	Secondary Received Data	Not Used
17	115	DD	Receiver Signal Element Timing	Not Used
18	—	—	Not Used	—
19	120	SCA	Secondary Request to Send (SRTS)	Terminal
20	108.2	CD	Data Terminal Ready (DTR)	Terminal
21	110	CG	Signal Quality Detector	Not Used
22	125	CE	Ring Indicator	Not Used
23	111	CH	Data Signal Rate Selector	Terminal
24	113	DA	Transmit Signal Element Timing	Not Used
25	—	—	Not Used	—

\* Data set connector has pin 11 jumpered to pin 19.

In local mode operation of the display terminal, keyed-in data is directed to both the display screen and to the peripheral printer, regardless of the setting of the half-duplex/full-duplex switch. Selection of local mode always disconnects the transmit interface of the display terminal, while the receive interface may be either maintained or disabled via switch conditioning within the terminal; see CONSTANT DTR Switch description in the associated Operators Guide/Reference Manual (see preface) or refer to section 5 of this manual.

The rear panel data set connector is used to interface voltage level terminals to a voltage level communication facility, and current loop terminals to a current loop communication facility. As indicated in table 1-3, terminals interfacing voltage level communication facilities use RS-232-C/CCITT V.24-compatible signals to and from the data set connector. Current loop terminals use receive and transmit circuits designed to interface a 20-milliampere current loop communication facility. The data set connector pins used on current loop terminals vary with the type of current loop facility being connected. Unipolar, half-duplex facilities use pin 2 for transmit data and pin 3 for receive data; unipolar, full-duplex facilities use pin 2 for transmit data, pin 3 for receive data, and pin 7 as a common receive/transmit channel ground.\* Although all current loop terminals use the same transmit and receive circuits, internal conditioning of terminals used on a half-duplex current loop facility differs slightly from that of terminals used on a full-duplex current loop facility (refer to facing-page description for Current Loop Transmit and Receive Diagram in section 5).

With the exception of their different communication facility interfaces, voltage level and current loop terminals operate in an identical manner.


## **NONIMPACT PRINTER**

The nonimpact printer, see figure 1-5, operates as an output peripheral device in conjunction with the display terminal. It prints a maximum of 30 characters per second (300 baud) in serial order, and checks for even character parity. A full print line is 80 characters maximum.

The printer cabinet contains the following major functional components; a print mechanism, interface and control logic cards, and a power supply. The position of these components within the printer cabinet is shown in figure 1-6.


---

\* Where only 4-wire, full-duplex, current-loop communication facilities are available, the separate receive and transmit channel grounds are tied together for connection to pin 7 of the data set connector.

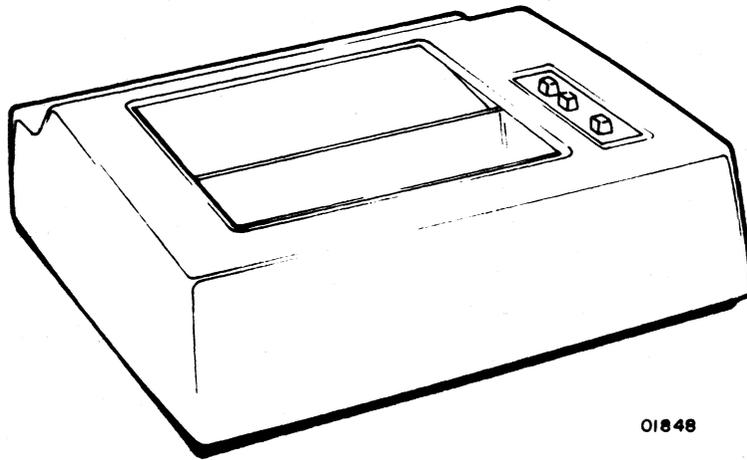

01848

Figure 1-5. Nonimpact Printer

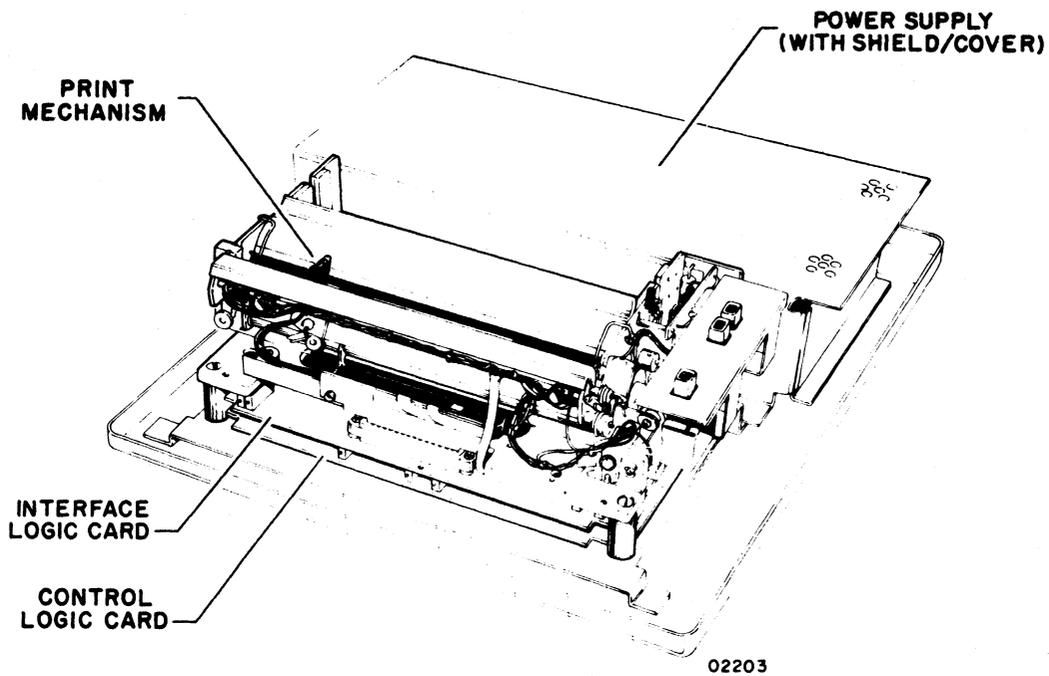

02203

Figure 1-6. Nonimpact Printer Components

## **Print Mechanism**

The print mechanism consists of the electromechanical elements necessary to print characters and to advance the roll-type heat-sensitive paper on which characters are printed. Printing is done by a single printhead that consists of a set of heater elements arranged in a 5- by 7-dot matrix. A character is printed by bringing the printhead into contact with the heat-sensitive paper and quickly heating the matrix elements necessary to reproduce the desired character. Multicopy records cannot be made on this type of printer. The printer is capable of reproducing the 95 (including space) uppercase and lowercase characters and symbols listed in appendix A of this manual. It responds to the following ASCII control codes: backspace, line feed, and carriage return.

## **Interface and Control Logic Cards**

The interface and control logic cards contain circuits for interfacing the printer to the display terminal and for controlling printer operation. The interface card accepts serial outputs from the display terminal, assembles and decodes these outputs, and directs them to the appropriate circuits (data outputs to the printhead and control outputs to the control logic). The control card provides timing and control signals for all printer operations.

## **Power Supply**

The nonimpact printer power supply is a single, removable assembly that provides four regulated dc voltages: +5 for all logic circuits, +16 for the print mechanism, +24 for the print mechanism, and -24 for the printer/terminal interface circuits. All outputs have overcurrent and overvoltage protection.

## **IMPACT PRINTER**

The impact printer, shown in figure 1-7, operates as a peripheral device for the display terminal in lieu of the nonimpact printer. It prints characters in serial order at speeds of up to 173 characters per second in a 60-Hz version or 180 characters per second in a 50-Hz version. It includes internal switches for selecting 150, 300, 600, or 1200 baud data reception rates and for selecting either odd or even parity checking of received codes. Although the impact printer has a print line capacity of 132 characters, the use of line feed and carriage return control codes can format a print line to match the display line format of 80 characters.

The printer cabinet contains a print mechanism, interface and control logic cards, and a power supply. Figure 1-8 shows the location of these components within the printer cabinet, and the following text briefly describes each component.


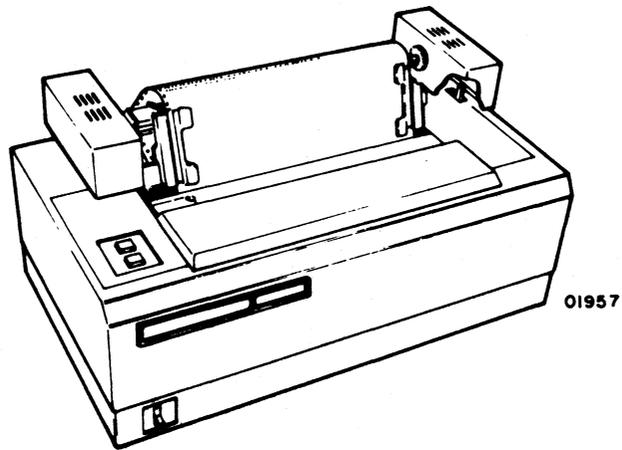


Figure 1-7. Impact Printer

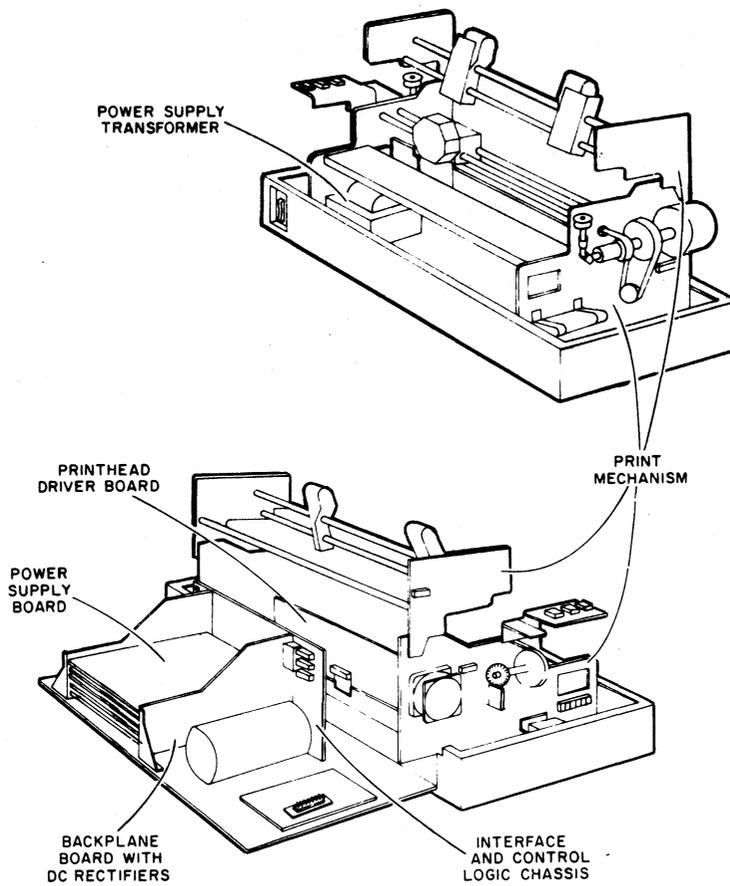

02202

Figure 1-8. Impact Printer Components

## **Print Mechanism**

The print mechanism consists of all electromechanical components necessary to print characters and to move the paper forms on which characters are printed. The mechanism uses standard, fan-folded, single or multicopy (up to five parts) paper forms. The printhead of the mechanism consists of a set of impact pin elements arranged in a vertical 1- by 7-dot matrix. This printhead prints one vertical column at a time within a 7- by 7-dot character matrix. Printing is accomplished by bringing the required pins into contact with an inked ribbon, which in turn transfers the dot pattern to a paper form. Electric solenoids actuate the particular pins for printing each portion of a desired character, which is determined by decoding the signals received via the terminal-to-printer interface. The printer is capable of reproducing the 95 (including space) uppercase and lowercase characters and symbols listed in the appendix of this manual, and it responds to the following ANSI control codes: carriage return, line feed, vertical tabulation, and form feed. Other device control codes cause the printhead to space a character position.

## **Interface and Control Logic Cards**

With the exception of the printhead driver board, which is mounted on the print mechanism, the logic chassis contains all the interface and control logic cards. Each card is a separate module that is removable by releasing the holding cams at each end of the card and withdrawing it from the logic chassis. Replacement is done in a reverse manner, slide the cards into the proper position in the chassis and set it to its connector via the holding cam levers. Logic circuits on these cards perform terminal-to-printer interface, control and timing, character code decoding and print mechanism control functions for the printer.

## **Power Supply**

The power supply in the printer consists of an ac input power transformer, a backplane rectifier board, and a dc regulator/power supply board. These components are physically separated from one another, as shown in figure 1-8. The transformer converts either 60-Hz or 50-Hz ac input power to the following voltages: 13, 16, 24, and 28 V ac. The backplane board contains rectifiers for producing +12- and +36-V dc power. The power supply board supplies regulated +5 V dc for the logic circuits, and it also contains a -12-V dc rectifier/regulator to produce power for use by the controller, character decoder, and interface circuits of the printer.

## FEATURES SUMMARY

Following is a summary listing of display terminal features; some features listed have been described earlier in this section and some are given here for the first time.

- Self-contained display unit with interface for connecting removable keyboard module.
- 12-inch crt screen using an approximate 7.8-in by 5-in (198-m by 127-m) raster area.
- Nonglare crt screen.
- 24 display lines of 80 characters per line.
- Character refresh memory capable of holding all character codes recognizable by the terminal.
- Display character refresh rate of either 50 or 60 Hz (power line input frequency) for flicker-free viewing.
- Blinking cursor to mark position of next character entry.
- Highlight feature, permitting operator to display selected data fields either at reduced intensity or blinking.
- Capability of positioning cursor anywhere on display area via keyboard inputs.
- Audible notification at 73rd character position that end of line is approaching.
- Capability of recognizing and generating 128 discrete codes: 95 alphanumeric codes and 33 control codes.
- Alphanumeric and control character codes that correspond with those recommended by ANSI.
- Modular keyboard assembly interconnected to display unit via single interface cable.
- 80-key keyboard with 67-key main cluster and 13-key numeric entry cluster.
- Nonglare keycaps on all keyboard keys.
- Keyboard access to all 33 ANSI control codes.
- Keyboard carries all controls and indicators normally used by the operator during display terminal operation.
- 3-character buffer for keyed-in data to prevent typing-burst errors.

- Operator selection of the following via the keyboard:
  - Online or local mode (offline) operation of the display terminal.
  - Choice of routing keyed-in data to the communication channel only, to the display and printer only, or to the display, printer, and communication channel.
  - Choice of any two of the following communication line baud rates in addition to a preset 300 baud rate: 110, 150, 200, 600, 1200, 1800, 2400, 4800, or 9600.
  - Odd, even, or no word parity.
  - Page or scroll made operation of displayed data entered via the keyboard.
  - Use of either 96- or 64-character, alphanumeric, ANSI code sets for keyed-in data.
- Keyboard control of display functions including cursor positioning, reset cursor, clear screen, line clear, or highlight.
- Display terminal available with either voltage level communication facility interface, or with current loop interface.
- 50-Hz terminals with FTZ-approved shielding.
- Rear panel connector for attaching either nonimpact printer for quiet terminal operation, or impact printer for producing up to 5-part multi-copy forms.
- Rear panel tests for facilitating display terminal test and checkout procedures.

## **EQUIPMENT CHARACTERISTICS**

The following paragraphs describe the environmental, electrical, and physical characteristics for the display terminal, the nonimpact printer, and the impact printer.

## **ENVIRONMENTAL REQUIREMENTS**

All of the display terminal equipments have the following environmental requirements.

- **Operating**

Temperature: 50°F to 104°F (10°C to +40°C)  
Temperature Change: 18°F/h (10°C/h)  
Relative Humidity: 20 to 80% - no condensation  
Humidity Change: 10%/h  
Altitude from Sea Level: -980 to +9850 ft (-300 to +3000 m)

- **Nonoperating**

Temperature: -14°F to +122°F (-10°C to +50°C)  
Temperature Change: 27°F/h (15°C/h)  
Relative Humidity: 10 to 90% - no condensation  
Humidity Change: 10%/h  
Altitude from Sea Level: -980 to +9850 ft (-300 to +3000 m)

## **DISPLAY TERMINAL-ELECTRICAL**

The display terminal has the following electrical power requirements.

- 120 V ac, 60 Hz, at 1.0 A, nominal
- 220/240 V ac, 50 Hz, at 0.55 A, nominal

The display terminal requires 90 W of power. Heat dissipation is approximately 332 Btu/h.

## **NONIMPACT PRINTER-ELECTRICAL**

The nonimpact printer has the following electrical power requirements.

104 to 127 V ac single-phase, 59.0 to 60.6 Hz, 2.0 A

or

198 to 242 V ac single-phase, 49.0 to 50.5 Hz, 1.3 A  
216 to 264 V ac single-phase, 49.0 to 50.5 Hz, 1.3 A

The nonimpact printer requires 100 W of power. Heat dissipation is approximately 341 Btu/H.

### **IMPACT PRINTER—ELECTRICAL**

The impact printer has the following electrical power requirements.

104 to 127 V ac single-phase, 59.0 to 60.6 Hz, 4.2 A

or

198 to 268 V ac single-phase, 49.0 to 50.5 Hz, 2.1 A

Power use of this printer is 250 W and heat dissipation is 854 Btu/h.

### **DISPLAY TERMINAL—PHYSICAL**

The display terminal has the following dimensions and mass with the keyboard attached, see figure 1-9.

Height: 15.2 in (386.1 mm)

Width: 21.7 in (551.2 mm)

Depth: 20.5 in (520.7 mm)

Mass: 51 lb (23.1 kg)

### **NONIMPACT PRINTER—PHYSICAL**

The nonimpact printer has the following dimensions and mass, see figure 1-10.

Height: 5.9 in (149.9 mm)

Width: 17.6 in (447.1 mm)

Depth: 15.9 in (403.9 mm)

Mass: 30 lb (13.6 kg) approximately

### **IMPACT PRINTER—PHYSICAL**


The impact printer has the following dimensions and mass, see figure 1-11.

Height: 14.8 in (375.9 mm)

Width: 27.6 in (701 mm)

Depth: 15 in (381 mm)


Mass: 77 lb (35 kg) approximately

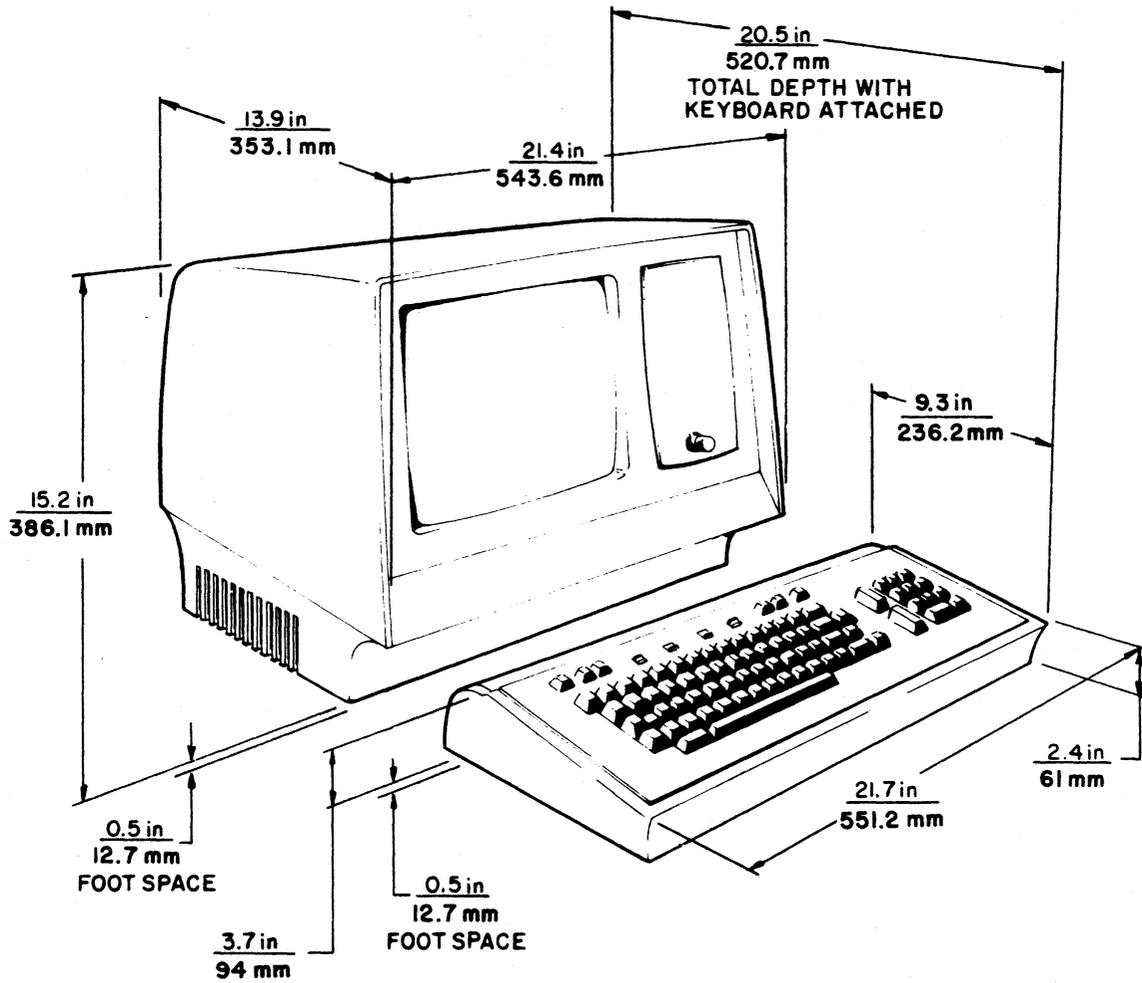

VALUES GIVEN ARE  
MAXIMUM DIMENSIONS

1741-12


Figure 1-9. Display Terminal Dimensions

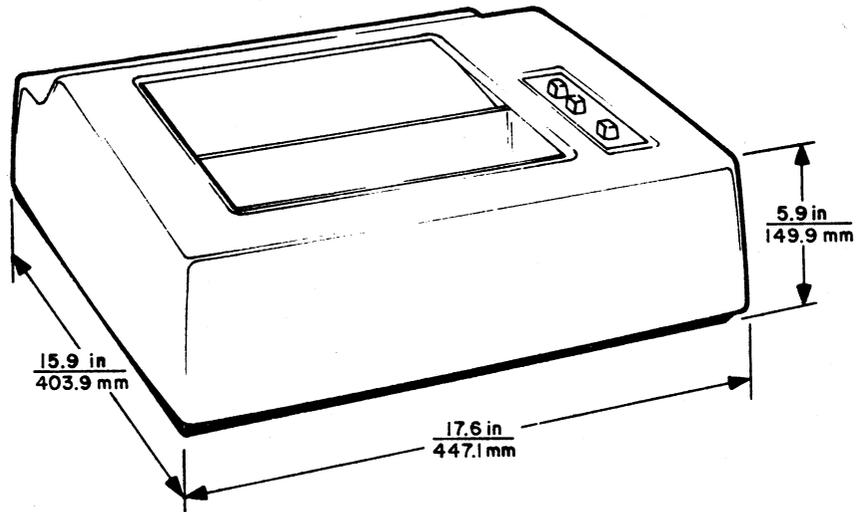

VALUES GIVEN ARE  
MAXIMUM DIMENSIONS

01848-3

Figure 1-10. Nonimpact Printer Dimensions

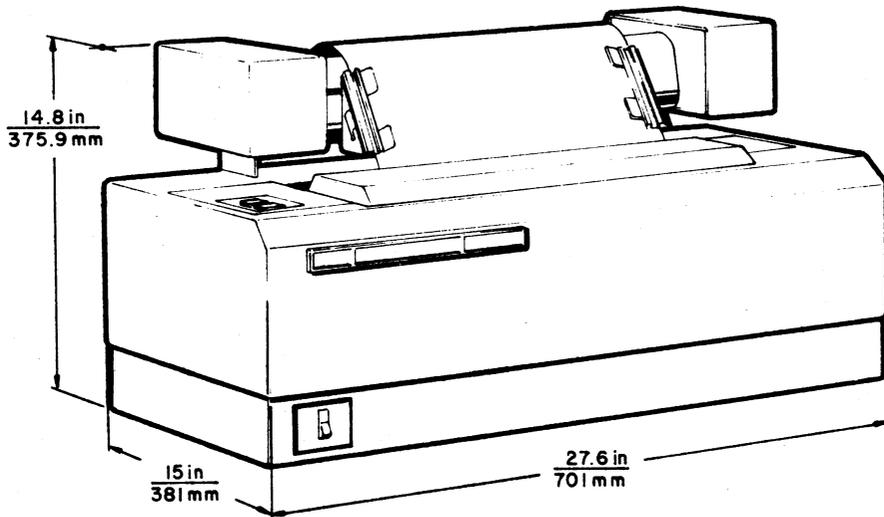

VALUES GIVEN ARE  
MAXIMUM DIMENSIONS

01759-1

Figure 1-11. Impact Printer Dimensions



---

This section title page is included to maintain format continuity and compatibility with other manuals of this type. See the Operators Guide/Reference Manual referred to in the preface of this manual for information on operating the terminal.



---

This section title page is included to maintain format continuity and compatibility with other manuals of this type. The appendix of the associated Operators Guide/Reference Manual (see preface) contains installation information for this terminal, and section 6, Maintenance, of this manual contains checkout information for the terminal.




PCA, A

# THEORY OF OPERATION

The schematic, logic and timing diagrams in section 5 of this manual provide sufficient information for a technician with proper test equipment to identify and correct problems arising from individual circuit or component malfunctions. Section 4 describes the functional theory of the modular assemblies comprising the keyboard display terminal. Additionally, it provides an overview of each assembly comprising the terminal to assist in diagnosing a malfunction to a particular component or part.

The display terminal consists of five functional assemblies: 1) keyboard assembly, 2) video display assembly, 3) logic module assembly, 4) rear panel assembly, and 5) power supply assembly. Figure 4-1 is a functional block diagram of the display terminal. In addition to describing the functional theory of the five principal assemblies of the display terminal, this section also provides descriptions for miscellaneous components that are field-replaceable and a description of the nonimpact printer. The functional theory of the impact printer is described in the reference and field-service manual for the impact printer (see preface for publication number and ordering information).

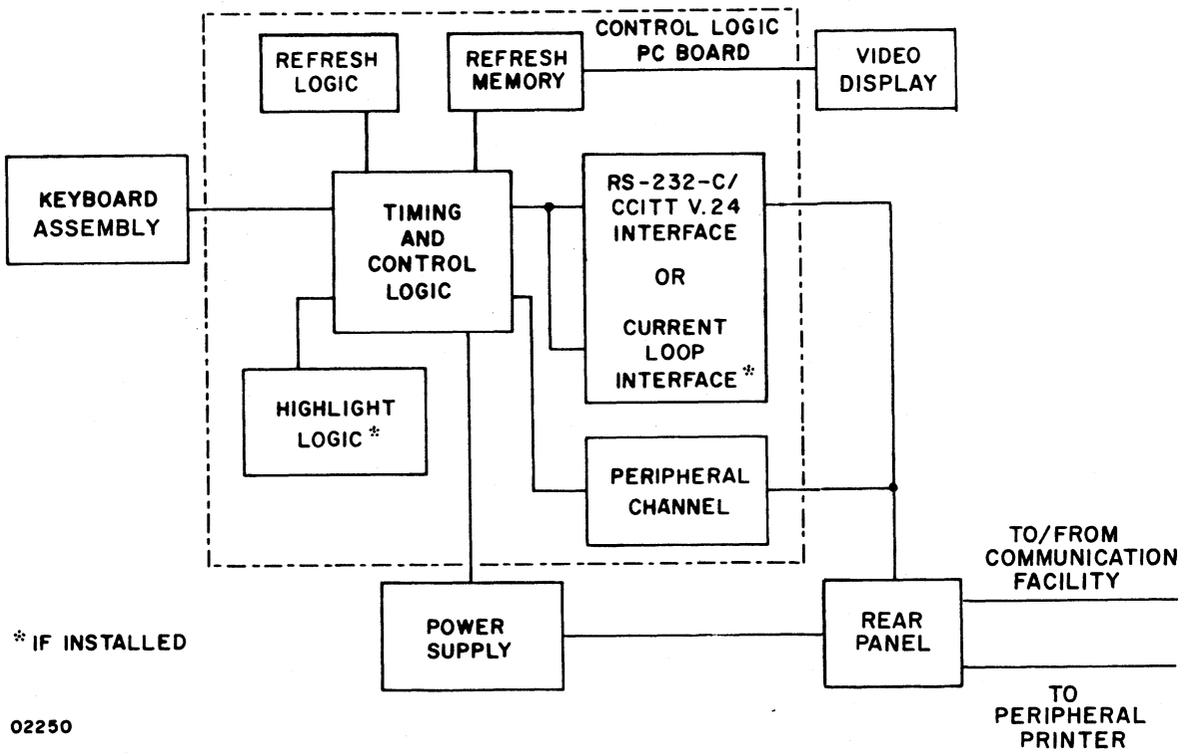

\* IF INSTALLED

02250

Figure 4-1. Functional Block Diagram of Display Terminal

## KEYBOARD ASSEMBLY

Figure 4-2 shows the component parts of the keyboard module. As noted previously, the keyboard provides the terminal operator/display terminal interface, and consequently, the interface to the system of which the terminal is a part. Via the keyboard, the operator controls the operating modes and parameters of the terminal and keys in data for transmission to the central processing unit (CPU).

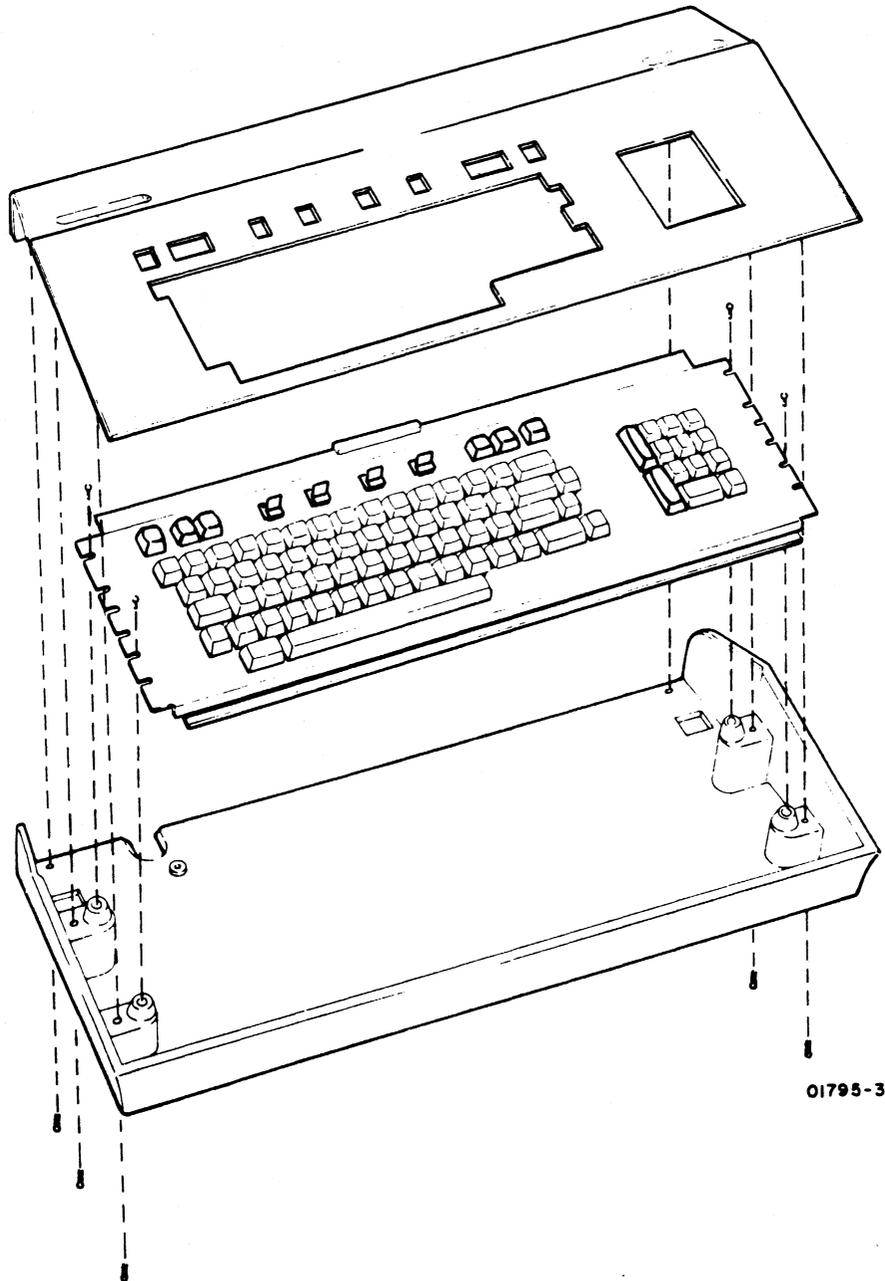


Figure 4-2. Keyboard Module

With the exception of the SHIFT, SHIFT LOCK, CONTROL, REPEAT and BREAK keys, pressing any key on the keyboard enables a seven-bit code to pass to the keyboard interface.\* This code then transfers to the control-logic PC board where it is identified and acted upon accordingly (for example, transmit and display, transmit only, control). All code-encoding keys on the keyboard feature N-key rollover, which means that pressing a key enables the transfer of its code to the keyboard interface, regardless of the state of other keys on the keyboard. For example, even if two keys are pressed and held down, pressing a third key will pass the code associated with the third key to the interface.

The SHIFT, SHIFT LOCK, and CONTROL keys do not generate a code, they modify key codes. The SHIFT and the SHIFT LOCK keys modify key codes in the same manner by permitting access to the second (or uppercase) level of keyboard codes. The CONTROL key allows access to the third (or control level) of keyboard codes. Figures and tables in the appendix of this manual list the codes and symbols associated with each key. Pressing the REPEAT key and holding it down while a data key is pressed and held, permits the code associated with the data key to repeat approximately 15 times per second until the REPEAT key is released. The BREAK key, while not a code-generating key, does pass a signal to the keyboard interface. Pressing the BREAK key causes the Break signal line to remain high (logical 1) for as long as the key is held down.

Table 4-1 shows the keyboard interface signal line assignments. A high level (logical 1) signal on the interface is defined as being between +2.4 and +5.25 V dc. A low level (logical 0) signal on the interface is defined as being between -0.5 and +0.4 V dc. All signals from the keyboard interface, except those coming in from the keyboard toggle switches, are electronically buffered and are not subject to switch-contact bounce. All keyboard power comes from the power supply assembly via the keyboard/display interface cable. The voltages supplied are  $+5.0 \pm 0.25$  V dc and  $-12 \pm 0.60$  V dc. The following paragraphs describe the on/off states of the interface signal lines.

The CO signal line carries a Carrier On signal from the terminal communication channel interface to the keyboard CO indicator. When this line is low, the indicator lights; when high, the indicator is extinguished.

The Page signal goes high when the PAGE key on the keyboard is pressed. This enables the page mode operation of the display screen. When this signal is low (PAGE key up), scroll mode operation of the display screen is enabled.

---

\* The 96/64 and PAGE keys are actually switches and the CO key is actually an indicator.

TABLE 4-1. KEYBOARD INTERFACE SIGNAL LINES

PIN	SIGNAL	PIN	SIGNAL
1	CO	14	High Rate
2	Page	15	Low Rate
3	Data 2 <sup>6</sup>	16	Odd Parity
4	Data 2 <sup>5</sup>	17	Even Parity
5	Data 2 <sup>4</sup>	18	Signal Ground
6	Data 2 <sup>3</sup>	19	Open
7	Data 2 <sup>2</sup>	20	Frame Ground
8	Data 2 <sup>1</sup>	21	Open
9	Data 2 <sup>0</sup>	22	Open
10	Data Ready	23	+5 V dc
11	Online/Local	24	Signal Ground
12	Full/Half Duplex	25	-12 V dc
13	Break	Shell	Frame Ground

A high level on a Data 2<sup>x</sup> signal line equals a set bit, while a low level on a Data 2<sup>x</sup> signal line equals the absence of a bit, or logical 0.

The Data Ready signal line switches from a normally high-level condition to a low-level condition for between 8 to 20 microseconds to inform the display logic that new data is on the Data 2<sup>x</sup> signal lines and is ready to be read.

The Online/Local signal line goes high when the ON LINE/LOCAL keyboard switch is in the ON LINE position; it goes low when the switch is in the LOCAL position.

The Full Duplex/Half Duplex signal line goes high when the FULL DUP/HALF DUP keyboard switch is in the FULL DUP position; it goes low when the switch is in the HALF DUP position.

The Break signal line goes high when the BREAK keyboard key is pressed and it remains high until the key is released, at which time it goes low.

The High Rate signal line goes low when the HIGH RATE/300/LOW RATE keyboard switch is in the HIGH RATE position; it goes high when the switch is in either the 300 or the LOW RATE position.

The Low Rate signal goes low when the HIGH RATE/300/LOW RATE keyboard switch is in the LOW RATE position; it goes high when the switch is in either the 300 or the HIGH RATE position.

The Odd Parity signal line goes low when the ODD PAR/NO/EVEN PAR keyboard switch is in the ODD PAR position; it goes high when the switch is in either the NO or the EVEN PAR position.

The Even Parity signal line goes low when the ODD PAR/NO/EVEN PAR keyboard switch is in the EVEN PAR position; it goes high when the switch is in either the NO or the ODD PAR position.

## **VIDEO DISPLAY ASSEMBLY**

The video display assembly (monitor) enables monitoring of electronically encoded information. The monitor receives fixed-rate horizontal and vertical sync inputs from the control logic counters, and the video (blank and unblank) signals are not modulated onto the sync pulses. The video signal inputs to the monitor come from the symbol generator and read/write memory (refresh memory) circuits on the logic module PC board. This method of separating the video and sync signals to the monitor nearly eliminates vertical roll and horizontal tearing of displayed images.

The monitor receives only an unregulated +23-V dc input from the power supply module. From this voltage input, the monitor produces all of the other voltages, including the 12-kV anode voltage necessary for operation of the crt. The principal subassemblies of the video display assembly are shown in figure 4-3. These subassemblies are the crt, the vertical choke, the monitor PC board, the +15-V regulator assembly, the crt yoke assembly and crt cap, and the high-voltage transformer. Following are brief descriptions of each of these subassemblies.

### **CATHODE-RAY TUBE (CRT)**

The crt is a standard 12-inch display tube which uses a P4 white phosphor screen and a bonded, nonglare faceplate. The crt is a replaceable item and procedures for removing and replacing it are included in section 6.

### **VERTICAL CHOKE**

The vertical choke is connected in series with the vertical yoke coil; it suppresses oscillations in the vertical output circuit to provide a linear vertical sweep motion of the crt electron beam. Procedures for replacing the vertical choke are included in section 6.

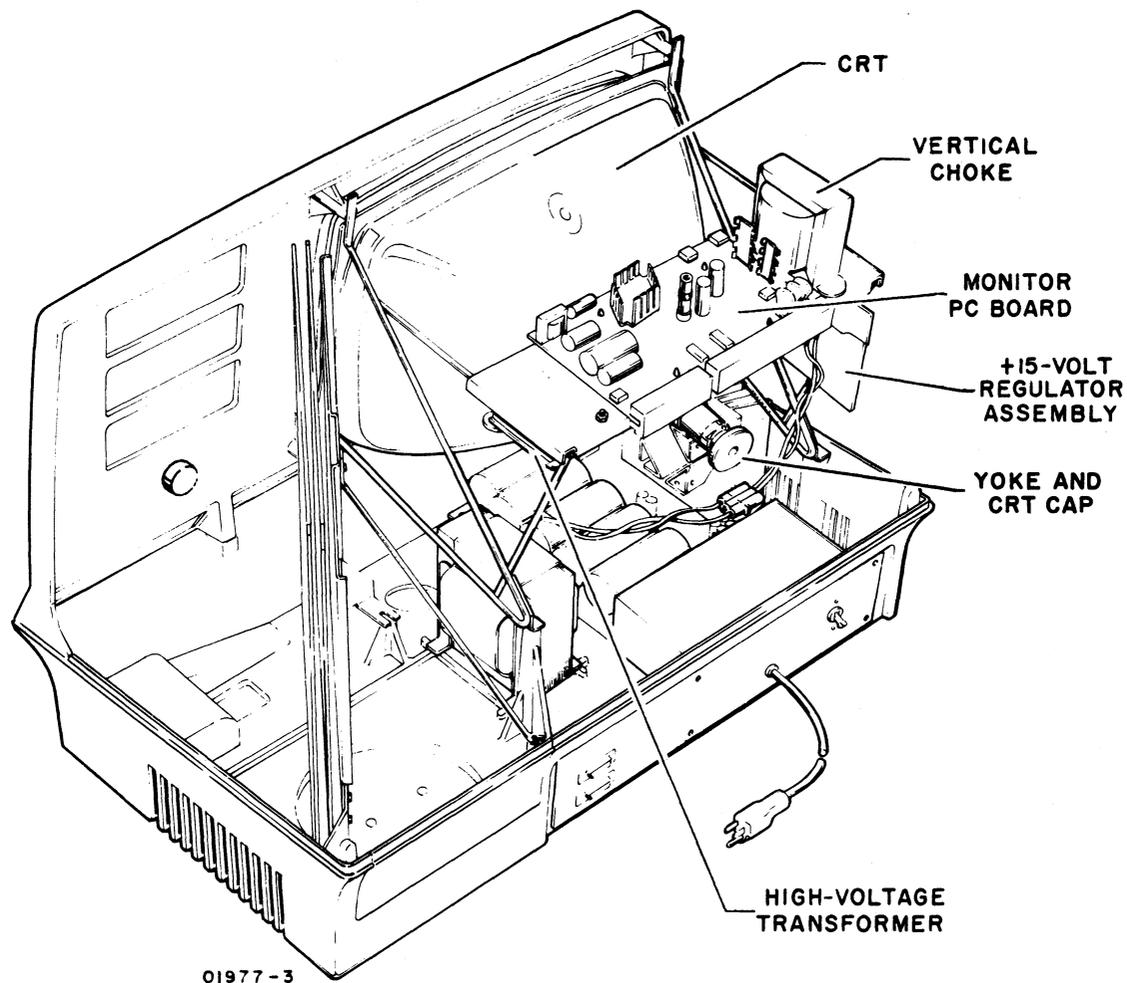


Figure 4-3. Location of Video Display Subassemblies

### MONITOR PC BOARD

The monitor PC board contains the horizontal and vertical sync and amplifier circuits for controlling the sweep of the electron beam across and up and down the crt screen. It also carries the video amplifier circuits that control blanking and unblanking of the beam. The sync circuits incorporate a feature that shuts off the high voltage (12 kV) upon loss of either the horizontal or vertical sync pulses. Adjustment procedures for vertical height and linearity, and for contrast and focus controls mounted on the monitor PC board are included in section 6 of this manual, as are procedures for removing and replacing the PC board. A schematic of this PC board is included in section 5. The PC board also has a +5-V dc regulator circuit on it for producing a regulated +5 V dc from the +15-V dc output of the +15-V regulator assembly.

## +15-V DC REGULATOR ASSEMBLY

The +15-V dc regulator assembly is the large heat sink and regulator circuits mounted on the left rear side of the display unit. The regulator circuit consists of a +15-V dc regulator and a pass transistor, each mounted in a round metal package (TO-3 type). Figure 4-4 shows the mounting location of the regulator assembly on the video monitor chassis and the location of the pass transistor and regulator circuit on the heat sink.

The regulator assembly accepts an unregulated +23-V dc input from the power supply module and converts it to a regulated +15-V dc output for use by the monitor PC board. The +15-V output splits to furnish power to two locations on the monitor PC board. One output furnishes +15 V to circuits using this power level directly, while the second supplies a +5-V dc regulator circuit to produce a regulated +5-V dc output. Refer to the Noncomposite Video Display Electronics Schematic Diagram and the +15-V Regulator Assembly Schematic Diagram in section 5 of this manual for circuit details. Section 6 of this manual contains the procedures for checking the regulator assembly and for replacing it if necessary.

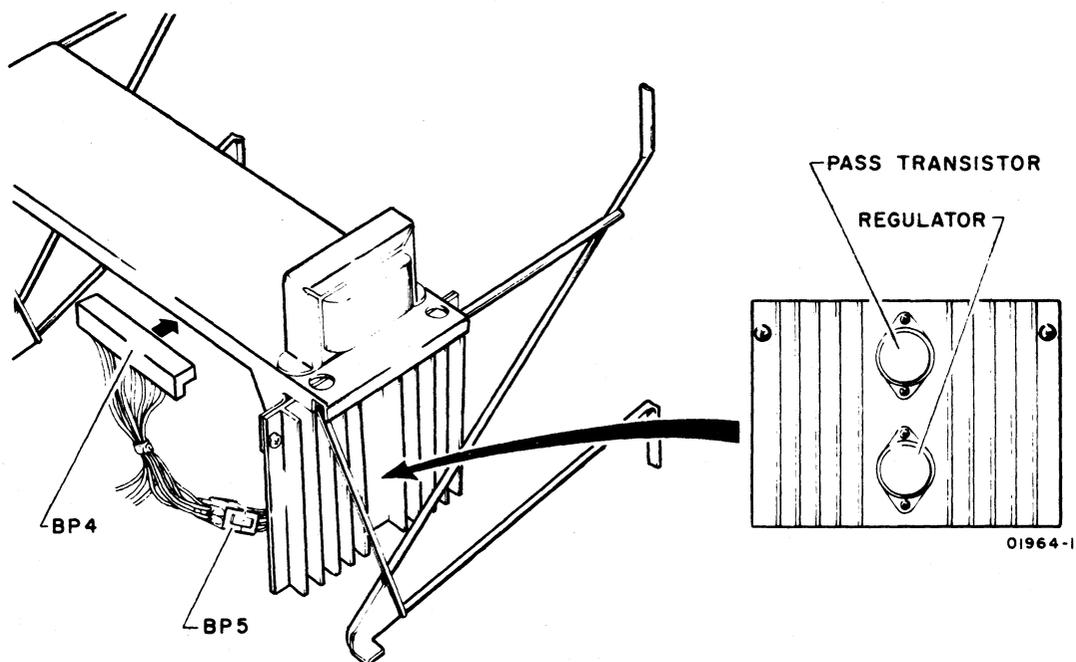


Figure 4-4. +15-V dc Regulator Assembly

## **CRT YOKE AND CRT CAP**

The crt yoke provides horizontal and vertical deflection of the crt electron beam so that the beam sweeps the screen properly. This is accomplished by applying the horizontal and vertical amplifier outputs to the horizontal and vertical deflection coils in the yoke assembly. The yoke assembly is not expected to fail unless physically damaged but since that possibility does exist, replacement and adjustment procedures for the yoke assembly are included in section 6. The yoke also has some small permanent magnets affixed to it. These magnets are used to minimize geometric distortion of the video display. Section 6 also contains procedures for installing these magnets on a new yoke assembly to minimize the effects of geometric distortion.

## **HIGH-VOLTAGE TRANSFORMER**

The high-voltage transformer produces all high dc voltages (-190, +45, +465, and +12 kV dc) used within the video display assembly by boosting the output of the horizontal amplifier. The secondary of the transformer is tapped at various points so that outputs can be rectified and used in the high voltage portions of the monitor PC board electronics.

### **WARNING**

Never touch or attempt to replace the high voltage transformer while power is applied to the terminal.

## **LOGIC MODULE ASSEMBLY**

The logic module assembly is the heart of the display terminal in that it carries the bulk of the electronic circuits for the terminal. Figure 4-5 shows the location of the PC board within the terminal and figure 4-6 is a detailed block diagram of the circuits mounted on the PC board. The following text describes the general functions of the circuits on the logic PC board. Logic and timing diagrams for these circuits are included in section 5.

The function of the phase-lock loop circuit is to lock vertical sync timing for the video display to the frequency of the ac input power. The circuit accomplishes this by comparing the output of the vertical sync circuit with the frequency of the ac input power, and then adjusting the output of a 14.5962-MHz oscillator slightly upward or downward, as necessary, to maintain optimal synchronization.


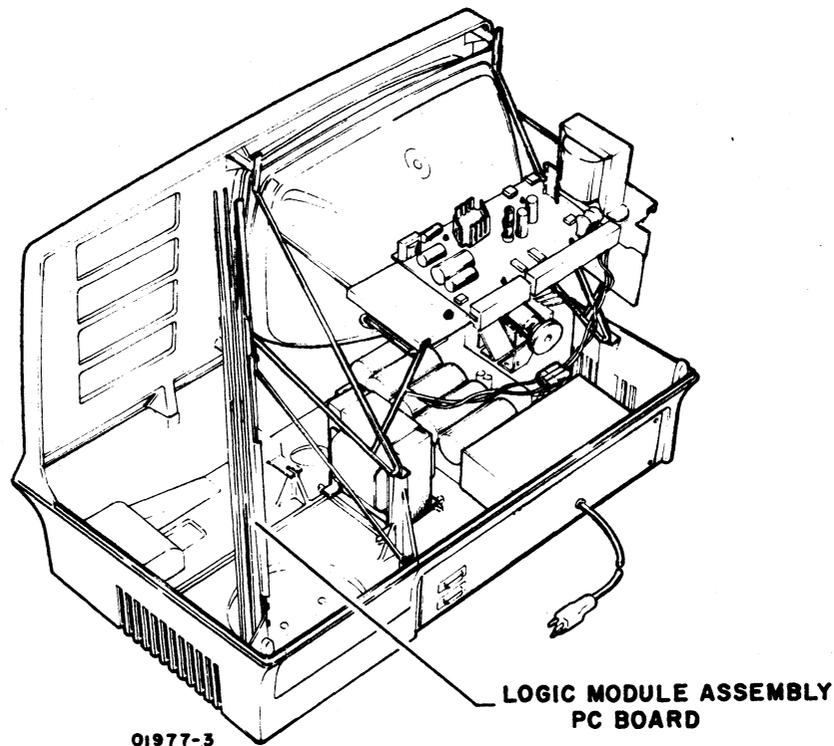


Figure 4-5. Location of Logic Module Assembly PC Board in Display Terminal

The output of the 14.5962-MHz oscillator is a 68.51-ns clock pulse (center frequency), which corresponds to one display dot time. Each character space consists of nine horizontal dot times; seven are displayable and two are used for spacing between characters. Because a display line can consist of 80 characters, there are  $9 \times 80$  (720) dot times per horizontal display line ( $49.33 \mu\text{s}$ ). During this  $49.33 \mu\text{s}$  time period, the electron beam of the crt moves from the left side of the screen to the right side. To begin a new dot line, the beam must move back to the left side of the screen. This movement of the beam takes 198 dot times, or  $13.56 \mu\text{s}$  since nothing has to display during this horizontal retrace time. One complete cycle of the beam from left to right and back is called a scan line and this scan line takes  $49.33 \mu\text{s}$  plus  $13.56 \mu\text{s}$ , or  $62.89 \mu\text{s}$  to complete.

Vertically, a character has ten dot positions, nine are displayable and one is used for spacing between horizontal scan lines and for cursor display. This means that it requires 240 scan lines to complete a page of 24 character lines. This, in turn, takes  $15.09 \text{ ms}$ , or  $240$  scan lines times  $62.89 \mu\text{s}$  per scan line. To complete an entire display frame cycle, the electron beam of the crt must move from its final display position at the bottom of the display screen up to the upper left corner of the screen. The time allotted for this movement of the beam to occur in a 60-Hz

4-10

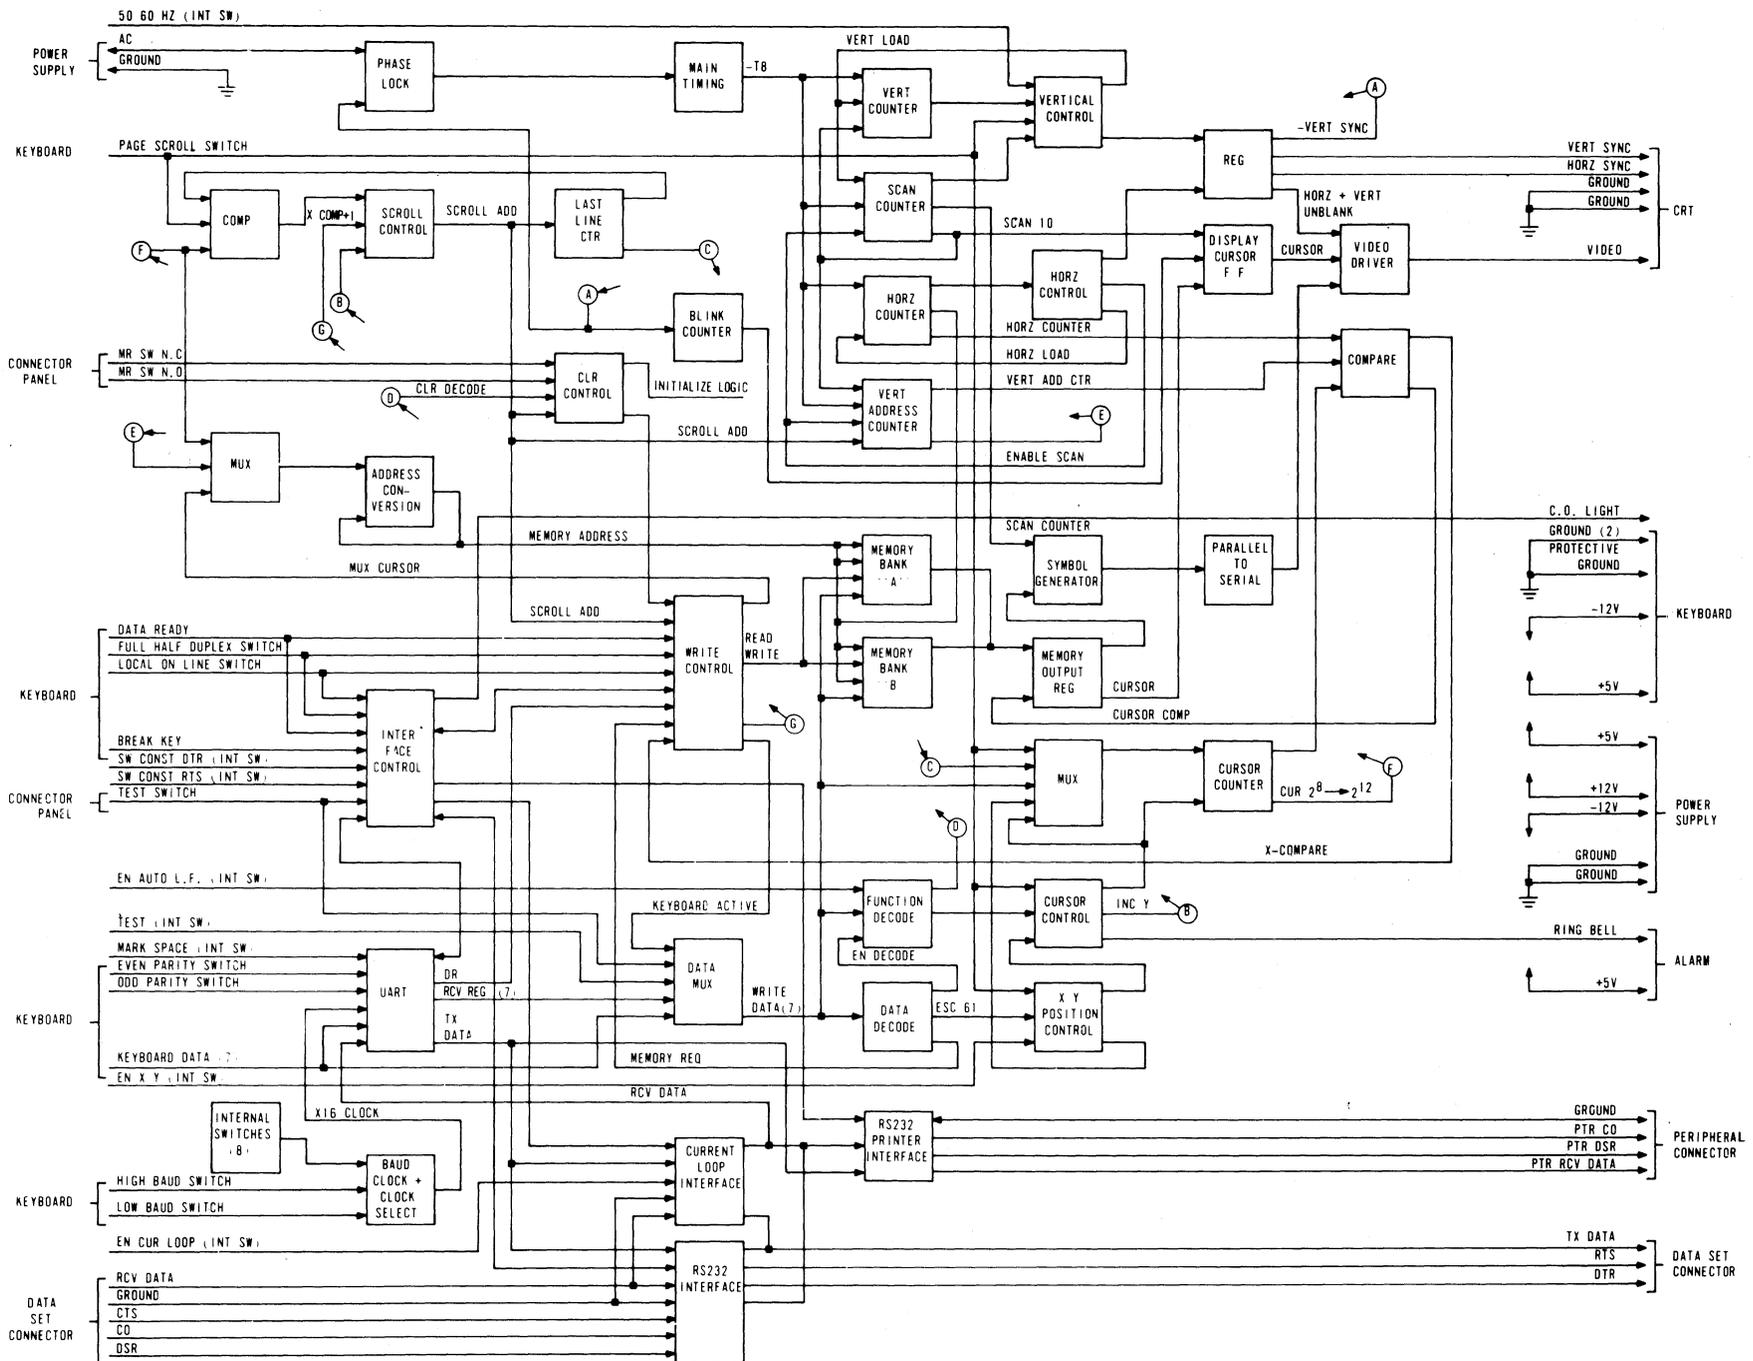

62957400 A

Figure 4-6. Logic Module Assembly PC Board Block Diagram

terminal is 1.57 ms. Total cycle time for one complete display frame on a 60-Hz terminal is, therefore, 15.09 ms plus 1.57 ms, or 16.66 ms. Timing for 50-Hz terminals is essentially the same, except that time allotted for moving the beam of the crt from its final display position up to the upper left corner of the screen is 4.91 ms. This means that a 50-Hz terminal has a display frame time of 20 ms, rather than the 16.66-ms frame time of the 60-Hz terminal.

During the time that the electron beam is scanning a display screen, its position must be tracked so that it can be determined what the beam is supposed to be doing at any given dot position on the screen. The circuits shown in figure 4-6 track the motion of the beam via the horizontal and vertical scan counters, and control the presentation of character information on the screen by presenting the crt with video blank and unblank signals at the appropriate dot positions.

Other circuits shown in figure 4-6 are used to control where, when, and how video information is displayed on the crt screen. Since display information may originate from either the keyboard or the communication channel, control circuits are provided to multiplex display information into the refresh memory. Information from the memory must be converted into video blank and unblank signals for each dot position on the screen, and cursor-positioning control inputs from either the keyboard or the communication channel must be monitored and acted upon to move the cursor to any desired character position on the screen. All keyboard and internal control switch positions are monitored by the control logic so that the display reacts in accordance with the selected operating parameters of the terminal.

In addition, the logic module PC board has UART (universal asynchronous receiver/transmitter) circuitry to assemble serial communication channel data into parallel words for use within the terminal, and to serialize keyboard data from the terminal for transmission on the communication channel. Circuits are also provided for either a current loop or an RS-232-C communication channel interface and for an RS-232-C peripheral printer interface.

## **REAR PANEL ASSEMBLY**

Figure 4-7 indicates the location of the rear panel assembly on the display terminal and shows the external layout. The panel mounts the peripheral printer and communication facility interface connectors, the TEST/NORMAL switch, and the ac entry panel housing. The ac entry panel housing is the entry point for ac power to the terminal, and it contains circuit breaker CBI and a radio frequency interference (RFI) filter. On 50-Hz, 220-/240-V ac terminals, connector CP2 (coming out of the ac entry panel housing internally), is the connector having the LOW and NORMAL wire connectors for matching the ac input power (nominal 220 V or 240 V) to the power requirements of the display terminal (see AC/DC Power Interconnect Diagram in section 5 for details).

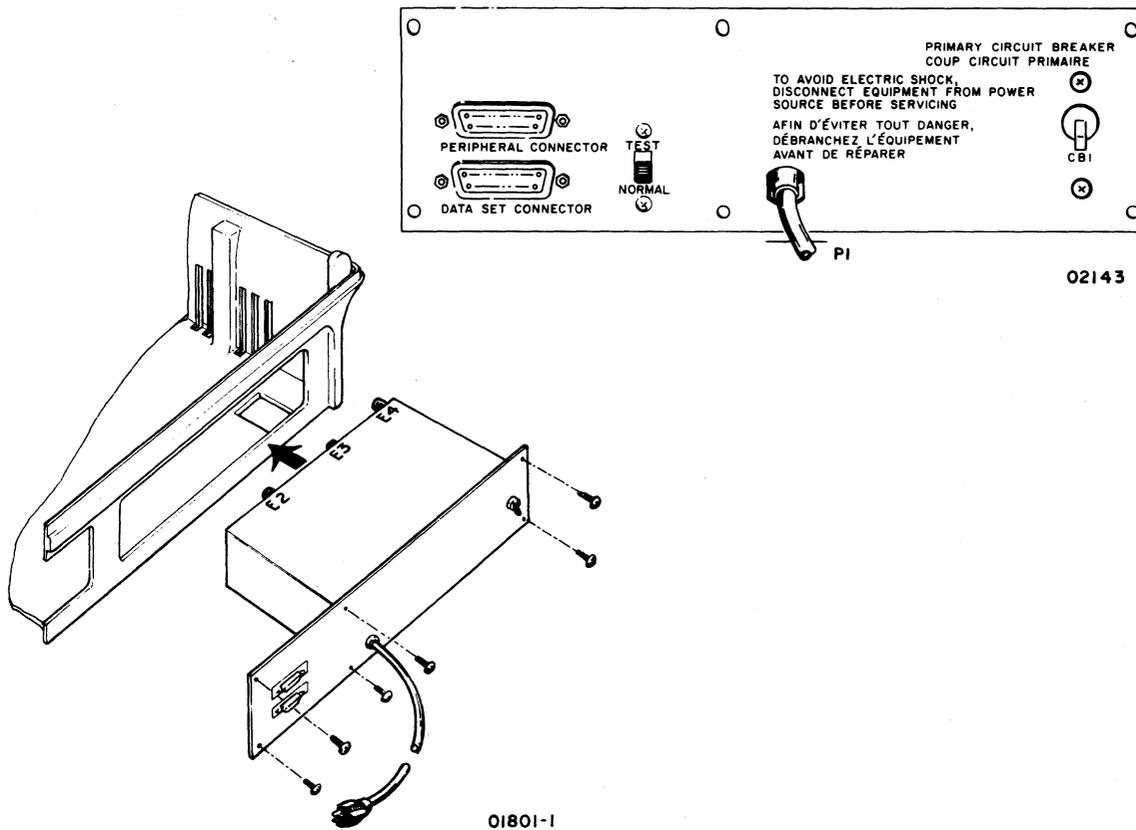


Figure 4-7. Terminal Rear Panel Location and Layout

Circuit breaker CBI and the RFI filter are the only field replaceable components on the rear panel assembly. Procedures for replacing these two items are included in section 6 of this manual.



## POWER SUPPLY ASSEMBLY

Figure 4-8 shows the top and front views (relative to front of display) of the power supply and figure 4-9 shows its mounting location within the display unit. The power supply receives its ac input power via CP2 and distributes dc voltages to the keyboard, video assembly, and logic module assembly via HJ2. Output voltages from HJ2 are as follows:

<u>HJ2 Pin No.</u>	<u>Output</u>
1	19 V ac at 0.1 A, maximum
2	Not used
3	+23 V dc at 1.5 A, maximum
4 through 6	Ground

7	+12 V dc at 0.2 A, maximum
8 and 9	Ground
10	-12 V dc at 0.2 A, maximum
11 and 12	+5 V at 6.0 A combined, maximum

An ac input circuit breaker, CB1, is located on the rear panel of the display terminal and is rated at 3.0 A for 115-V ac terminals or 2.0A for 220/240-V ac terminals.

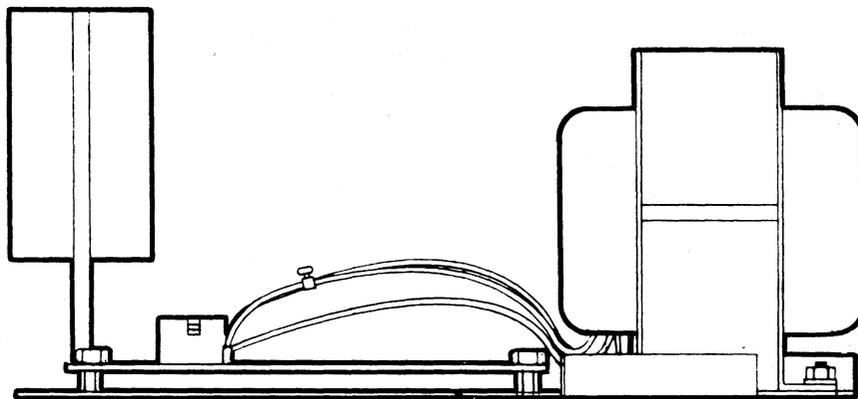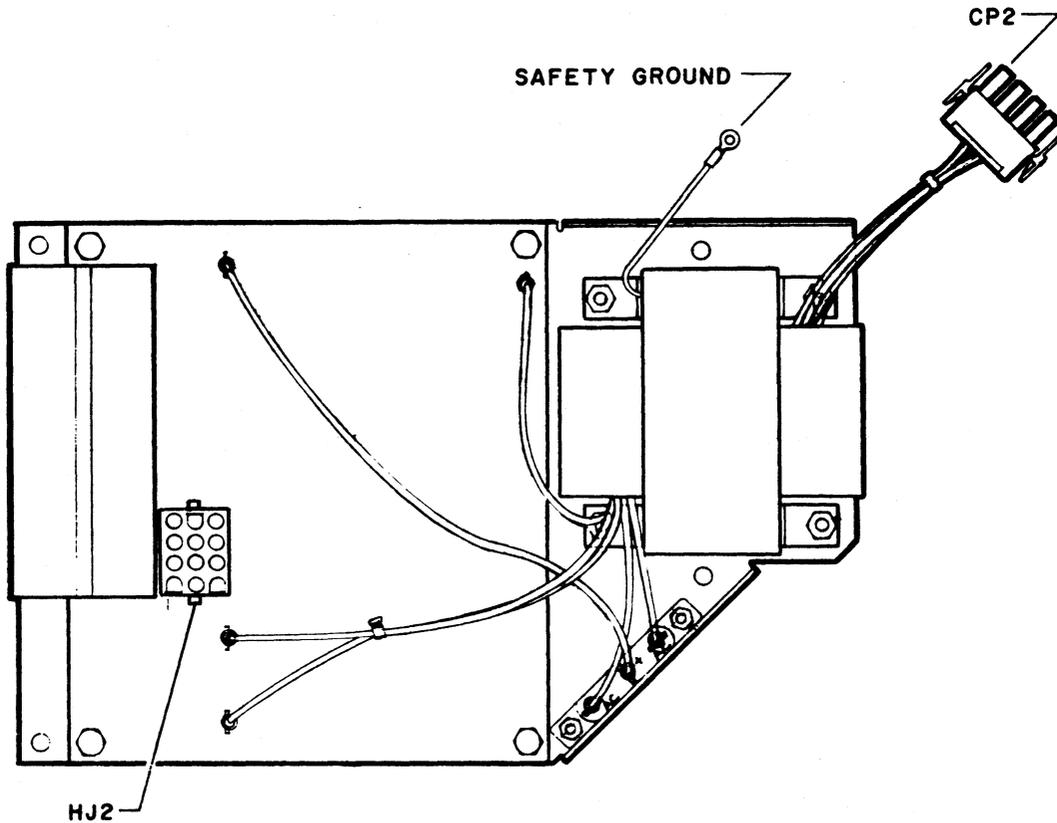

02634

Figure 4-8. Top and Front Views of Power Supply Module

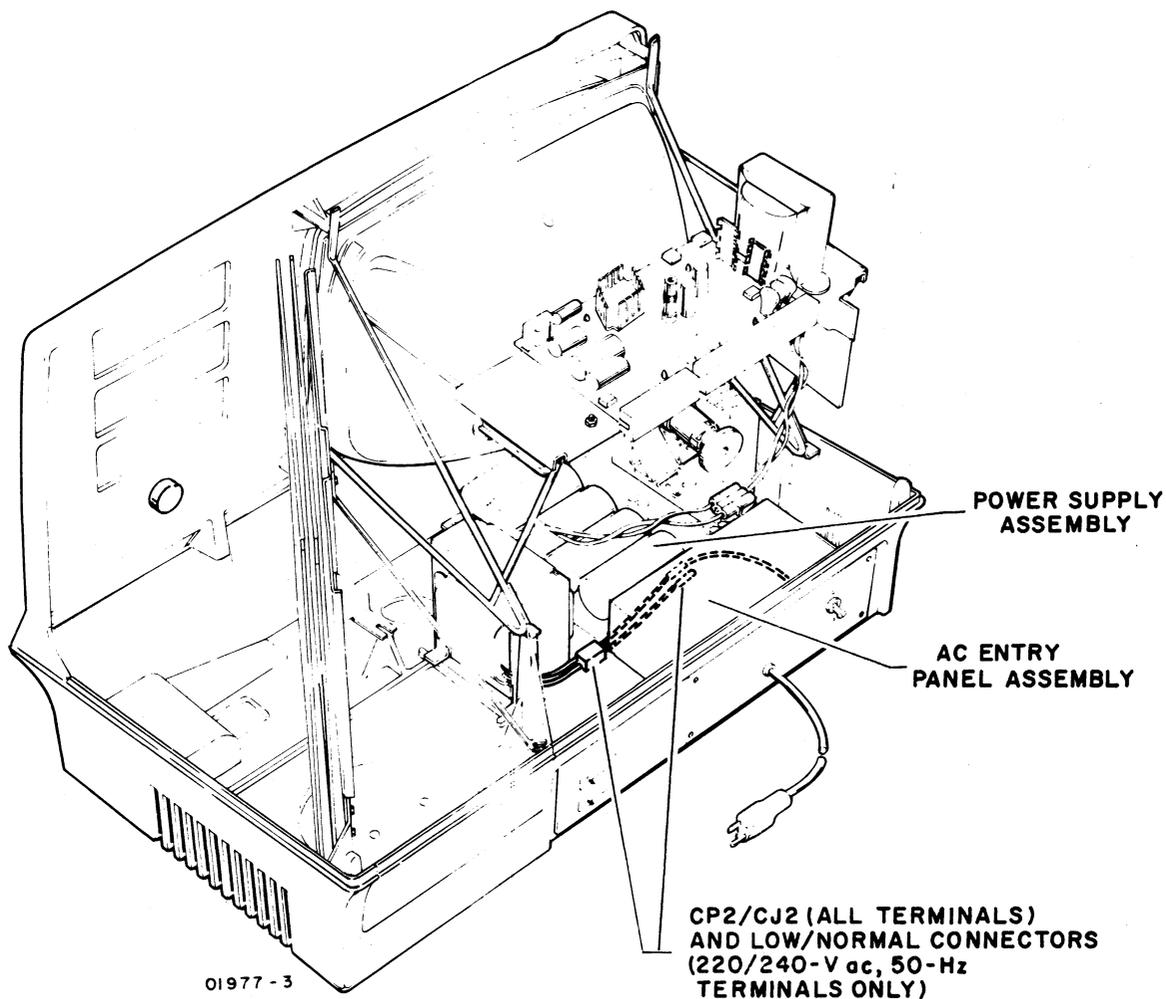


Figure 4-9. Location of Power Supply in Display Terminal

AC input power enters the ac entry panel at the rear of the display terminal and is coupled to the power supply via cable connectors CJ2/CP2. Jumper connections on CJ2 are used to match input line voltage to the primary of the power supply transformer.

<u>AC Input Voltage</u>	<u>Line Input to CJ2</u>	<u>Jumpers on CJ2</u>
115	Pins 1 and 2	Pins 1 to 3 and 2 to 5
220 (Low)	Pins 1 and 4*	Pin 2 to 3
240 (Normal)	Pins 1 and 6*	Pin 2 to 3

\* Check AC/DC Power Interconnect Diagram in section 5 for internal connection of 220 V ac (low) or 240 V (normal) inputs.

## NONIMPACT PRINTER

The nonimpact printer is a serial-input, RS-232-C-compatible, thermal printing device capable of printing at speeds up to 30 characters per second. A single printhead, containing a 5- by 7-dot matrix, is used to print one character at a time over an 80-character print line. Characters are formed by bringing the printhead into contact with heat-sensitive paper and heating selected elements of the matrix. The printer is capable of performing the following operations in response to input data commands.

- Character Print — printhead moves down, contacts the paper, and printhead elements heat to print the selected character. After printing, the printhead moves back off the paper to the next column for printing (see appendix A for characters and control code listing).
- Backspace — printhead moves one column to the left.
- Line Feed — paper advances either one or two lines, depending on setting of Line Spacing switch.
- Carriage Return — printhead returns to left margin of paper. Printer does an automatic carriage return and line feed after reaching print column 80.

Figure 4-10 shows the various subassemblies of the nonimpact printer. Maintenance philosophy for the printer power supply is to replace it entirely upon failure; the four regulated outputs of the printer power supply (+5, +16, +24, and -24 V dc) should measure within  $\pm 5$  percent of their nominal output level. The following paragraphs discuss the functional theory of the logic and interface circuits of the printer as related to operation of the print mechanism.


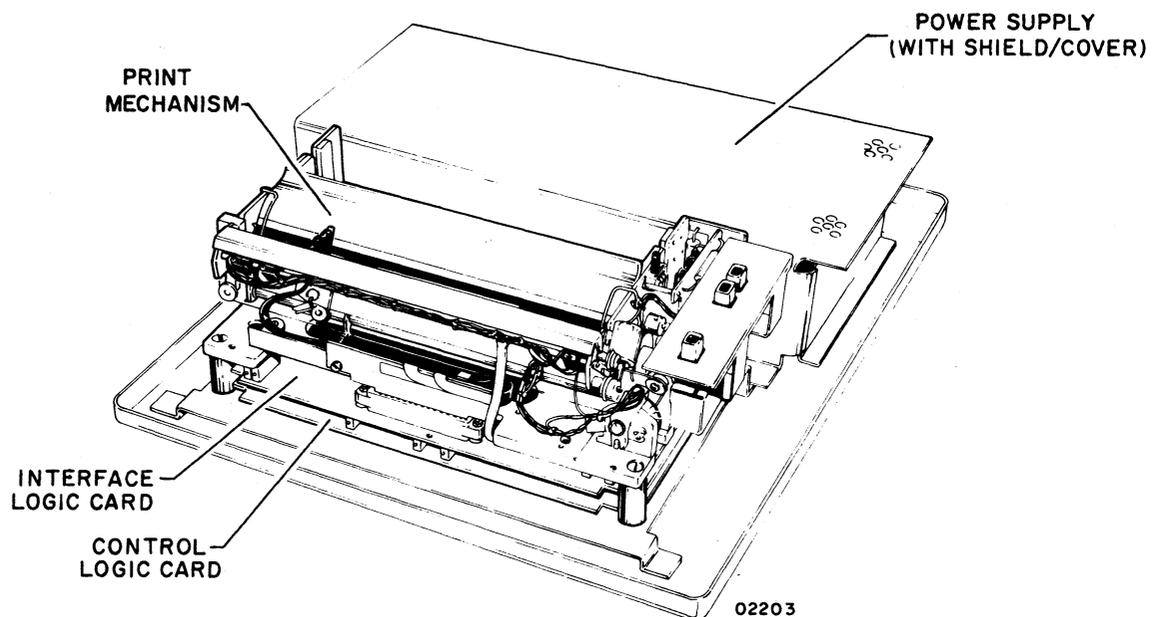


Figure 4-10. Nonimpact Printer Subassemblies


Interface connectors, power connectors, fuse holder wiring, and internal cable routing for the nonimpact printer are identified in figure 4-11. The replaceable power supply is shown in relation to the connectors near the rear panel of the printer cabinet. For the pin assignments of the RS-232-C interface connector, refer to section 1 and the table for the Peripheral Connector Pin Assignments. The J5 connector shown in the diagram is not used in this subsystem application.

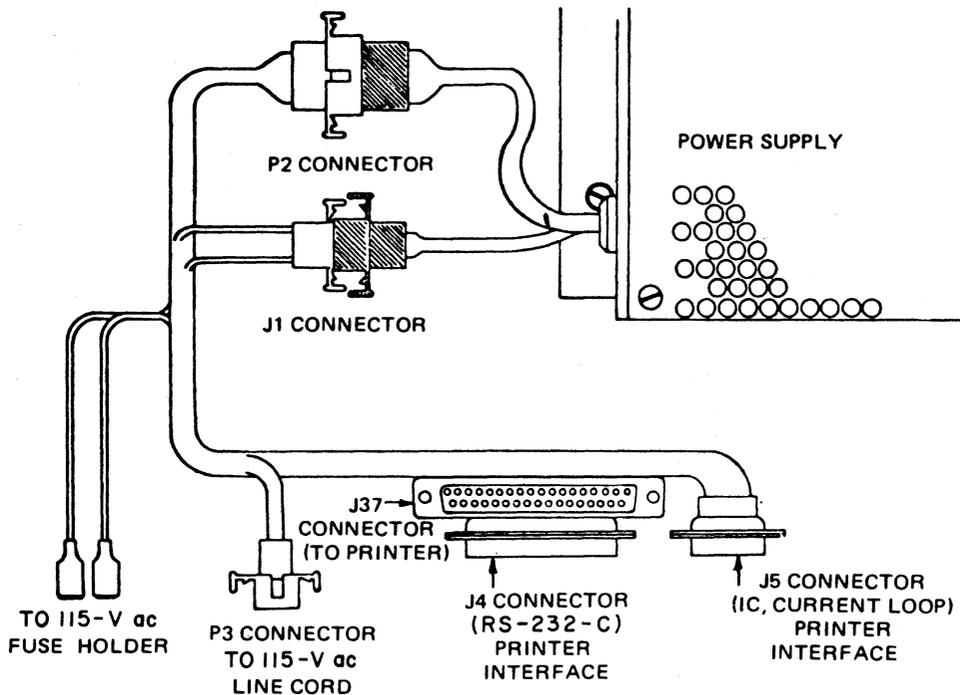

02635


Figure 4-11. Nonimpact Printer Wiring Harness

Figure 4-12 is a functional block diagram of the printer components and figure 4-13 shows the location of various print mechanism components. Refer to this latter figure to locate components as they are described in the following text. As shown in figure 4-12, serial input data enters a serial-to-parallel converter. When the converter receives the Stop bit of an input word, the word shifts to decoder/encoder logic and a Start pulse starts the command logic. Parity error checking is also done during the Stop bit time, and if an error is detected, an error code goes to the decoder/encoder in lieu of the data word code and the Start pulse starts the command

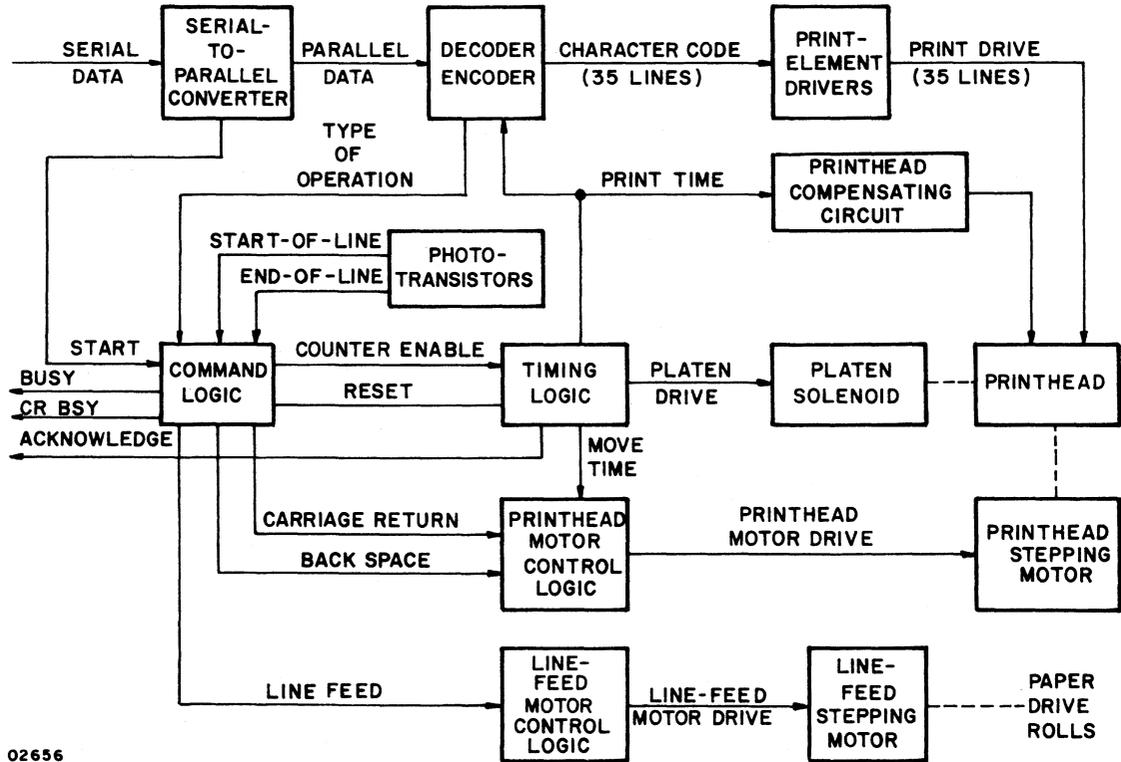

02656

Figure 4-12. Nonimpact Printer Block Diagram

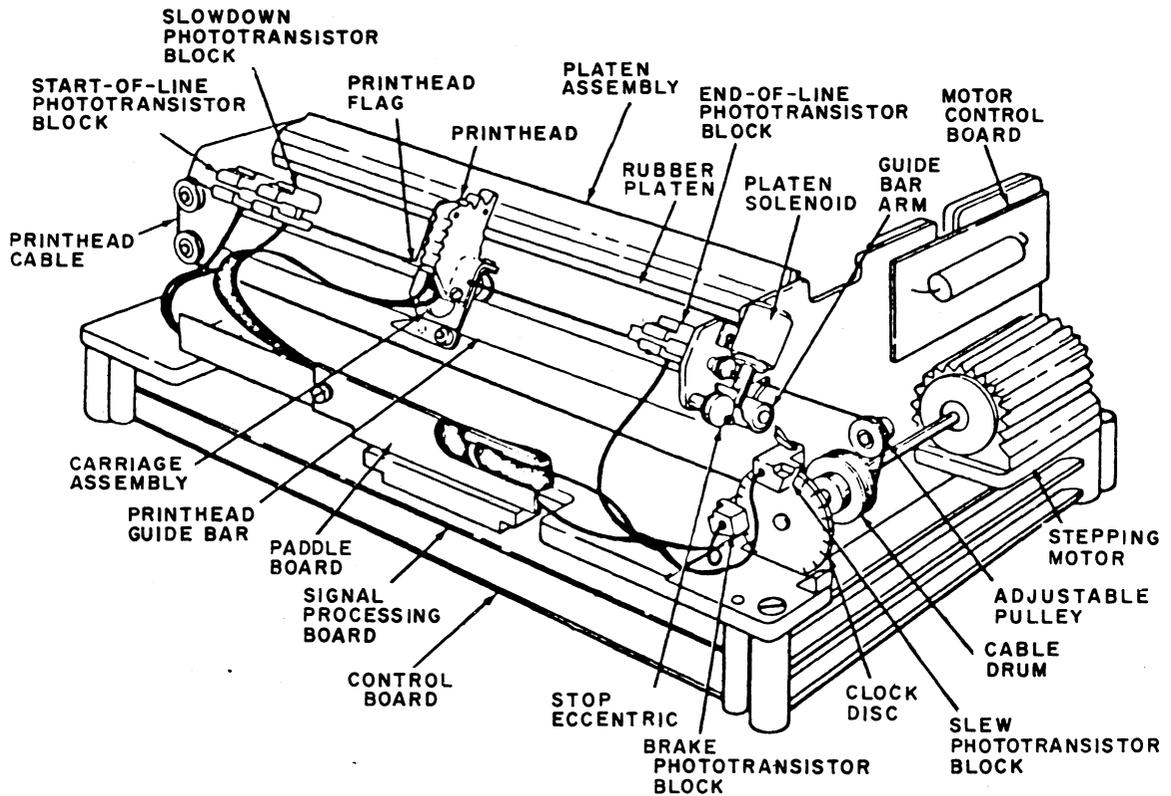

02637

Figure 4-13. Nonimpact Printer Print-Mechanism Assembly

logic. The decoder/encoder indicates the type of operation (print or control) to be performed to the command logic. Once an operation starts, the Busy signal rises and remains high until the operation is complete (about 32 ms).

A character-print operation activates the timing logic via a Counter Enable signal; the timing logic, in turn, first energizes the platen solenoid with a Platen Drive signal and then begins moving the printhead down toward the platen. Figure 4-14 shows the timing for a character print operation. As the printhead contacts the paper and moves it against the platen, the timing logic turns on the Print Time line, which in turn enables the decoder/encoder to pass character code information to the print element driver circuits. The printhead compensating circuit also energizes at this time to complete the printhead element circuit. The printhead compensating circuit controls the heating of the printhead heater elements relative to the printing speed. The elements specified by the input character code then heat up to transfer a dot-matrix representation of the desired character to the heat-sensitive paper. Timing logic then terminates the Print Time and Platen Drive signals, and the printhead moves back from the platen as the platen solenoid spring is released. As an

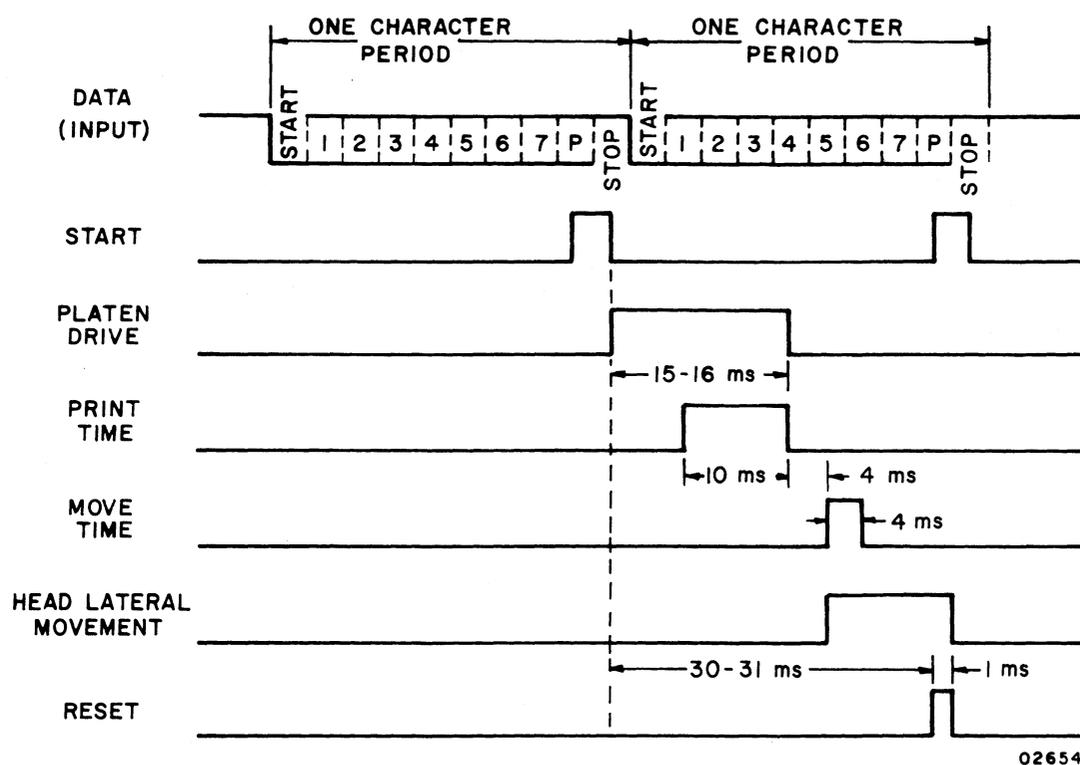


Figure 4-14. Nonimpact Printer Character Print Timing

indication that printing is complete, timing logic causes the Acknowledge signal line to go low. During the time the printhead is returning to its start position, the timing logic generates a Move Time pulse. The Move Time pulse activates the printhead motor-control logic, which in turn causes the printhead stepping motor to move the printhead to the next character position. When this operation is complete, the timing logic issues a Reset pulse to the command logic to reset the command logic in preparation for the next operation. As the command logic resets, the Busy signal drops.

A backspace operation is much the same as a character-print operation, except that a backspace code does not enable the heating of any print elements and causes printhead motor-control logic and the printhead stepping motor to move the printhead back one space.

Line feed operations are also similar to the preceding two operations, but differ in the following manner. The line-feed operation blocks both printing and printhead movement by inhibiting all outputs from the timing logic except the Reset and Acknowledge signals. The line-feed code raises a Line Feed signal from the command logic to activate the line-feed motor-control logic and line-feed stepping motor in lieu of the printhead control circuits. The line-feed stepping motor advances paper either one or two lines, depending upon the setting of the line-spacing switch. Figure 4-16 shows the timing for a line-feed operation. The end-of-line phototransistor initiates a line-feed/carriage-return operation if the printhead attempts to move past the 80th character position of a print line. The start-of-line phototransistor is used to terminate either the automatic line-feed/carriage-return operation or a code-input-initiated carriage-return operation.

A receive carriage-return code, performs only a carriage-return operation and does not automatically line-feed the print mechanism; this occurs in the following manner. The decoder decodes a carriage-return operation and specifies that type of operation to the command logic, which started as the carriage-return code shifted into the decoder. The command logic, in turn, generates a Carriage Return signal to the printhead motor-control logic, which moves the printhead in reverse via the printhead stepping motor until the start-of-line phototransistor senses the printhead and stops the carriage-return operation. The command logic holds the Busy signal high for a short time after the printhead has returned to the left margin (column 1 or start-of-line) to ensure that the printhead is stable and ready to accept the next print-character command. Figure 4-16 shows the timing for a carriage-return operation.

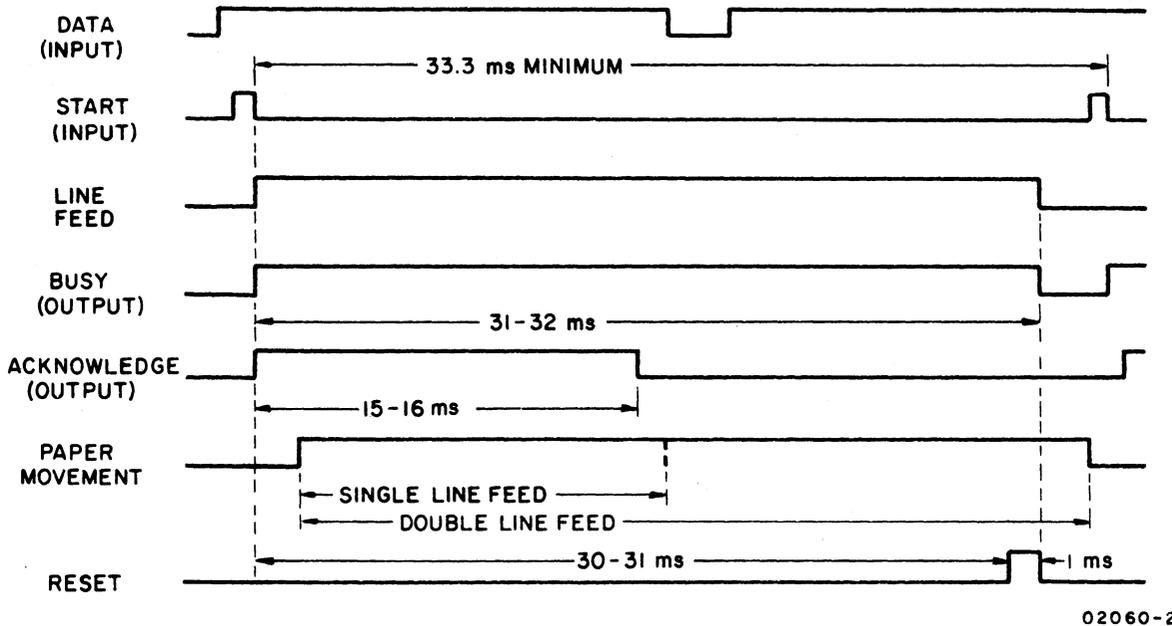


Figure 4-15. Nonimpact Printer Line Feed Operation Timing

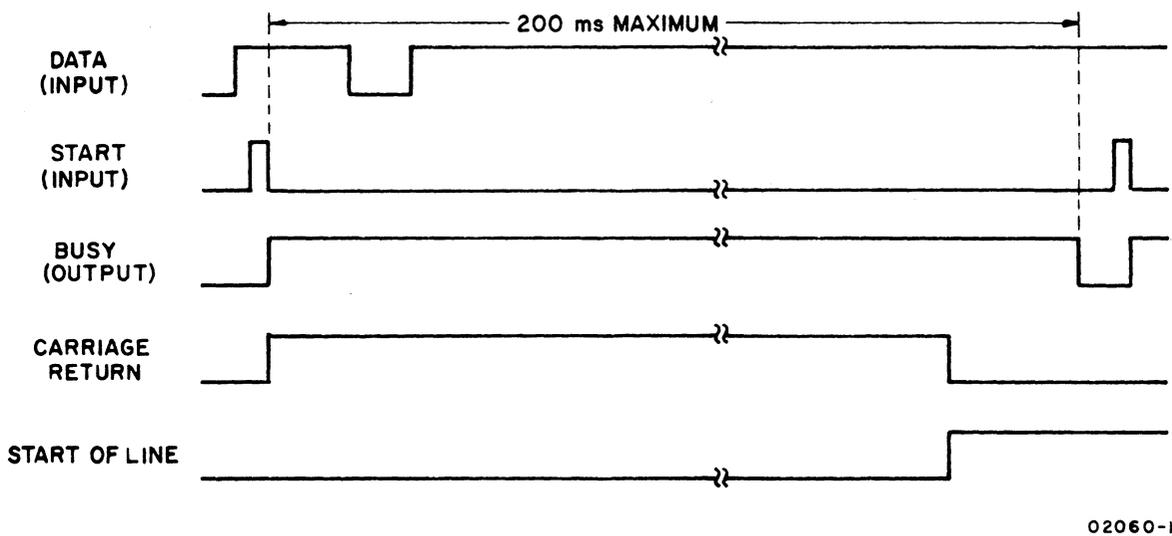


Figure 4-16. Nonimpact Printer Carriage Return Operation Timing

## **IMPACT PRINTER**

Functional theory of the impact printer is included in the Matrix Printer Reference and Field Service Manual, so theory of operation information for the impact printer is not repeated in this manual. Refer to preface of this manual for the publication number of the Matrix Printer Reference and Field Service Manual and for ordering information.


## **MISCELLANEOUS TERMINAL COMPONENTS**

Miscellaneous field-replaceable components of the display terminal include the following items: the Sonalert (audible alarm), the intensity control and cable assembly, the intensity control knob, and a small, plastic support post for the keyboard display logic module assembly. Section 6 of this manual includes procedures for removing and replacing all of the items within the crt portion of that section.



Section 5 contains logic diagrams, timing diagrams, schematics, ac/dc power distribution diagrams, signal interconnection diagrams, and block diagrams for the display terminal. Diagrams of a similar nature for the impact and nonimpact printers are included in their respective maintenance manuals (see preface). Information on how to interpret the logic diagrams precedes, and is part of, the logic diagram set. Information on the operation of individual logic chips may be found in the Key to Logic Symbology for Terminal Equipment Manual (see preface). Additionally, the logic set includes facing-page logic descriptions that describe the functions of the circuits depicted on each logic diagram.

The title block of each logic diagram contains the following information:

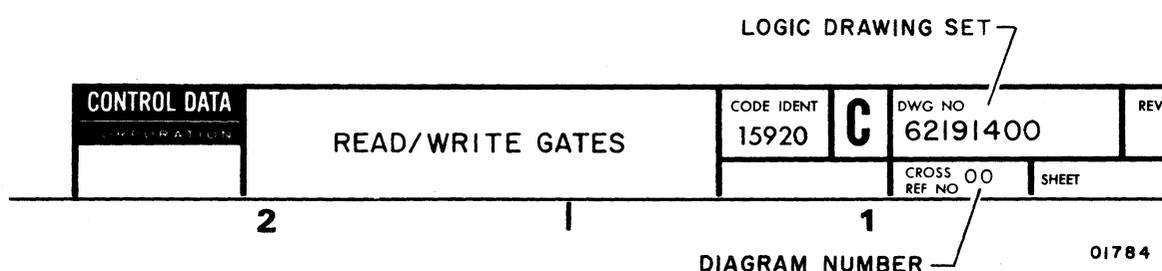

In the diagrams that follow, the logic drawing set number refers to the entire set of diagrams while the diagram cross-reference number identifies the specific diagram. The cross-reference number is the only reference term that can appear on the inputs and outputs of the circuitry to indicate that the source or destination of the signal is found internally on another diagram of this logic set. Lack of a cross-reference number on an input or an output line indicates that this line comes from or goes to an external location (one that is not part of this logic set).



The logic module assembly PC board of the display terminal has a number of test points that have been brought to the board edge for ease of access. These test points are grouped as TP1 (near the upper front edge of the installed PC board) and TP2 (near the lower rear edge of the installed PC board). Test signals available at these two test points are shown on the logic module assembly PC board logic diagrams and are also listed here for easy reference. Table 5-1 gives the test point pin number, the diagram on which the test point is depicted in parentheses, the test signal name, and a brief description of the test signal.

TABLE 5-1. LOGIC MODULE ASSEMBLY TEST POINT DATA

TEST POINT	SIGNAL NAME	SIGNAL DESCRIPTION
TP1-1 (115)	+BAUD SEL 3	Used in conjunction with TP1-2, TP1-3 and TP1-7 to externally select an operating baud rate. See facing page description for diagram 115.
TP1-2 (115)	+BAUD SEL 2	
TP1-3 (115)	+BAUD SEL 1	
TP1-4	Not Used	
TP1-5 (100)	-DISABLE MAIN OSC	Grounding (logical 0) this test point disables the main oscillator.
TP1-6	Not used	
TP1-7 (115)	+BAUD SEL 4	See TP1-1, TP1-2, and TP1-3, preceding. Square wave clock signal equal to 16 times the selected baud rate.
TP1-8 (110)	+BAUD CLOCK	
TP1-9 (100)	+MAIN OSC	Nominal 14.5962-MHz oscillator signal on which main timing is based.
TP1-10 (110)	-DISABLE BAUD OSC	Grounding (logical 0) this test point disables the baud oscillator.
TP1-11 (110)	-DISABLE BAUD CLOCK	Grounding (logical 0) this test point disables the baud clock.
TP1-12 (110)	+BAUD OSC	Square-wave-output oscillator operating at 6.745 MHz and used to derive communication baud rates.
TP2-1 (105)	+COMP	A positive pulse indicating coincidence of the 2 <sup>3</sup> through 2 <sup>0</sup> counts of the cursor and horizontal counters; the signal is a component of the +X COMP signal.
TP2-2	Not Used	
TP2-3	Not Used	
TP2-4 (102)	+CHARACTER DOTS	Positive 70-ns pulses corresponding with unblank signals from the logic module assembly to the video display assembly.
TP2-5	Not Used	
TP2-6 (100)	-HORZ LOAD	Negative 600-ns pulse that occurs every 63 $\mu$ s; used for horizontal control.
TP2-7 (100)	-(T8+ T2)	Negative 70-ns pulse occurring at either T8 (read memory operations) or T2 (write memory or cursor movement operations).
TP2-8 (105)	+CURSOR COMP	Positive 630- $\mu$ s pulse occurring every 16.66 ms (60-Hz terminals) or 20 ms (50-Hz terminals); indicates match of horizontal and vertical counters with X and Y cursor counters.
TP2-9 (100)	-VERT LOAD	Negative 63- $\mu$ s pulse occurring every 16.66 ms (60-Hz terminals) or 20 ms (50-Hz terminals); used for vertical control.
TP2-10 (100)	+ENABLE SCAN	Positive 63-ns pulse occurring every 63 $\mu$ s for timing control.
TP2-11 (105)	+X COMP	Positive 600-ns pulse indicating match of horizontal and X cursor counters and occurring every 63 $\mu$ s.
TP2-12 (112)	+LST LN COMP	Positive signal indicating match of last-line and Y cursor counters when in scroll mode.




PHYSICAL LOCATION CODES OF THE 156 PACKAGE MODULE

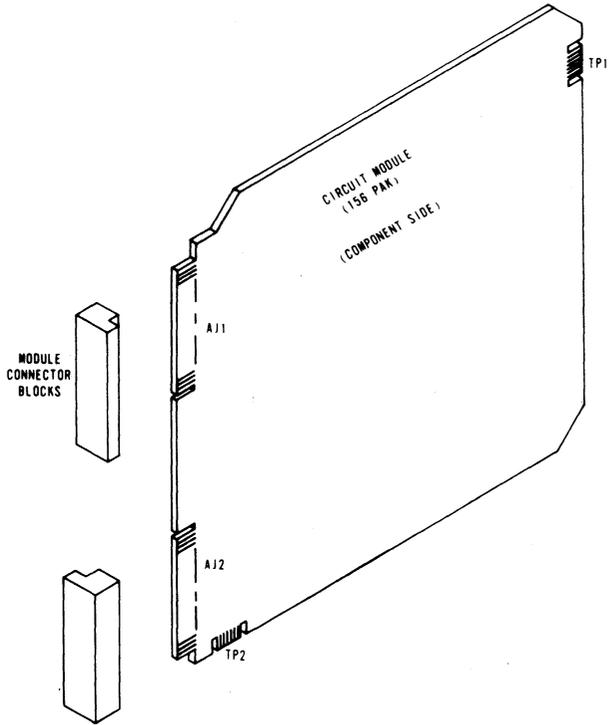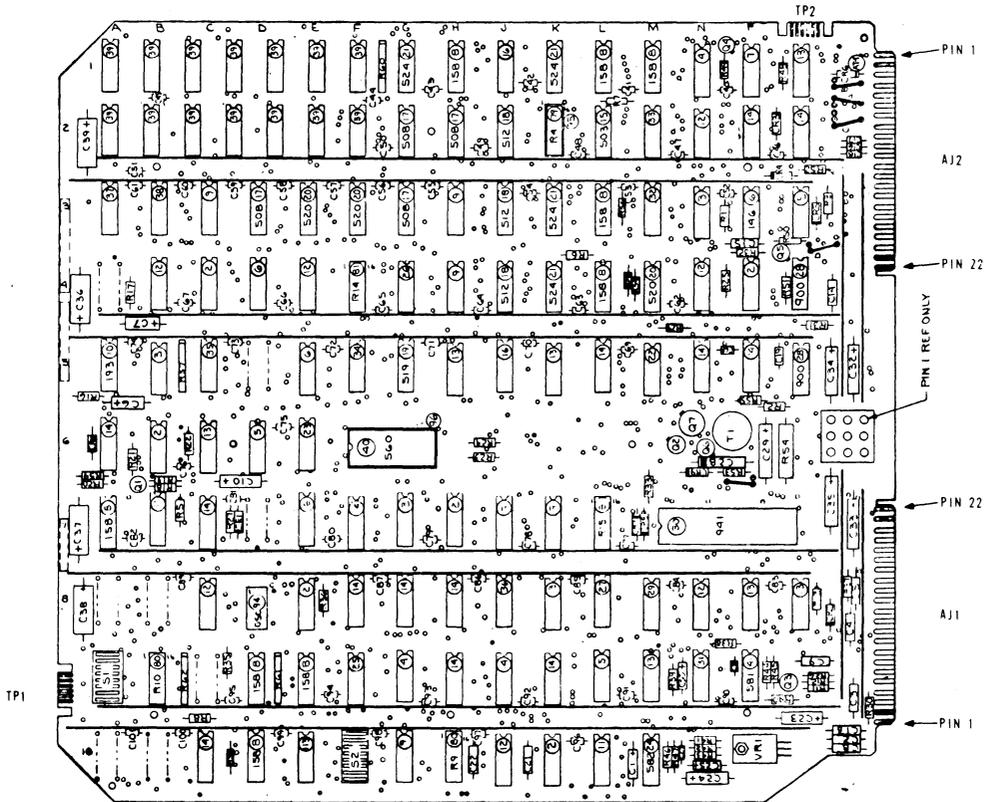

POWER AND GROUND PINS

- +12V A13-
- +5V [ A13-  
A12-22  
A11-22
- 12V [ A13-  
A13-19
- GNC [ A13-  
A13-  
A12-21  
A12-18  
A11-21  
A11-20

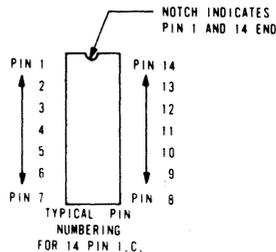


CONTROL DATA	KEY TO DIAGRAMS	DWG NO	REV
	PHYSICAL LOCATION CODES	62200824	C
		CROSS REF NO	SHEET 2
		CODE IDENT	
		15920	

**GENERAL LOGIC SYMBOL INFORMATION**

**INTEGRATED CIRCUIT LOGIC SYMBOL**



**TAGGING INFORMATION**

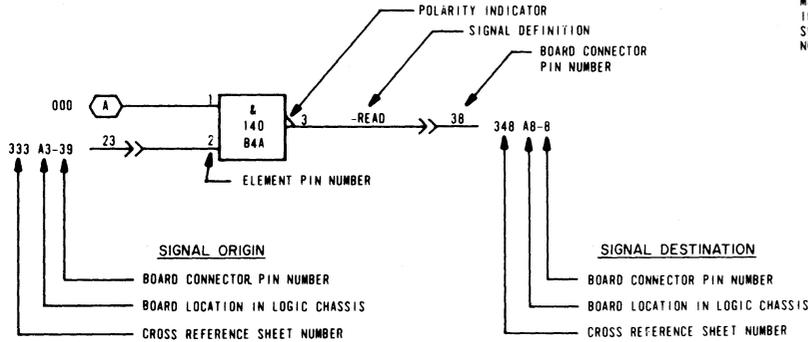

**GENERAL P.C. BOARD INFORMATION**


EACH PRINTED CIRCUIT BOARD UNDER IDEAL CONDITIONS WOULD BE REPRESENTED ON ONE SHEET. HOWEVER DUE TO THE LARGE NUMBER OF CIRCUITS LOCATED ON SOME BOARDS MULTIPLE SHEETS MAY BE REQUIRED. THE BOARD TYPE IS LISTED AT THE BOTTOM OF EACH DIAGRAM SHEET. THE BOARD LOCATION WITHIN THE LOGIC CHASSIS MAY ALSO ACCOMPANY THE BOARD TYPE. EACH SYMBOL ON THE DIAGRAM REPRESENTS A PORTION OF AN INTEGRATED CIRCUIT. THE ENTIRE INTEGRATED CIRCUIT OR A DISCRETE COMPONENT EACH SYMBOL REFLECTS THE LOGIC FUNCTION IDENTIFIER, ELEMENT OR COMPONENT TYPE AND THE ELEMENT OR COMPONENT LOCATION ON THE BOARD. COMPONENT LOCATION IS DEFINED BY AN ALPHANUMERIC MATRIX DEPENDING ON THE TYPE OF PRINTED CIRCUIT BOARD USED. FOR INFORMATION ON THE COMPONENT OR ELEMENT TYPES USED IN THIS LOGIC SET REFER TO KEY TO LOGIC SYMBOLS MANUAL, CDC PUBLICATION NUMBER 82172400.

**QUALIFYING SYMBOLS**

- & = AND
- 1 = OR
- 1 = INVERTER
- X → Y = X (INPUTS), DECODED OR ENCODED TO Y (OUTPUTS)
- X Y = X (INPUT LEVEL) CONVERTED TO Y (OUTPUT LEVEL)


**ON BOARD, OFF SHEET TAGGING**

IN A LOGIC DIAGRAM SET HAVING MORE THAN ONE SHEET, A HEXAGON IS USED TO INDICATE THAT THE SIGNAL IS COMING FROM, OR GOING TO, ANOTHER SHEET OF THE SAME BOARD. (NOTE: EACH SIGNAL NAME IN THIS LOGIC SET HAS BEEN PRECEDED BY A '+' (INDICATING AN ACTIVE HI) OR A '-' (INDICATING AN ACTIVE LO).)

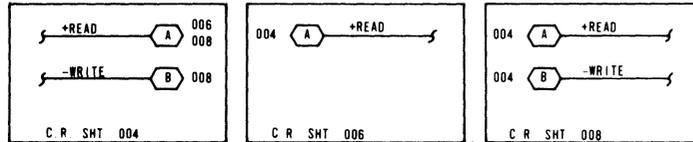

**ON SHEET TAGGING**

THE SMALL CIRCLES WITH ALPHA CHARACTERS INSIDE ARE USED TO SHOW A SIGNAL PATH WITHOUT ACTUALLY RUNNING A LINE FROM ONE POINT TO ANOTHER. A CIRCLE WITH AN ARROW POINTING AWAY FROM IT IS THE SIGNAL ORIGIN. IN DIRECT LINE WITH THE ORIGIN ARROW ANOTHER CIRCLE IS DRAWN WITH AN ARROW POINTING TOWARD IT. THIS IS THE SIGNAL DESTINATION.

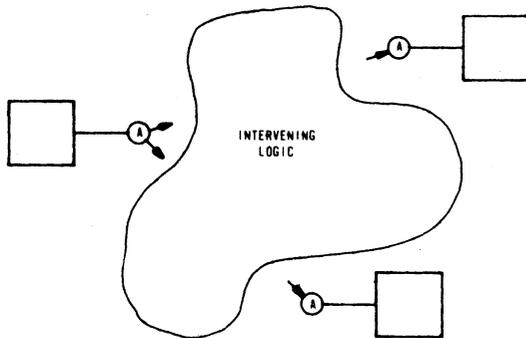

**VOLTAGE LEVELS**


- 1 ANALOG OR NON-LOGIC LEVELS

- 2 NON-STANDARD LOGIC LEVEL


- 3 LOGIC LEVELS

DTL LOGIC OPERATION  
 HIGH (LOGICAL 1) = +2.6 TO +5.0 VOLTS  
 LOW (LOGICAL 0) = 0.0 TO +0.45 VOLTS  
 SWITCHING POINT = +1.1 TO +1.9 VOLTS  
 TTL LOGIC OPERATION  
 HIGH (LOGICAL 1) = +2.8 TO +5.0 VOLTS  
 LOW (LOGICAL 0) = 0.0V TO +0.45 VOLTS  
 SWITCHING POINT = +0.5V TO +1.9 VOLTS

**RESISTOR MODULES**

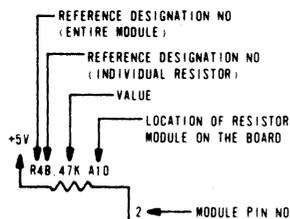

**SWITCH MODULES**

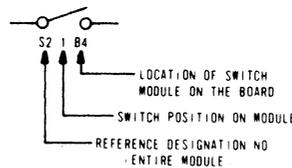

**ELEMENT IDENTIFIERS**

CDC	VENDOR
140	7400
141	7410
143	7440
146	7404
148	7402
149	7486
189	74157
200	7406
201	7408
218	7432
240	9024
507	7442
508	74153
527	74164
547	74165
901	MC1489
943	7414

REV A  
 DWG NO 62200824  
 SHEET 3  
 CODE IDENT 15920  
 CROSS REF NO C  
 KEY TO SYMBOLS  
 CONTROL DATA

**DIAGRAM 100**  
**MAIN TIMING, HORIZONTAL SCAN, AND VERTICAL COUNTERS**

This diagram, from bottom to top, shows the main timing, horizontal scan, and vertical counters. Reference the timing diagram on sheet 20 of this logic set during the following description of the logic on diagram 100.

**MAIN TIMING COUNTER** — When power is turned on, the  $-PWR\ RST$  signal goes low, which resets all of the counters and sets Main Timing start flip-flop (L5B). As the  $-PWR\ RST$  signal returns high, the 14.596-MHz +MAIN OSC clock pulses begin toggling L5B and M5. The set output of L5B (+T0) loads the M5 shift register, and then L5B clears as the +MAIN OSC clock pulses shift the main timing pulse through the shift register to produce main timing clock pulses +T1 through +T8. These clock pulses are each 68.51 ns in duration, and it takes 616.6 ns for one complete pass through the counter. The +T8 output of M5 reenables L5B for setting and the sequence repeats, providing continuous +T0 through +T8 main timing pulses. These main timing pulses each correspond with a dot time on the display screen (see Timing Diagram, sheet 20 of this logic set).

**HORIZONTAL COUNTER** — The horizontal counter consists of counter circuits L4 and L3. A  $-(T8 + T2)$  clock signal toggles the horizontal counter. This clock signal is used because refresh memory write operations take longer than read operations. The normal T0 through T8 clock cycle is therefore extended from T0 through T2 of the next clock cycle for write (key-in or receive) operations. Although the horizontal counter is a divide-by-256 counter, it never reaches a full count. A horizontal control ROM, shown on diagram 101, monitors the  $-HORZ\ 2^7$  through  $2^0$  outputs of the horizontal counter and causes a  $-HORZ\ LOAD$  pulse to reload the horizontal counter on count 101 ( $+HORZ\ 2^6 \cdot 2^5 \cdot 2^2 \cdot 2^0 = 1$ ). Each count of the horizontal counter corresponds with one 9-dot horizontal character scan time. Eighty of the 102 counts (2 through 81) correspond with the display of character dots as the crt electron beam sweeps from left to right across the screen, and 22 of the counts (82 through 101, and 0 and 1) correspond with horizontal retrace and settling time for the beam before it begins a new horizontal scan. Gate N3C out of the horizontal counter NANDs the +HORZ  $2^6$ , +HORZ  $2^4$  and +T4 clock signals to produce a  $-(HORZ\ 2^6 \cdot 2^4)$  signal. This signal sets a write disable flip-flop to prevent write access to refresh memory during horizontal retrace time (diagram 101).

**SCAN COUNTER** — The scan counter is a 4-bit decade counter (L2) that is enabled by the +ENABLE SCAN signal (count 84 of horizontal counter via horizontal control ROM), and is toggled by the  $-(T8 + T2)$  clock signal. The +SCAN  $2^3$  through  $2^0$  outputs of the counter provide timing for the vertical control ROM (diagram 101) and for the character generator ROM (diagram 102). The scan counter counts 10 scan lines (counts 0 through 9), and then outputs an enable to the vertical counter via pin 15 to increment the vertical (display line) counter. The scan counter also produces a +SCAN 10 signal by ANDing its +SCAN  $2^3$  and  $2^0$  outputs. This signal is used to increment the vertical address counter (diagram 101) and to control cursor displays (diagram 102).

Upon completion of an entire raster scan, including vertical retrace time, the vertical control ROM (diagram 101) drops the  $-VERT\ LOAD$  signal line low for 62.89  $\mu s$ . This enables the VERT LOAD signal to NAND with the ENABLE SCAN signal and reload the scan the vertical counters simultaneously (see timing diagrams on sheets 20, 21, and 22 of this logic set).

**VERTICAL COUNTER** — The vertical counter consists of counter circuit L1 and flip-flop L5A. The tenth count of the scan counter enables the vertical counter while the  $-(T8 + T2)$  clock signals advance it. The vertical counter increments once for every ten counts of the scan counter, and thereby tracks the display line count. Completion of a vertical scan count occurs when the  $-VERT\ 2^3 \cdot 2^4$  signal line goes low to indicate the 24th display line has just been completed. The  $-VERT\ 2^3 \cdot 2^4$  signal enables the vertical control ROM (diagram 101), which in turn provides vertical retrace control signals.

In addition to going to the vertical control ROM, outputs from the vertical counter go to the vertical address counter (diagram 101) and the request to send (RTS) control logic (diagram 114). See the timing diagrams on sheets 20, 21, and 22 of this logic set.



**DIAGRAM 101**  
**HORIZONTAL AND VERTICAL CONTROL, VERTICAL**  
**ADDRESS COUNTER, AND READ/WRITE CONTROL**

This diagram depicts the horizontal and vertical control logic (ROMs M2 and M3 and register M4), the vertical address counter (counter M1, flip-flop P2B flip-flop P5B and other associated gates), and the read/write control logic (flip-flops P5A, N5A and N5B, and other associated gates).

**VERTICAL CONTROL ROM** — The vertical control ROM monitors outputs from the vertical and scan counters and from the +50/-60-Hz switch (diagram 112) to produce vertical retrace timing signals. The ROM is enabled during vertical retrace time by the  $-VERT 2^3 \cdot 2^4$  signal from the vertical counter (diagram 100). Since vertical retrace timing for 50- and 60-Hz terminals vary, the +50/-60-Hz signal determines which retrace timing signals are accessed. Basically, the sequence is as follows: 1) the ROM is enabled as  $-VERT 2^3 \cdot 2^4$  goes low, 2) this immediately drops the +VERT UNBLK signal to blank the display screen during vertical retrace, 3) the vertical sync pulse occurs, 4) the  $-VERT LOAD$  signal drops low to reload the vertical and scan counters (diagram 100), and 5) this latter action disables the vertical control ROM because the  $-VERT 2^3 \cdot 2^4$  signal returns high as the counters reload. The  $-(T8 + T2)$  clock signal toggles register M4 to ensure proper timing of the horizontal and vertical sync and unblank signals. See the timing diagrams on sheets 21 and 22 of this logic set for timing details.


**HORIZONTAL CONTROL ROM** — This ROM is always enabled to track the output of the horizontal counter (diagram 100). It provides control of the +HORZ UNBLK (+MEMORY ACCESS), +HORZ SYNC, -HORZ LOAD, and +ENABLE SCAN signals as shown on the horizontal refresh and memory timing diagram (sheet 20 of this logic set). The +HORZ UNBLK (+MEMORY ACCESS) signal is high from counts 2 through 81 of the counter; the +ENABLE SCAN signal pulses high at count 84; the +HORZ SYNC signal pulses high for counts 85 and 86; and the -HORZ LOAD signal drops low to restart the horizontal counter clock cycle at count 101.

**VERTICAL ADDRESS COUNTER** — The vertical address counter, P2B, tracks the vertical position of the electron beam on the crt screen and provides information for displaying the cursor in the correct position for addressing refresh memory. This counter normally (page mode) counts, along with the vertical counter L5A (diagram 100), up through count 23. The  $-(T8 + T2)$  clock signal toggles both counters, and both are enabled for counting by essentially the same signals (+ENABLE SCAN and +SCAN 10). At count 23, gates N1A and R1B enable the vertical address counter to reload via gates P1B, and P3A and R1B the next time gate N3A from the horizontal control ROM is made. At the same time this occurs, the  $-VERT 2^3 \cdot 2^4$  signal line goes low disabling gate N3A while vertical retrace occurs. When vertical retrace is complete, the vertical counter (diagram 100) resets, reenabling the circuit to the vertical address counter via gate N3A and the horizontal control ROM.

The vertical address counter may also be advanced via gate N3B when the display is operating in scroll mode. When scroll mode is selected, the +LST LN COMP signal comes up to enable gate N3B whenever the cursor moves into the display line designated as the last line. Initially, the last line is display line 24; however, each time the display is scrolled, the last line count wraps around. That is, display line 24 moves to position 23 and display line 1 wraps around to position 24 as a blank line awaiting data entry. Gate N3B is enabled when the cursor is in the last line (+LST LN COMP = 1), a scroll command causes +INC Y to go high, and the horizontal position of the beam is one position past the X cursor compare point [+ (X COMP + 1) = 1]. Incrementing the vertical position count when the cursor is in the last display line in scroll mode also advances the vertical address counter (memory address control) count ahead of the vertical counter (electron beam position control). This occurs when the vertical address counter is advanced once via gate N3B and then once via gate N3A. This double advance effectively wraps addressing of the display lines around so that the vertical address counter follows the last line counter; display line 1 now becomes display line 24, line 24 becomes line 23, etc. Each time the display is scrolled, this double advance takes place until the original 24th display line becomes the 1st display line. The next advance scrolls line 24 off the screen at the top and moves the 1st line back into its original 1st line position. The original line 24 then appears in display position 24 as a blank line awaiting further data entries and scroll commands.

**READ/WRITE CONTROL** — Read/write control logic controls the reading of information from and the writing of information into refresh memory. The write and read memory timing diagrams on sheets 21 and 22 of this logic set indicate the signal sequences for the read/write control logic. Basically, memory is always enabled for reading because the +READ/-WRITE signal line is normally high. Write memory can only occur when:

- 1) Data is received or keyed in — +(RCV ACT + KYBD ACT) signal is high, and
- 2) A horizontal retrace is not occurring — flip-flop P5A is clear.

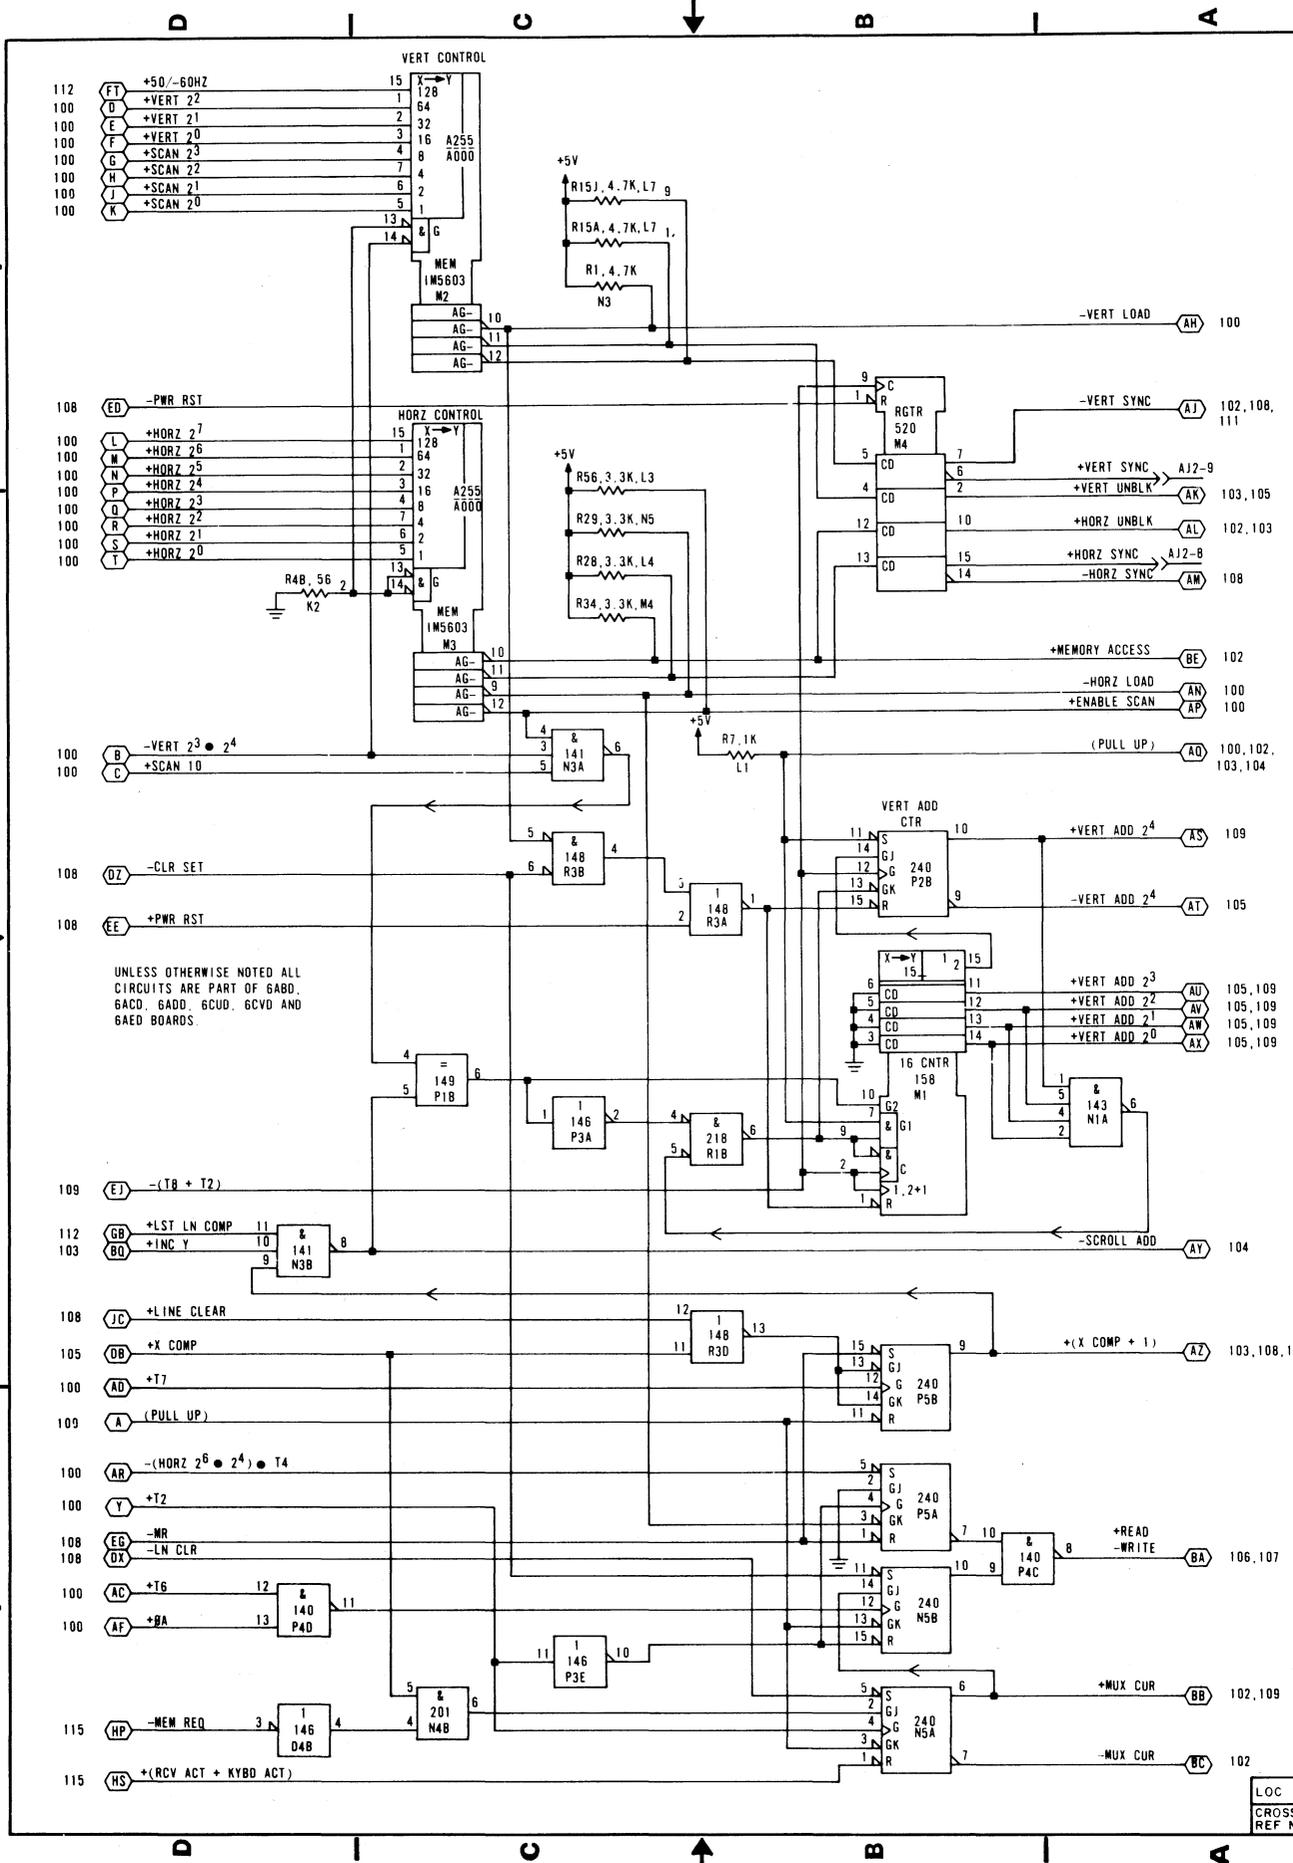

- 112 FT +50/-60HZ
- 100 D +VERT 22
- 100 E +VERT 21
- 100 F +VERT 20
- 100 G +SCAN 23
- 100 H +SCAN 22
- 100 J +SCAN 21
- 100 K +SCAN 20
- 108 ED -PWR RST
- 100 L +HORZ 27
- 100 M +HORZ 26
- 100 N +HORZ 25
- 100 P +HORZ 24
- 100 Q +HORZ 23
- 100 R +HORZ 22
- 100 S +HORZ 21
- 100 T +HORZ 20
- 100 B -VERT 23 • 24
- 100 C +SCAN 10
- 108 DZ -CLR SET
- 108 EE +PWR RST
- 109 EI -(T8 + T2)
- 112 GB +LST LN COMP
- 103 BD +INC Y
- 108 JC +LINE CLEAR
- 105 DB +X COMP
- 100 AD +T7
- 109 A (PULL UP)
- 100 AR -(HORZ 26 • 24) • T4
- 100 Y +T2
- 108 EG -MR
- 108 DX -LN CLR
- 100 AC +T6
- 100 AF +PA
- 115 HP -MEM REQ
- 115 HS +(RCV ACT + KYBD ACT)

REV	C
DWG. NO	62200824
CROSS. REF. NO.	101
SHEET	5
CODE IDENT	G
15920	
HORIZONTAL AND VERTICAL CONTROL, VERTICAL ADDRESS COUNTER, READ/WRITE CONTROL	
CONTROL DATA	
LOC	
CROSS REF NO	101

**DIAGRAM 102**  
**MEMORY OUTPUT LATCH, CHARACTER GENERATOR, VIDEO SERIALIZER,**  
**BLINK COUNTER, DISPLAY CURSOR FLIP-FLOP**

Diagram 102 depicts the logic for the following items: 1) memory output latch E3 and F3, 2) character generator G6, 3) video serializer E6, 4) blink counter A7, 5) display cursor flip-flop P2A, 6) inhibit display flip-flops A6B and A6A, and 7) highlight control circuit E10, and flip-flops C10A and C10B.

**MEMORY OUTPUT LATCH** — The 4-bit latches, E3 and F3, receive seven bits (+MEM  $2^6$  through  $2^0$ ) of character code information from memory bank A (diagram 106) or memory bank B (diagram 107). Each memory is accessed by alternating HORZ  $2^0$  clock signals: +HORZ  $2^0$  accesses memory A and -HORZ  $2^0$  accesses memory B. The -(T8 + T2) clock signal loads the latches with character code information from the appropriate memory (memory A = characters 1, 3, 5 ... 79 and memory B = characters 2, 4, 6 ... 80) once every character-line clock cycle (see memory timing, sheet 22). The character information loaded into the latches is then applied to character generator G6 and highlight control ROM E10 circuits. Latch F3 also latches the +CUR COMP signal. This signal occurs when the count of the horizontal counter (diagram 100) matches that of the X cursor counter (diagram 113) and the count of the vertical address counter (diagram 101) matches that of the Y cursor counter (diagram 103).

**CHARACTER GENERATOR** — The character generator is a ROM that converts character code and scan line inputs into 7 bits of dot information. This enables formation of dot pattern characters on a 7- by 9-dot character matrix during successive, vertically incremented horizontal scans of a display line. The combination of a scan line and a character code input generates the 7 dots required for composing one horizontal character scan. Nine scans are then required to compose an entire character area; the 10th scan line is used for displaying the cursor. The dot patterns generated by the character generator pass to a video serializer, which serializes the dot codes before sending them to the video display circuits.

**VIDEO SERIALIZER** — The video serializer accepts 7-bit inputs from the character generator each -(T8 + T2) clock cycle. Loaded with each 7 bits of dot information are a leading and a trailing blank bit (logical 0). These blank bits enable 2-dot spacing between adjacent horizontal character displays. Once loaded, the serializer shifts out a character dot on each - $\emptyset$ A clock pulse. The + $\emptyset$ A clock pulses AND with the output of the serializer to produce either a blank or an unblank signal to the video driver (diagram 103). Notice that the -(T8 + T2) clock signal, which loads the video serializer, can be blocked by Inhibit Display flip-flops A6A and A6B.

**BLINK COUNTER AND DISPLAY CURSOR FLIP-FLOP** — The blink counter divides the frequency of the -VERT SYNC signal by 16 to provide blink capabilities for the cursor display and for the blink highlight feature of the display. The blink counter alternately enables and disables the Display Cursor flip-flop for 8 display pages. The +CUR COMP and +SCAN 10 signals coincide every raster scan to provide a set input to the Display Cursor flip-flop. If the flip-flop is enabled by the blink counter, it sets on the next -(T8 + T2) clock pulse. As it sets, the -DISPLAY CURSOR FF signal line goes low to enable the cursor display. The integrity of cursor display timing and character display timing is maintained in the following manner: on the 1st -(T8 + T2) clock signal the +CUR COMP rises; the next -(T8 + T2) clock signal latches the +CUR COMP signal just before it drops; the 3rd -(T8 + T2) clock pulses sets the Display Cursor flip-flop and enables display of the cursor at the same time a new character code is being latched (+CUR COMP from F3-15 goes to 0); the 4th -(T8 + T2) clock signal clears the Display Cursor flip-flop so that the cursor display only lasts one character scan time.

**INHIBIT DISPLAY FLIP-FLOPS** — Flip-flops A6A and A6B are both Inhibit Display flip-flops. When data is being written into refresh memory (+MUX CUR goes high), both A6B and A6A direct set as the -MUX CUR signal drops low on a T2 clock pulse. Two T2 clock pulses after the Mux Cursor flip-flop sets (diagram 101) flip-flop A6B clears and permits A6A to clear on the next T2 clock pulse. When either A6B or A6A is set, it blocks the shifting of character dots out of the video serializer. This is done for a few character times to prevent spurious dot patterns from appearing on the display screen when the cursor is multiplexed to a new location in memory (write memory operation).

During highlight commands (keyboard control key functions), flip-flop A6A sets for one character time as the control character is decoded to prevent the display of the control code symbol associated with the control code.

## DIAGRAM 102 (CONTD)

**HIGHLIGHT CONTROL CIRCUIT** — The 4- by 256-bit ROM at location E10 implements the highlight features of the display by decoding the following control codes: initiate low intensity (SO or 016g), initiate blink (ETB or 027g), and end highlight (SI or 017g). To do this, the E10 ROM monitors all of the codes out of memory (+MEM 2<sup>6</sup> through 2<sup>0</sup>). In addition, it also monitors the output of Blink Control flip-flop C10A. The output of blink counter A7 toggles the Blink Control flip-flop so that the flip-flop cycles on and off about twice a second.

The Blink Control flip-flop is only used in conjunction with the initiate blink control code (ETB or 027g). While this code is applied to the input of memory E10 and the Blink Control flip-flop is set, output pins 10 and 11 of E10 go low: 10 to inhibit the display of the symbol for the ETB code and 11 to initiate reduced intensity (set flip-flop C10B). C10B remains set either until the end of the scan line when the +MEMORY ACCESS and +HORZ UNBLK drop to reset it, or until the highlight control memory detects an end highlight code (SI or 017g) within the same scan line. Detection of the end highlight code causes pin 12 of E10 to go low and enable flip-flop C10B for clearing on the next +T2 clock pulse. The Blink Control flip-flop (C10A) remains set for 16 pages and then clears for 16 pages so that input pin 15 to memory E10 goes low. During the 16 pages when E10-15 is low, output pin 11 remains high, C10B does not set, and display dots appear at normal brightness. Alternately enabling and disabling low intensity scans approximately once every 16 pages causes displayed characters within the highlight field to appear as blink characters.

The initiate reduced intensity code (SO or 016g) has a similar effect, with the exception that the state of the Blink Control flip-flop is disregarded. The highlight field appears as a steady reduced intensity field rather than as a blinking field.

Either the occurrence of the cursor display scan (SCAN 10 = 1), or the selection of internal test mode (TEST = 1) disables the highlight control memory. This enables normal cursor display throughout a highlight field, and in the case of test-mode selection, it permits display of the symbols associated with the highlight control codes.





## DIAGRAM 103

### Y CURSOR COUNTER AND MUX, AND VIDEO DRIVER CIRCUIT

Diagram 103 depicts the logic for the Y cursor multiplexer (mux—G3, G2 and H2), the Y cursor counter (J2 and flip-flop R2B), and the video driver circuit (Q1/B7), near the bottom of the diagram.

**Y CURSOR COUNTER AND MUX** — The Y cursor counter tracks the vertical position of the cursor on the display screen. To do this, the counter can either increment or decrement its count to follow keyboard or receive codes that increment or decrement the vertical position of the cursor within the range of display lines 1 through 24 (counter counts 0 through 23). Additionally, the counter can be loaded from the Y cursor mux. This permits it to load the count of the last-line counter for the reset-to-home operation when the display is operating in scroll mode, or to load the Y position portion of X/Y positioning commands when the display is operating in page mode.



The -EN Y CUR CTR and the -LOAD CUR CTR signals from the Y cursor control memory determine whether the counter is enabled for counting (increment or decrement) or for loading from the mux. The enable and load counter signals cannot occur simultaneously, although the same clock time [ $+(X \text{ COMP} + 1)$  and T3] clocks either occurrence. During enable counter operations, the state of the -INC Y signal determines whether the counter increments (-INC Y = 0) or decrements (-INC Y = 1). During enable counter operations, the Y mux becomes part of the counter when the carry from counter J2, pin 15, goes high: J2 increments at the maximum count or decrements at the minimum count. This permits flip-flop R2B to set or clear, as appropriate, when tracking the cursor position during enable counter operations.

During load counter operations, the -LOAD Y CUR CTR signal (from diagram 113) goes low to enable loading the counter, while the +PAGE/-SCROLL, -RST Y, and -Y POS signals determine what information muxes into the counter. Although the mux is a 4-input type, only three sets of inputs normally pass through the mux: the write inputs (pins 5 and 11), the last-line inputs (pins 4 and 12), and the clear cursor/set cursor and increment/decrement Y inputs (pins 6 and 10). Input pins 3 and 13 (both grounded) should not be muxed because the all-0s combination of +PAGE/-SCROLL, -RST Y and -Y POS signals necessary to mux pins 3 and 13 is illegal; that is, Y positioning commands are blocked in scroll mode (see diagram 115). The loading of write inputs from the mux into the counter is associated with Y positioning commands (-Y POS = 0), while the loading of last-line inputs is associated with reset Y and scroll mode commands (-RST Y and +PAGE/-SCROLL = 0). Other combinations of mux control inputs gate either -CLR CUR 2<sup>12</sup> and +(INC Y + DEC Y) signals or -SET CUR 2<sup>12</sup> and +(INC Y + DEC Y) signals from the mux to the counter. Operations like increment Y at maximum Y cause the -CLR CUR 2<sup>12</sup> signal to go low, while decrement Y at minimum Y cause the -SET CUR 2<sup>12</sup> signal to go low.

**VIDEO DRIVER CIRCUIT** — Video driver Q1 turns on momentarily as +CHAR UNBLK signals (dot pulses) enable NAND gate B5A during horizontal and vertical unblank times. The video output signal then passes to the video amplifier circuit on the video display assembly where it blanks or unblanks the electron beam as necessary to produce dot pattern characters on the crt screen. The video driver also receives Display Cursor signal inputs, via NAND gate C6A, to implement display of the cursor on the crt screen.

The -REDUCED INTENSITY signal to Q1 comes from the highlight control logic (diagram 102). It shifts the base bias of Q1 when it goes low, producing a smaller output signal from the video driver circuit. This, in turn, decreases the intensity of the characters displayed on the crt screen.

REV C  
 DWG NO 62200824  
 SHEET 7  
 CODE IDENT 15920  
 CROSS REF NO 103  
 CONTROL DATA  
 "Y" CURSOR COUNTER AND MUX VIDEO DRIVER CIRCUIT

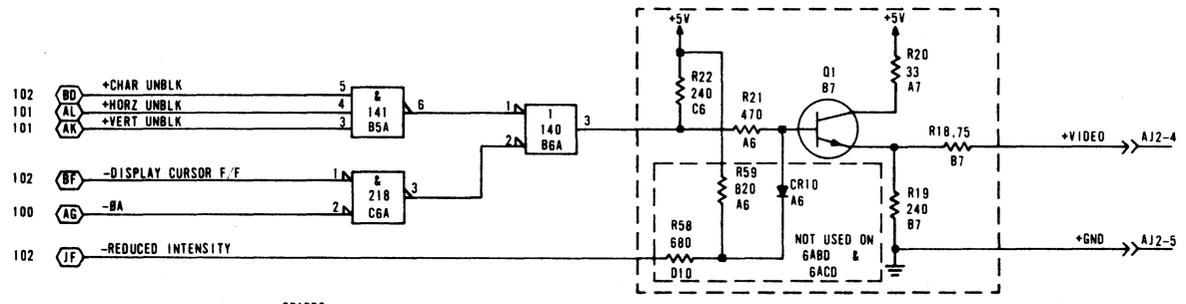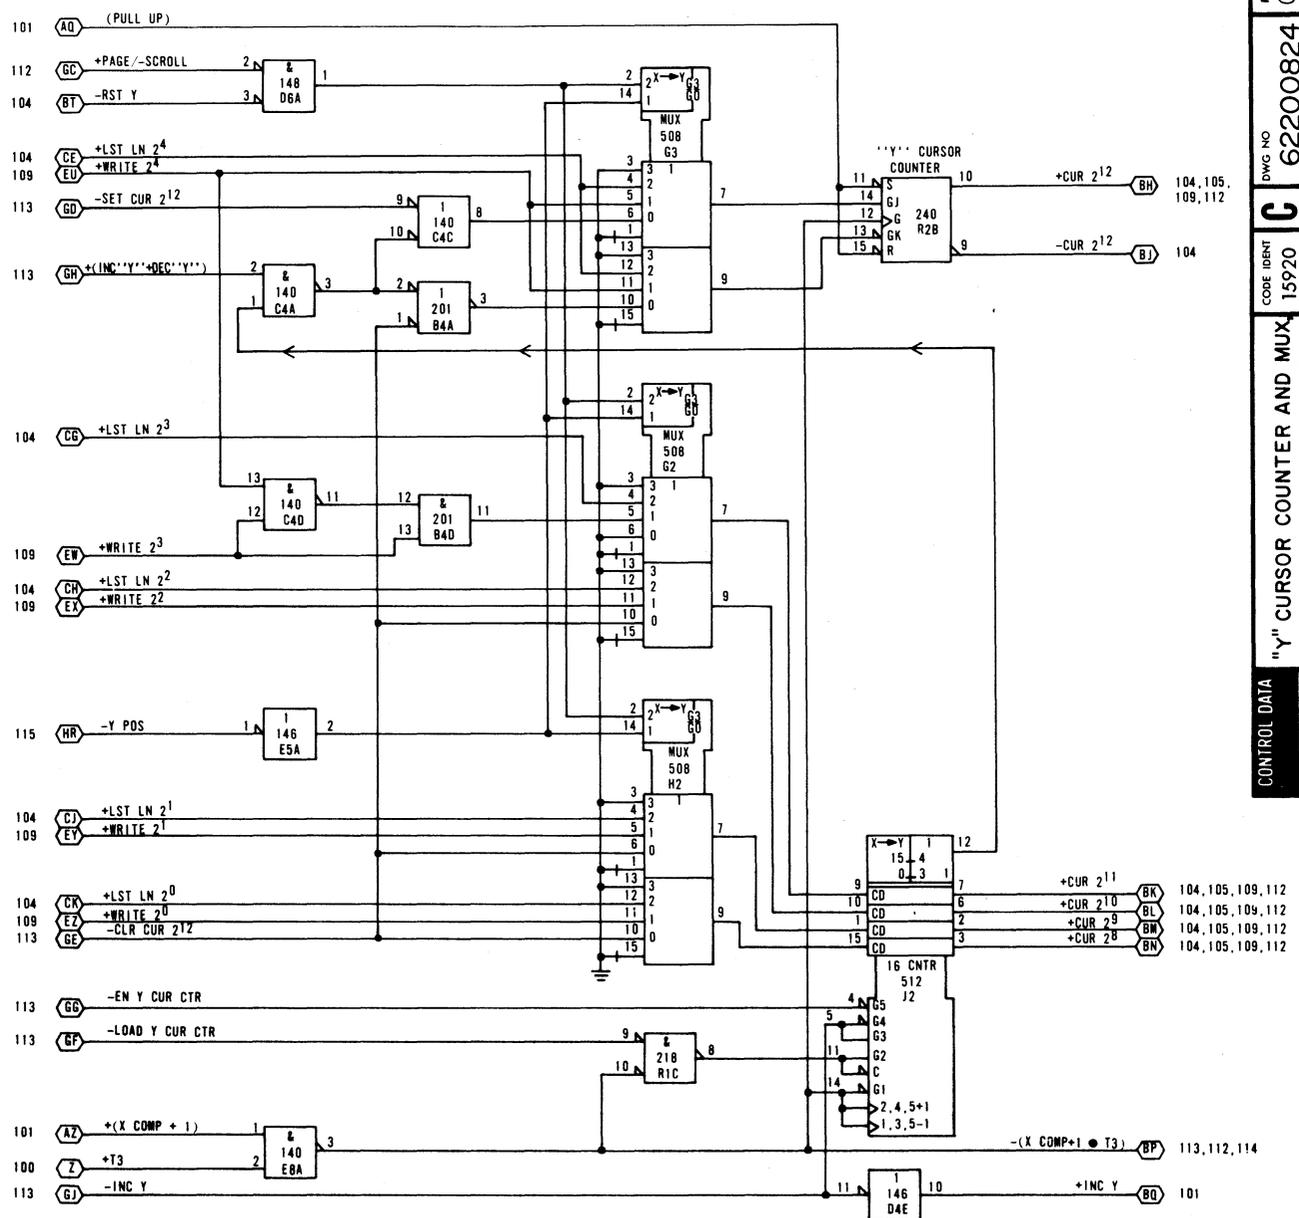

-SPARES-

ELEMENT	LOCATION	OUTPUT PINS
146	E5	4
200	L10	8, 10
943	N9	10
900	R4	6, 8, 11

UNLESS OTHERWISE NOTED ALL CIRCUITS ARE PART OF 6ABD, 6ACD, 6ADD, 6CUD, 6CVD AND 6AED BOARDS.

LOC  
 CROSS REF NO 103

**DIAGRAM 104**

**CURSOR FUNCTION DECODE, CURSOR POSITION DECODE, LAST LINE COUNTER**

Diagram 104 depicts the logic for the cursor function decode circuit (memory G4), the cursor position decode circuit (coders J1 and J5, register G5 and associated gates), and the last-line counter circuit (counter H1, flip-flop R2A and associated gates).

**CURSOR FUNCTION DECODE CIRCUIT** — The data decode circuit on diagram 109 monitors keyboard and receive data inputs, and if it detects a display control character code, it gates the cursor function decode circuit by causing the -EN DECODE signal to go low. The cursor function decode circuit monitors 4 write bits (+WRITE  $2^4$  and  $2^2$  through  $2^0$ ) and the +EN AUTO LF signal to determine what control code is being received and what outputs to enable. Input codes to which the cursor function decode circuit responds are as follows (the auto line feed bit only affects the carriage return function):


Keys	ANSI Mnemonic	Memory Input				Function Output
		+WRITE	$2^4$	$2^2$	$2^1$ $2^0$	
CONTROL plus G	BEL	0	1	1	1	Sound audible alarm
←	BS	0	0	0	0	Decrement X
LINE FEED	LF	0	0	1	0	Increment Y
CARRIAGE RETURN	CR	0	1	0	1	Reset X, or Reset X and increment Y if auto line feed bit is set
CONTROL plus U or →	NAK	1	1	0	1	Increment X
CONTROL plus V	SYN	1	1	1	0	Line clear
CONTROL plus X or CLEAR	CAN	1	0	0	0	Clear, reset X, and reset Y
CONTROL plus Y or RESET	EM	1	0	0	1	Reset X and reset Y
CONTROL plus Z or ↑	SUB	1	0	1	0	Decrement Y

Because there are nine function outputs possible and only eight outputs available from the cursor function decode circuit, the bell, clear, and line clear outputs require further decoding via gates N8C and M9C on this diagram and gates J10B and P8C on diagram 108.

**CURSOR POSITION DECODE CIRCUIT** — The cursor position decode circuit uses two BCD-to-decimal decoders (J1 and J5) to track the outputs of the X and Y cursor counters (diagrams 113 and 103). Decoding the outputs of these two counters enables monitoring of the minimum and maximum counts. Clock pulse +T7 loads the resulting -Min/-Max X/Y signals into register G5, which passes them to their respective X or Y cursor control memory circuits (diagram 113). The cursor position decode circuit also enables a +BEEP signal (audible alarm) as the cursor moves from character position 72 to character position 73 on the display screen.

**LAST-LINE COUNTER CIRCUIT** — The last-line counter circuit tracks the display line designated as the last line when the terminal is operating in scroll mode. A clear operation sets the Clear 1 flip-flop (diagram 108), causing the -CLR 1 signal to go low and the +CLR 1 signal to go high. These two signals load the last-line counter with a count of 23 (display line 24), which is always the display line designated as the last line when initializing the logic (power-on clear or CLEAR Key). Each time the display screen is scrolled, the -SCROLL ADD signal goes low to advance the last-line counter, and the last display line acquires a new designation (0, 1, 2 ... 23). When count 23 of the last-line counter is reached, a complete scroll cycle has occurred and gate N1B enables the counter for resetting to 0 the next time the -SCROLL ADD signal goes low. Outputs from the last-line counter circuit go to the last-line comparator circuit (diagram 112) and to the Y cursor mux and counter circuits (diagram 103).

REV C  
 DWG NO 62200824  
 CROSS REF NO 104 SHEET 8  
 CODE IDENT 15920  
 CONTROL DATA  
 CURSOR FUNCTION DECODE,  
 CURSOR POSITION DECODE,  
 LAST LINE COUNTER

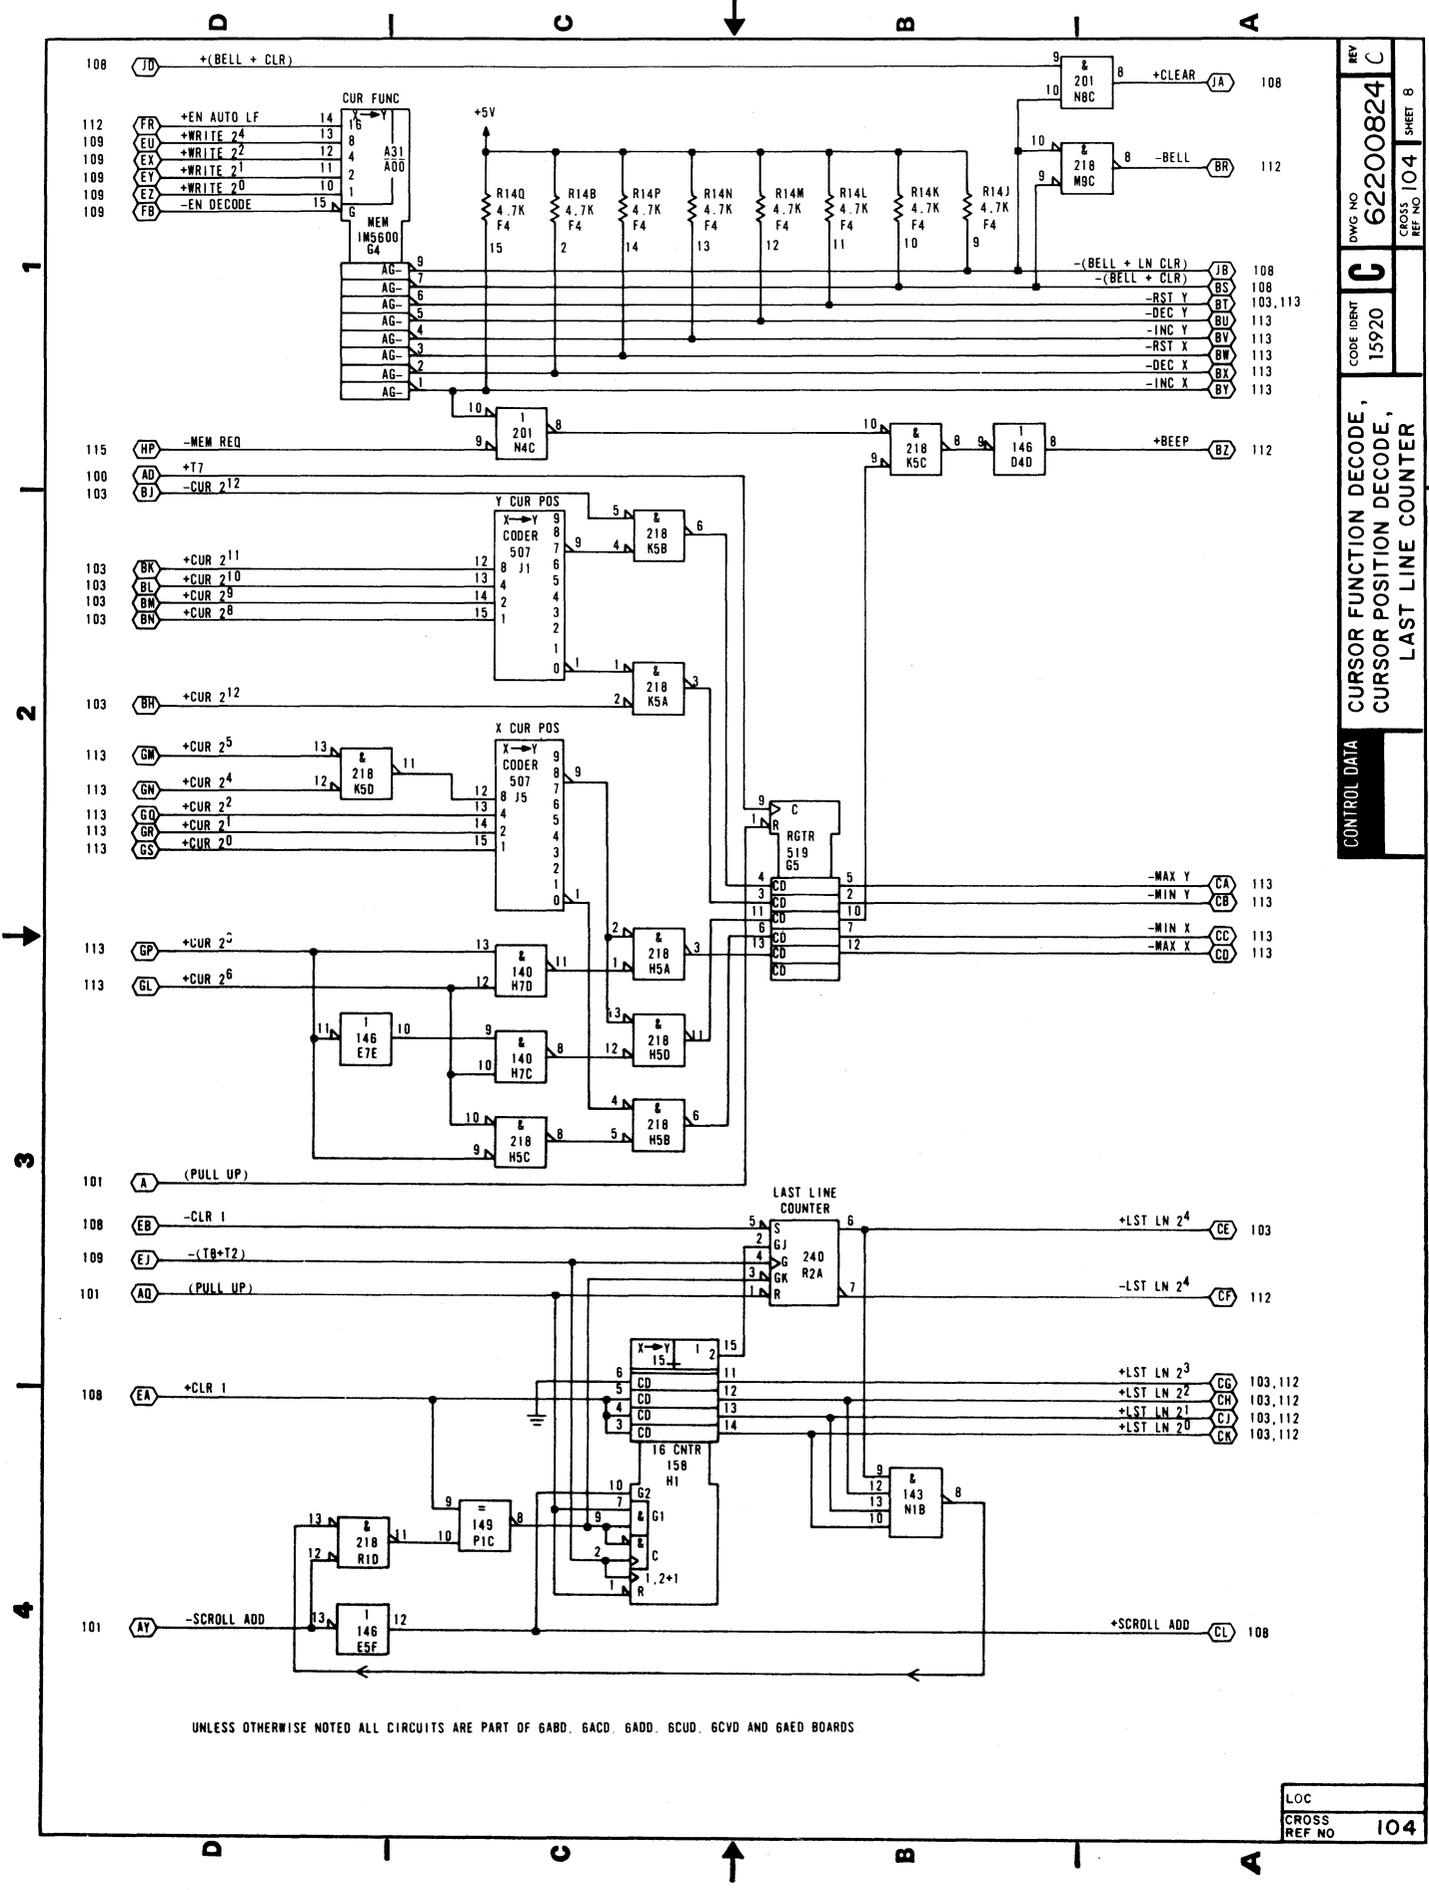

**DIAGRAM 105**  
**UART, X COMPARE, CURSOR COMPARE**

Diagram 105 shows the logic for the UART, the X compare, and the cursor compare circuits.

**UART** — The UART is a universal, asynchronous, receiver/transmitter LSI circuit. It can simultaneously receive parallel data inputs, disassemble them, and transmit them as asynchronous serial data outputs, and receive asynchronous serial data inputs, assemble them, and gate them out as parallel data words. Additionally, it can add start, parity (even or odd), and stop bits to its transmit, serial-data outputs, and can check received serial data for word format and parity errors. Following is a list of the UART pin assignments for this application.

Pins 1 through 3 provide the required power and signal ground inputs to the UART.

Pin 4 (Enbl Rcvr Rgtr) is normally low to gate outputs from Rcvr Rgtr pins 6 through 12, but goes high to block the receiver register outputs when either a word format error (framing error indicated by missing stop bit) or a parity error occurs in a received word.

Pins 6 through 12 (Rcvr Rgtr) are the receiver register output pins; they pass received words to the write-memory multiplexer and data-decode circuits (diagram 109).

Pin 13 (Parity Err) goes high to indicate a parity error in a received data word.

Pin 14 (Frame Err) goes high to indicate a framing error (format error) if a received word does not end with a stop bit (mark or logical 1 bit).

Pin 16 (Enbl Status Rgtrs) is tied low to enable status outputs from pins 13, 14, 19, and 22 (parity error, framing error, receiver register full, and transmit holding register empty).

Pin 17 (Rcvr Clk  $\div$  16) accepts a receive clock signal that is 16 times the actual bit rate of received data inputs.

Pin 18 (Reset Rcvr Rgtr Full) goes low to reset pin 19 (Rcvr Rgtr Full) when the receive register is not full; pin 19 goes high when the receive register is full.

Pin 20 (Ser Rcvr Data) receives serial data inputs; reception starts with a high-to-low (marking to spacing) transition on this line.

Pin 21 (Reset) goes high to reset the UART when a master reset occurs.

Pin 22 (Bfr Rgtr Empty) goes high when transmit holding register is empty.

Pin 23 (Load Bfr Rgtr) goes low to load data on pins 26 through 33 into the UART transmit buffer register.

Pin 24 (Xmtr Shf-Rgtr Empty) goes high to indicate transmit shift register is empty.

Pin 25 (Ser Xmtr Data) is the output pin for serial transmit data; it is high when no data is being transmitted and shifts low (start bit) to indicate the start of transmission.

Pins 26 through 33 receive parallel data inputs from the keyboard (7 bits) and the mark or space select bit, which is active when even or odd parity bit generation is not selected.

Pin 34 (Load Mode Rgtr) is tied high to permit addition of control and parity bits to the parallel, transmit data inputs.

Pin 35 (Enbl Parity) is low to enable parity bit generation and checking, and is high to disable these functions.

Pin 36 (Sel Stop Bit) goes high when the display terminal is operating at 110 baud transmission rate to enable two stop bits to be added to transmitted words; it is low to enable only one stop bit at all other baud rates.

#### DIAGRAM 105 (CONTD)

Pins 37 and 38 (Sel Wd Lg) are connected so as to enable eight data bits per transmitted word when no parity is selected (see pin 33, preceding) or to enable seven data bits and a parity bit per transmitted word when parity check/generation is enabled (see pin 35, preceding).

Pin 39 (Sel Parity Even/Odd) is high to select even parity checking and generation when these functions are enabled (see pin 35, preceding), and low to select odd parity checking and generation.

Pin 40 (Xmtr Clk) receives a clock signal that is 16 times the actual bit rate of transmitted data (see also pin 17, preceding).

**X COMPARE** — The X compare circuit issues a +X COMP signal when the counts of the horizontal counter (diagram 100) and the X cursor counter (diagram 113) are equal to one another. This equality indicates that the horizontal position of the electron beam as it sweeps the crt screen matches the horizontal location of the cursor on the crt screen.



**CURSOR COMPARE** — The cursor compare circuit consists of the X compare circuit described preceding and of a circuit that issues a +CURSOR COMP signal when the counts of the vertical address counter (diagram 101) and the Y cursor counter (diagram 103) are equal to one another. The +X COMP signal ANDs with the +CURSOR COMP signal to produce a +CUR COMP signal each time the crt beam sweeps the actual position of the character immediately at the cursor position on the display screen.



REV	C
DWG NO	62200824
CODE IDENT	C
15920	
CROSS REF NO	105
SHEET	9

CONTROL DATA

UART, "X" COMPARE,  
CURSOR COMPARE

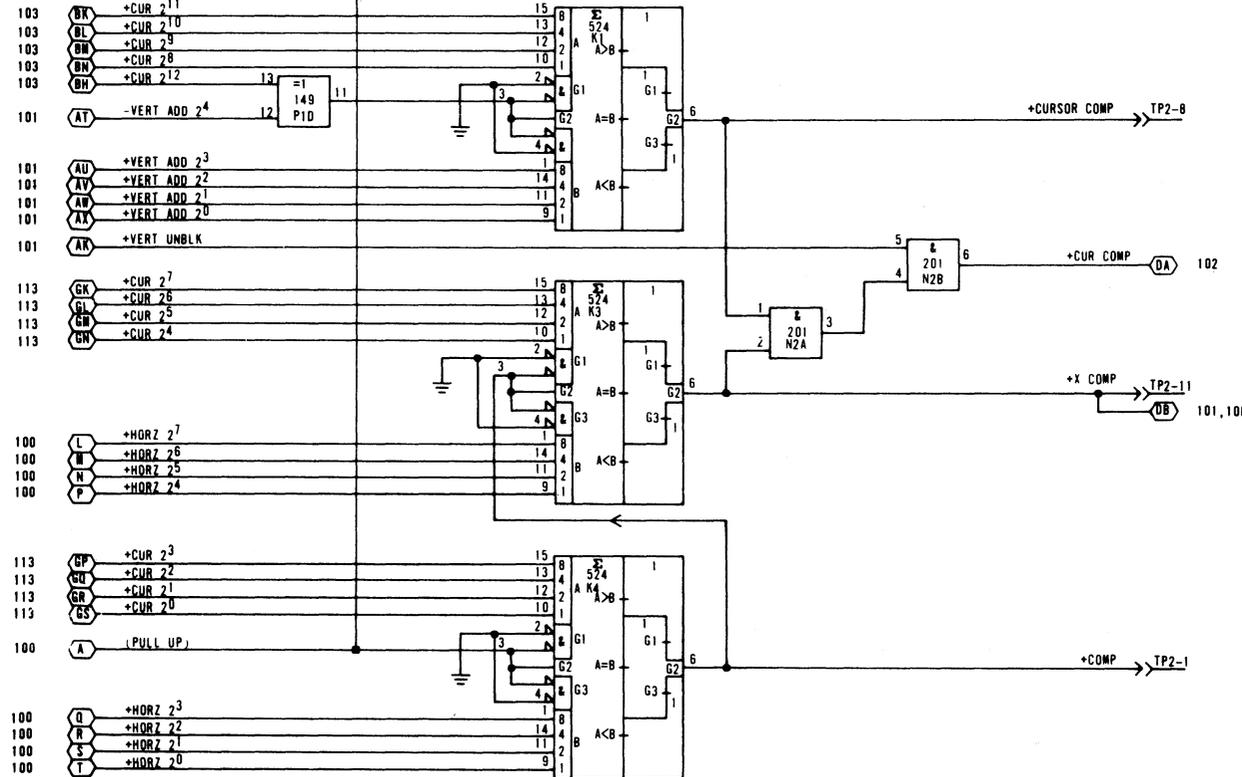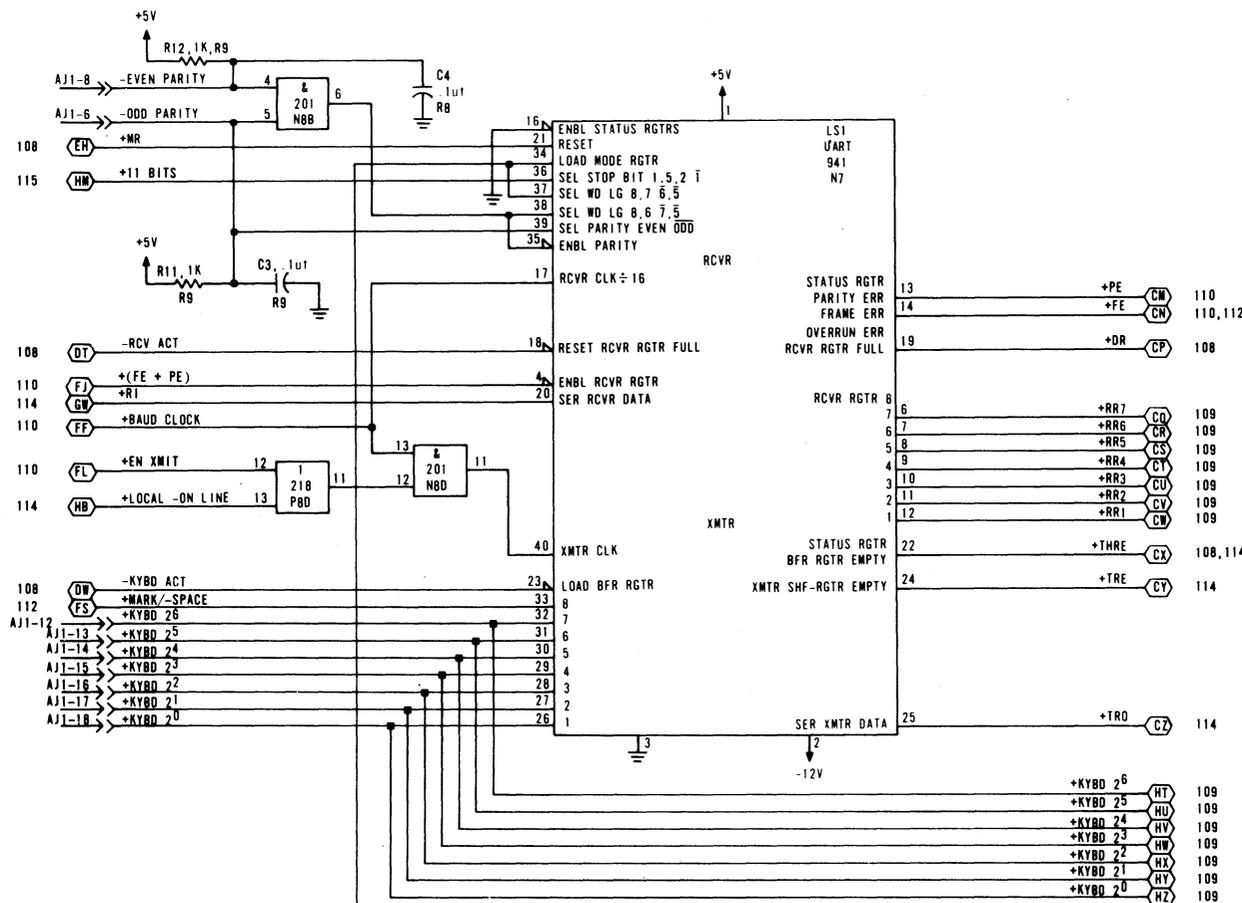

UNLESS OTHERWISE NOTED ALL CIRCUITS ARE PART OF GABD, GACD, GADD, BCUD, GCVD AND GAED BOARDS.

LOC	
CROSS REF NO	105


**DIAGRAMS 106 AND 107**  
**MEMORY BANK A AND MEMORY BANK B**

Memory bank A and B each consist of seven 1024- by 1-bit random-access, read/write memory circuits connected in parallel to produce a 1024- by 7-bit memory. The two banks therefore have a capacity of 2048 seven-bit words. Both banks use common address, read/write select (+READ/-WRITE), and write-data (+WRITE  $2^6$  through  $2^0$ ) signal input lines. Each bank, however, uses a separate bank select signal (A = +HORZ  $2^0$  and B = -HORZ  $2^0$ ) and separate read data lines (+MEM  $2^6$  through  $2^0$ ), which are ORed into the 7-bit, memory output latch register (diagram 102).

The common address bits to each bank simultaneously address the same memory locations; however, the bank select signals alternately enable each memory bank so that bank A receives (write) or furnishes (read) all even characters (0, 2, 4, . . . 78) and bank B receives or furnishes all odd characters (1, 3, 5, . . . 79) in a display line.

The combination of horizontal counter signals (diagram 100) and address signals from the memory address converter (diagram 109) enables binary addressing of 960 of the 1024 possible memory locations in each memory bank. The two banks, therefore, provide a total of 1920 seven-bit memory locations that corresponds with the 1920-character capacity of the display screen (24 lines of 80 characters per line).

Reading or writing from or into memory is determined by the state of the +READ/-WRITE signal line from the read/write control circuit (diagram 101). When the read/write signal line is high, the memory is enabled for reading information, and when the read/write signal line is low, the memory is enabled for receiving write information. The read/write signal line is normally high and only goes low when a write operation (keyboard entries or receive information) occurs.

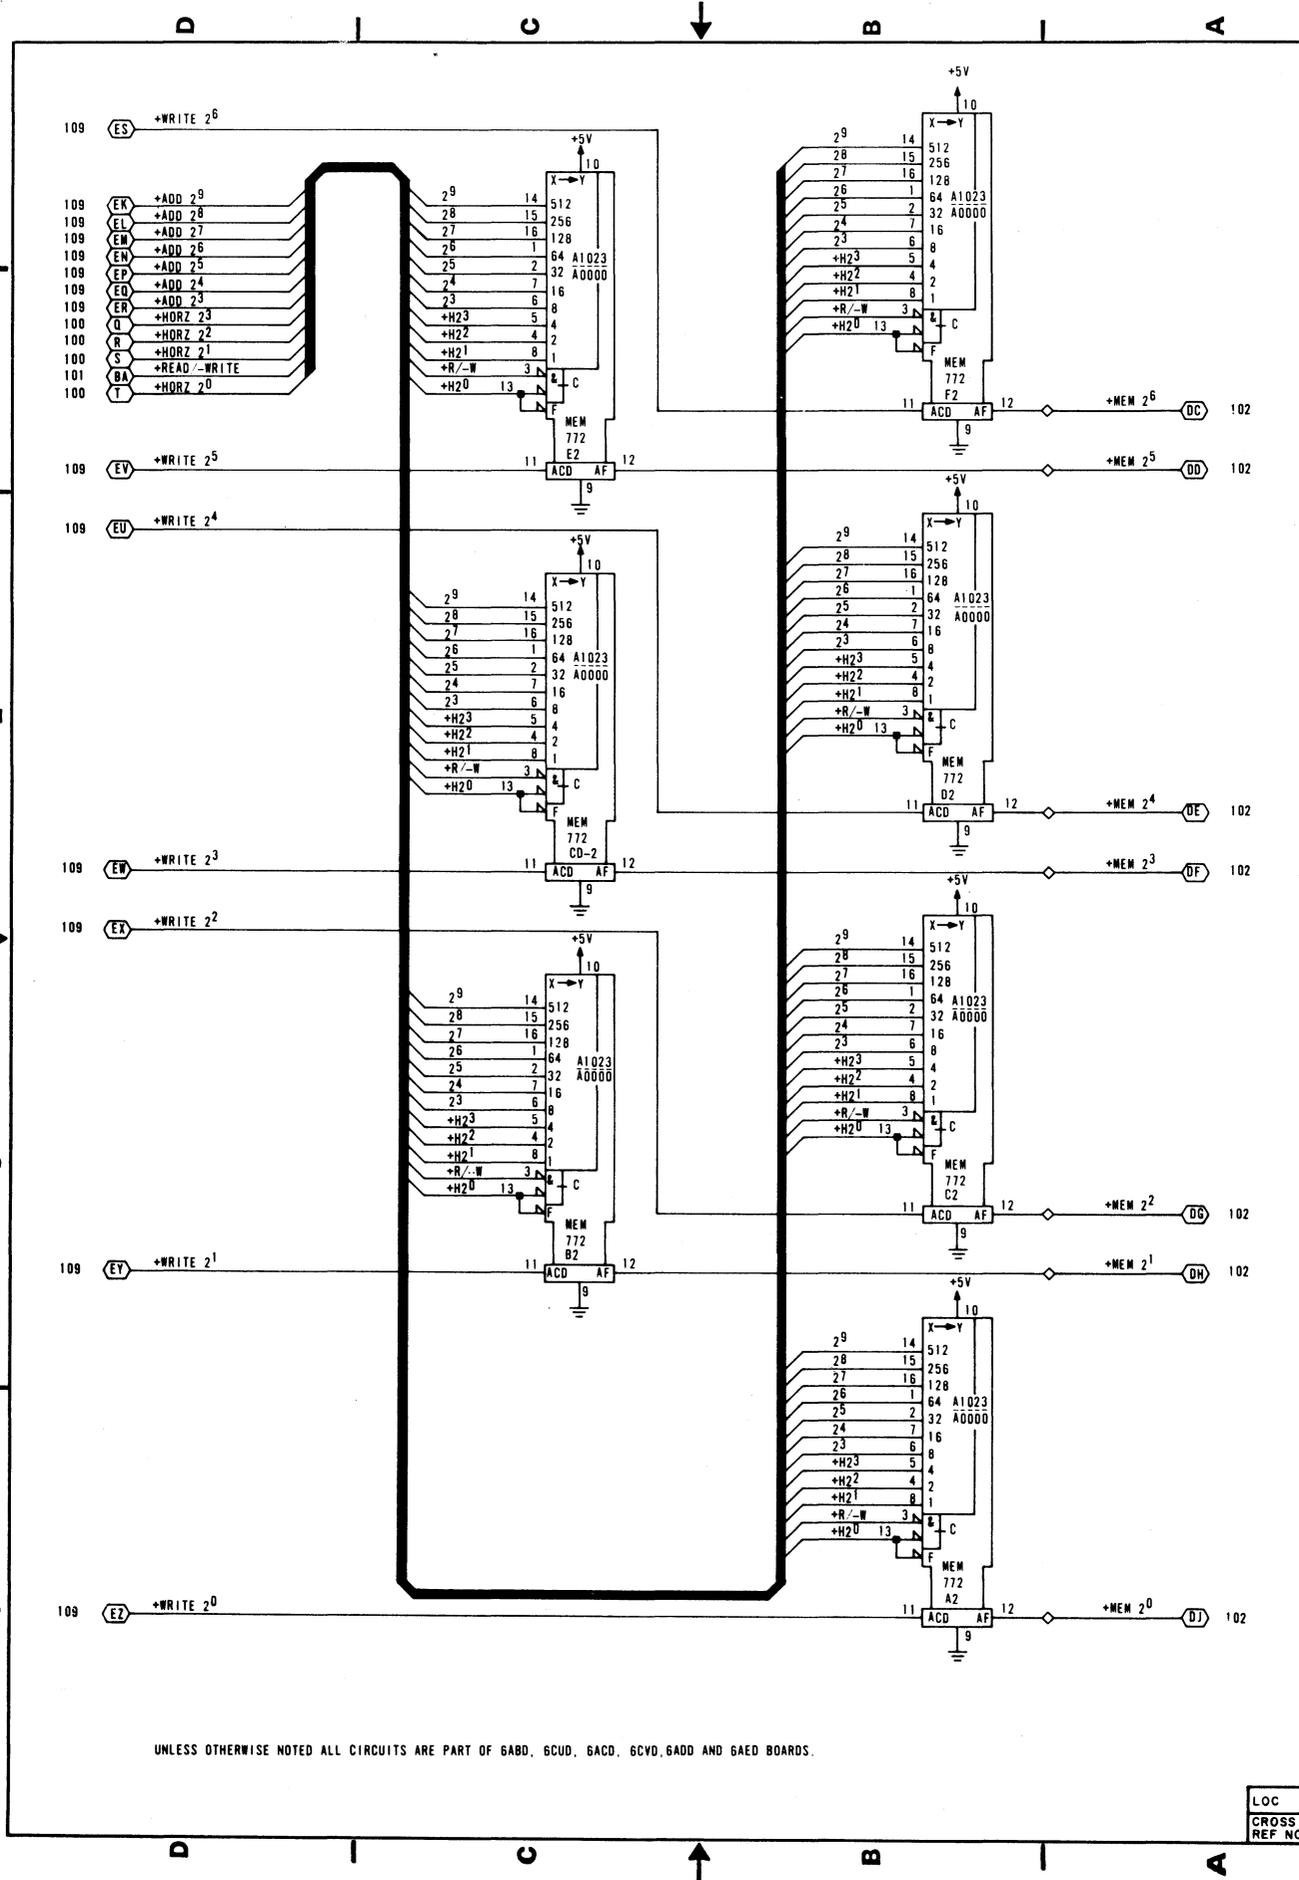

- 109 ES +WRITE 2<sup>6</sup>
- 109 ER +ADD 2<sup>9</sup>
- 109 EL +ADD 2<sup>8</sup>
- 109 EN +ADD 2<sup>7</sup>
- 109 EP +ADD 2<sup>6</sup>
- 109 EQ +ADD 2<sup>5</sup>
- 109 ER +ADD 2<sup>4</sup>
- 109 ER +ADD 2<sup>3</sup>
- 100 Q +HORZ 2<sup>3</sup>
- 100 R +HORZ 2<sup>2</sup>
- 100 S +HORZ 2<sup>1</sup>
- 101 BA +READ -WRITE
- 100 T +HORZ 2<sup>0</sup>

109 EV +WRITE 2<sup>5</sup>

109 EU +WRITE 2<sup>4</sup>

109 EW +WRITE 2<sup>3</sup>

109 EX +WRITE 2<sup>2</sup>

109 EY +WRITE 2<sup>1</sup>

109 EZ +WRITE 2<sup>0</sup>

+MEM 2<sup>6</sup> DC 102

+MEM 2<sup>5</sup> DD 102

+MEM 2<sup>4</sup> OE 102

+MEM 2<sup>3</sup> DF 102

+MEM 2<sup>2</sup> DG 102

+MEM 2<sup>1</sup> DH 102


+MEM 2<sup>0</sup> DJ 102

UNLESS OTHERWISE NOTED ALL CIRCUITS ARE PART OF 6ABD, 6CUD, 6ACD, 6CVD, 6ADD AND 6AED BOARDS.

REV	C
DWG NO	62200824
CROSS REF NO	106
SHEET	10
CODE IDENT	15920
MEMORY BANK "A"	
CONTROL DATA	

LOC	
CROSS REF NO	106



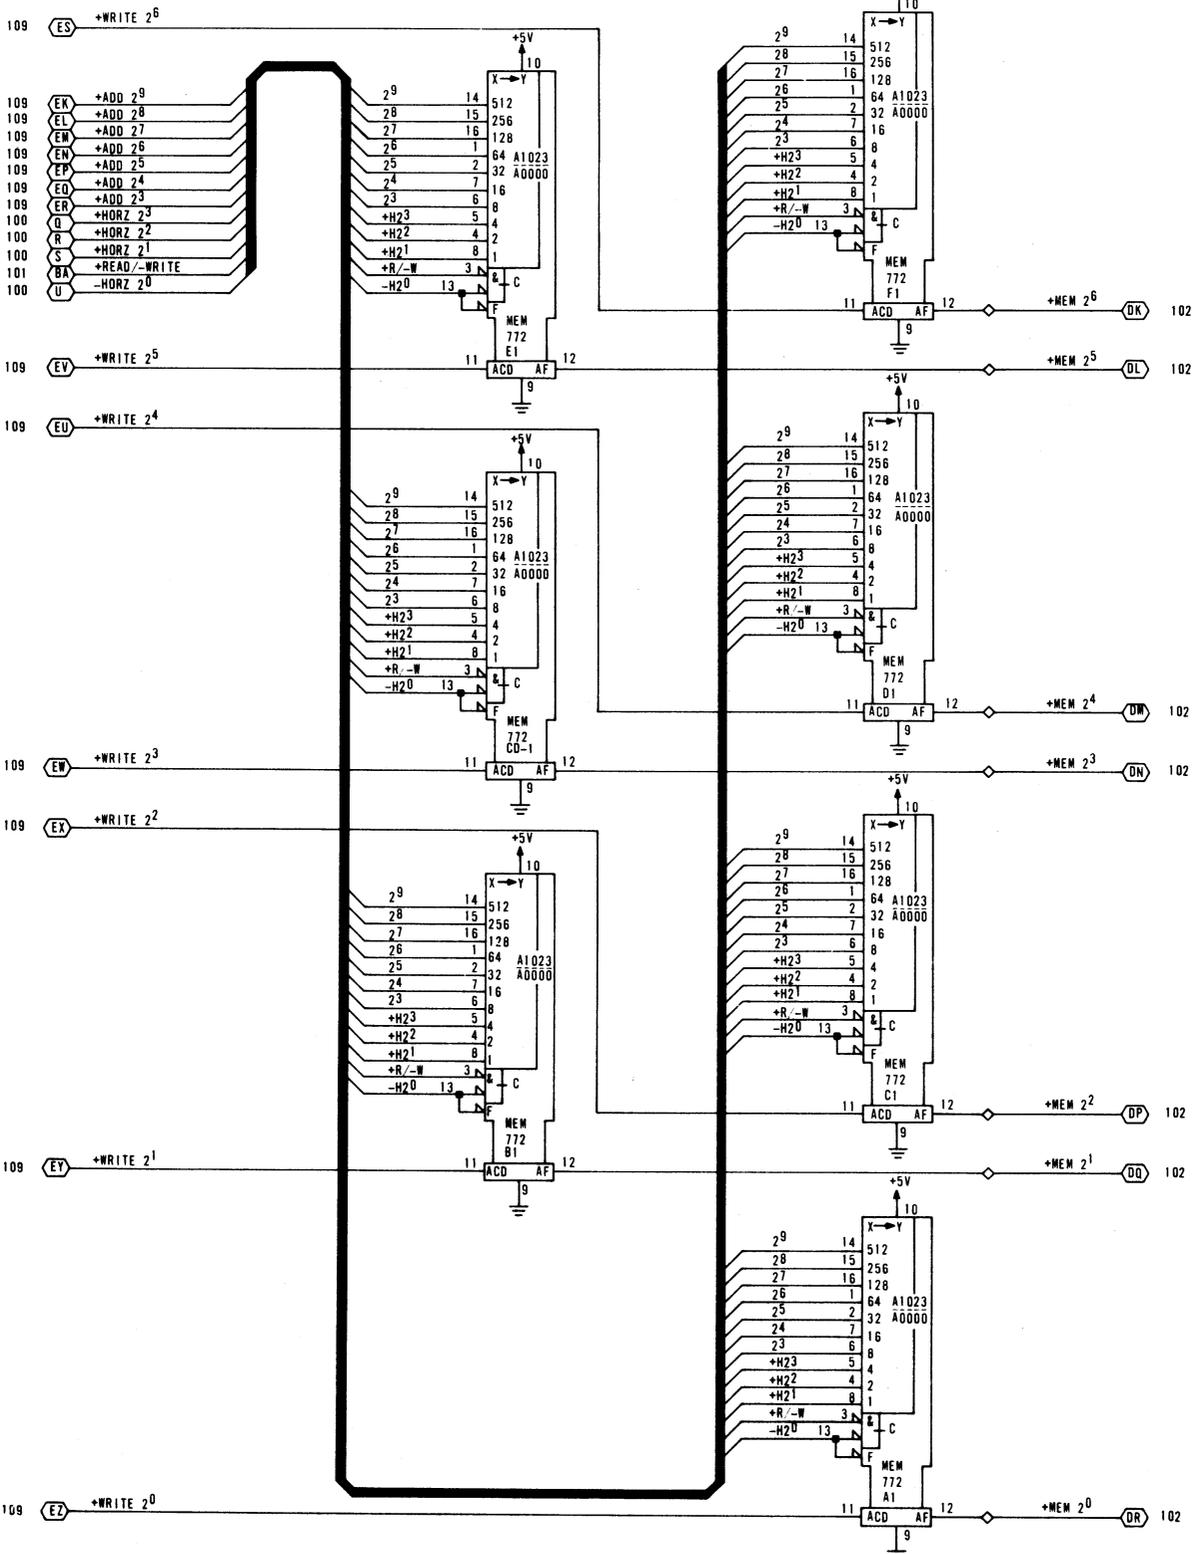

UNLESS OTHERWISE NOTED ALL CIRCUITS ARE PART OF A 6ABD, 6ACD, 6ADD, 6CUD, 6CVD AND 6AED BOARDS.

REV	C
DWG NO	62200824
CODE IDENT	C
15920	
CROSS REF NO	107
SHEET	11
MEMORY BANK "B"	
CONTROL DATA	

**DIAGRAM 108**  
**CLEAR CONTROL, RECEIVE, AND KEYBOARD CONTROL**

The upper third of this diagram shows the receive and keyboard control logic; the middle third shows the clear control logic, and the lower third shows the power-on reset logic.

**RECEIVE AND KEYBOARD CONTROL LOGIC** — The receive and keyboard control logic consists of flip-flops G8A (receive active), H9B (strobe) and H9A (keyboard active), and of the gates associated with these flip-flops. The following text describes how these flip-flops interact to enable gating of receive data or keyboard data inputs.

The Receive Active flip-flop, direct sets via G8A-1 as the display terminal is powered up. It then clears at time T4 of the +(X COMP + 1) pulse. At time T4, any time that there is receive data ready (+DR = 1), and there is neither a clear 1 nor a scroll clear in progress (K9B and J9B are both clear), and it is neither an +X COMP nor +(X COMP + 1) time, the Receive Active flip-flop sets. As it sets, the resulting +RCV ACT and -RCV ACT signals go to various portions of the control logic to enable checking of the received character to determine what action the display terminal is to take: for example, either store a character in memory or perform a control action. The -RCV ACT signal resets the +DR signal from the UART, enabling the UART for reception of the next receive character. The -RCV ACT signal also disables NAND gate G9B.

NAND gate G9B is the control gate for the Keyboard Active flip-flop. The Keyboard Active flip-flop is enabled for setting on the next T5 clock pulse when: 1) the Receive Active flip-flop is clear, 2) the transmit holding register of the UART is empty (+THRE = 1), 3) the scan timing indicates that neither an +X COMP nor +(X COMP + 1) is occurring, 4) flip-flops K9B and J9B are clear to indicate that neither a clear 1 nor a scroll clear is occurring, and 5) the Strobe flip-flop (H9B) sets to indicate keyboard data is awaiting loading into the UART. Notice that the timing of the Receive Active and Keyboard Active flip-flops gives the Receive Active flip-flop priority by virtue of its earlier clock pulse (T4 versus T5). As the Keyboard Active flip-flop sets, it distributes +KYBD ACT and -KYBD ACT signals to various portions of the logic to enable loading and checking of the keyed-in character to determine what action the display terminal is to take: for example, transmit and control, transmit and display, or transmit only.

**CLEAR CONTROL LOGIC** — Clear control logic consists of Line Clear flip-flop J9A, Clear flip-flop K9A, Scroll Clear flip-flop J9B, Clear 1 flip-flop K9B, and the gates associated with these flip-flops. These four flip-flops provide control for three functions of the display terminal: 1) a clear operation, 2) a line clear operation, and 3) a scroll clear operation.

A clear operation occurs as the result of either a received or keyboard input clear command, as decoded by the cursor function decode circuit (diagram 104). The resulting +CLR signal enables Clear 1 flip-flop K9B to set as the next T1 clock pulse occurs. +CLR 1 then enables Clear flip-flop K9A for setting on the next -VERT SYNC pulse. When the Clear flip-flop sets, its +CLR ACT signal inhibits the data decode mux (diagram 109), while its -CLR SET signal resets the vertical address counter and sets the Read/Write Control flip-flop to enable muxing the new cursor position into memory (diagram 101). The Clear flip-flop remains set until the next -VERT SYNC pulse toggles it clear; as it resets, it completes the clear operation by toggling the Clear 1 flip-flop clear.

A line clear operation also occurs as the result of a keyboard input or a received command. In this case, the cursor function decode circuit causes the -(BELL + CLR) signal to go high while the -(BELL + LN CLR) signal goes low. These signals gate Line Clear flip-flop J9A for setting on the next T2 clock signal. When the line clear flip-flop sets, its outputs enable the clearing of refresh memory from the current cursor location to the end of the associated display line without moving the cursor position. The line clear flip-flop resets on the next -HORZ SYNC pulse to terminate the line clear operation at the end of the display line in which the operation began.


A scroll clear operation is similar to a line clear operation with the exception that it only occurs during scroll mode operation of the display. When the display is scrolled, the +SCROLL ADD signal enables the Scroll Clear flip-flop for setting at the next T1 clock pulse. The Scroll Clear flip-flop, in turn, enables the line clear flip-flop for setting on the next -HORZ SYNC pulse. This approach ensures that the display line moving into the last-line position (scroll position or 24th line of screen) is clear. The Line Clear flip-flop clears on the second -HORZ SYNC pulse following initiation of the scroll clear operation and terminates the operation by enabling the Scroll Clear flip-flop for clearing.

Notice that both the scroll clear and the clear operations (Clear 1 set) inhibit either keyboard or receive functions from occurring until the clear operation is complete. This is because the duration of these operations is such that timing conflicts could occur.

#### DIAGRAM 108 (CONTD)

POWER-ON RESET LOGIC — The power-on reset logic consists of flip-flops C7A and C7B. Power-on Reset flip-flop C7B is normally clear as display terminal power comes on. When clear, C7B resets the horizontal and vertical counters (diagrams 100 and 101) and sets the Master Reset flip-flop (C7A), which clears the remainder of terminal logic. After display terminal power has been on a short time, capacitor C10 charges through resistor R27 and enables flip-flop C7B for setting, which it does on the next  $+T_0$  clock transition. C7B then remains set as long as the +5-V dc logic power remains on. As C7B sets and the -PWR RST signal goes high, it enables Master Reset flip-flop C7A for clearing, which it does on the next  $+T_0$  clock transition. The power-on clear operation is then complete, and all logic circuits are initialized for operation.



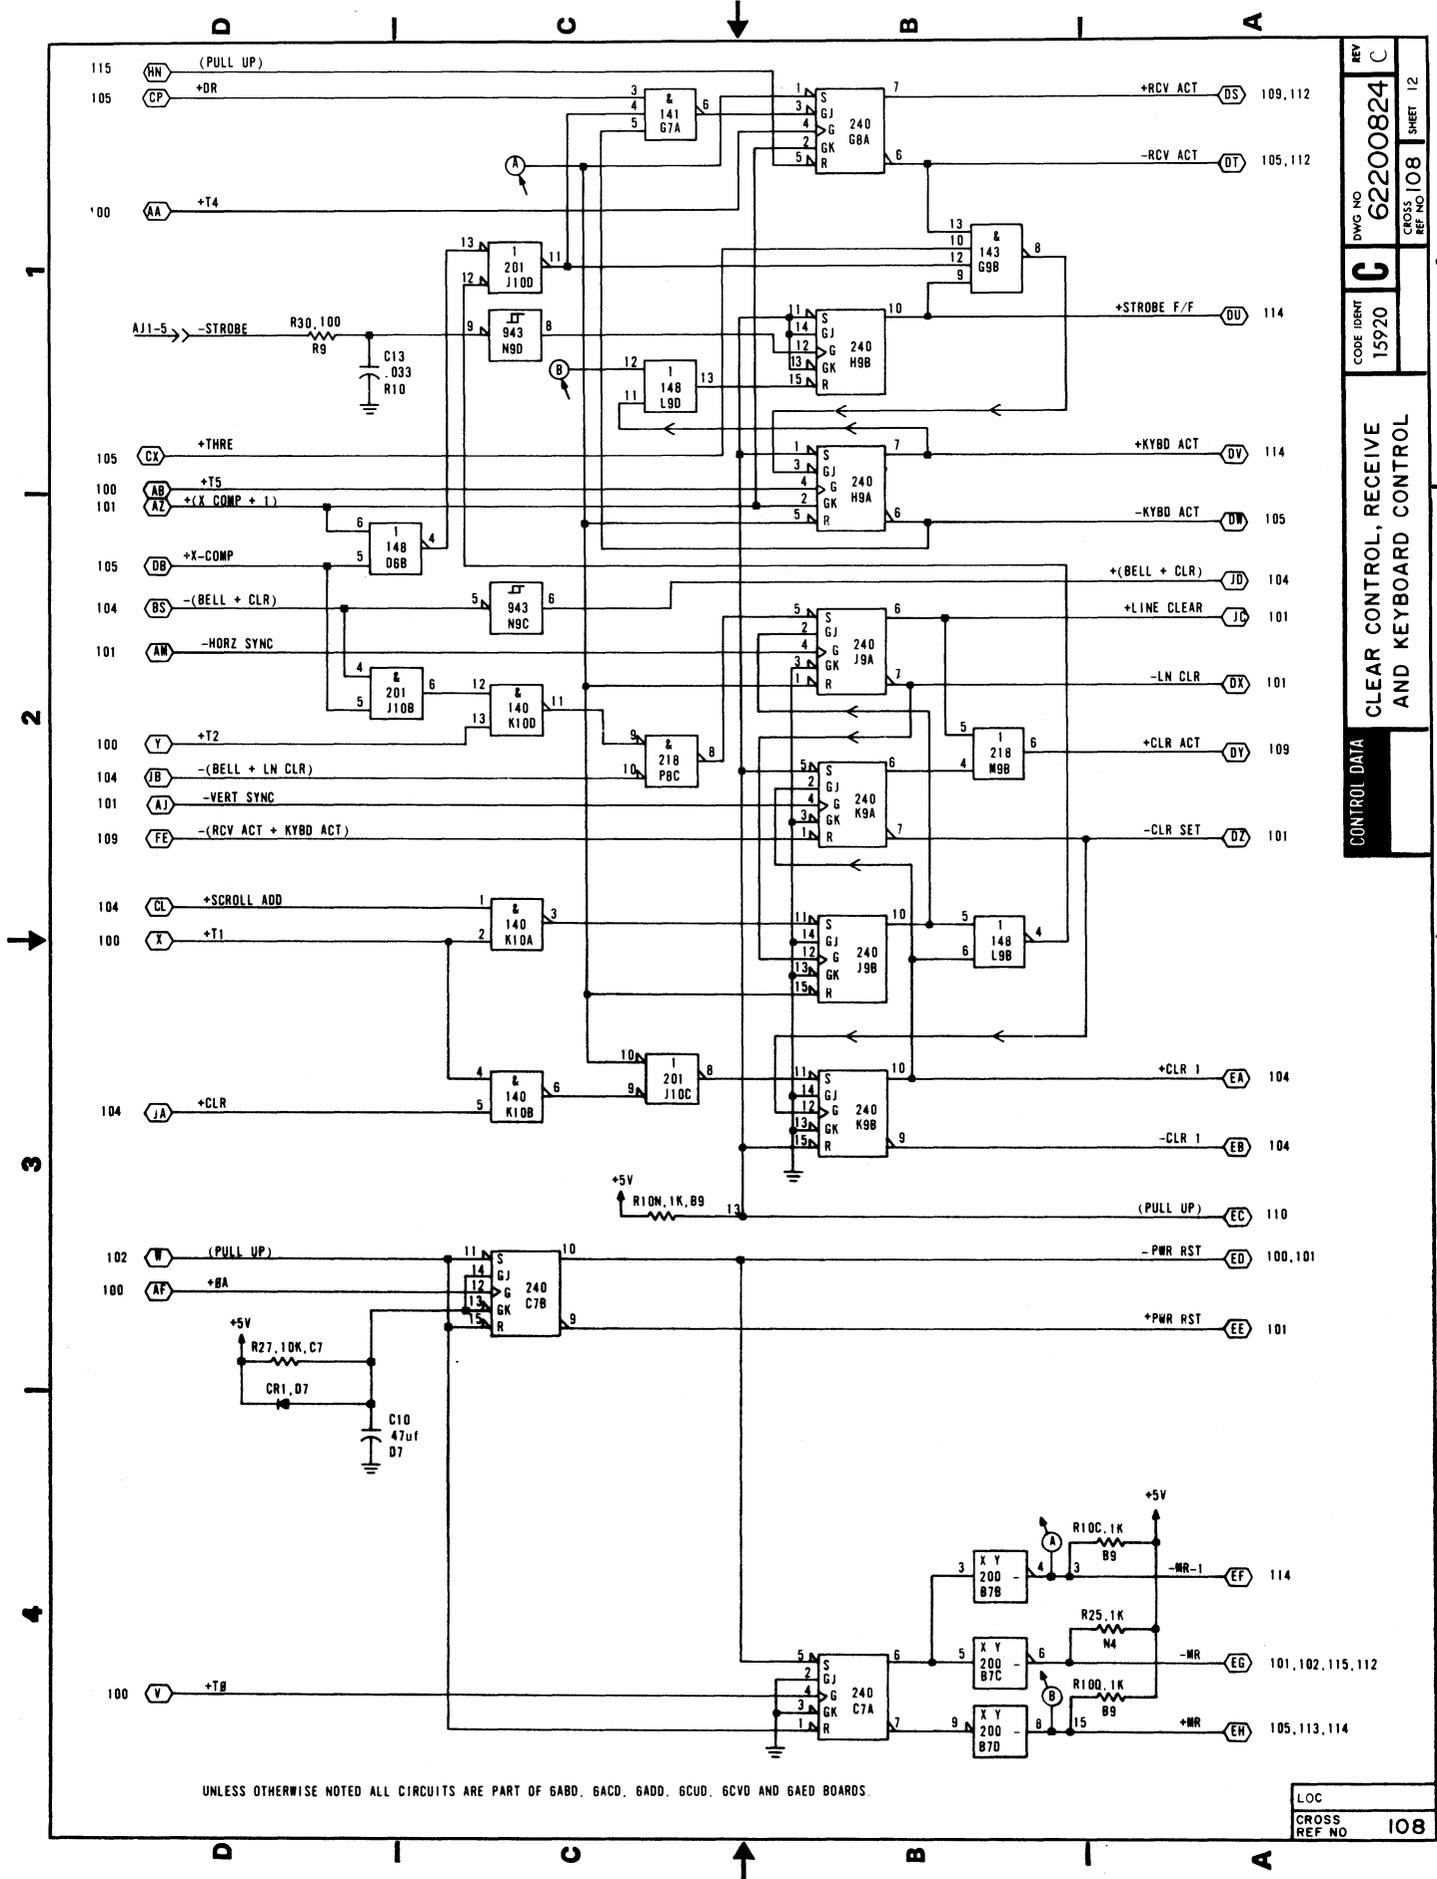

UNLESS OTHERWISE NOTED ALL CIRCUITS ARE PART OF 6ABD, 6ACD, 6ADD, 6CUD, 6CVD AND 6AED BOARDS.

LOC  
 CROSS REF NO 108

**DIAGRAM 109**  
**MEMORY ADDRESS CONVERSION, DATA DECODE**

Diagram 109 depicts the logic for the memory address conversion circuit (multiplexers C3 and D3, and ROMs B3 and A3), and it also shows the data decode logic circuit (multiplexers K7 and J7, and ROM J8).

**MEMORY ADDRESS CONVERSION CIRCUIT** — The memory address conversion circuit provides the upper seven bits of address for the refresh memory of the display terminal (bank A and B, diagram 106 and 107). The conversion is necessary to provide sequential binary addressing of refresh memory from the BCD outputs of the horizontal and vertical address (or Y cursor) counters (diagrams 100, 101 and 103). The +HORZ  $2^6$  through  $2^4$  signals from the horizontal counter feed directly into the ROM converters, whereas multiplexing is necessary to determine whether the +VERT ADD  $2^4$  through  $2^0$  or the +CUR  $2^{12}$  through  $2^8$  signals pass into the ROM converters. The vertical address and +T8 clock signals are multiplexed during refresh (read memory) operations, while the Y cursor counter and +T2 clock signals are multiplexed during write memory (receive data or keyboard input) or other cursor movement operations (+MUX CUR = 1).

**DATA DECODE LOGIC CIRCUIT** — Data decode ROM J8 monitors the output of write data multiplexer K7/J7 to determine whether:

- 1) The write character is a valid display character — -VALID CHAR signal goes low.
- 2) The write character is one calling for cursor movement, a bell signal, a clear operation or a line clear operation — -EN DECODE signal goes low.
- 3) The write character is one that calls for the request to send signal to be cleared — -CLR RTS signal goes low. The carriage return (015g), the end of text (003g), the end of transmission (004g), and line feed (012g) codes cause the -CLR RTS signal to go low.
- 4) The write character(s) are requesting a cursor positioning operation — -(ESC + 061g) signal goes low.


The -VALID CHAR signal makes a gate (diagram 115) that enables loading the write characters into refresh memory. The -EN DECODE signal enables the cursor function decode ROM (diagram 104), which in turn examines the write character for its significance. The -CLR RTS signal goes to the modem interface logic (diagram 114) to enable dropping the request to send signal if the terminal is operating in half duplex and switched RTS modes. The -(ESC + 061g) signal goes to the X/Y position control logic (diagram 115) to enable it for X/Y cursor positioning operations; the escape and 061g codes must occur one after the other, in sequence, to enable the X/Y positioning circuits.

The write data multiplexer muxes either keyboard (+KYBD ACT = 1) or receive data (+KYBD ACT = 0) inputs onto the write data lines and into the data decode ROM. Selecting internal test mode of the display terminal (+TEST = 1) conditions the ROM so that input control functions are not performed (-EN DECODE remains high) and so that all characters are displayed (-VALID CHAR goes low for each write input). When the +(PE + RCV BRK + TEST) signal line is high and is muxed into the data decode ROM with the write data, the -VALID CHAR signal goes low to enable a character display but the actual display depends on the particular signal causing the +(PE + RCV BRK + TEST) signal to be high: a parity-error symbol (■) displays if either the +PE or the +RCV BRK signal is the cause, or the symbol associated with the write code displays if the +TEST signal is the cause.

REV C  
 DWG NO 62200824  
 CODE IDENT 15920  
 CROSS REF NO 109  
 SHEET 13

MEMORY ADDRESS CONVERSION,  
 DATA DECODE

CONTROL DATA

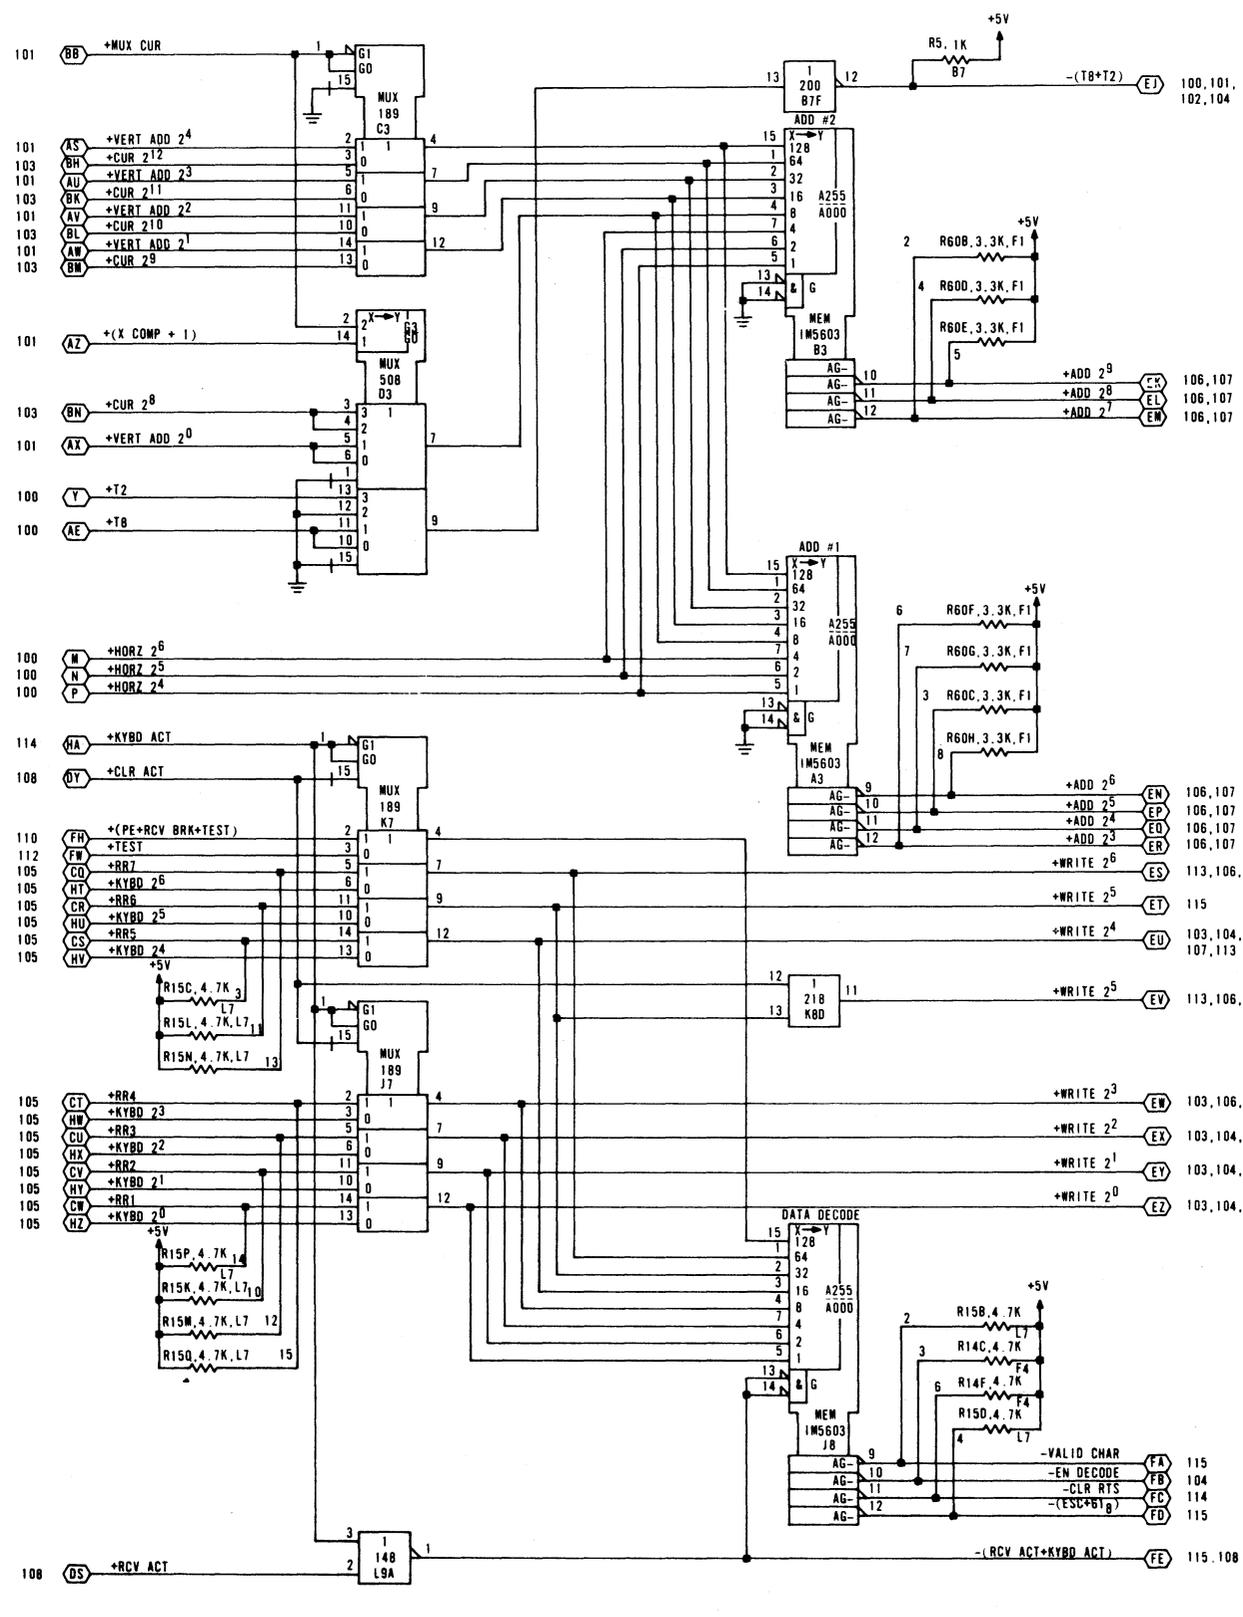

UNLESS OTHERWISE NOTED ALL CIRCUITS ARE PART OF 6ABD, 6ACD, 6ADD, 6CUD, 6CVD AND 6AED BOARDS.

LOC  
 CROSS REF NO 109

**DIAGRAM 110**  
**BAUD COUNTER, MODEM CONTROL**

Diagram 110 depicts the logic for the baud counter (counters E9, D9 and E10, flip-flop F8A, and oscillator D8) near the top of the diagram, and it shows the modem control logic (ROM L8) near the bottom.


**BAUD COUNTER** — The baud counter receives a 6.745-MHz clock signal from oscillator D8 and load inputs +BIT 8 through +BIT 1 from the Baud Select switches (diagram 115) to enable selection of one of the following transmit/receive baud rates: 110, 150, 200, 300, 600, 1200, 1800, 2400, 4800, or 9600. The transmit/receive circuits of the UART divide the input transmit/receive clock frequencies by 16 to obtain the desired baud rate. In addition, flip-flop F8A at the output of the counter circuit provides a constant divide-by-two factor. The following tabular listing shows the relationship between the desired transmit/receive baud rate and the preload input to the baud counter.

Baud Rate	Clock Hertz to UART (Output of F8A)	Clock Hertz from Counter (Output of E7D)	Counter $\div$	Counter Preload (E9 and D9)							
				B8	B7	B6	B5	B4	B3	B2	B1
110	1760	3520	1936	0	1	0	1	0	0	0	0
150	2400	4800	1408	1	0	0	0	0	0	0	0
200	3200	6400	1056	1	0	1	0	0	0	0	0
300	4800	9600	704	1	1	0	0	0	0	0	0
600	9600	19,200	352	1	1	1	0	0	0	0	0
1200	19,200	38,400	176	1	1	1	1	0	0	0	0
1800	28,800	57,600	117	1	1	1	1	0	0	1	1
2400	38,400	76,800	88	1	1	1	1	1	0	0	0
4800	76,800	153,600	44	1	1	1	1	1	1	0	0
9600	153,600	307,200	22	1	1	1	1	1	1	1	0

Only the preload values for counters E9 and D9 are included in the listing because the preload for counter D10 is normally fixed at 0101, except at 1800 baud. At 1800 baud, the preload for counter D10 is 0111.

**MODEM CONTROL LOGIC** — Just above the modem control ROM, the +TEST, +FE (format error) and +PE (parity error) signals pass through OR gates P8A and P8B to produce a +(PE + RCV BRK + TEST) signal and a +(FE + PE) signal. The parity error, receive break or test signal goes to the data decode mux and memory (diagram 109) to enable loading, decoding and display of the appropriate symbol: parity error or receive break = error symbol (■), and test mode provides display of all symbols but no control functions. The format error or parity error signal goes to the UART (diagram 105) to block loading of an erroneous code in memory and attempting to decode it.

Modem control ROM L8 receives input signals from the modem interface logic (diagram 114) and provides modem control output signals to the logic circuits within the display terminal. As examples, the data set ready (-DSR) and data terminal ready (-DTR) signals into the ROM cause an enable request to send (-EN RTS) signal out of the ROM, and the carrier on (-CO) signal into the ROM enables the -CO LIGHT signal out of the ROM. Selection of current loop mode of display terminal operation (+EN CUR LOOP = 1) forces all of the ROM outputs high inhibiting the modem control signals that are not necessary for current loop mode operation. The +EN XMIT and +EN RCV signals remain high in current loop mode.

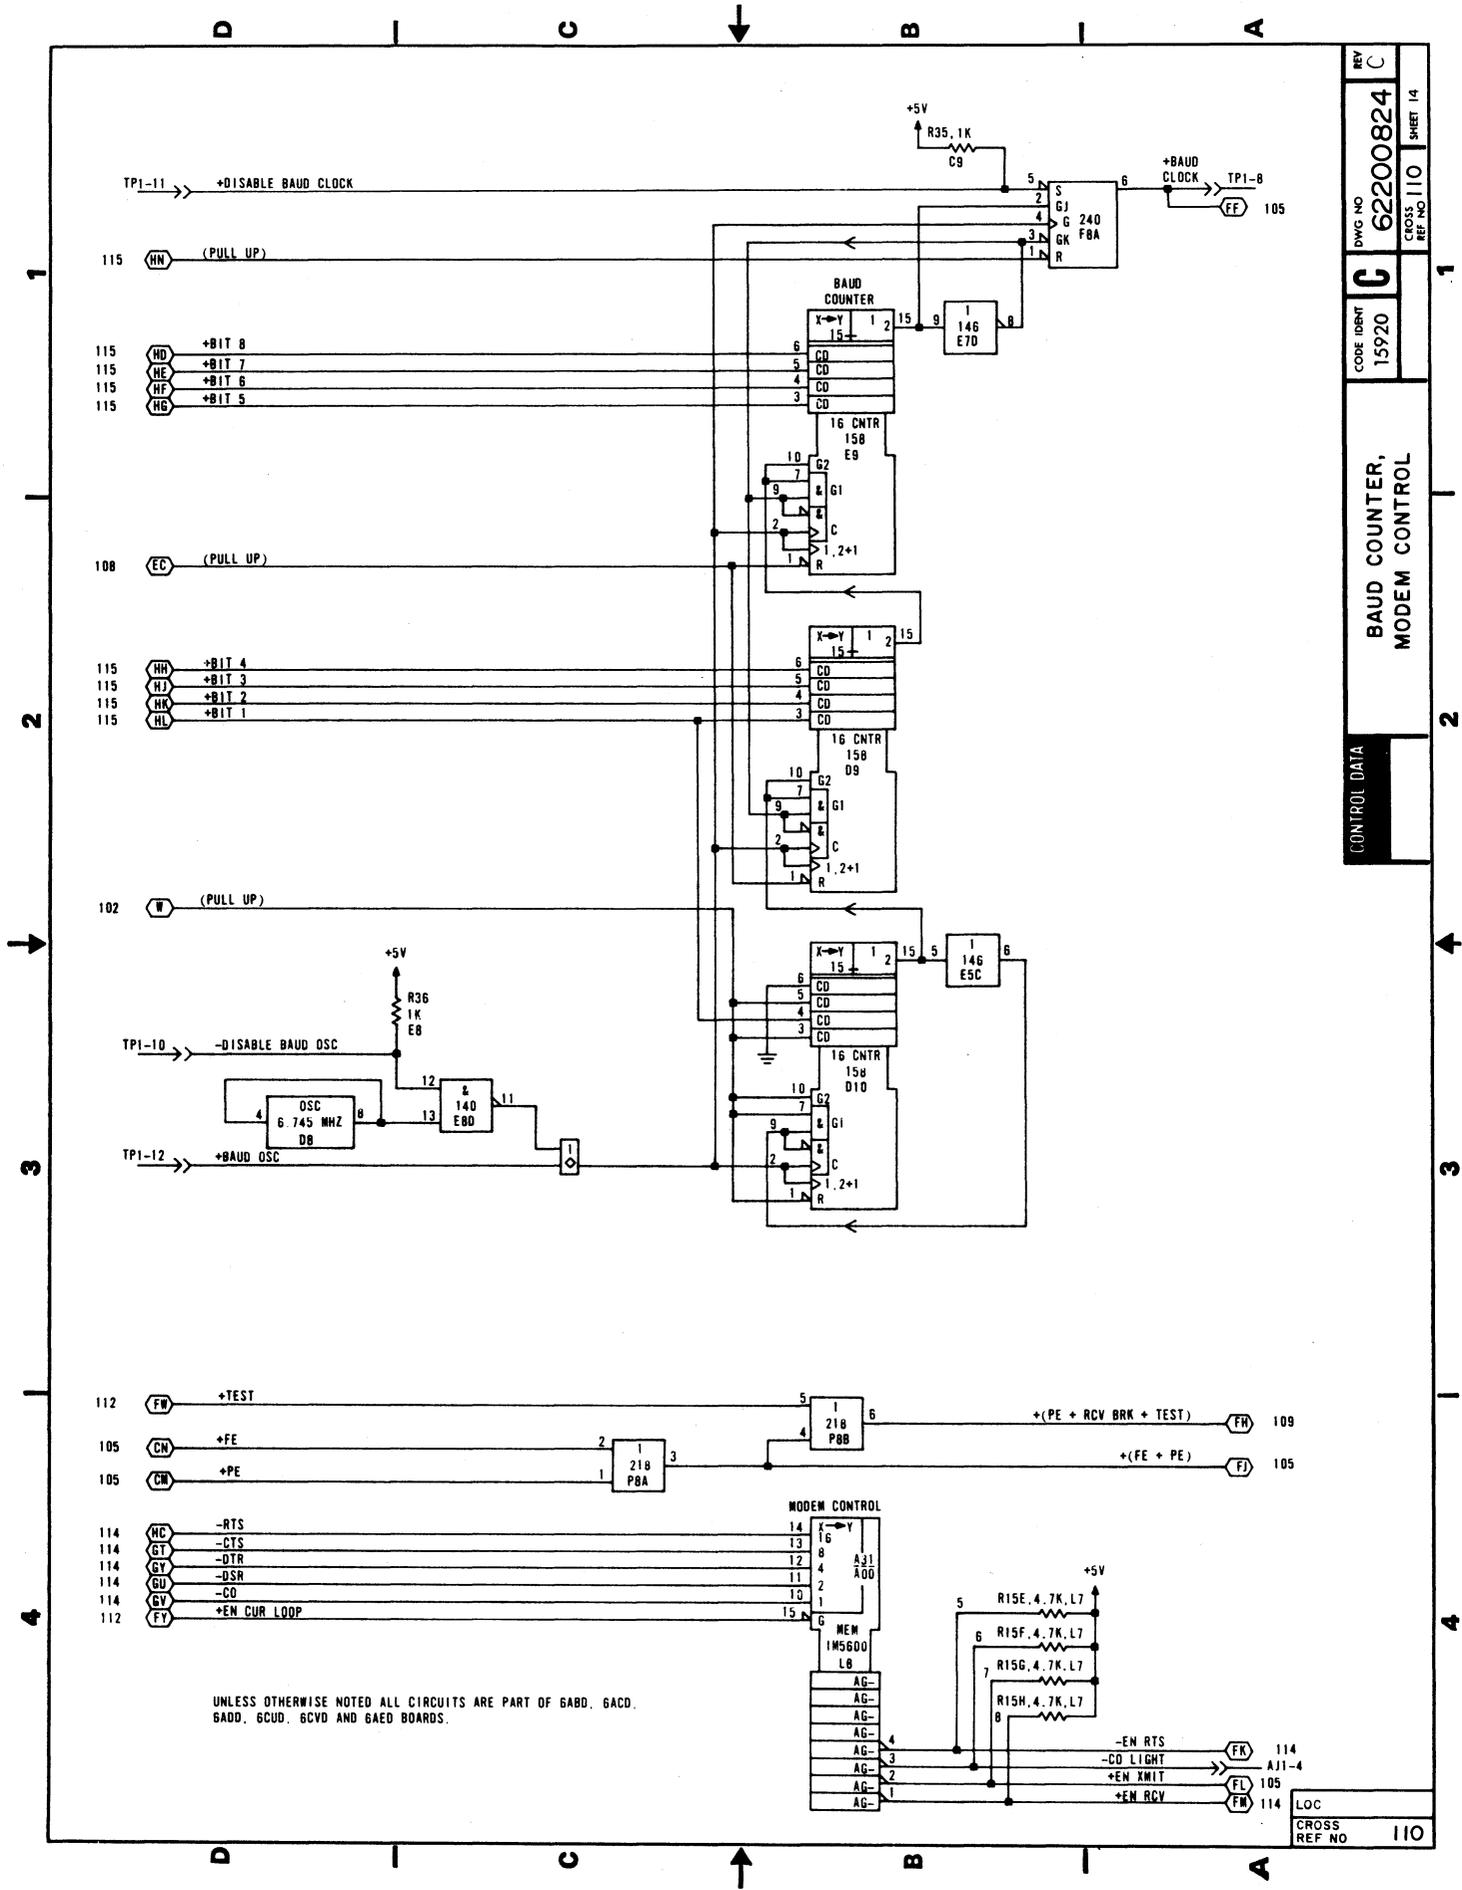

UNLESS OTHERWISE NOTED ALL CIRCUITS ARE PART OF GABD, GACD, GADD, 6CUD, 6CVD AND GAED BOARDS.

**DIAGRAM 111**  
**PHASE LOCK OSCILLATOR, CURRENT LOOP RECEIVE AND TRANSMIT**

Diagram 111 shows the phase lock and the current loop transmit/receive circuits of the display terminal.

**PHASE LOCK CIRCUIT** — Phase lock circuit P9 synchronizes the vertical sync pulse of the vertical control circuit (diagram 101) with the frequency of the ac input power. The phase-shift detector portion of P9 receives its reference input via N9B-4 and compares it with the -VERT SYNC signal. If the -VERT SYNC signal lags the reference signal, output pin 13 of P9 goes high while pin 2 goes low. These outputs feed around and into the charge pump section of P9 on pins 4 and 11 causing output pin 5 to go high while output pin 10 goes low. As a result, Q3 conducts less, P9-8 goes high increasing the voltage input to voltage-controlled multivibrator M2, and the multivibrator speeds up. If the -VERT SYNC signal leads the reference signal, output pin 13 of P9 goes low while pin 2 goes high. The charge pump outputs then reverse; pin 5 goes low and 10 goes high causing Q3 to increase conduction. The amplifier portion of P9, in turn, conducts more causing pin 8 of P9 to go low. Voltage input to the voltage-controller multivibrator decreases, and the multivibrator decreases its speed until it matches that of the reference signal. The phase lock circuit uses power from its own +5-V dc regulator, which in turn uses the +12-V dc as a power source.




**CURRENT LOOP TRANSMIT AND RECEIVE CIRCUITS** — Current loop circuits are present only on display terminals having that option installed; however, all display terminals have the jumper connectors installed for conditioning the display terminal for use on either a current loop or voltage level communication interface. When used on a voltage level interface, the following jumper connections are used in the display terminal: A to B, L to M, G to E and K to H. Full-duplex current loop operation of the display terminal requires the following connections: A to D, M to L, E to G and J to H. Half-duplex current loop operation requires the following jumper connections: A to C, N to L, J to H, and complete removal of the E/F/G jumper. The following text describes the operation of the current loop transmit and receive circuits when connected for a full-duplex current loop channel. Operation of the circuits on a half-duplex current loop channel is similar to that of the circuits on a full-duplex channel.

The current loop transmit circuit normally receives high -TRO·ON LN and -XMIT BREAK signals via N2C and a pulsing +HORZ 2<sup>0</sup> signal via gate R3. The signals to 2NC block R3 so that its output stays low. The low output from R3 holds Q7 of the pulse transformer off so that the pulse transformer does not produce an output. The external system battery passes current to the transmit circuit via AJ2-17 and biases Q6 and Q2 to turn on. When Q2 is on, it bypasses R33 and provides a return path for the battery current via jumper J-H and AJ2-16. With current flowing in the loop in this manner, the transmit loop is in a quiescent marking condition (idle loop). When data is transmitted, the -TRO·ON LN signal line pulses high (mark) and low (space) to reflect the state of the data bits composing a transmit word. As -TRO·ON LN goes low to signify a space bit, it causes N2C-8 to go low and enable gate R3. R3 in turn passes the +HORZ 2<sup>0</sup> pulses to the pulse transformer, causing it to produce bias voltage that turns off Q6 and Q2. The use of the +HORZ 2<sup>0</sup> pulses provide efficient energy transfer across the pulse transformer. As Q6 and Q2 turn off, current flow in the transmit loop drops to about 0.2 mA because R33 now provides the only return path for current to the system battery. The alternating mark and space bits of a transmit word turn the pulse transformer off and on and turn Q6 and Q2 on and off to reproduce the bits as current flow marks and no current flow spaces on the transmit loop.

In full-duplex mode, current flows through the receive circuit loop via AJ2-17, jumpers F and E, jumpers L and M, the MCT-4 diode, jumpers D and A, and back to the system battery via AJ2-14. With current flowing through the MCT-4 diode, MCT-4 turns on and lowers the collector voltage of Q5 so that Q5 and Q4 turn off.

When Q4 is off, the -CURRENT RCV signal line is high (marking). When current flow in the loop drops, MCT-4 turns off causing Q5, and consequently Q4, to turn on. As Q4 turns on, the -CURRENT RCV signal line goes low (spacing).

PHASE LOCK OSCILLATOR  
 CURRENT LOOP RECEIVE  
 AND TRANSMIT

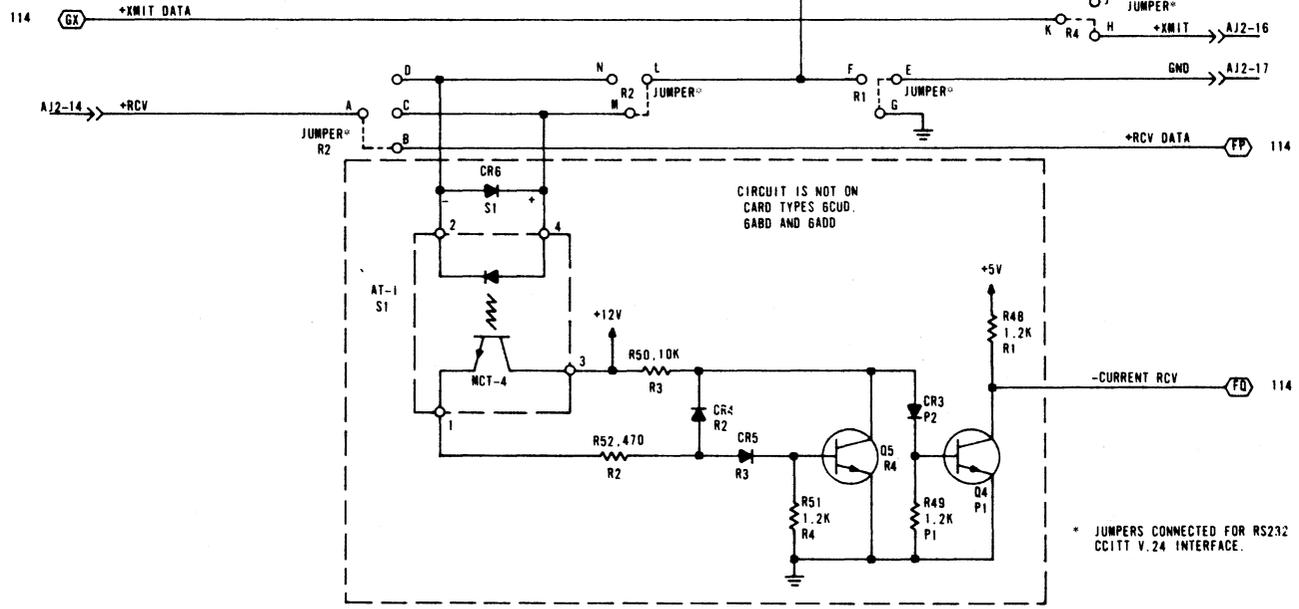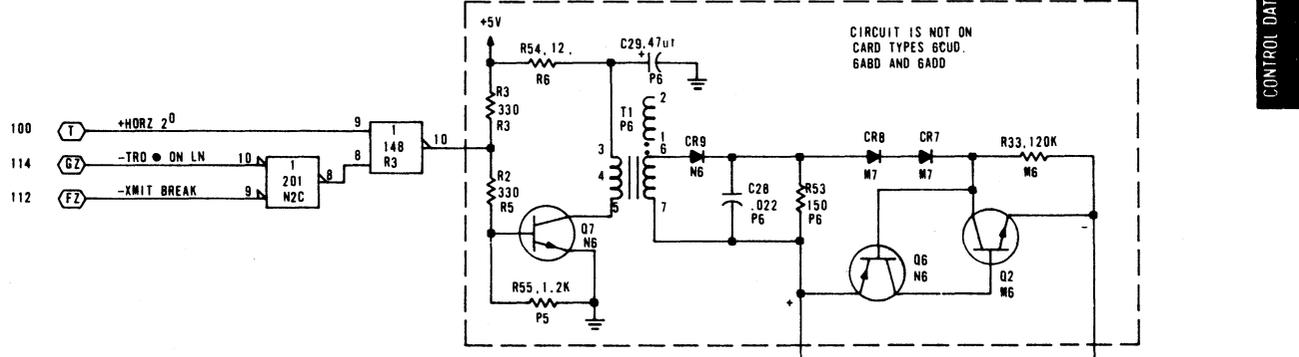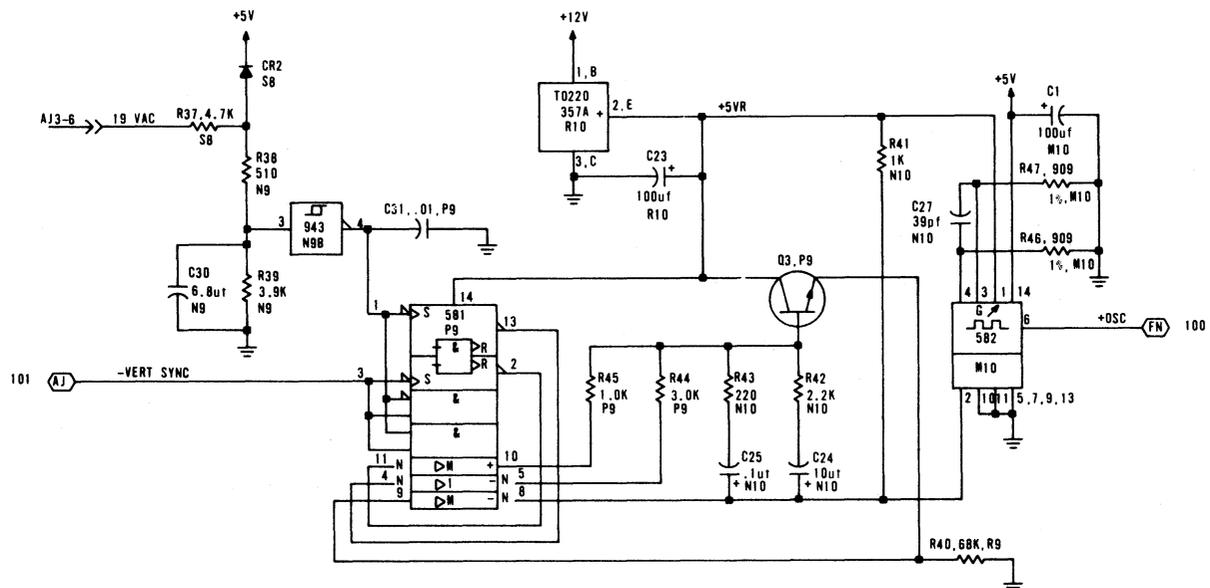

UNLESS OTHERWISE NOTED ALL CIRCUITS ARE PART OF 6ABD, 6ACD, 6ADD, 6CUD, 6CVD AND 6AD boards.

LOC  
 CROSS REF NO III


**DIAGRAM 112**  
**INTERNAL SWITCHES, BREAK AND ALARM, LAST-LINE COMPARE**

Diagram 112 shows the internal control switches, the break and alarm logic, and the last-line compare logic of the display terminal. The functions of the internal control switches are described with the logic circuits that they affect; therefore, only the break and alarm logic and the last-line compare logic are described here.

**BREAK AND ALARM LOGIC** — Pressing the BREAK key on the display terminal keyboard causes the +BREAK signal line to go high (AJ1-10). If the display terminal is operating online, the break signal from the keyboard causes a 260 ms -XMIT BREAK signal to occur. This signal goes to the modem interface (diagram 114) or to the current loop interface (diagram 111) to enable a break signal (spacing condition) to be transmitted to the receiving station.

The alarm, or ring bell circuit becomes active if either: 1) an ANSI BEL code is decoded during a receive operation (-BELL and -RCV ACT signals are low), 2) the cursor moves from the 72nd to the 73rd character position of the display screen while transmitting (+BEEP and +KYBD ACT signals are high), or 3) a framing error or a break signal is detected during data reception (+FE and +RCV ACT signals are high). When any one of these conditions occur, it causes the -RING BELL signal line to the audible alarm (AJ2-3) in the display terminal to go low, sounding the the alarm for about 200 ms.

**LAST-LINE COMPARE LOGIC** — The last-line compare circuit is only active when the display terminal is operating in scroll mode. The compare circuit monitors the output of the Y cursor counter (+CUR 2<sup>12</sup> through 2<sup>8</sup>) and the output of the last-line counter (+LST LN 2<sup>3</sup> through 2<sup>0</sup> and -LST LN 2<sup>4</sup>) so that it can determine when the cursor is in the display line designated as the last line. When a match of the two counts occurs, the compare circuit output ANDs with the scroll mode signal to enable a +LST LN COMP signal to the scroll add gate (diagram 101). The scroll add gate, in turn, enables the last-line counter (diagram 104) to increment when the display screen is scrolled.

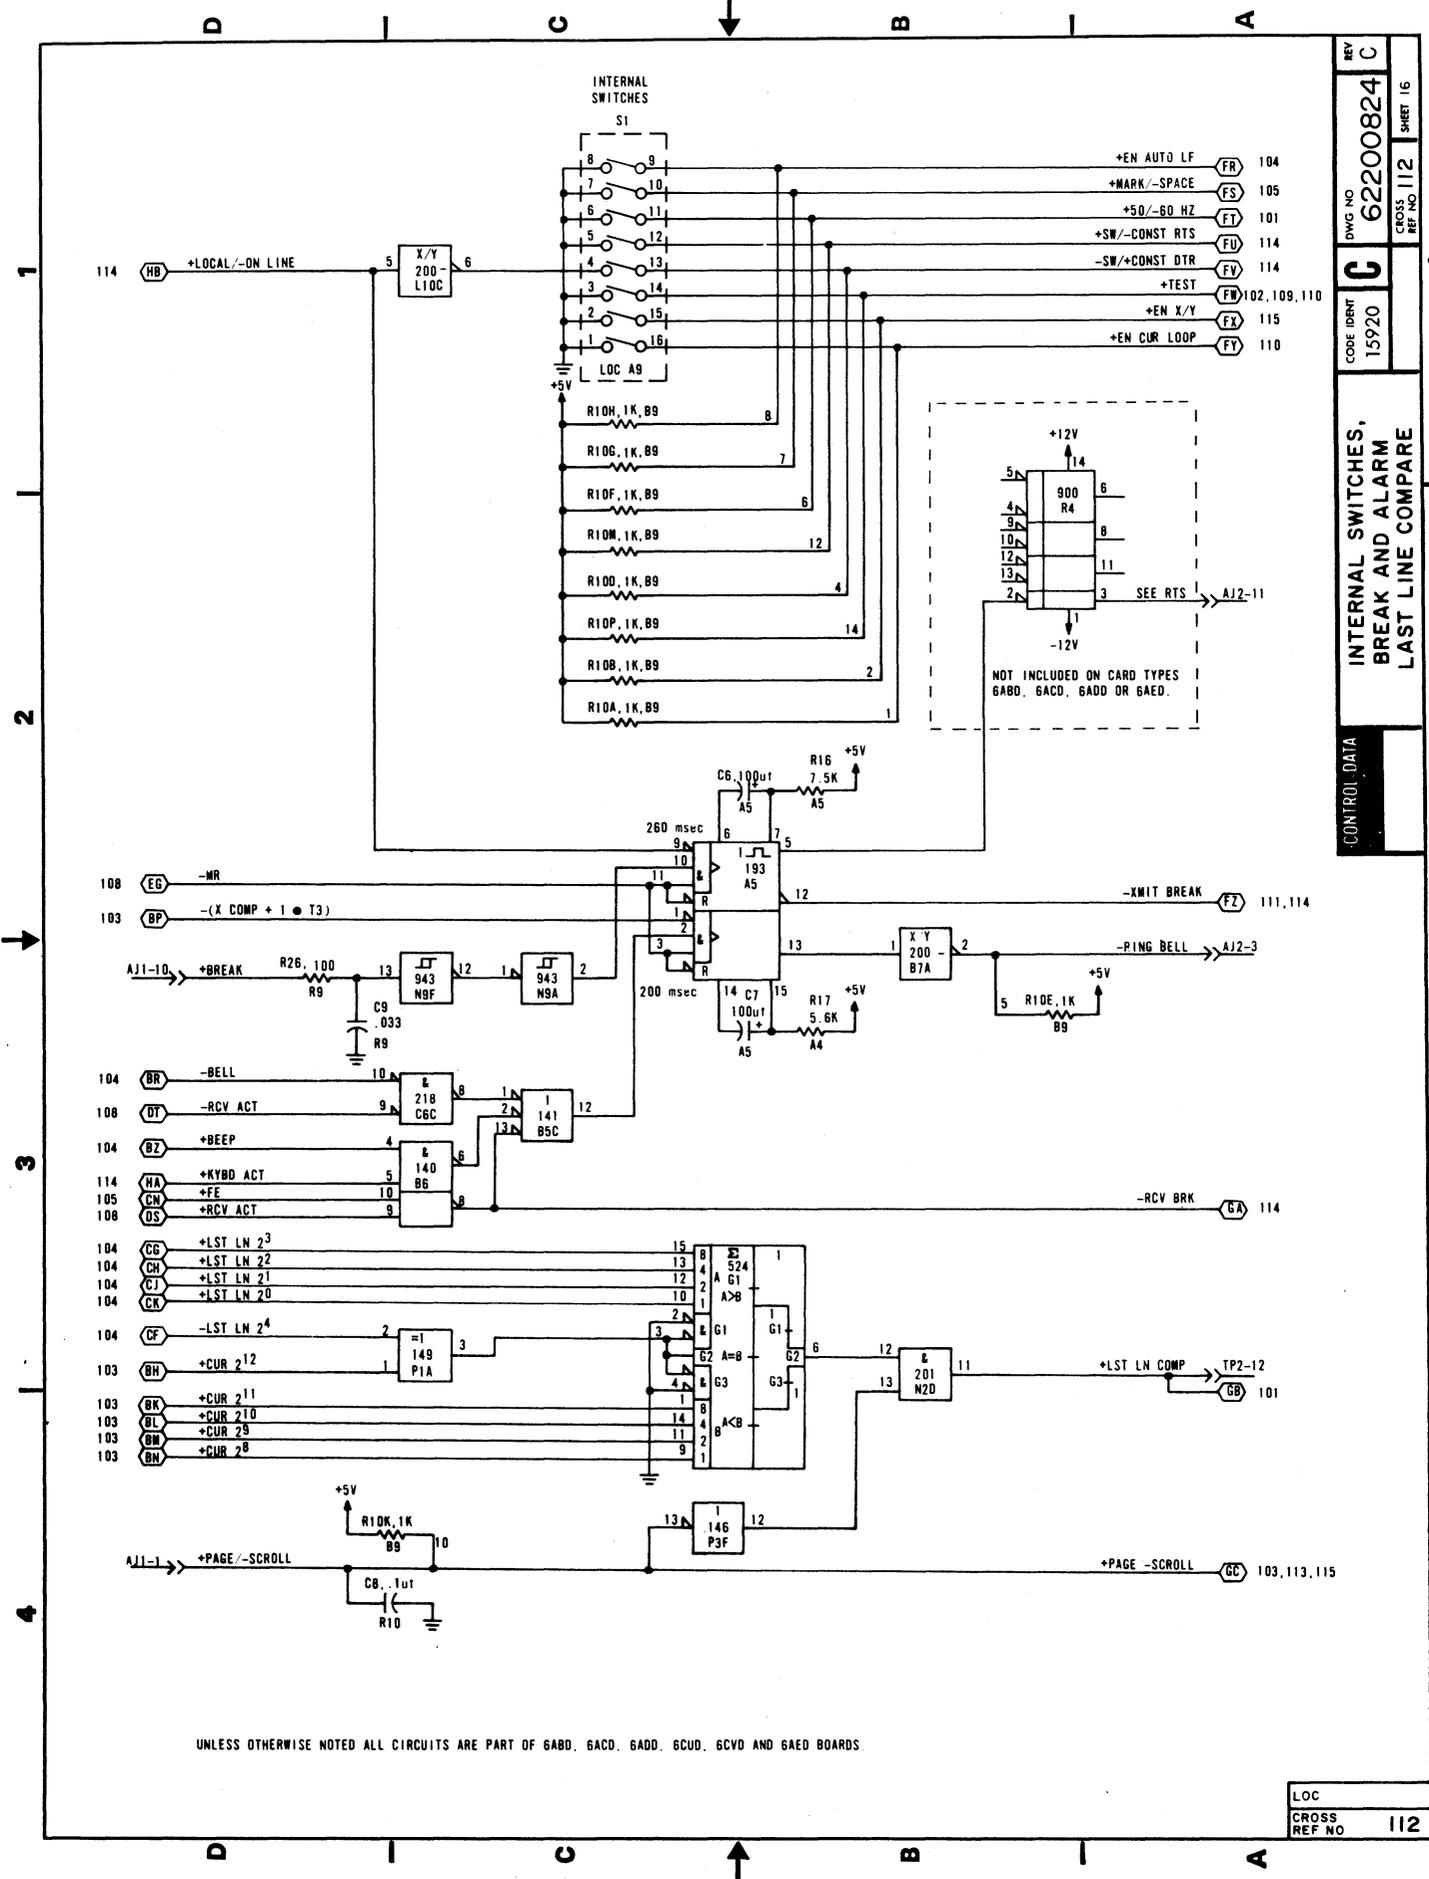

**DIAGRAM 113**

**X CURSOR CONTROL, Y CURSOR CONTROL, AND X CURSOR COUNTER**

Diagram 113 depicts the logic for the Y cursor control circuit and for the X cursor counter and control circuits.

**Y CURSOR CONTROL CIRCUIT** — The Y cursor control circuit is a ROM that decodes signals from the cursor position and cursor function control circuits (diagrams 104 and 115) to determine whether to load the Y cursor counter (diagram 103) or to enable the counter for incrementing or decrementing. The Y cursor control ROM has four outputs and uses four combinations of these outputs for controlling the Y cursor counter: -LOAD Y CUR CTR; -LOAD Y CUR CTR and -SET CUR 2<sup>12</sup>; -LOAD Y CUR CTR and -CLR CUR 2<sup>12</sup>; and -EN Y CUR CTR. The following are listings giving the input signals that produce each of these output combinations.

<p><u>- LOAD Y CUR CTR</u></p> <p>-Y POS and -MAX Y -Y POS and -MIN Y -Y POS -RST Y, -SCROLL, and -MAX Y -RST Y, -SCROLL, and -MIN Y -RST Y and -SCROLL</p>	<p><u>-LOAD Y CUR CTR and -SET CUR 2<sup>12</sup></u></p> <p>-DEC Y and -MIN Y -DEC Y, -SCROLL, and -MIN Y</p>
<p><u>- LOAD Y CUR CTR and -CLR CUR 2<sup>12</sup></u></p> <p>-INC Y and -MAX Y -INC Y, -SCROLL, and -MAX Y -RST Y and -MIN Y -RST Y and -MAX Y -RST Y</p>	<p><u>-EN Y CUR CTR</u></p> <p>-INC Y, -SCROLL, and -MIN Y -INC Y and -SCROLL -INC Y and -MIN Y -INC Y -DEC Y, -SCROLL, and -MAX Y -DEC Y and -SCROLL -DEC Y and -MAX Y -DEC Y</p>

**X CURSOR CONTROL AND COUNTER CIRCUITS** — The X cursor control circuit is a ROM that decodes signals from the cursor position and cursor function control circuits (diagrams 104 and 115) to determine whether to load the X cursor counter or to enable it for incrementing or decrementing. The X cursor control ROM has four outputs and uses only four combinations of these outputs for controlling the X cursor counter: load the X counter (F5-11); enable X counter (F5-12); increment Y (F5-9); and decrement Y (F5-10). The following are listings giving the input signals that produce each of the output combinations.


<p><u>Load X Counter (F5-11)</u></p> <p>-X POS and -MAX X -X POS and -MIN X -X POS -RST X and -MAX X -RST X +MR</p>	<p><u>Enable X Counter (F5-12)</u></p> <p>-INC X and -MIN X -INC X -MEM REQ and -MIN X -MEM REQ -DEC X and -MAX X -DEC X</p>
<p><u>Load X and Increment Y (F5-9)</u></p> <p>-MEM REQ and -MAX X -INC X and -MAX X</p>	<p><u>Load X and Decrement Y (F5-10)</u></p> <p>-DEC X and -MIN X</p>

The X cursor counter tracks the horizontal positioning of the cursor on the display screen and passes this information to the cursor position decoder (diagram 104) and cursor compare circuit (diagram 105). The X cursor control circuit determines what count the X cursor counter contains by directing it either to load with X cursor positioning information from the +WRITE 2<sup>6</sup> through 2<sup>0</sup> lines or to increment or decrement its count. The load X counter signal passes from the control circuit (F5-11) via gate C6D, while the enable count signal passes directly from the control ROM (F5-12) to the counter (J4-4).

During load operations the -X POS signal determines whether the counter loads with write information (-X POS signal = 0) or with a count that depends on the state of the +MR and -MIN X signals (-X POS signal = 1). The counts possible in this latter instance are 79 when +MR = 0 and -MIN X = 0, and 0 for all other combinations of +MR and -MIN X.

During enable operations, the -DEC X signal determines whether the counter increments (-DEC X = 1) or decrements (-DEC X = 0) its count.

REV C  
 DWG NO 62200824  
 CODE IDENT 15920  
 CROSS REF NO 113 SHEET 17  
 CONTROL DATA  
 X CURSOR CONTROL  
 Y CURSOR CONTROL  
 X CURSOR COUNTER

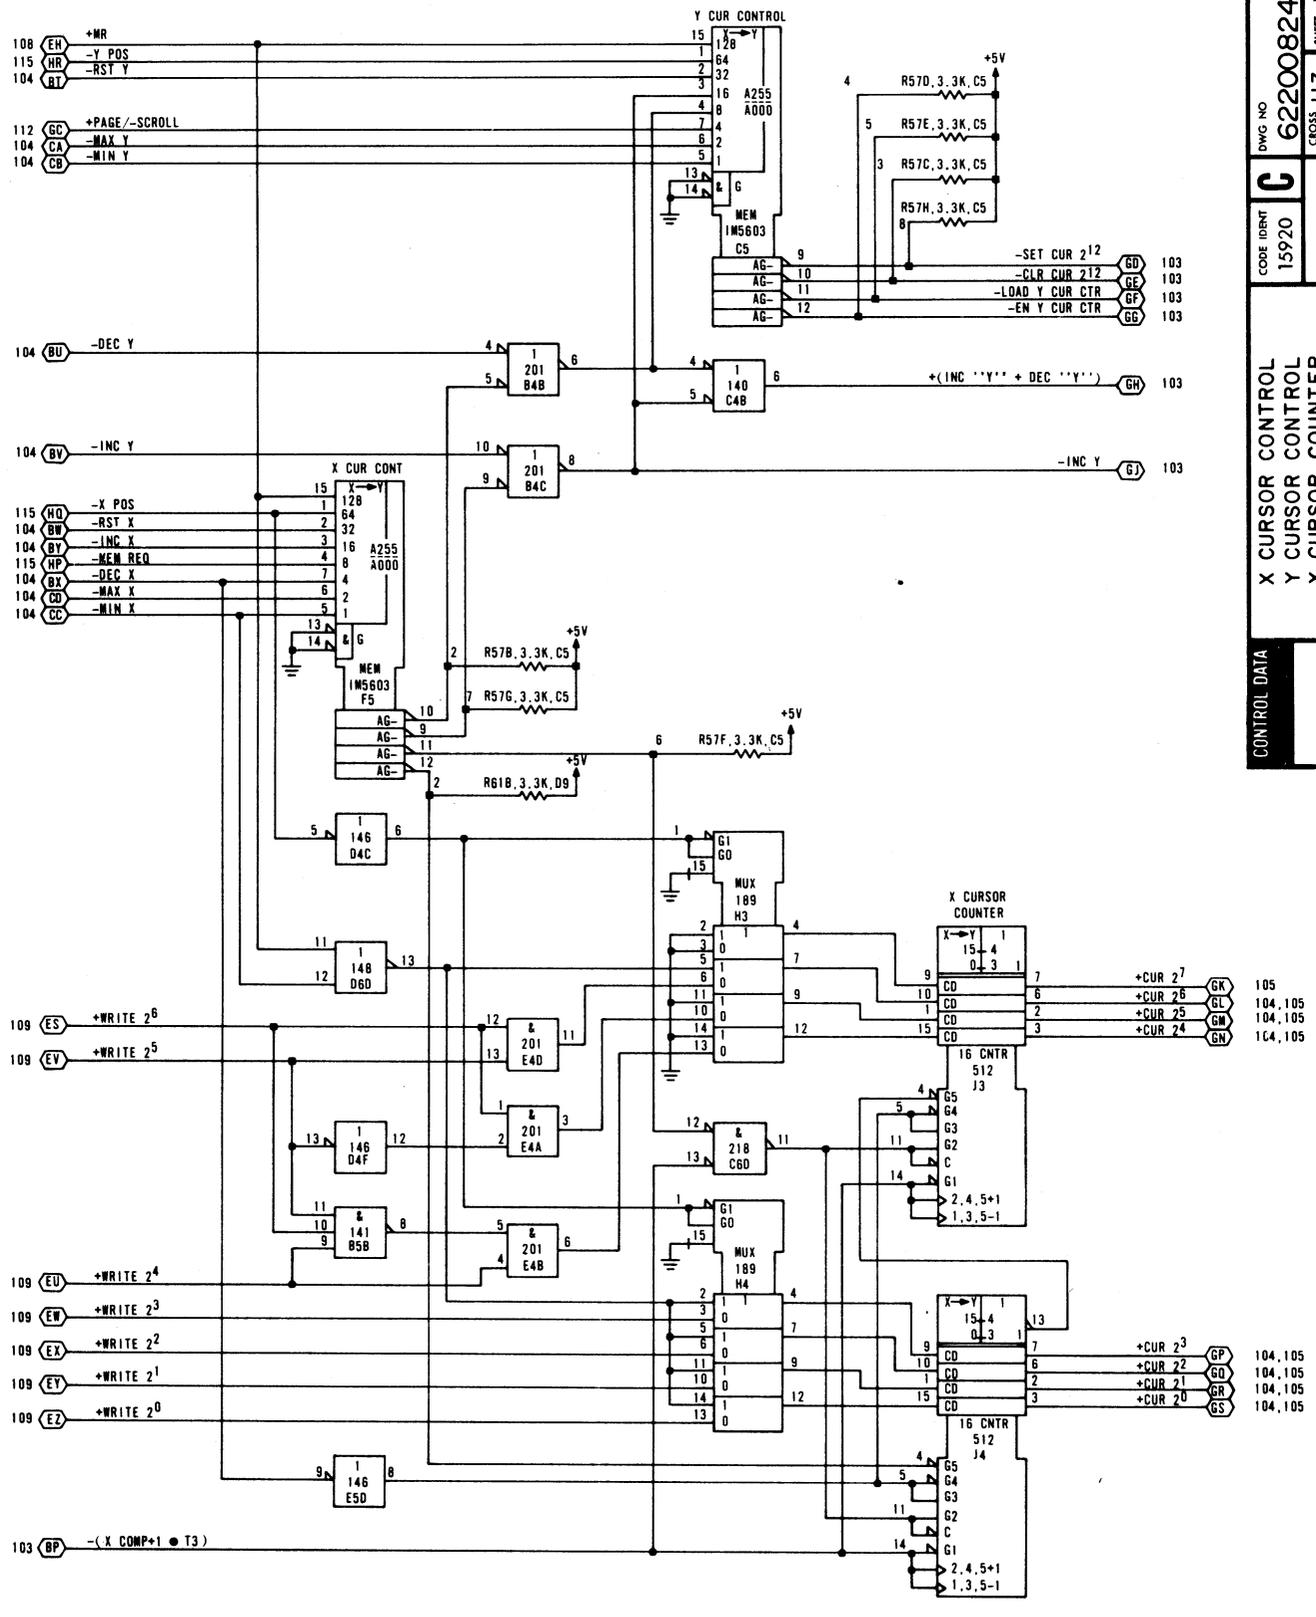

UNLESS OTHERWISE NOTED ALL CIRCUITS ARE PART OF 6ABD, 6ACD, 6ADD, 6CUD, 6CVD AND 6AED BOARDS.

LOC  
 CROSS REF NO 113

**DIAGRAM 114**  
**MODEM INTERFACE, RTS CONTROL**

The upper half of diagram 114 depicts the modem interface logic, and the lower half depicts the request to send logic of the display terminal.

**MODEM INTERFACE LOGIC** — Receiver circuit M8 receives the clear to send (+CTS), data set ready (+DSR), and carrier on (+CO) signals directly from the modem and passes them on to the modem control logic (diagram 110). The receive data signal (+RCV DATA) also comes from the modem, but it first passes through the voltage level/current loop jumper connectors (diagram 111). The +RCV DATA line, receiver circuit M5, and jumper connectors P and Q are used for voltage level communication facilities, while the -CURRENT RCV line and jumper connectors R and Q are used for current loop communication facilities. The +EN RCV signal comes from the modem control logic (diagram 110), and it is required to enable either current loop or voltage level receive data into the display terminal logic via gate R8B. Receive data from either source then passes to the UART (diagram 105) via the +R1 signal line.

Gate R8C enables receive data to a peripheral printer via transmitter circuit R5 and the +PTR XMIT DATA line, if the display terminal is operating online; if local mode operation of the display terminal is selected, gate R8C blocks the passage of receive data to the peripheral printer. R5 also passes keyboard, or transmit data (+TRO) to a peripheral printer via gate R8D and the +PTR XMIT DATA line. Gate R8D is conditioned by gate L9C, which allows transmit data to pass to the printer only if the display terminal is operating either in local mode or in half-duplex and online modes. Selection of online and full-duplex modes of display terminal operation causes gate L9C to inhibit the transfer of keyed-in data to the printer or refresh memory by blocking gates R8D and C8A. This restricts the printing or displaying of information during online, full-duplex operation to received data.

Transmit data (+TRO) also passes through gate R8A, which is the control gate for passing transmit data to the communication facility. Selection of local mode operation blocks gate R8A, but when online mode operation is selected (+LOCAL/-ONLINE = 0) gate R8A passes transmit data to both the -TRO·ON LN and the +XMIT DATA signal lines. Both signal lines return to the current loop interface logic where jumper connectors determine which transmit data signal line is selected:

- 1) Current loop display terminals pass the -TRO·ON LN signal into the current transmitter circuit and then onto the +XMIT signal line via jumper connectors J and H (diagram 111).
- 2) Voltage level display terminals pass the +XMIT DATA signal through jumper connectors K and H onto the +XMIT signal line (diagram 111).

**REQUEST TO SEND CONTROL LOGIC** — The request to send signal is dependent on a number of variables with the display terminal. These variables are monitored by the modem control ROM (diagram 110) and by the RTS control logic shown on this diagram (diagram 114). A principal control signal for the RTS control logic is the -EN RTS signal, which originates at the modem control ROM; another principal control signal is the +SW/-CONST RTS signal from the internal control switches (diagram 112). Unless the -EN RTS signal is low, the RTS control circuit is disabled. The -EN RTS signal is not low when:


- 1) The display terminal is a current loop type and has the internal current loop enable switch (diagram 112) in the enable position (+EN CUR LOOP signal = 1).
- 2) The display terminal is a voltage level type and is enabled for a voltage level interface (+EN CUR LOOP signal = 0), but is operating using the switched position of the switched-or-constant DTR switch (diagram 112) and has the front panel ON LINE/LOCAL switch in the LOCAL position. This mode of operation disables the -DTR signal into the modem control ROM, which in turn causes the -EN RTS signal to go high.
- 3) The display terminal is a voltage level type and the data set ready signal from the modem drops for any reason. This condition causes the -DSR signal to the modem control ROM to go high, causing the -EN RTS signal to go high.

**DIAGRAM 114 (CONTD)**

Other signals affecting RTS control logic are the -HALF/+FULL DUP signal from the front panel FULL DUP/HALF DUP switch; the +LOCAL/-ON LINE signal from the front panel ON LINE/LOCAL switch; the -RCV BRK signal from the break control logic (diagram 112); and the -CLR RTS signal from the data decode ROM (diagram 109). Following is a tabular listing of combinations of signals that affect RTS control logic and the effect that each combination has on the control logic.

-HALF/ +FULL DUP	-RCV BRK/ -CLR RTS	+LOCAL/ -ON LINE	+SW/ -CONSTR RTS	-EN RTS	EFFECT
X	X	X	0	0	-RTS goes low and remains low.
1 0	X 1	0 0	1 1	0 0	-RTS goes low following the first keyboard entry and remains low until one of the following occurs.
1 0	X X	1 1	1 1	0 0	Switching to local mode during either half- or full-duplex operation causes the -RTS signal to go high on second +VERT 2 <sup>0</sup> pulse after UART transmit and transmit holding registers empty (+TRE and +THRE signals both go high).
0	0	0	1	0	-RTS signal goes high on second +VERT 2 <sup>0</sup> pulse after UART transmit and transmit holding registers empty if either:  a) a break signal or a character with a framing error is received (-RCV BRK signal goes low)  b) or the -CLR RTS signal goes low due to detection of one of the following by the data decode ROM: a carriage return, an end of text, an end of transmission, or a line feed code.



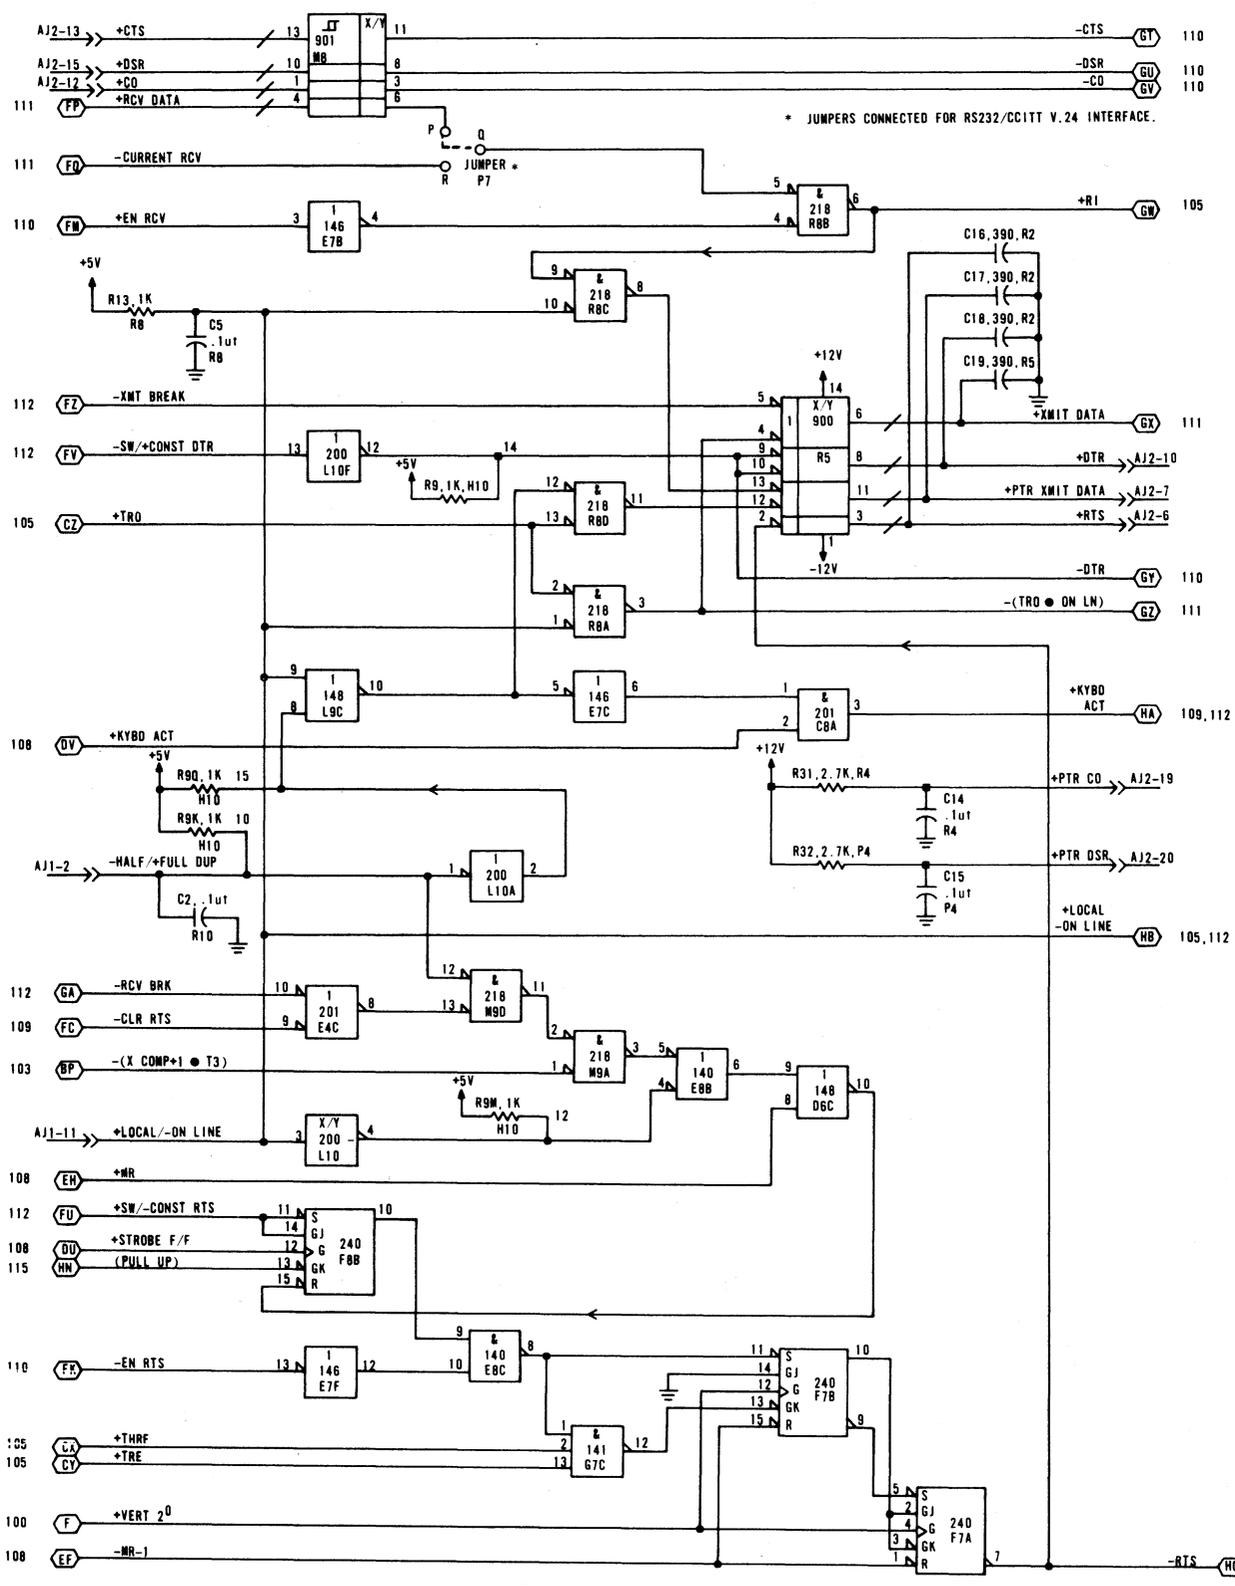

UNLESS OTHERWISE NOTED ALL CIRCUITS ARE PART OF 6ABD, 6ACD, 6ADD, 6CUD, 6CVD AND 6AED BOARDS.

**DIAGRAM 115**  
**BAUD SELECT, X/Y POSITION CONTROL**


The upper half of diagram 115 depicts the logic for selecting the transmit/receive baud rate of the display terminal while the lower half of the diagram shows the X/Y position control logic.

**BAUD SELECT LOGIC** — The -HIGH BAUD and -LOW BAUD signals originate at the front panel HIGH RATE/300/LOW RATE switch. Moving the switch to the HIGH RATE position causes the -HIGH BAUD signal to go low. With the -HIGH BAUD signal low, J10A-3 goes low to enable mux G10, while the high -LOW BAUD signal causes the high-rate switches to be muxed (mux input pins 3, 6, 10, and 13). Moving the front panel switch to the LOW RATE position causes the -LOW BAUD signal to go low. With the -LOW BAUD signal low, J10-3 goes low to enable mux G10, while the low -LOW BAUD signal enables multiplexing of the low-rate switches (mux input pins 2, 5, 11 and 14). If the front panel switch is moved to the 300 position, both the -HIGH BAUD and -LOW BAUD signals remain high. This, in turn, disables the mux and forces all outputs to go low. Following is a tabular listing that gives the relationship between the desired baud rate, the high rate/low rate switch settings, the input to baud select ROM G10, and the output from the ROM (baud counter preload).

Baud Rate Desired	Switch Settings 2 <sup>3</sup> through 2 <sup>0</sup>	ROM Input 2 <sup>4</sup> through 2 <sup>0</sup>	ROM Output Bit 8 through Bit 1	
110	1111	01111	0101	0000
150	1110	01110	1000	0000
200	1101	01101	1010	0000
300	1100 or 0000*	01100 or 00000	1100	0000
600	1011	01011	1110	0000
1200	1010	01010	1111	0000
1800	1001	01001	1111	0011
2400	1000	01000	1111	1000
4800	0111	00111	1111	1100
9600	0110	00110	1111	1110

**X/Y POSITION CONTROL LOGIC** — The X/Y position control logic provides the display terminal with the capability of detecting X/Y cursor positioning inputs. To do this, the internal X/Y positioning switch must be in its enable position and the display terminal must be operating in page mode (+EN X/Y = 1 and +PAGE/-SCROLL = 1). Detection of an escape code (033g) and 061g sequence then can activate the X/Y position control logic. The escape code is detected by the data decode ROM (diagram 109); this causes the -(ESC + 061g) signal to go low. Since the +WRITE 2<sup>5</sup> bit is also low when the escape code is detected, flip-flop H8B clears, and as it does so, it blocks memory request gate K8C and enables X position flip-flop H8A. The 061g input then sets flip-flop H8A, which provides a -X POS signal to the X cursor control ROM (diagram 113) and conditions the Y position flip-flop G8B for setting. The next character input is interpreted as the X cursor positioning input. As this input ends, it sets flip-flop H8B, clears flip-flop H8A, and sets Y position flip-flop G8B. As flip-flop G8B sets, it provides a -Y POS signal to the Y cursor control ROM and to the Y cursor counter and mux circuit (diagrams 113 and 103). The next character input is interpreted as the Y cursor positioning input; and as this input ends, it clears flip-flop G8B to complete the X/Y positioning operation and enables the memory request gate (K8C).

\* 300 baud can be either switch-selected via internal switches and high or low position of front panel switch, or via 300 position of front panel switch only.

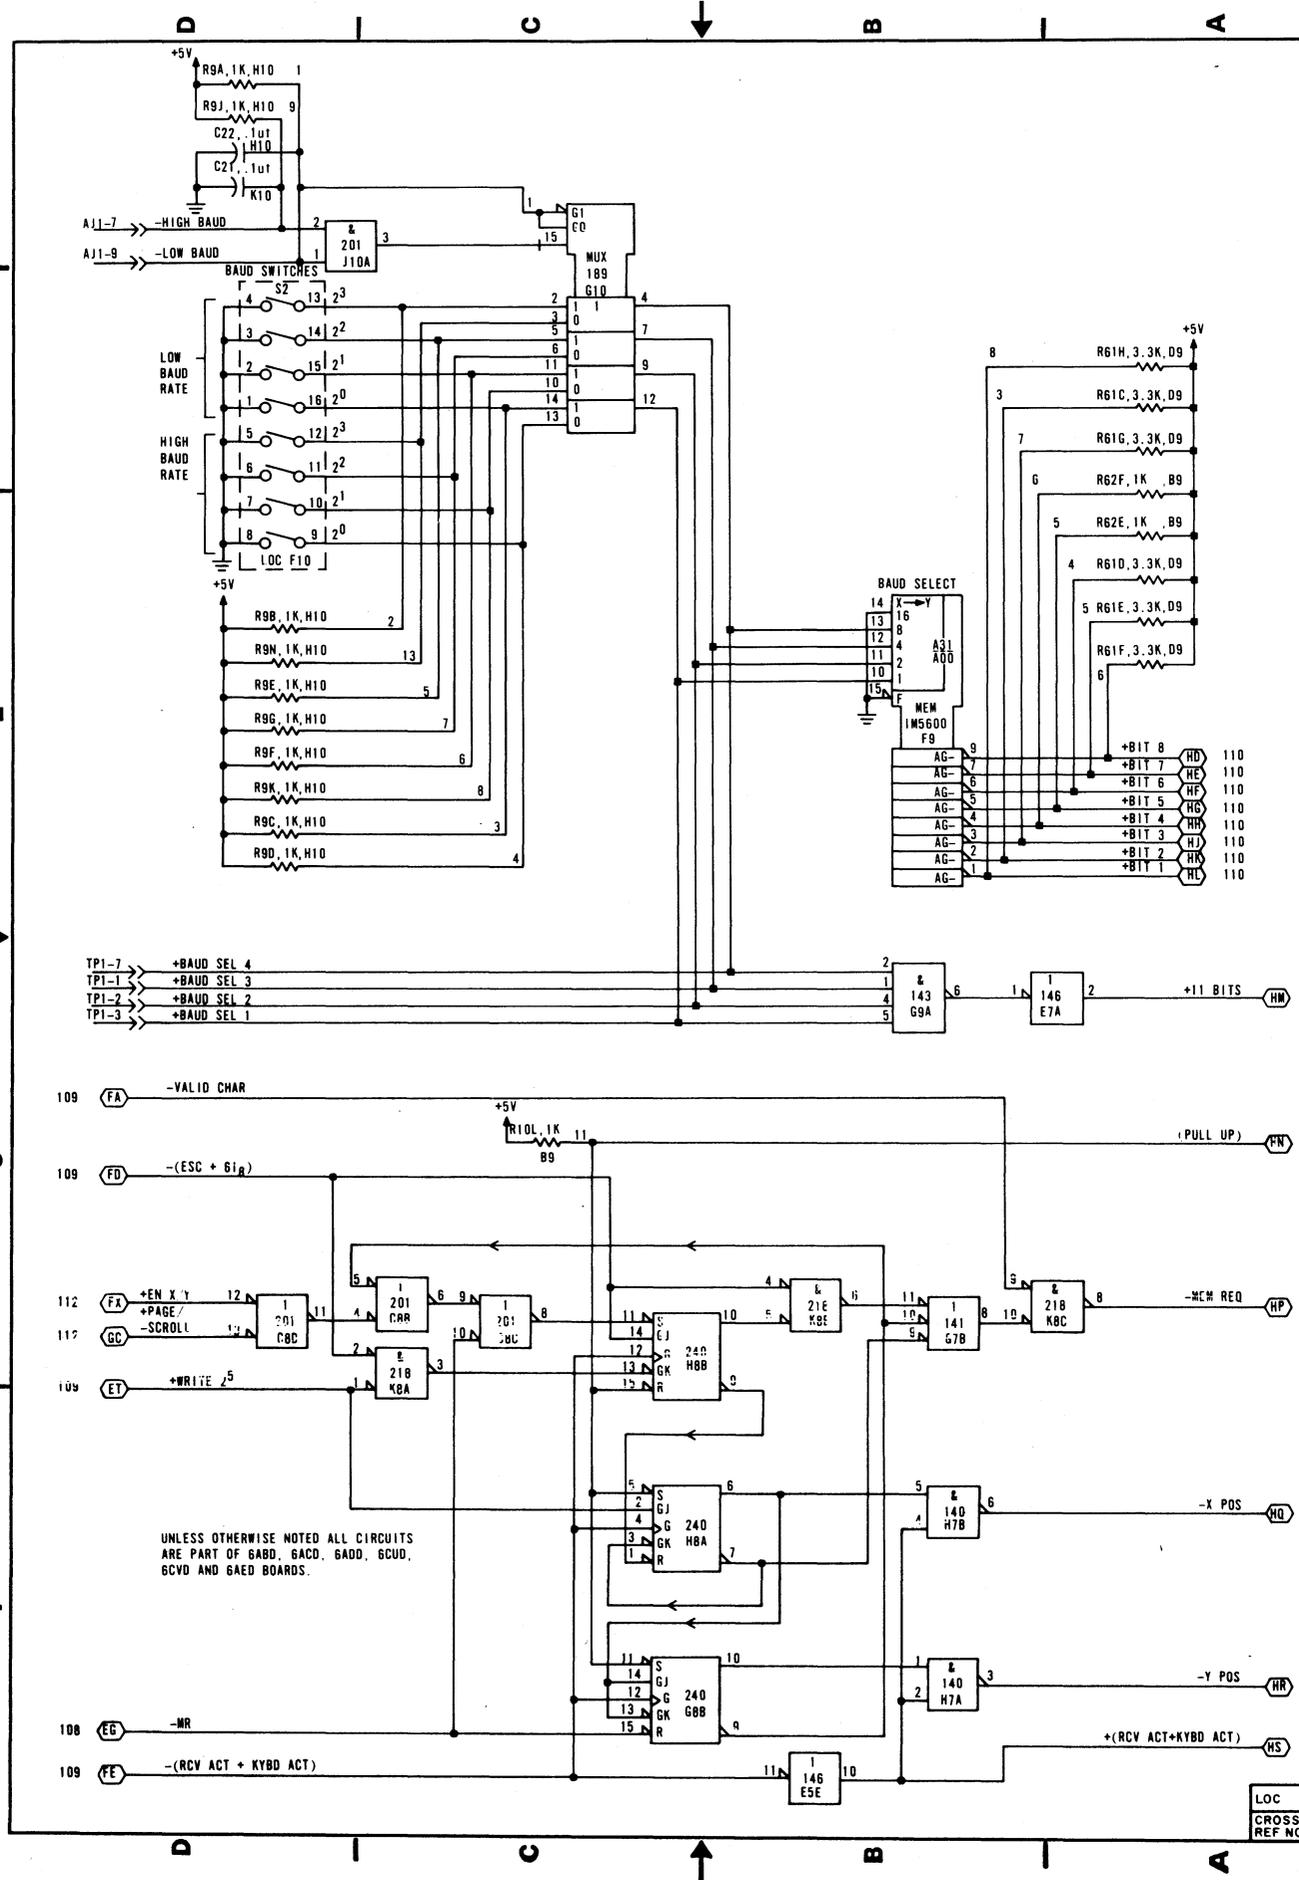


5-46


62957400 A

4 | 3 | 2 | 1

MAIN TIMING

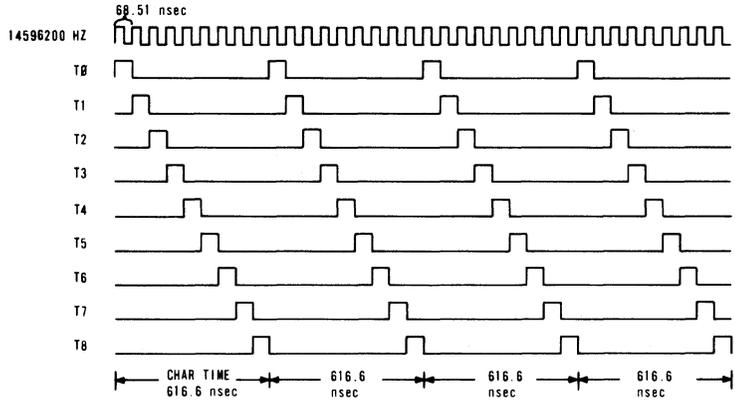

COUNT 0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 101

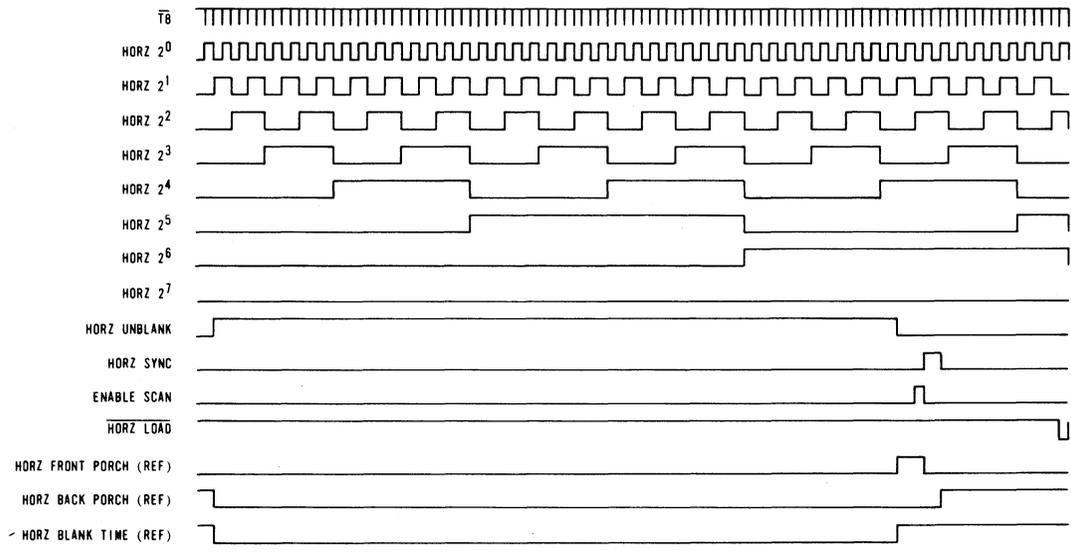

616.6 nsec (CYCLE TIME) (1 CHAR TIME)

ONE HORZ LINE 62.89 usec

- 80 CHAR TIMES 49.33 usec
- 2 CHAR TIMES 1.23 usec
- 1 CHAR TIME 616.6 nsec
- 1 CHAR TIME 616.6 nsec
- 3 CHAR TIMES 1.85 usec
- 17 CHAR TIMES 10.48 usec
- 22 CHAR TIMES 13.56 usec

HORZ REFRESH & MEMORY TIMING


4 | 3 | 2 | 1

CONTROL DATA	CODE IDENT	DWG NO	REV
	15920	62200824	C
	CROSS REF NO	SHEET 20	

TIMING DIAGRAM

62957400 A



5-47

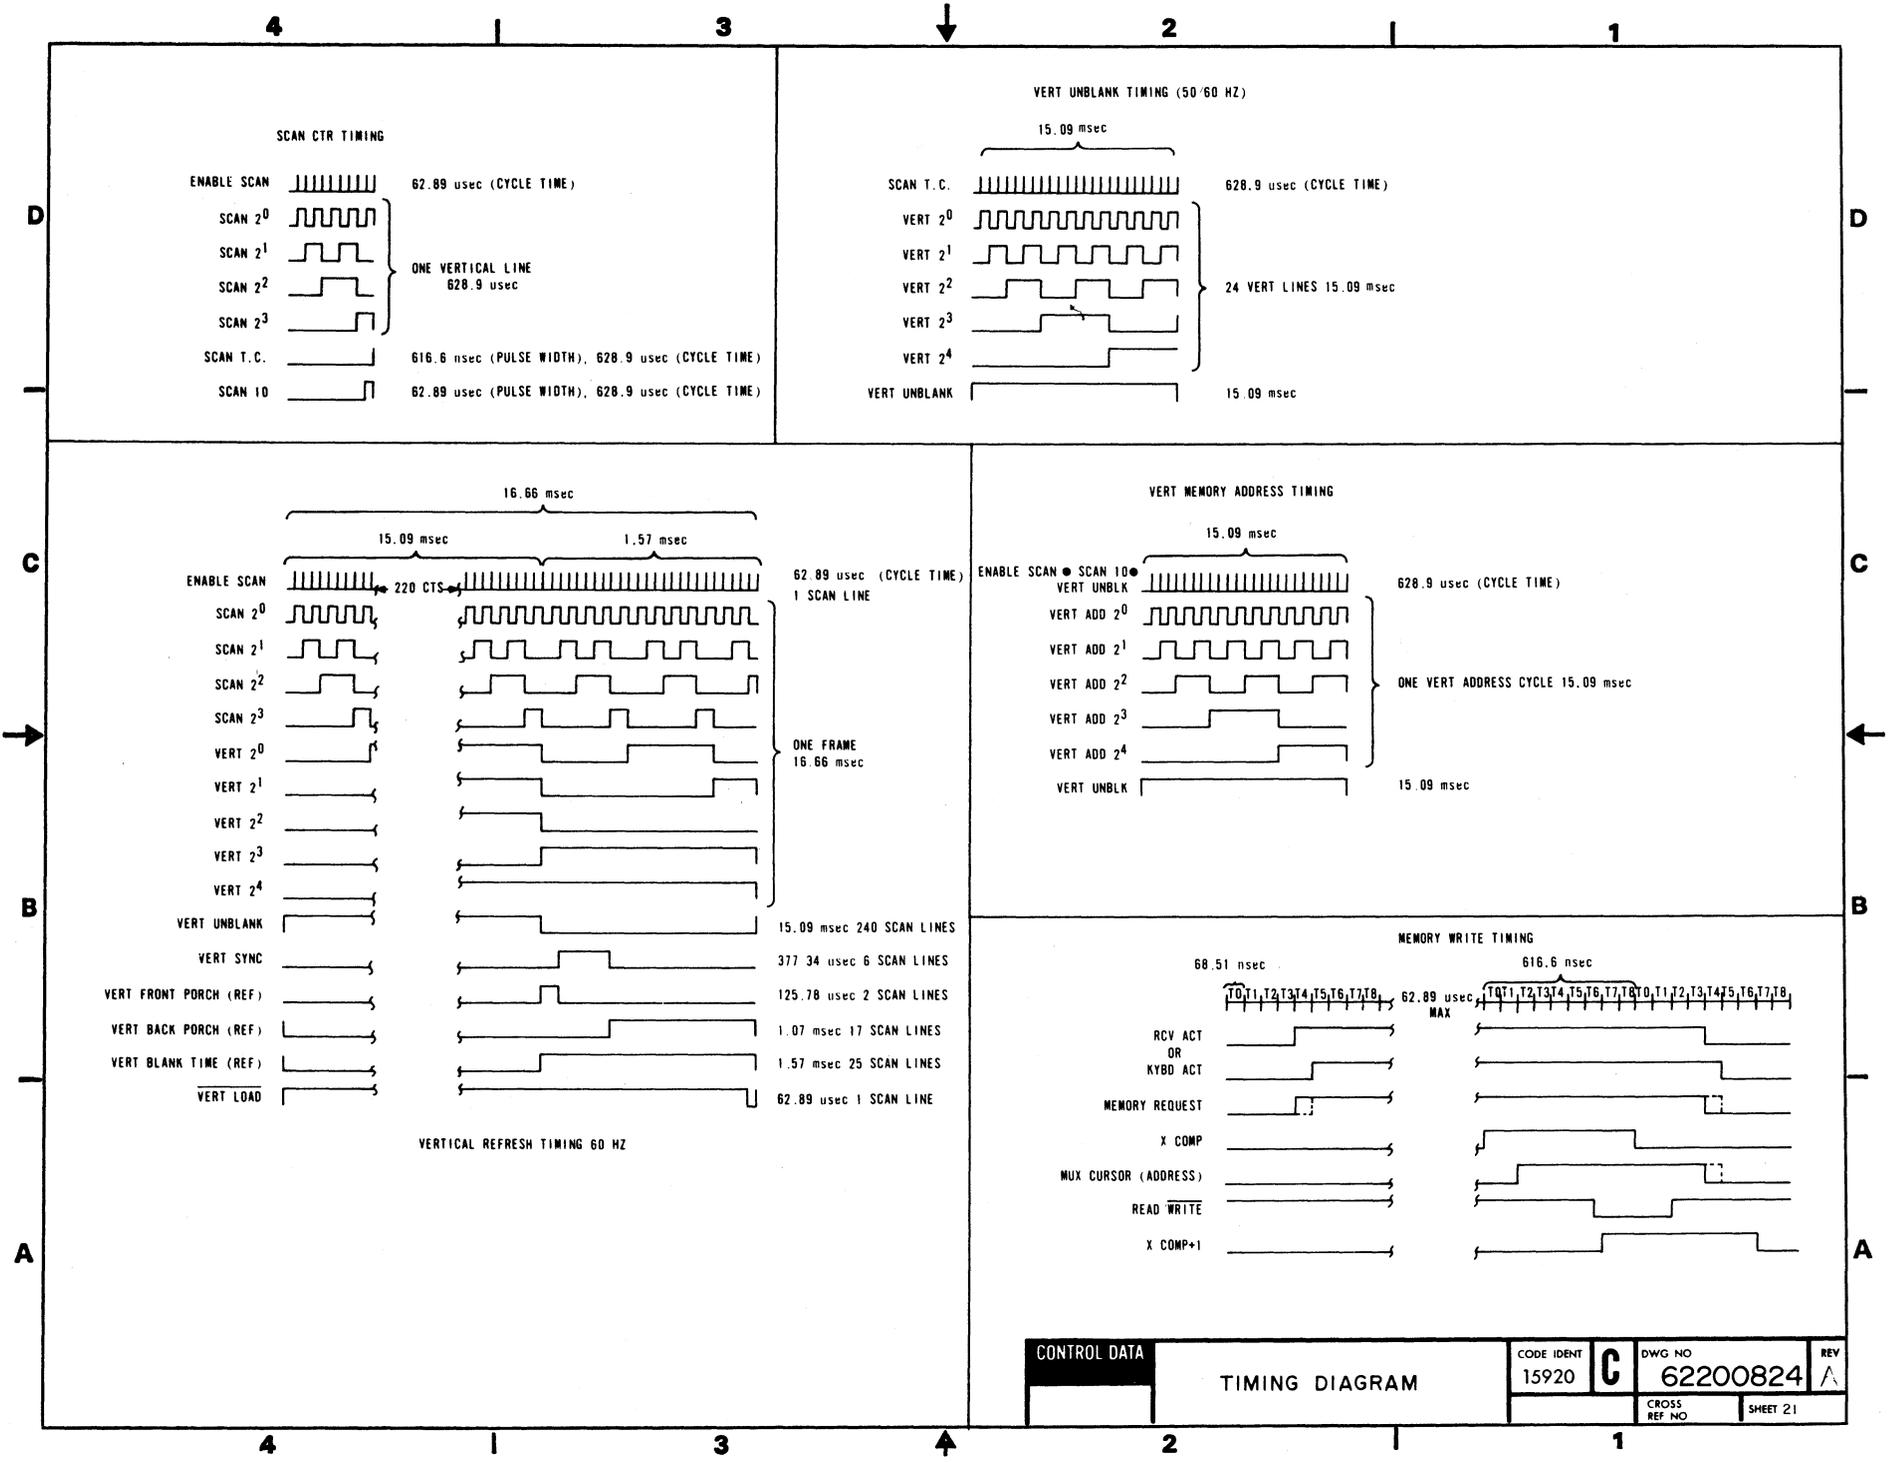

CONTROL DATA	TIMING DIAGRAM		CODE IDENT 15920	DWG NO 62200824	REV A
			CROSS REF NO	SHEET 21	


5-48

62957400 A

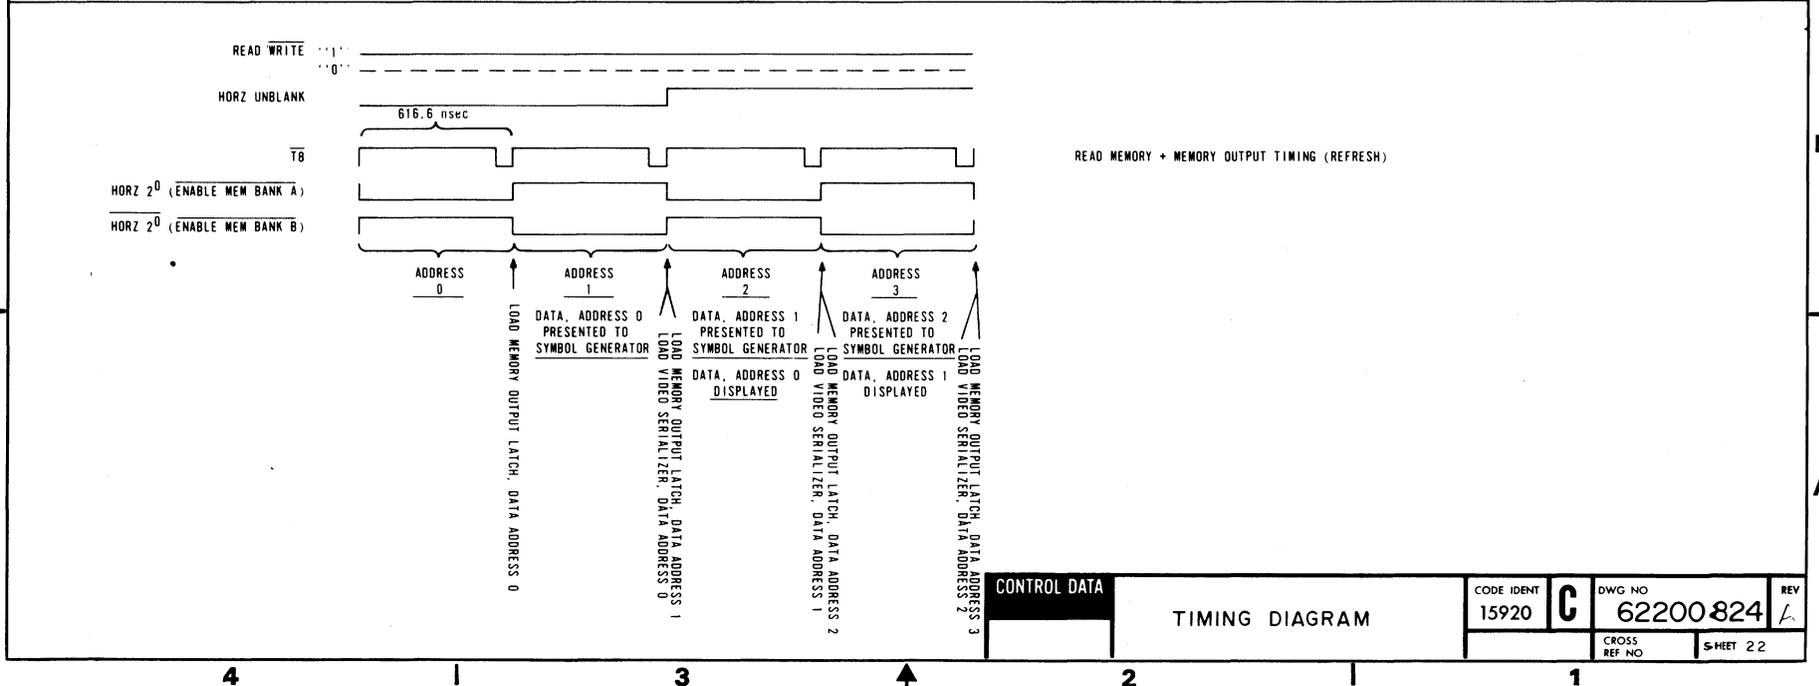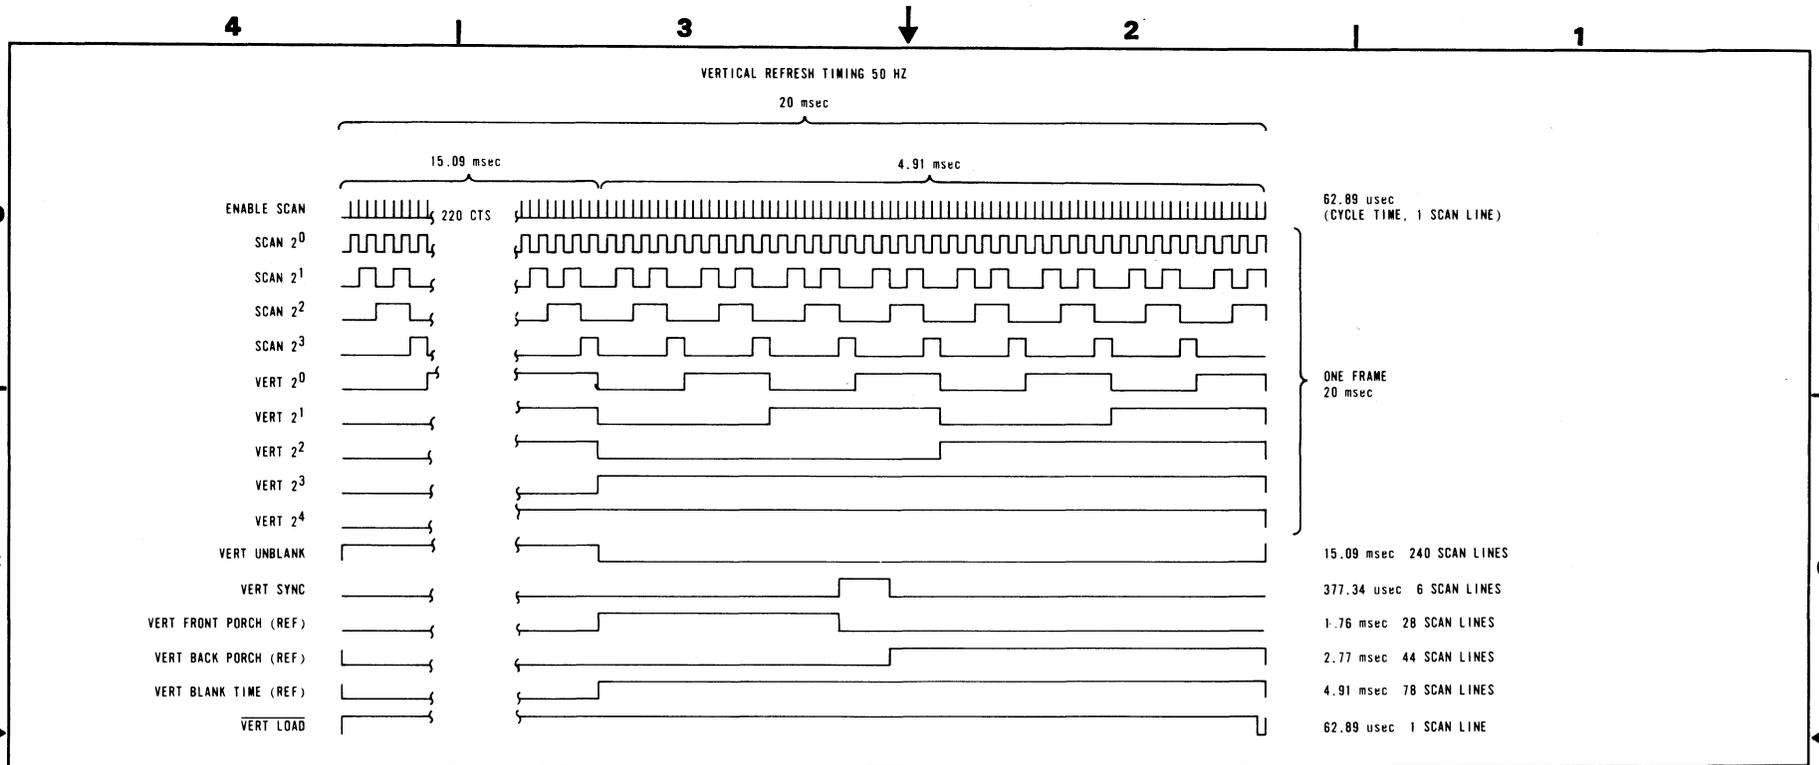

62957400 A

5-49

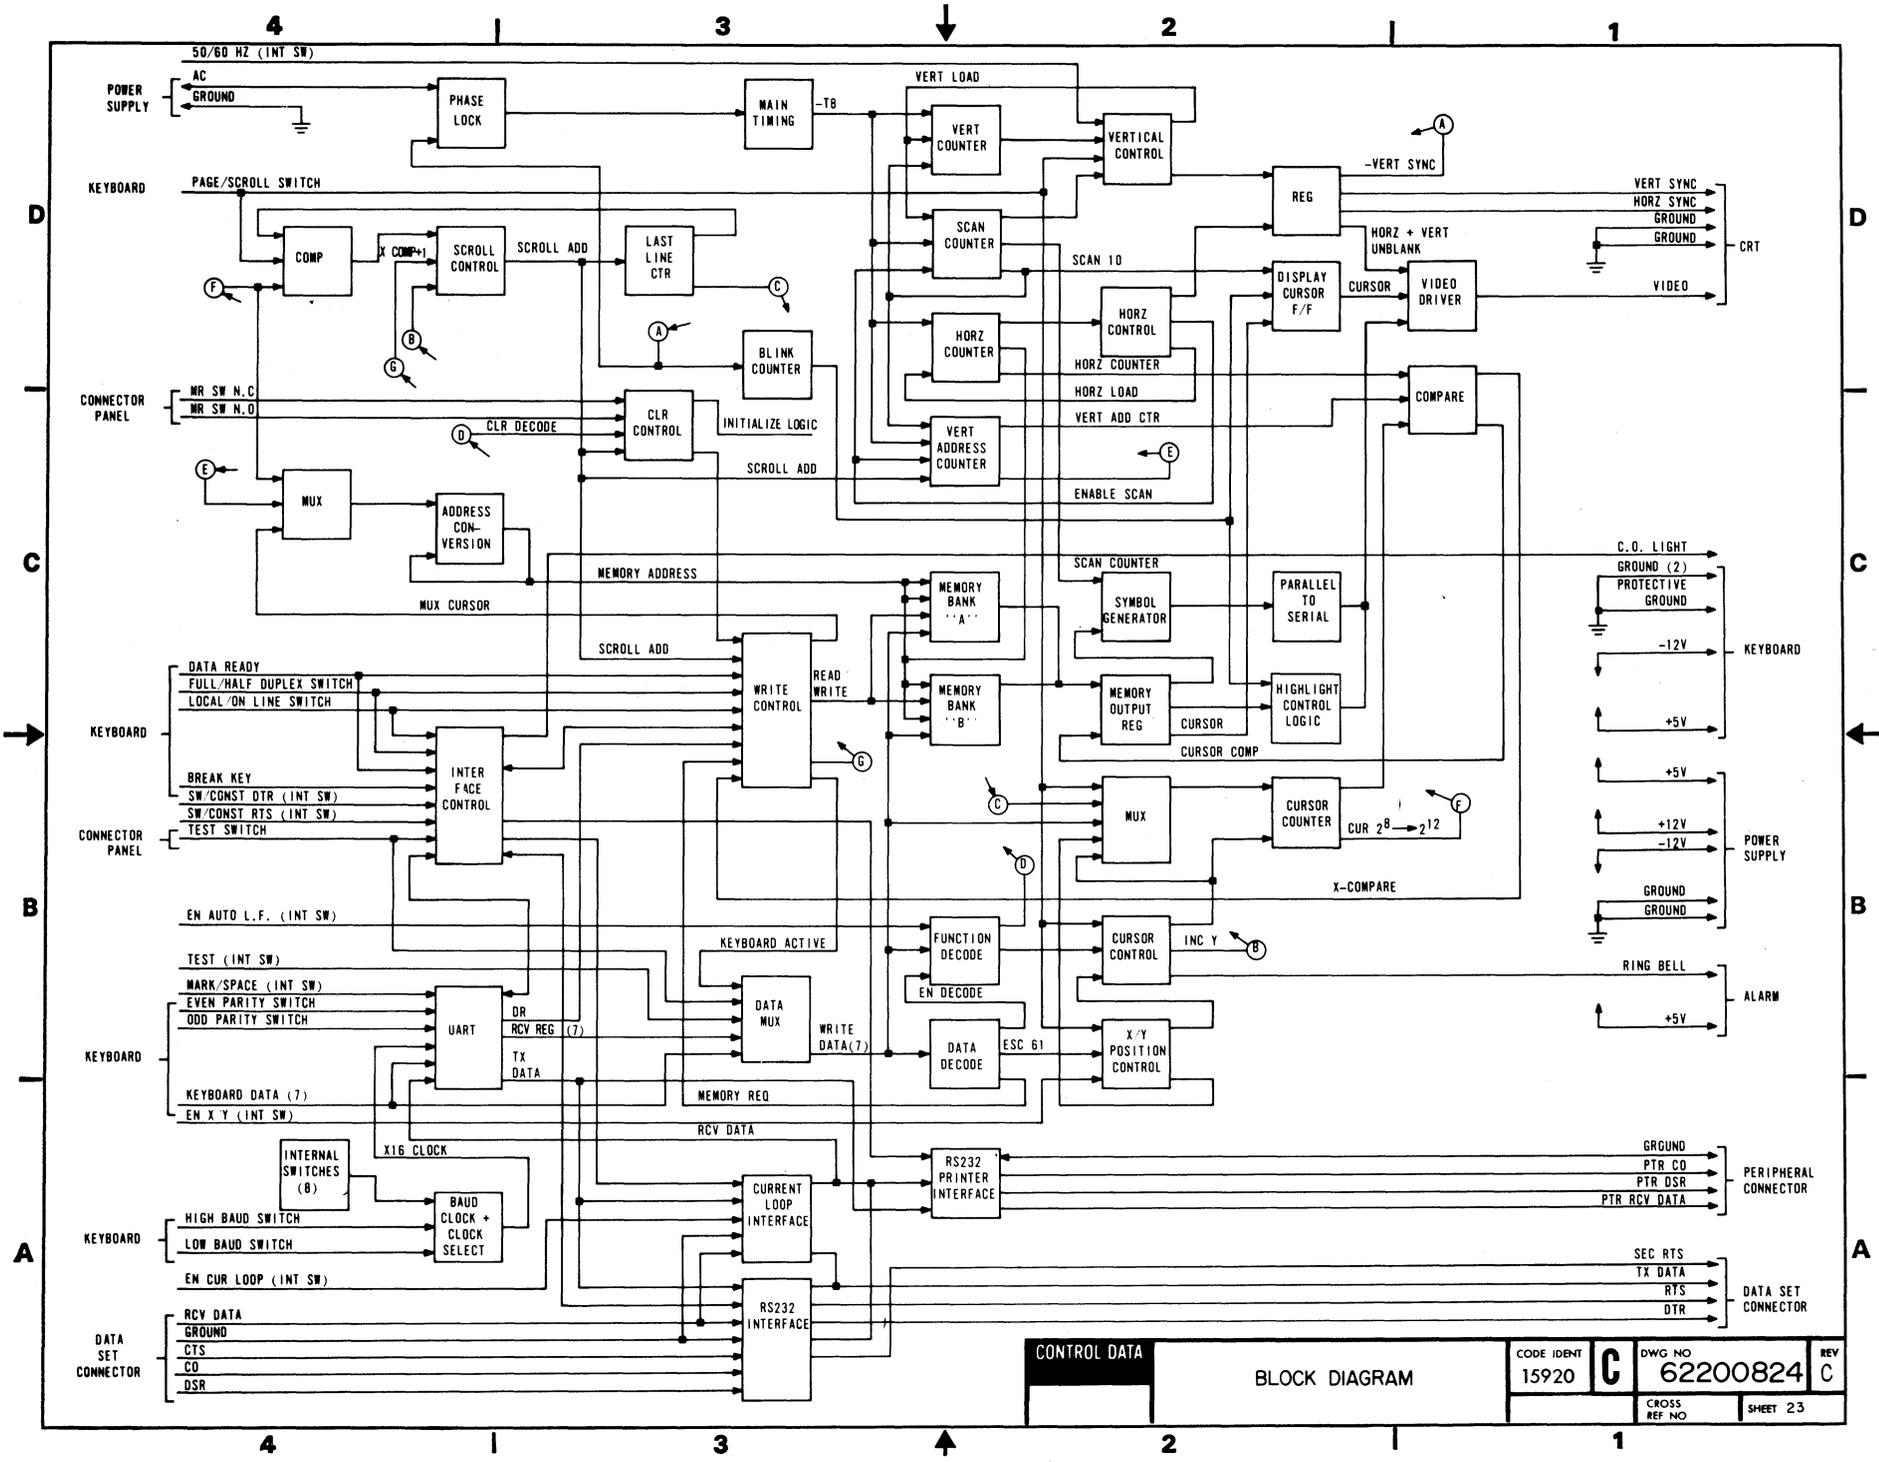

<b>CONTROL DATA</b>		CODE IDENT 15920	DWG NO <b>C</b> 62200824	REV C
<b>BLOCK DIAGRAM</b>		CROSS REF NO	SHEET 23	


5-50

62957400 A

SHEET REVISION STATUS				REVISION RECORD				
REV	CO	DESCRIPTION	DRFT	DATE	CHKD	APP		
		RELEASED CLASS C	BMG	2/26/76	DAK			
A	10653-35	RELEASED CLASS A						
B	CD11394	REVISED PER ECO	MMD	8-5-76	DW			
C	CD11615	REVISED PER ECO	WMA	8-6-76	JM			

REFERENCE INFORMATION	
LETTER DESIGNATION	ASSEMBLY
A	LOGIC MODULE ASSY
B	VIDEO MONITOR ASSY
C	REAR PANEL ASSY
H	PWR SUPPLY ASSY


- NOTE:
1. COMMON CONNECTED TO NORMAL FOR INPUT VOLTAGE RANGE 216V TO 268.
  2. COMMON CONNECTED TO LOW FOR INPUT VOLTAGE RANGE 198V TO 246.
  3. FACTORY SETTING COMMON CONNECTED TO NORMAL.

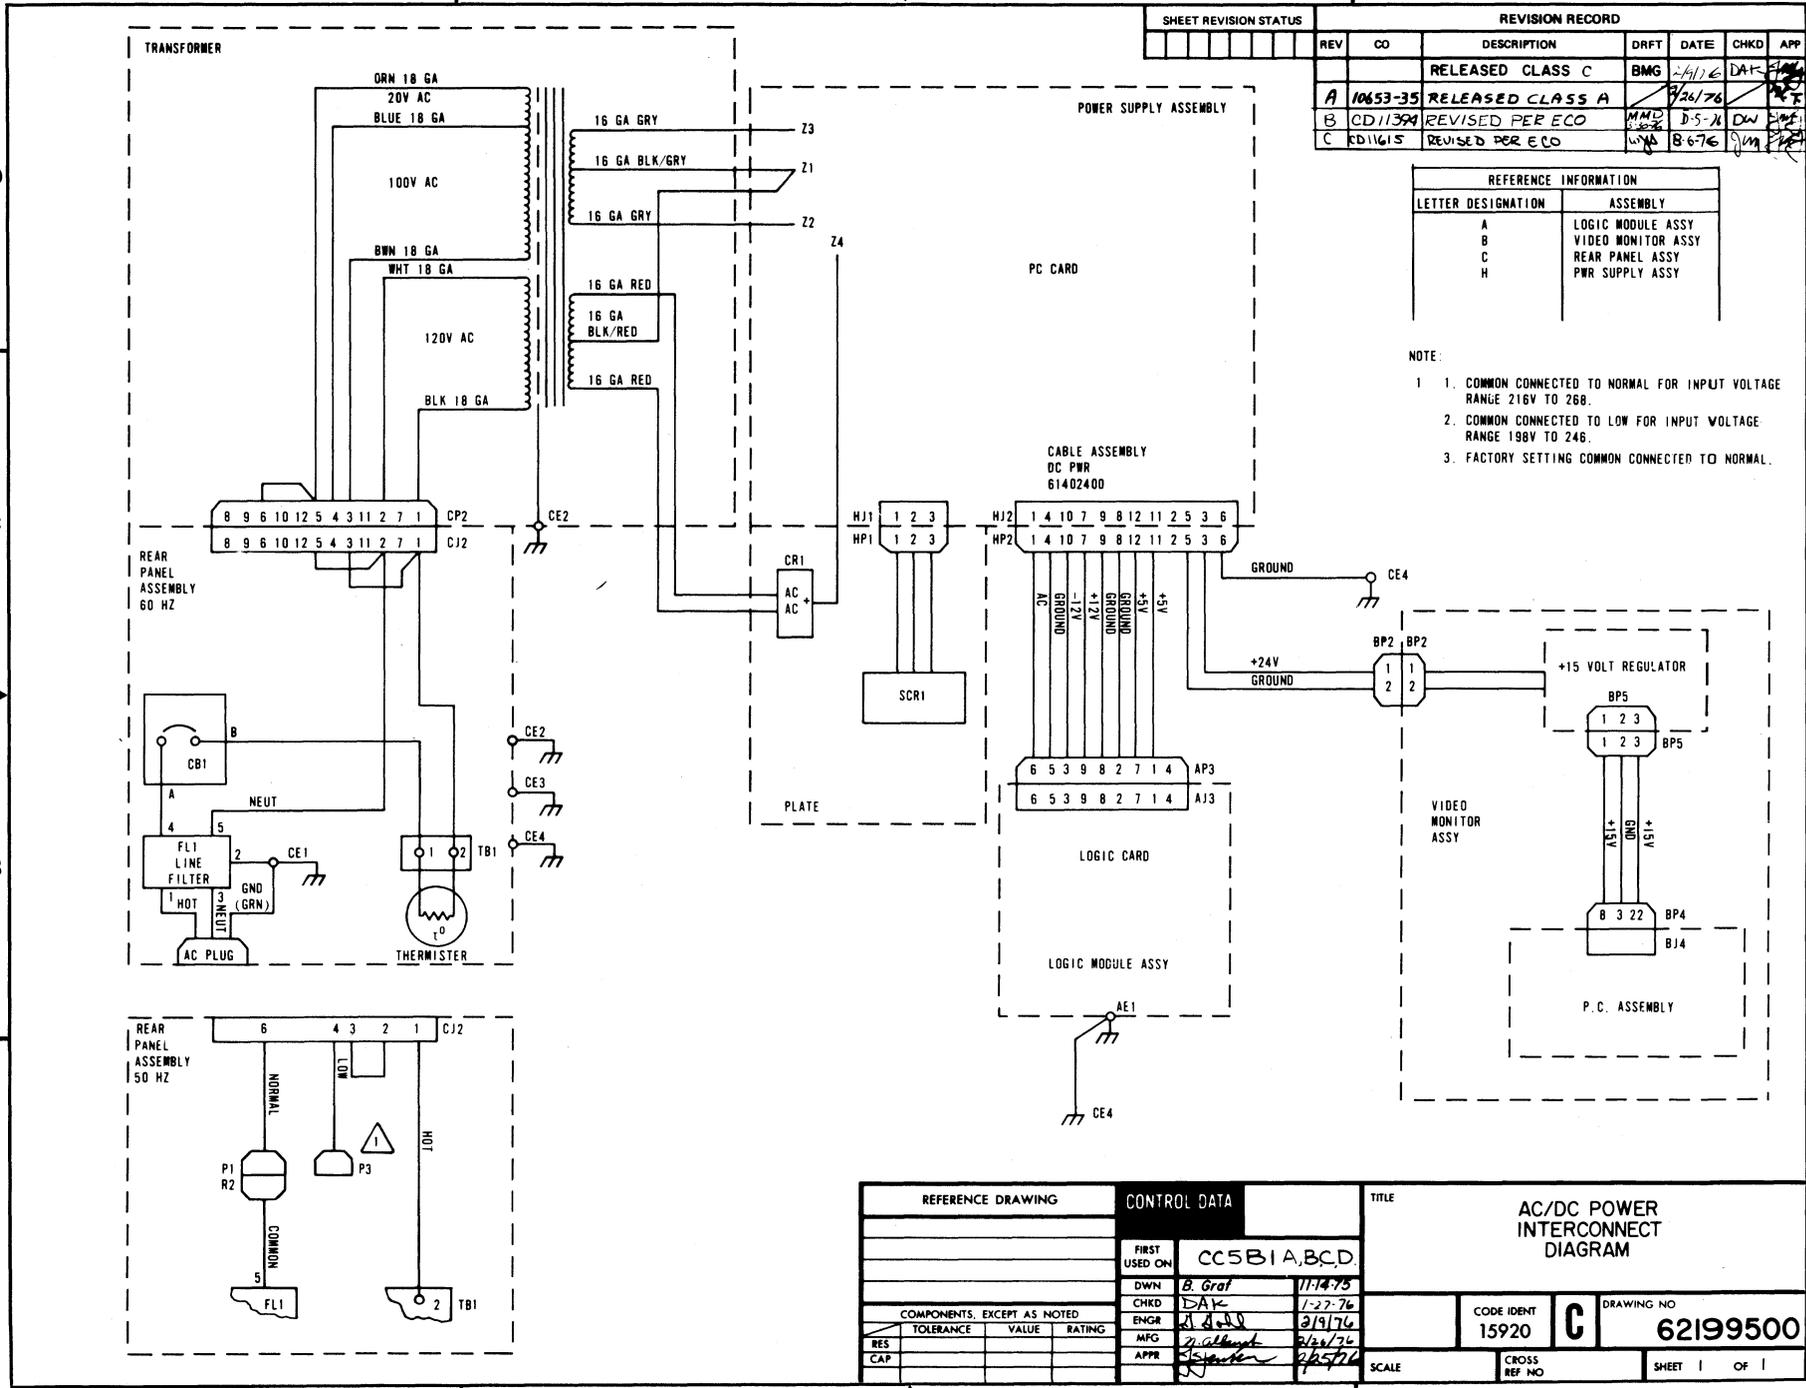

REFERENCE DRAWING		CONTROL DATA		TITLE	
		FIRST USED ON		AC/DC POWER INTERCONNECT DIAGRAM	
		DWN		CC5B1A,B,C,D	
		CHKD		11-14-75	
		ENGR		1-27-76	
		MFG		3/19/76	
		APPR		2/26/76	
COMPONENTS, EXCEPT AS NOTED		RES		CODE IDENT	
TOLERANCE	VALUE	RATING	CAP	15920	DRAWING NO
				C	62199500
SCALE		CROSS REF NO		SHEET 1 OF 1	

62957400 A

5-51

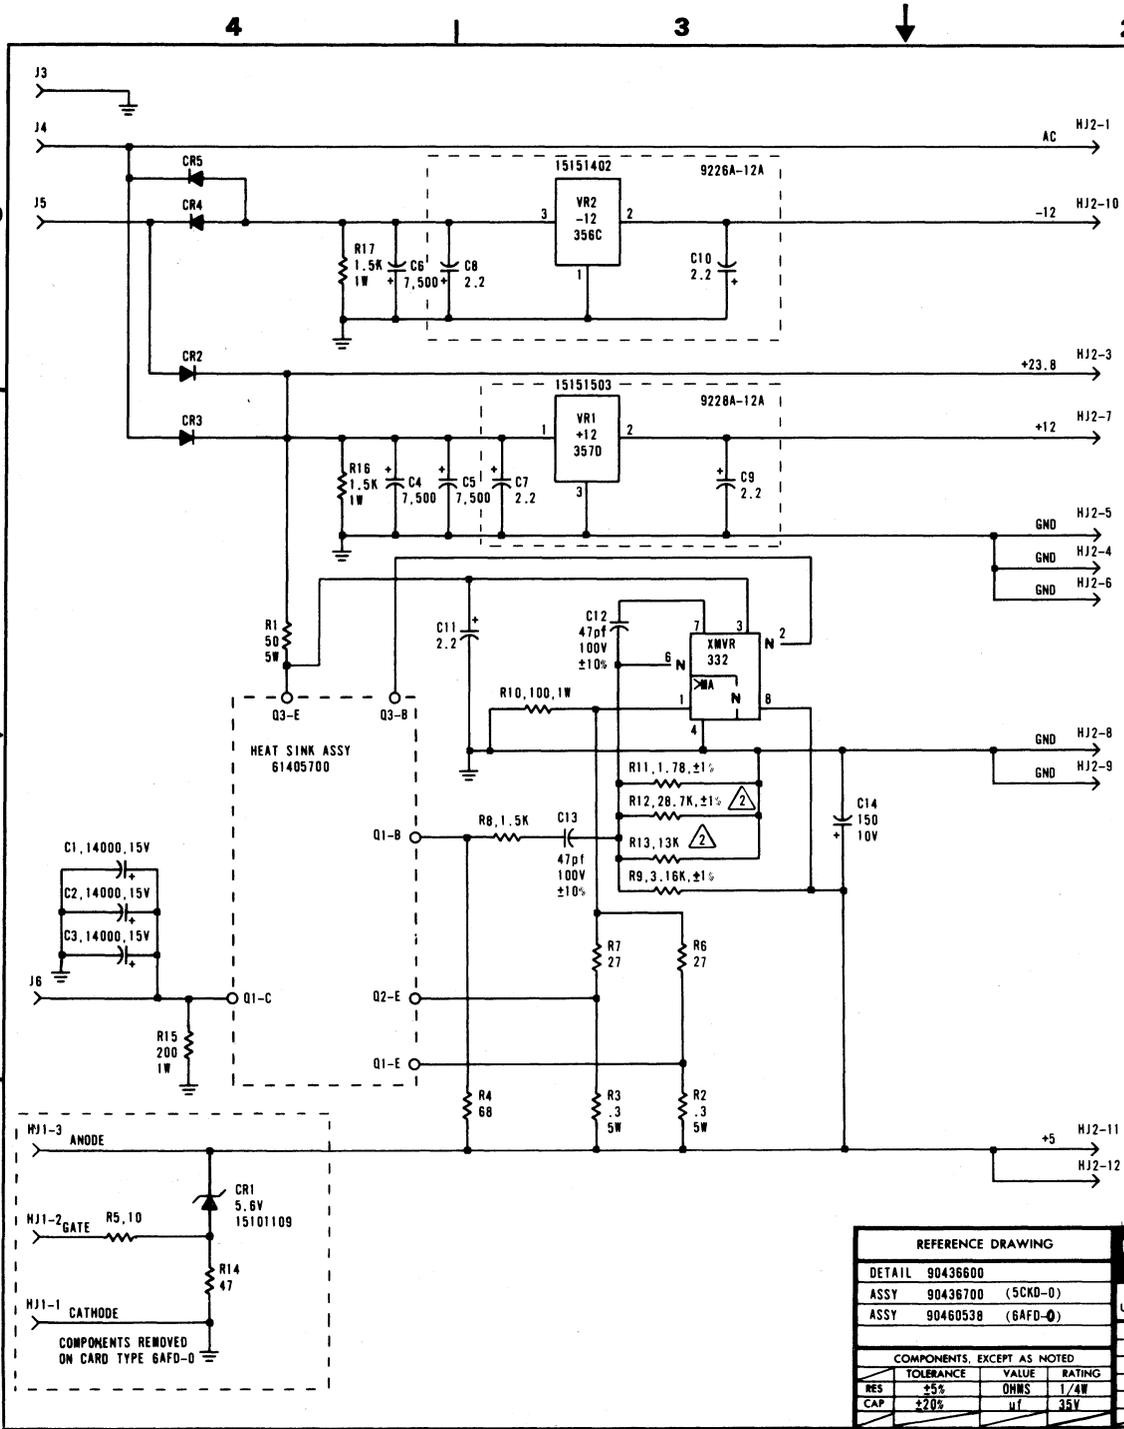


SHEET REVISION STATUS		REVISION RECORD					
REV	CO	DESCRIPTION	DRFT	DATE	CHKD	APP	
—	—	RELEASED CLASS C	MD	10/15/76	DR	RR	
01	C 536	REVISED PER ECO	JM	12-8-76	W	W	
A	10653-32	RELEASED CLASS A		2/11/76		W.C.T.	
B	11395	REVISED PER ECO	MD	4-1-76	DR	RR	

NOTE:  
 1. UNLESS OTHERWISE SPECIFIED ALL DIODES TO BE 51G10800.  
 2. TO SET OUTPUT TO +5.0 VOLTS ±.25 VOLTS REMOVE R13 FOR A DECREASE OF .5 VOLT AND/OR R12 FOR A DECREASE OF .25 VOLTS.

REFERENCE DRAWING		CONTROL DATA		TITLE	
DETAIL	90436600	FIRST USED ON	CC5B1	SCHEMATIC DIAGRAM, MET PWR SUPPLY	
ASSY	90436700 (5CKD-0)	DWN	Mary Dietz	10-15-76	
ASSY	90460538 (6AFD-0)	CHKD	S. B. Dineen	10-27-76	
COMPONENTS, EXCEPT AS NOTED		ENGR	R. J. Dineen	10-27-76	
RES	±5% 0WMS 1/4W	MFG	Al. Dineen	2-11-76	
CAP	±20% 4T 35V	APPR		2-11-76	
CODE IDENT 15920		DRAWING NO 90436500		SCALE	
CROSS REF NO		SHEET OF			

5-52


62957400 A

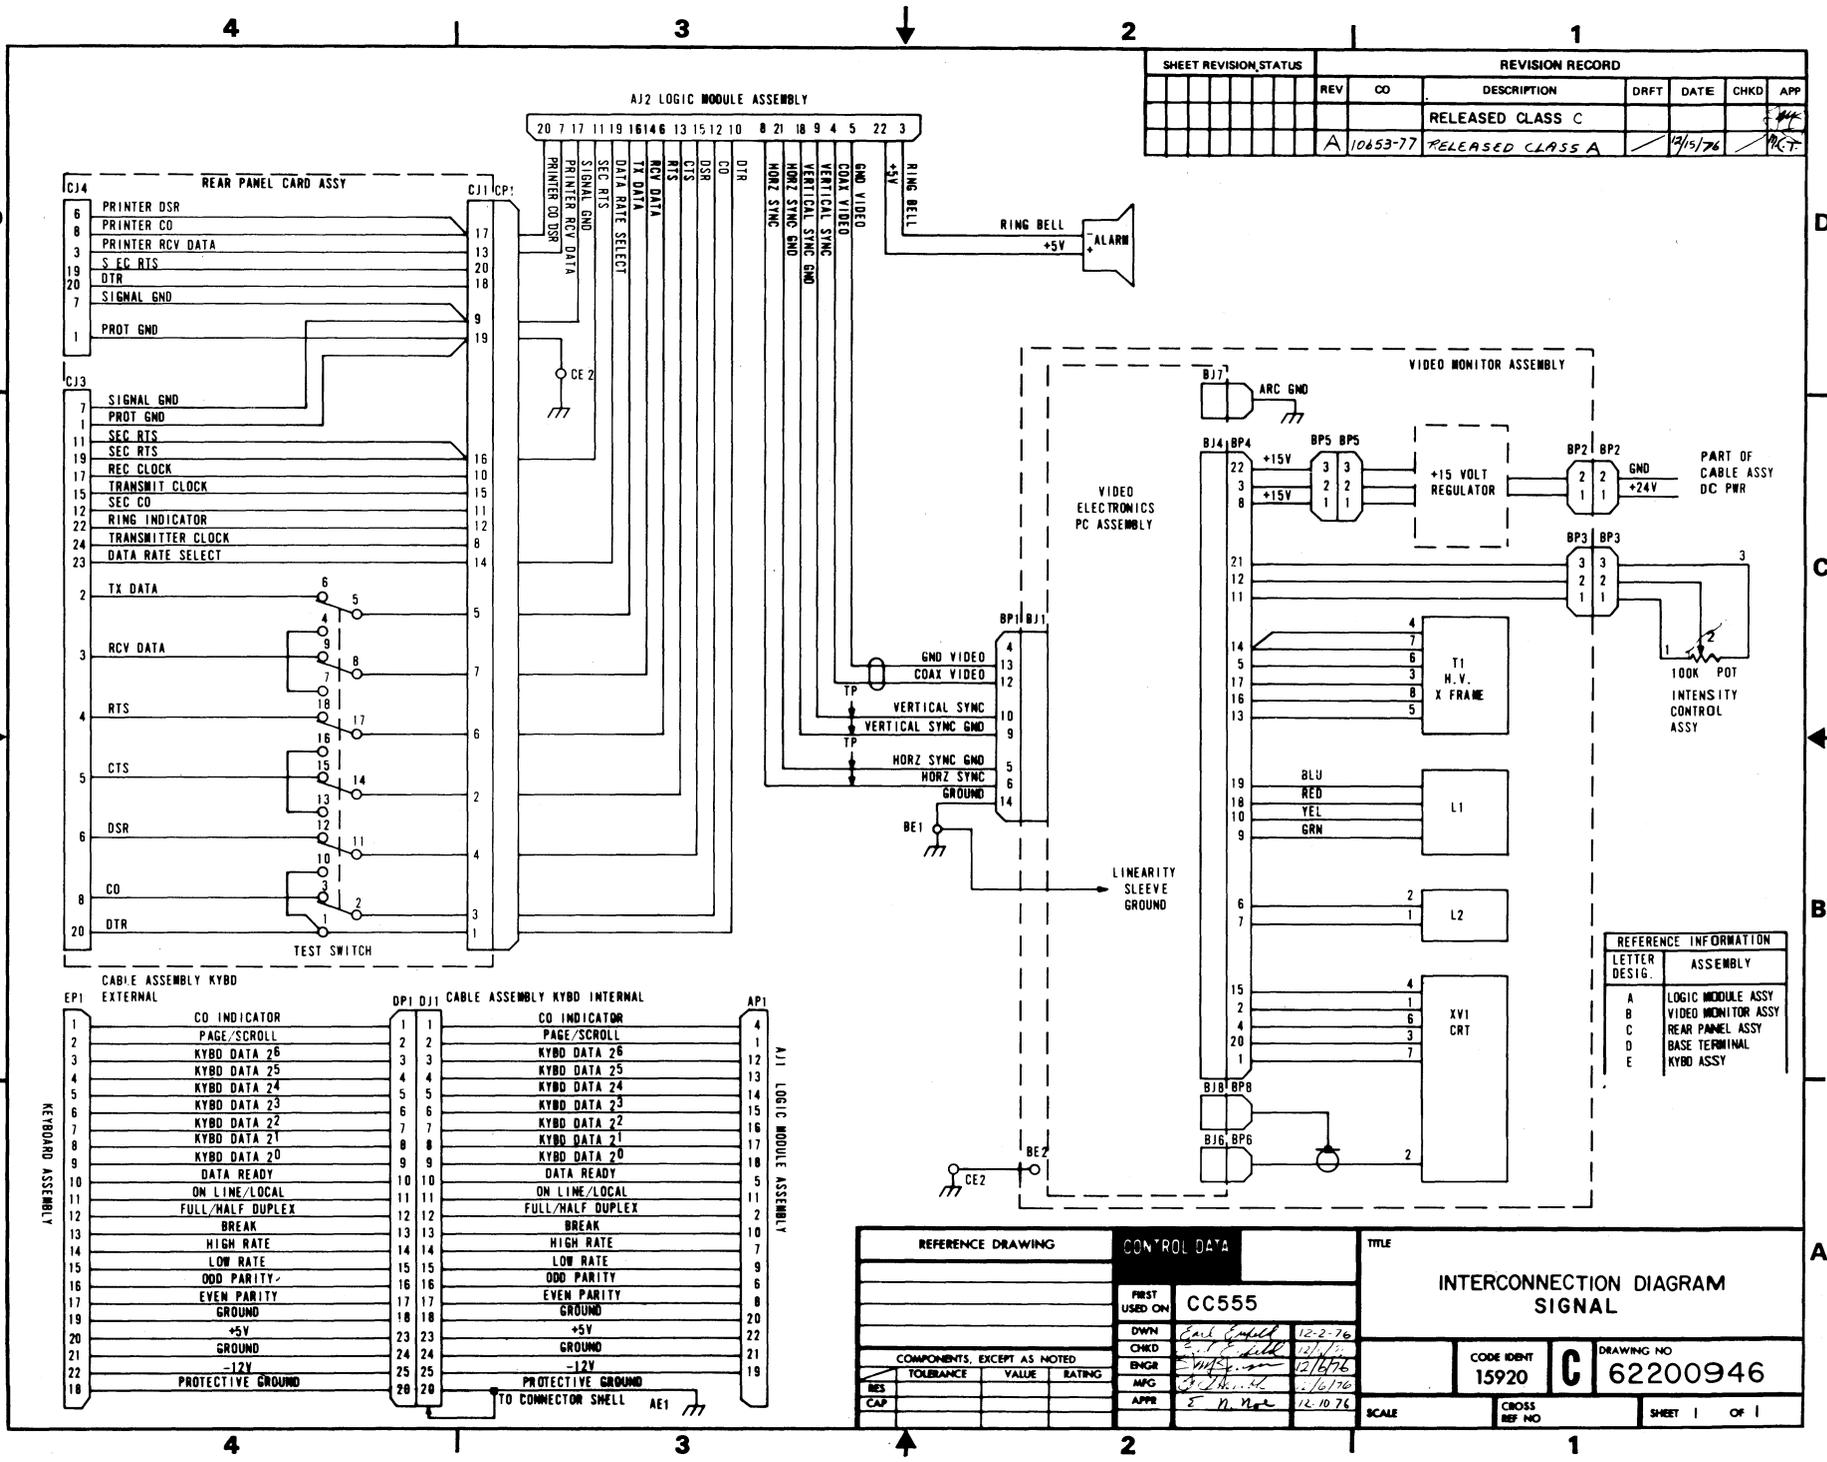

SHEET REVISION STATUS				REVISION RECORD					
REV	CO	DESCRIPTION	DRFT	DATE	CHKD	APP			
A	10453-77	RELEASED CLASS C		12/10/76					

REFERENCE INFORMATION	
LETTER DESIG.	ASSEMBLY
A	LOGIC MODULE ASSY
B	VIDEO MONITOR ASSY
C	REAR PANEL ASSY
D	BASE TERMINAL
E	KYBD ASSY

REFERENCE DRAWING		CONTROL DATA		TITLE	
		CC55		INTERCONNECTION DIAGRAM SIGNAL	
FIRST USED ON	DWPN	CC55	12-2-76	CODE IDENT	DRAWING NO
CHKD	ENGR	15920	12/10/76	C	62200946
COMPONENTS, EXCEPT AS NOTED				SCALE	CROSS REF NO
TOLERANCE	VALUE	RATING			
RES					
CAP					
APPR				SHEET	OF
E. N. N. 12-10-76				1	1

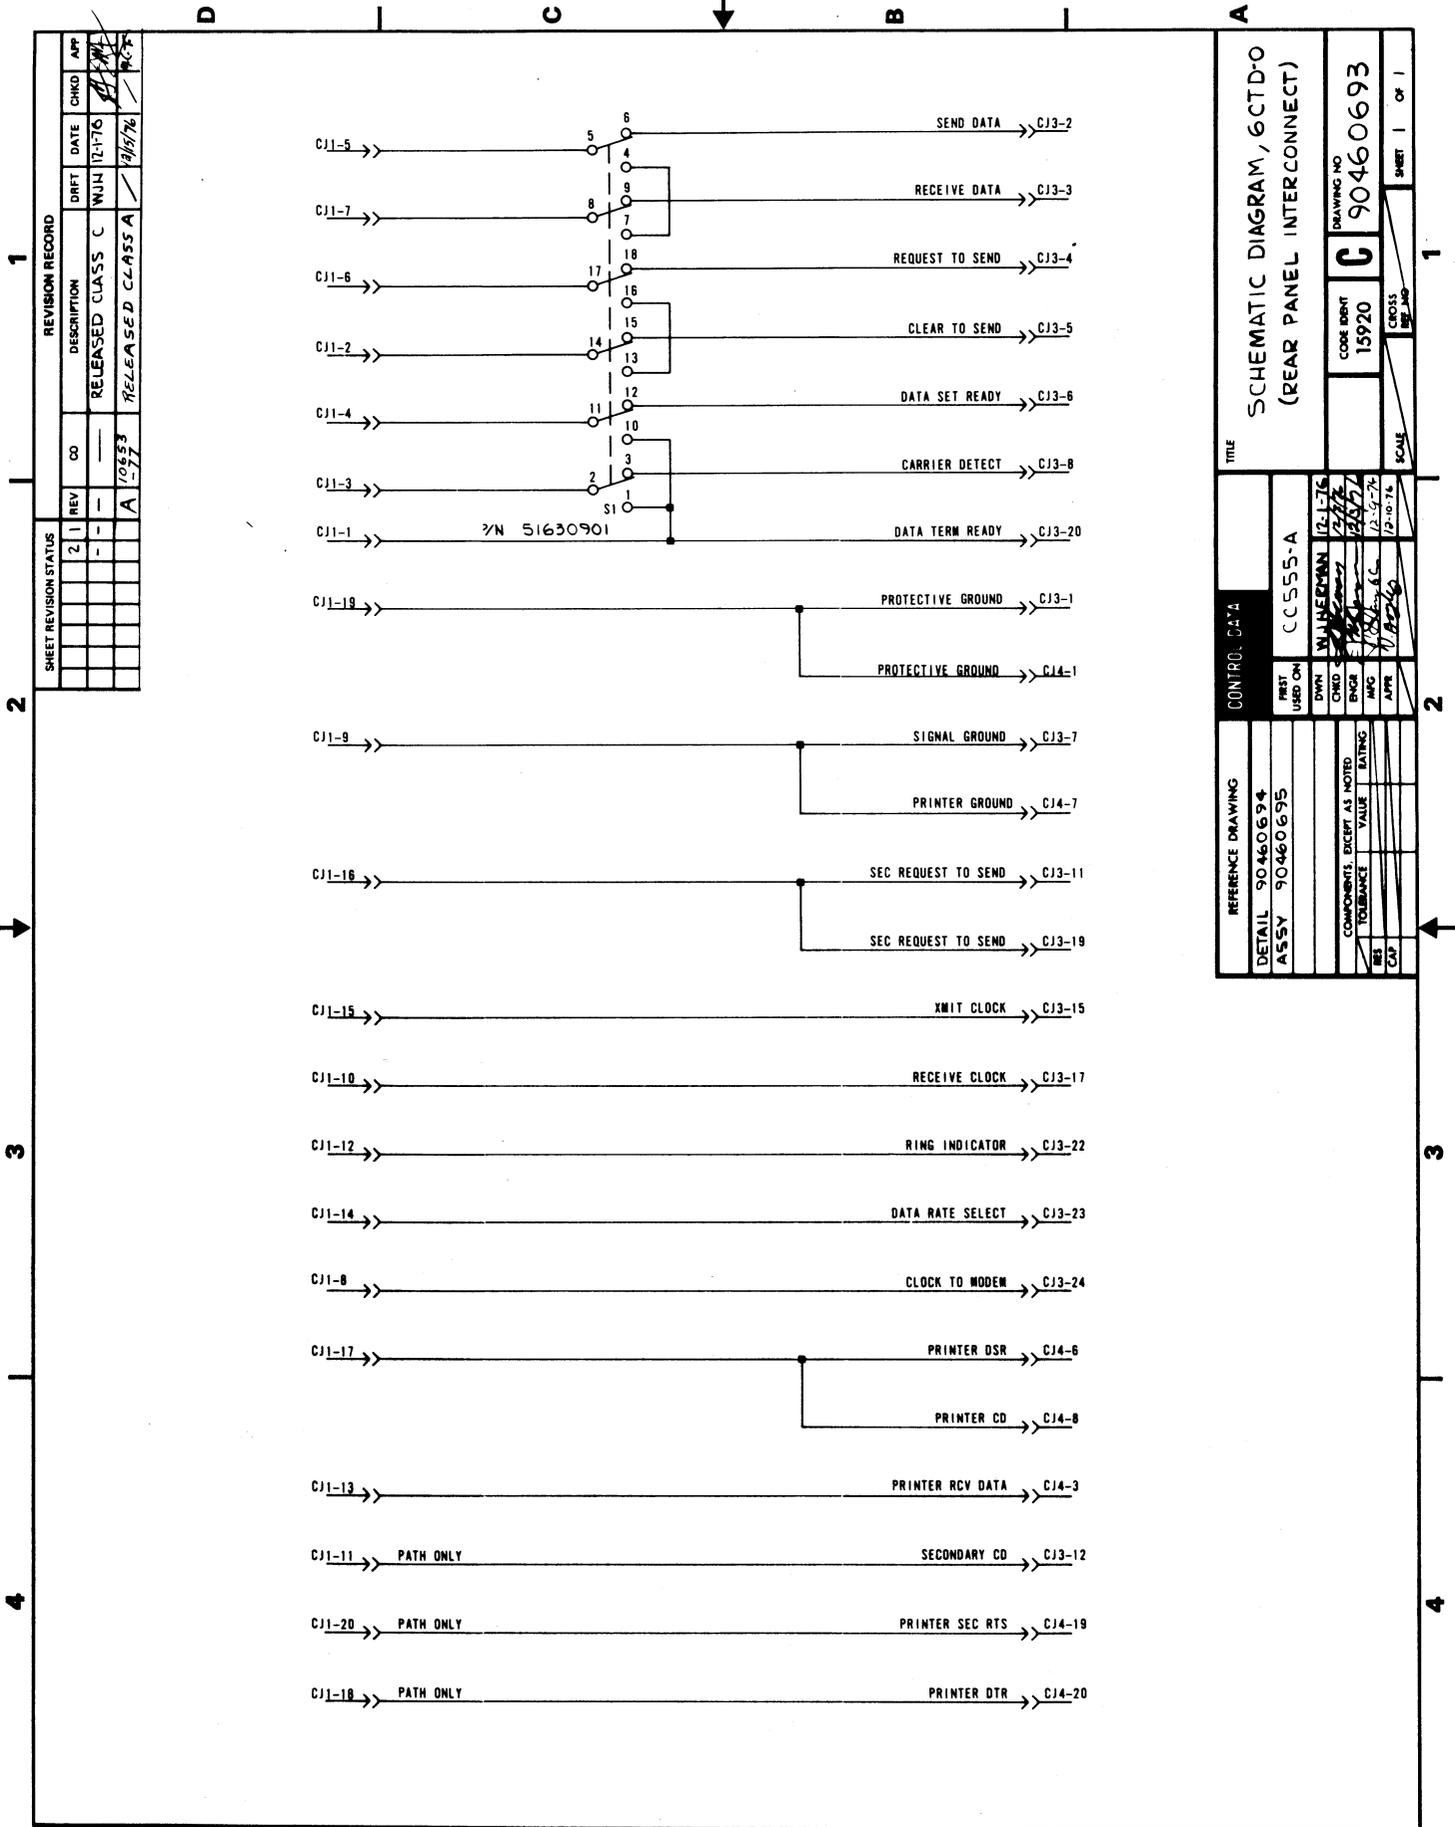


REVISION RECORD			
REV	CD	DATE	APP
2	1	12-1-76	WJN
DESCRIPTION: RELEASED CLASS C			
RELEASED CLASS A			

SHEET REVISION STATUS			
REV	CD	DATE	APP
2	1	12-1-76	WJN
DESCRIPTION: RELEASED CLASS C			
RELEASED CLASS A			

TITLE		SCHEMATIC DIAGRAM, 6CTD-0 (REAR PANEL INTERCONNECT)	
CODE	DRWT	DRAWING NO	90460693
15920	C		
REFERENCE DRAWING		CONTR. DATA	
DETAIL	90460694	FIRST USED ON	CC55-A
ASSY	90460695	BY	W. J. NEWMAN
COMPONENTS EXCEPT AS NOTED		DATE	12-1-76
SEE TOLERANCE VALUE LISTING		CHKD BY	WJN
DATE	12-1-76	APP'D	WJN
BY	WJN	SCALE	1 OF 1

S-54

62957400 A

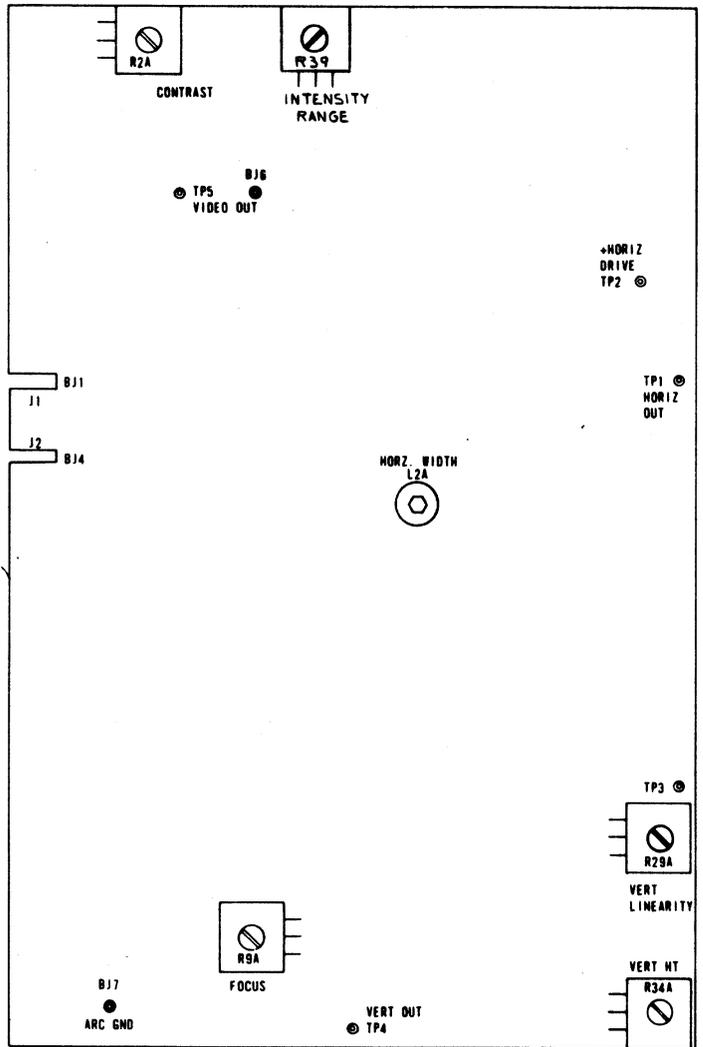


SHEET REVISION STATUS				REVISION RECORD			
REV	CO	DESCRIPTION	DRFT	DATE	CHKD	APP	
2	1	—	—	—	—	—	
—	—	RELEASED CLASS "C"	JM	8-30-76	WJA	WJA	
A	A	10653-67 RELEASED CLASS A	—	11-17-76	WJA	WJA	
B	B	CD11747 REVISED PER ECO	WJA	12-17-76	WJA	WJA	
C	C	CD12107 REVISED PER ECO	WJA	1-11-77	WJA	WJA	

REFERENCE DRAWING		CONTROL DATA		TITLE	
ASSY 90960619		CC6BI-A		SCHEMATIC DIAGRAM VIDEO DISPLAY ELECTRONICS NON COMPOSITE VIDEO (6BND-0)	
COMPONENTS, EXCEPT AS NOTED		FIRST USED ON	DWN	CHKD	ENGR
TOLERANCE VALUE RATING		CC6BI-A	J. MALMQUIST	8-30-76	8-30-76
RES 5%	OHMS 1/4W	ENGR	WJA	10-4-76	10-4-76
CAP		APPR	WJA	10-21-76	
CODE IDENT		DRAWING NO		SCALE	
15920		C 62200937		CROSS REF NO	
SHEET 1 OF 2					

62957400 A

5-55

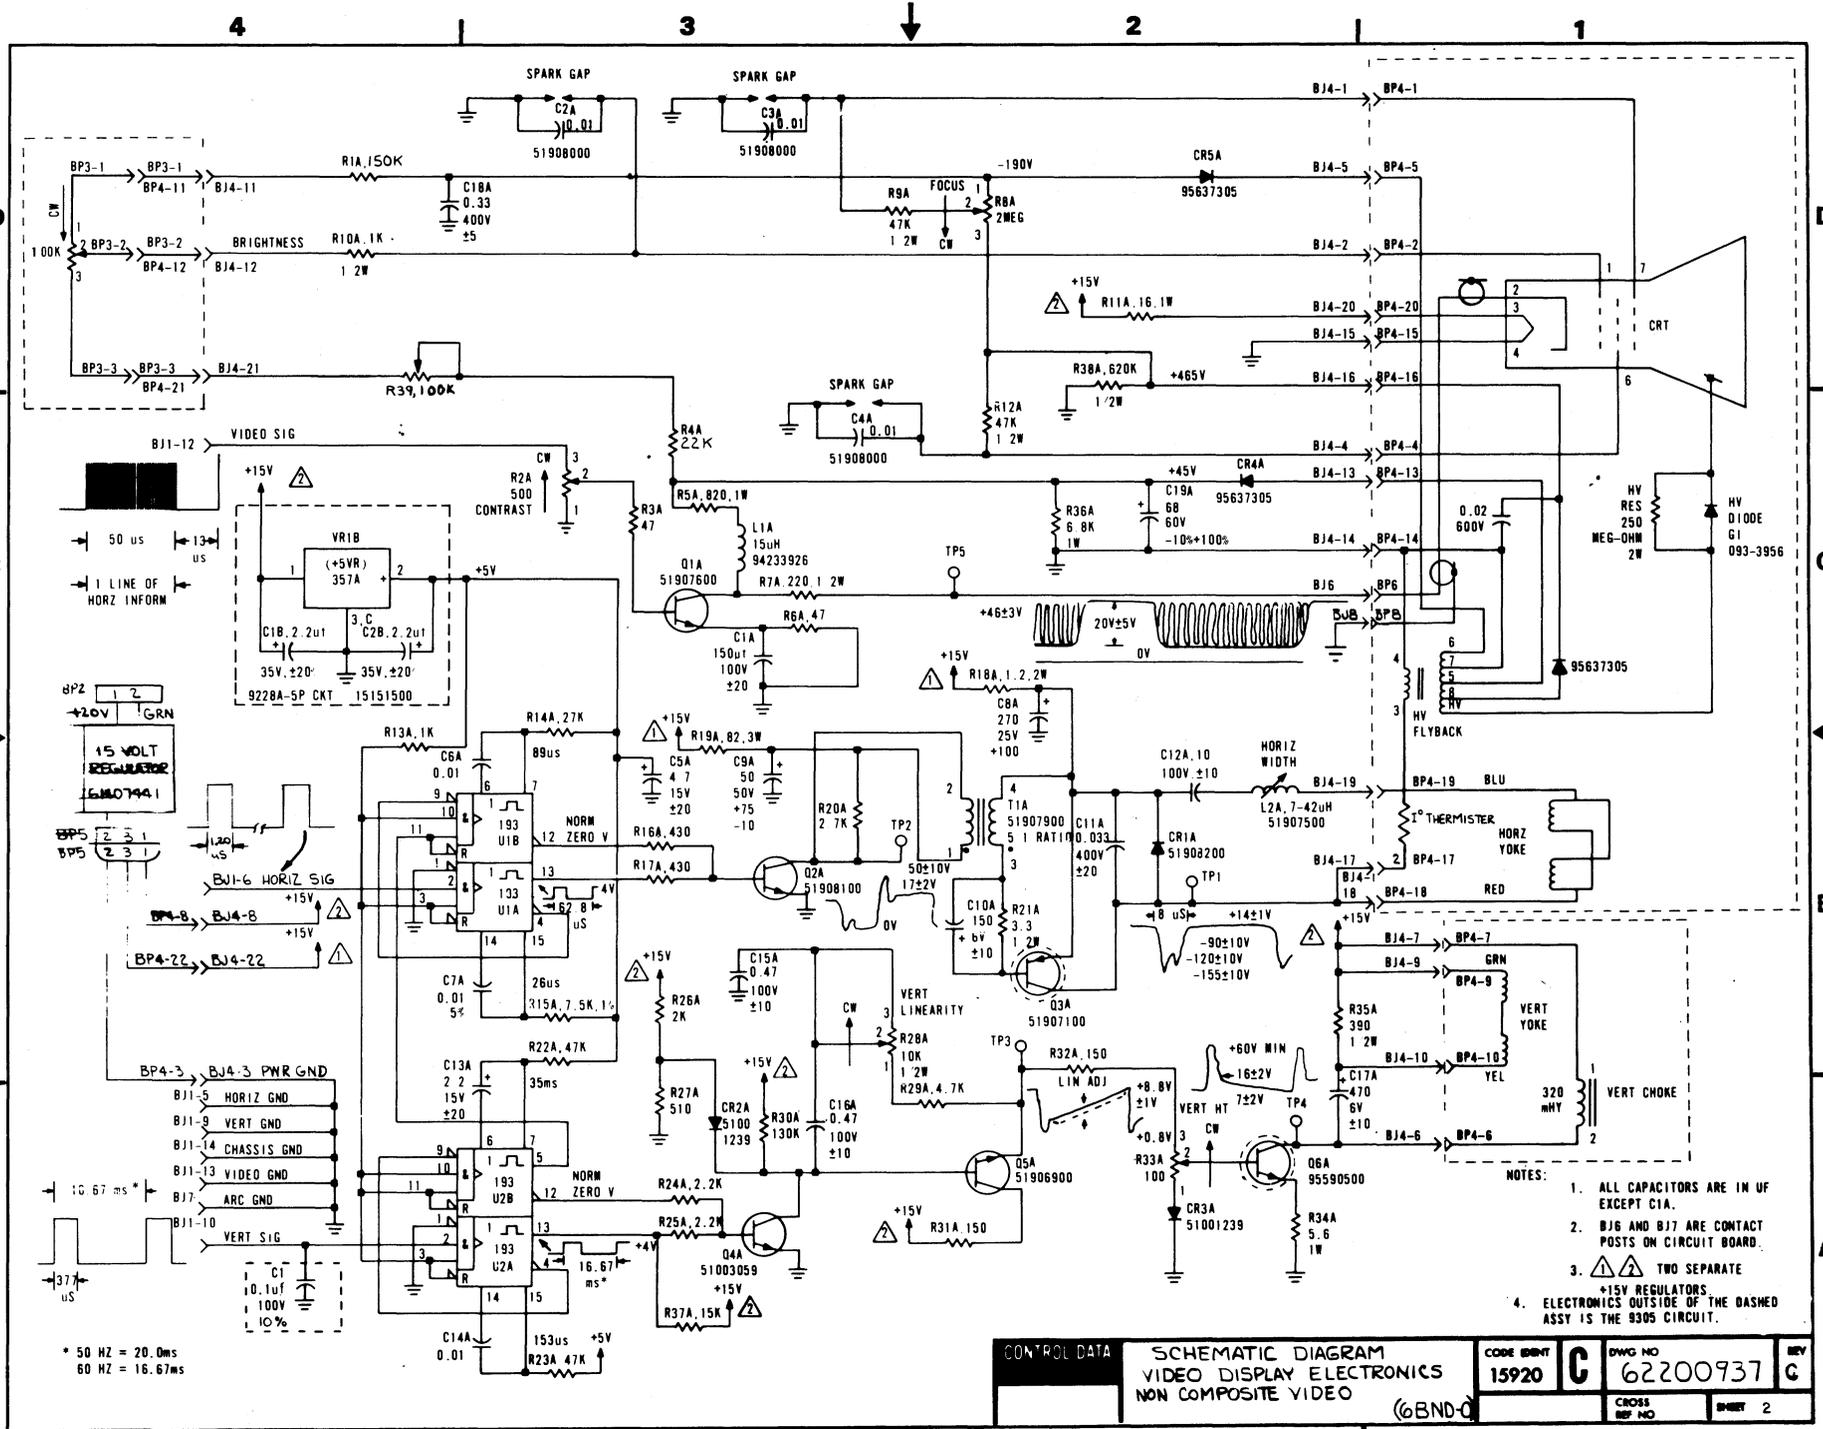

- NOTES:
1. ALL CAPACITORS ARE IN UF EXCEPT C1A.
  2. BJ6 AND BJ7 ARE CONTACT POSTS ON CIRCUIT BOARD.
  3. TWO SEPARATE +15V REGULATORS.
  4. ELECTRONICS OUTSIDE OF THE DASHED ASSY IS THE 9305 CIRCUIT.

\* 50 HZ = 20.0ms  
 60 HZ = 16.67ms

CONTROL DATA	SCHEMATIC DIAGRAM VIDEO DISPLAY ELECTRONICS NON-COMPOSITE VIDEO (6BND)	CODE IDENT	C	DWG NO	62200937	REV	C
		15920		CROSS REF NO		SHEET 2	

5-56


62957400 A

SHEET REVISION STATUS				REVISION RECORD							
	4	3	2	1	REV	CO	DESCRIPTION	DRAFT	DATE	CHKD	APP
							RELEASED CLASS "C"	JM	8-30-76	JM	JM
						10653-67	RELEASED CLASS A		9/17/76		P.C.T.
						CD11747	REVISED PER ECO	UW	10/20/76	DW	UW


NOTES:

- UNLESS OTHERWISE SPECIFIED POWER AND GROUND PINS OF INTEGRATED CIRCUITS ARE AS LISTED BELOW:  
 14 PIN INTEGRATED CKTS: PIN 14 = +5V, PIN 7 = GND  
 16 PIN INTEGRATED CKTS: PIN 16 = +5V, PIN 8 = GND


REFERENCE DRAWING			INTRO. DATA			TITLE		
DETAIL 80421300			FIRST USED ON			SCHEMATIC DIAGRAM 6BND-0 (NON COMPOSITE VIDEO BOARD)		
ASSY 90460619			CC6B1			DRAWING NO		
			OWN J. MALMQUIST			CODE IDENT		
			CHKD			C		
			ENGR			15920		
			MFG			90460618		
COMPONENTS, EXCEPT AS NOTED			APPR			SCALE		
TOLERANCE	VALUE	RATING				CROSS REF AND		
RES 5%	OHMS 1.4%					SHEET 1 OF 4		
CAP 10%	LT	100V						

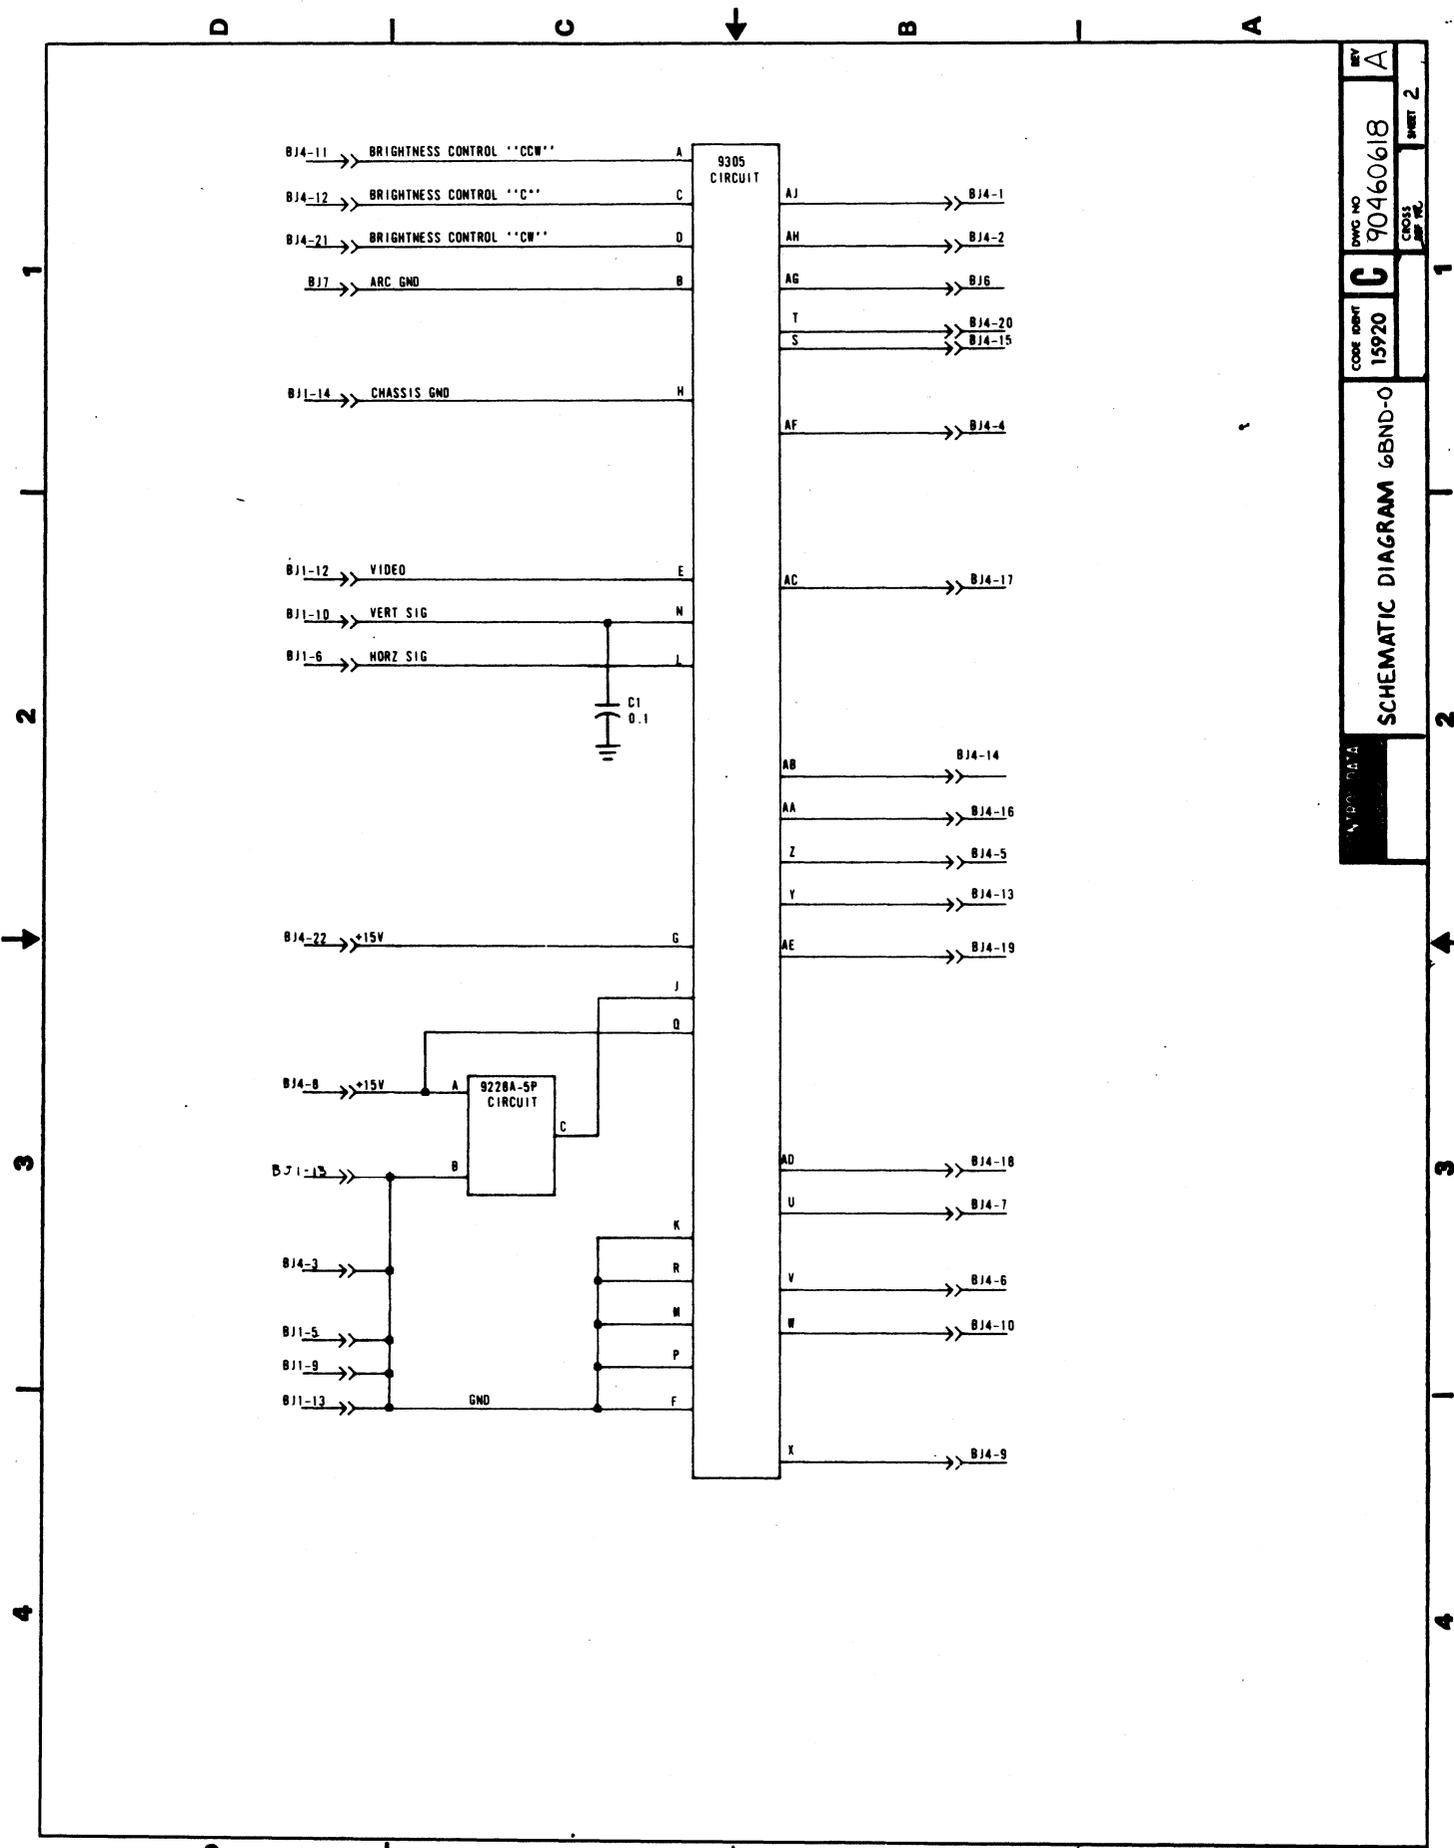

REV	A
DWG NO	90460618
CODE IDENT	C
15920	
CROSS REF	
SHEET 2	
SCHEMATIC DIAGRAM 6BND-0	

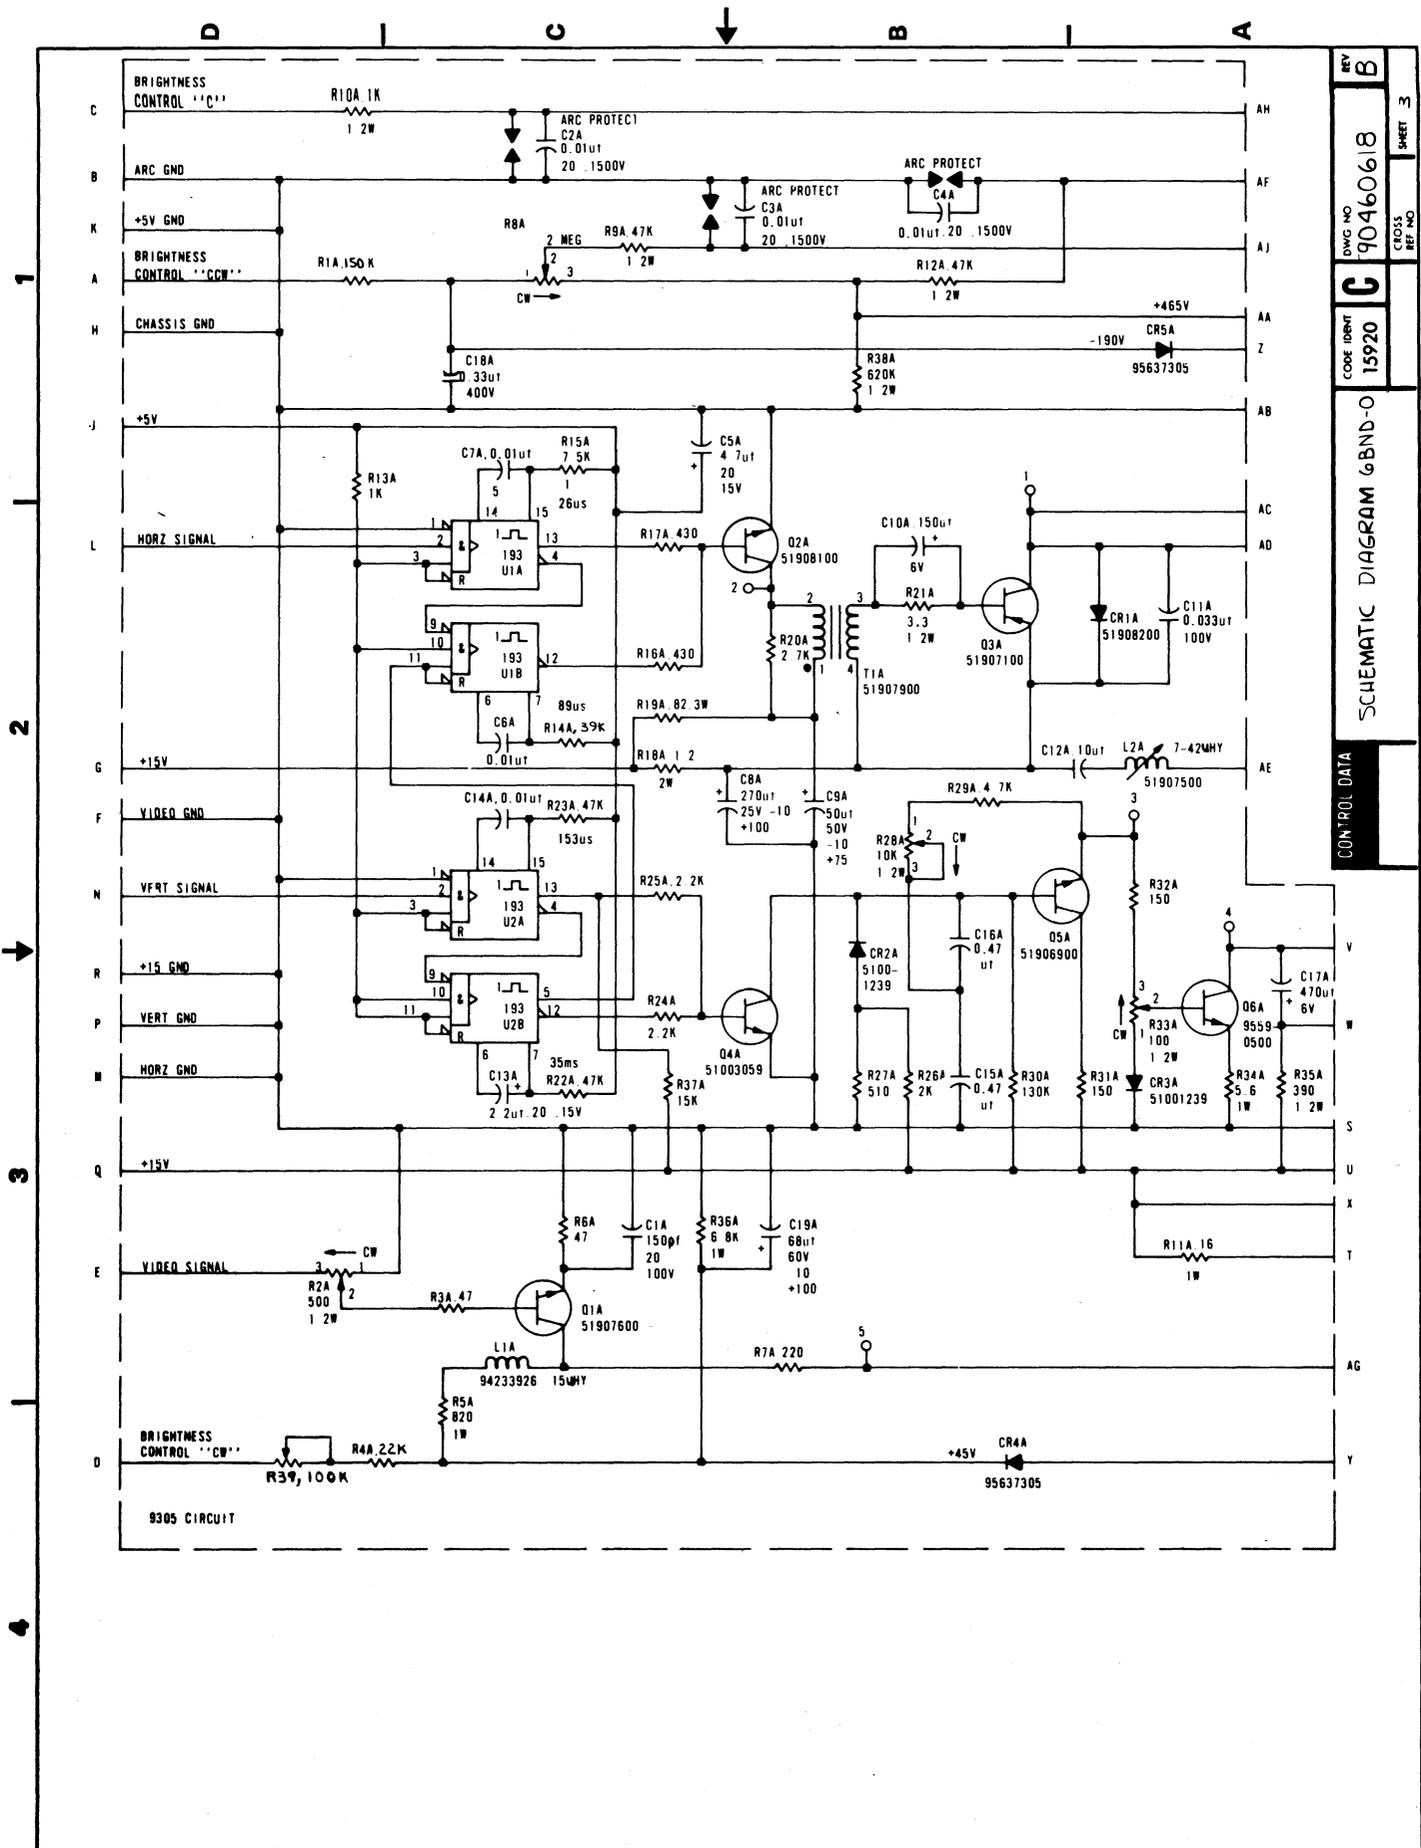


REV B  
 DWG NO 90460618  
 CODE IDENT 15920  
 CROSS REF NO  
 SHEET 3  
 SCHEMATIC DIAGRAM 6BND-0  
 CONTROL DATA

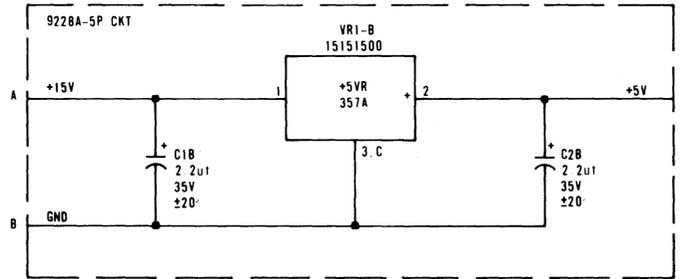

REV	A	SHEET	4
DWG NO	90460618	CROSS REF NO	
CODE IDENT	15920		
SCHEMATIC DIAGRAM 6BND			
CON POL DATA			

SHEET REVISION STATUS				REVISION RECORD				
REV	CO	DESCRIPTION	DRFT	DATE	CHKD	APP		
A	10653-29	RELEASED CLASS A		2/5/76				

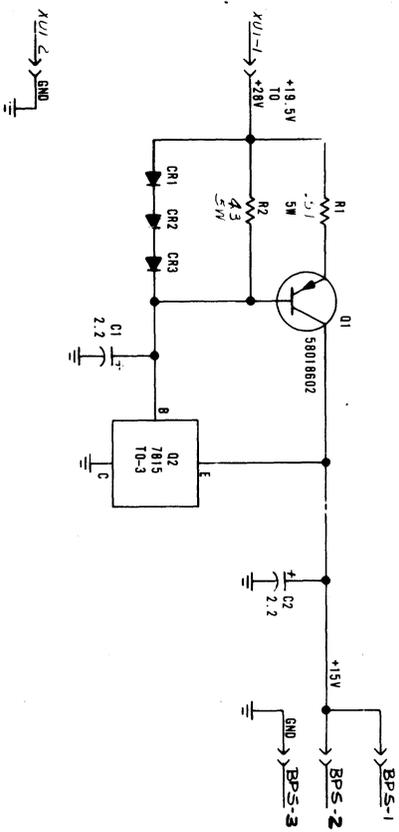

UNLESS OTHERWISE SPECIFIED ALL DIODES ARE 9563730A.

REFERENCE DRAWING				CONTROL DATA		TITLE	
				CC6B1-A		SCHEMATIC DIAGRAM REGULATOR ASSY (+15V)	
FIRST USED ON				DWN		CODE IDENT	
				T GORMAN		C	
COMONENTS, EXCEPT AS NOTED				CHKD		DRAWING NO	
				ENGR		15920	
				MFG		62200812	
				APPR		SCALE	
				E.N. WEA		CROSS REF NO	
				2-5-76		SHEET 1 OF 1	

5-60

62957400 A

4

3

2

1

4

3

2

1

D

G

B

A

D

C

B

A

---

This section describes field maintenance procedures for the display terminal, which in this section is referred to as the terminal subsystem, or just terminal. This terminology is used because the display terminal operates, and is tested with, either an impact or nonimpact character printer. The section begins by suggesting an approach to emergency maintenance (field maintenance). It then lists special tools required for maintaining the terminal under the Maintenance Aids heading, and describes the preventive maintenance tasks and procedures under the Preventive Maintenance heading. These tasks and procedures are often done immediately following emergency maintenance of the terminal subsystem. The last part of this section describes diagnostic and corrective maintenance procedures, which are those procedures actually used to diagnose and correct a malfunction during an emergency maintenance call to the terminal subsystem site.

Field maintenance for this terminal subsystem uses a logical process of elimination to trace a malfunction to a field replaceable part. Once the malfunctioning part is determined, the part is replaced. The key to speedy, efficient field maintenance is the diagnostic decision logic table (DDLT). This type of table is described in greater detail later in this section.

## **SUGGESTED EMERGENCY MAINTENANCE PROCEDURE**

The following text provides a procedure for customer engineers to follow when responding to customer complaints or request for service. Before leaving for the customer site, the customer engineer (CE) should obtain all of the information possible from the customer. This can be done by calling the customer and talking to the terminal operator or the person operating the terminal at the time the malfunction occurred. The CE should determine:

- The type of terminal that he is being called on to repair.
- The specific configuration of the terminal; for example, does it use a printer or other type of peripheral(s).
- The type of symptoms the terminal exhibited to indicate a malfunction occurred.
- Whether the terminal is operating at all at this time, and what symptoms, if any, it has when an attempt is made to operate it.

With notes that he has taken during the conversation with the terminal operator, the CE can decide what course of action to take.

- Go to the installation site and begin troubleshooting.
- Deduce that the terminal itself is probably not at fault and that the most likely cause of the problem is either the communication lines or a power reduction or loss. In either case, the CE can notify the responsible party (common carrier or power company) of the problem.
- Decide that an error in operating procedure and not an equipment failure is probably the cause of the malfunction, and notify the customer of the correct operating procedure.

Assuming that the CE must go to the terminal site to troubleshoot, the CE can also determine a probable cause of the failure and gather the tools, manuals, and spare parts that will be needed.

Upon arriving at the customer site, the CE finds the appropriate supervisory personnel, is shown to the malfunctioning terminal, again interviews the operator or otherwise verifies the phone notes taken concerning the malfunction. The CE visually inspects the terminal to ensure proper input/output cable and power connections, verifies that a malfunction does exist, and then begins to troubleshoot the terminal equipment.

Based on what is learned during conversations with customer personnel and what is observed after arriving at the customer site, the CE normally has two courses of action: 1) begin the troubleshooting procedures from the beginning, 2) begin troubleshooting only the equipment that is suspected of having a malfunction. Once the source of a malfunction is discovered and corrected, the CE should:

- Run through the terminal subsystem checkout procedure furnished later in this section to ensure that the terminal is fully operational.
- Check the preventive maintenance task tables in this section and perform any required preventive maintenance task procedures.
- Demonstrate to the customer's satisfaction that the terminal is now operating properly and is fully operational.

#### CAUTION

Because many of the circuits used in this system are of the MOS integrated circuit type, always observe the rules for handling MOS type circuits as described in appendix B of this manual. Failure to do so can result in these circuits being destroyed by an excessive discharge of static electricity.

## **MAINTENANCE AIDS**

In addition to the normal complement of hand tools and test equipment carried by the field CE, maintenance of this terminal requires a 3/32-inch nonmetallic hex driver (CRT Tuning Wand, CDC part no. 12263299). Maintenance of the impact printer may also require some special tools and equipment; these, however, are described in the Reference and Field Service Manual for the impact printer (see preface).

## **PREVENTIVE MAINTENANCE**

Preventive maintenance describes those tasks that are performed immediately following and as part of an emergency maintenance call. Preventive maintenance task tables (PMT) and preventive maintenance task procedures (PMTp) define the particular tasks to be performed for a terminal, indicate the schedule for performing these tasks, and describe how to do these tasks.\* Both PMTs and PMTPs for each equipment that can be used to configure this terminal subsystem are included in this section. While a CE is performing the PMTs and PMTPs, they should verify that the terminal operator has been performing their assigned preventive maintenance tasks. Normally, a terminal operator is only responsible for routine cleaning of equipment exterior; however, in some instances, the operator may be responsible for more complex preventive maintenance procedures. This is often determined on a per-installation basis and on the type of operator personnel used at a given installation.

### **KEYBOARD DISPLAY PMTs**

The listing of the PMTs in table 6-1 defines the items to be performed or checked at the keyboard display each time the terminal requires repair. Do these tasks for best equipment performance and to minimize the amount of emergency maintenance calls.

### CAUTION

Do not use solvents to clean the keyboard of the display terminal. Solvents can cause keyswitches to become defective.

---

\* Some of the PMTPs refer to the diagnostic/corrective-maintenance procedures found later in this section. These latter procedures are designated TS1, TS2, etc. for terminal subsystem procedures; CRT1, CRT2, etc. for keyboard display procedures; NIP1, NIP2, etc. for nonimpact printer procedures; and IMP1, IMP2, etc. for impact printer procedures.

TABLE 6-1. KEYBOARD DISPLAY PMTs

ITEM	PROCEDURE	APPROXIMATE TIME (MINUTES)
1	Clean keyboard	2
2	Clean exterior surface	2
3	Clean viewing screen	2
4	Visually inspect all cables and wires for insulation breakdown or other damage	5
5	Check keycaps for signs of wear or breakage	1
6	Check for foreign objects inside cabinet	5

**KEYBOARD DISPLAY PMTPs**

The following text describes the PMTPs which support the preceding PMT table for the keyboard display.

CAUTION

Before working inside of the cabinet for these PMTPs, turn power off and remove ac input from site power outlet.

- 1) Remove dust from keyboard with a soft-bristled brush.

CAUTION

Do not use solvents or cleaning fluids.

- 2) Clean exterior surfaces of cabinet with a damp, lint-free cloth. Mild detergent may be used.
- 3) Clean face of viewing screen with a clean, soft cloth and a mild glass-cleaning solution. If a spray is used, do not allow liquid to flow off screen (it is preferable to spray cloth rather than screen).

- 4) Remove cabinet hood (procedure CRT5) and visually inspect all cables and wires for evidence of insulation breakdown and wear. Replace damaged wires if possible. Check electrical connections to ensure they are not loose. Check electronic components for signs of deterioration, such as overheating or aging.
- 5) Check keycaps for signs of wear or breakage and replace keyboard if necessary (procedure CRT4).
- 6) Check for foreign objects such as bits of wire or solder.

### NONIMPACT PRINTER PMTs

The PMTs listed in table 6-2 are the tasks to be done at the nonimpact printer (if part of the subsystem) at the intervals specified in the table. Do these tasks for best equipment performance and to reduce repairs.

TABLE 6-2. NONIMPACT PRINTER PMTs

LEVEL (See Note 1)	ITEM	PROCEDURE	APPROXIMATE TIME (See Note 2)
1	1.1	Clean exterior surface	2
1	1.2	Inspect cabinet interior for possible loose parts	3
1	1.3	Clean cabinet interior	5
1	1.4	Inspect all cables and wires for insulation breakdown or other damage	2
1	1.5	Inspect all mechanisms for signs of excess wear	3
1	1.6	Check carefully for foreign objects inside cabinet and mechanism	2
2	2.1	Clean printhead	15
2	2.2	Clean guidebar	5
2	2.3	Lubricate platen solenoid plunger	5

**Notes:**

- 1) Level 1 tasks are those to be done each time the terminal subsystem requires repair. Level 2 tasks are required every 20 million printed characters, 500,000 line feeds, or one year, whichever occurs first. However, if foreign material is suspected on the guidebar at any time, it should be cleaned to prevent excessive carriage return time (over 200 milliseconds). Also, if printhead contamination is suspected before the normal cleaning time, it should be cleaned.
- 2) Approximate time given is in minutes, and is for tasks listed here only. This does not include troubleshooting/corrective maintenance procedures, which may be seen as necessary from these PMTs.

## **NONIMPACT PRINTER PMTPs**

Following text describes the PMTPs which support the preceding PMT table for the nonimpact printer.

### CAUTION

Before working inside of the cabinet for these PMTPs, turn power off and remove ac input cord from site power outlet.

The following steps describe the level 1 tasks listed in the PMT table.

- 1.1) Clean exterior surfaces of cabinet with damp, lint-free cloth. Mild detergent may be used. Do not use cloth so wet that water runs down into printer.
- 1.2) Turn the two hood-locking screws at cabinet rear 1/4-turn counter-clockwise and pull these screws back. Lift hood up from back until it will slide forward off its front holding tab. Placing the hood aside, inspect interior of cabinet for possible parts which may have worked loose from mechanism. Replace parts, or mechanism, depending on whether loose parts are reusable, replaceable, etc.
- 1.3) Using a soft, long-bristled brush and vacuum cleaner with a crevice tool, carefully and thoroughly clean cabinet interior of any/all paper particles, dust, etc.
- 1.4) Inspect all cables, wires, and connections (including input/output connector pins) for evidence of insulation breakdown or wear. Repair/replace damaged wires if possible. Check electronic components for signs of deterioration such as overheating or aging.
- 1.5) Look carefully at all mechanisms for signs of wear. Repair/replace worn parts if possible (use replacement procedures provided later in this section).
- 1.6) Inspect for foreign objects possibly lodged in crevices within the mechanism or other portions of cabinet.

The following steps describe the level 2 procedures listed in the PMT table. However, perform all level 1 tasks before doing level 2.

2.1) Clean printhead as follows:

- a) Remove printhead and cable assembly from printer (procedure NIP13).
- b) Using a clean, dry, stiff-bristle toothbrush, brush 10 to 15 times across printhead elements in both vertical and horizontal directions.

CAUTION

Do not use solvents or cleaning fluids.

- c) Replace printhead and cable assembly in printer (procedure NIP13).

2.2) Clean guidebar as follows:

- a) Using a clean, dry, lint-free cloth, wipe all four sides of the head guidebar until clean. Move carriage as necessary to access bar along entire length.

CAUTION

Do not use solvents or cleaning fluids.

- b) Exercise printer for a few minutes; that is, do offline tests for non-impact printer as described in Terminal Subsystem Checkout procedure (TS6) later in this section.

2.3) Lubricate platen solenoid plunger (figure NIP7) as follows:

- a) Apply three drops of lubricant, CDC part no. 62148158 or equivalent, around plunger working surface.
- b) Operate plunger in and out of housing to distribute lubricant.

## IMPACT PRINTER PMTs

The PMTs listed in table 6-3 are the tasks to be done at the impact printer (if a part of the subsystem) at the intervals specified in the table. Do these tasks for best equipment performance and to reduce repairs.

TABLE 6-3. IMPACT PRINTER PMTs

LEVEL (See Note 1)	ITEM	PROCEDURE	APPROXIMATE TIME (See Note 2)
1	1.1	Clean exterior surface	3
1	1.2	Inspect cabinet interior for possible loose parts	5
1	1.3	Clean cabinet interior	5
1	1.4	Inspect all cables and wires for insulation breakdown or other damage	4
1	1.5	Inspect all mechanisms for signs of excess wear	5
1	1.6	Check carefully for foreign objects inside cabinet and mechanism	4
2	2.1	Oil drive mechanism	2
2	2.2	Grease bevel gears	2
2	2.3	Examine/replace return reel cord	2 to 10
2	2.4	Clean printhead-slide shafts	2
2	2.5	Oil format tape and forms motion motor	1
2	2.6	Use printer Test Print switch and exercise	5
2	2.7	Replace cabinet and pack tools/materials	10
3	3.1	Remove and wash printhead and then check print pins	30
3	3.2	Reinstall printhead	10
3	3.3	Use printer Test Printer switch and exercise	5
3	3.4	Replace cabinet and pack tools/materials	15

Notes:

- 1) Level 1 tasks are those to be done each time the terminal subsystem requires repair. Level 2 tasks are required every 13.2 million printed characters, 500 hours of power-on time, or 3 months — whichever comes first. Level 3 tasks are required every 79.2 million characters, 3000 hours of power-on time, or 18 months — whichever comes first. However, if inspection shows the level 2 or 3 tasks should be done ahead of schedule, do such tasks as seem necessary to help prevent equipment wear/misperformance.
- 2) Approximate time given is in minutes, and is for tasks listed here only. This does not include troubleshooting corrective maintenance procedures which may be seen as necessary from these PMTs.

## **IMPACT PRINTER PMTPs**

The following text describes the PMTPs which support the preceding PMT table for the impact printer.

### CAUTION

Before working inside of the cabinet for these PMTPs, turn power off and remove ac input cord from site power outlet.

The following steps describe the level 1 tasks listed in the PMT table.

- 1.1) Clean exterior surfaces of cabinet with damp, lint-free cloth. Mild detergent may be used. Do not use cloth so wet that water runs down into printer.
- 1.2) Remove cabinet (procedure IMP6). With cabinet placed aside, inspect interior cabinet base and horizontal surfaces for parts which may have worked loose from mechanism. Replace parts, or mechanism, depending on whether loose parts are reusable, replaceable, etc.
- 1.3) Using a soft, long-bristled brush and vacuum cleaner with a crevice tool, carefully and thoroughly clean cabinet interior of any/all paper particles, dust, etc.
- 1.4) Inspect all cables, wires, and connections (including input/output connector pins) for evidence of insulation breakdown or wear. Repair/replace damaged wires if possible. Check electronic components for signs of deterioration caused by overheating or aging.
- 1.5) Look carefully at all mechanisms for signs of wear. Repair/replace worn parts if possible (use replacement procedures provided later in this section).
- 1.6) Inspect for foreign objects possibly lodged in crevices within the mechanism or other portions of the equipment.

The following steps describe the level 2 tasks listed in the PMT table. However, perform all level 1 tasks before doing level 2.

2.1) Oil drive mechanism as follows:

- a) Put three drops of oil, CDC part no. 95011200, in oil hole in motor support casting, figure IMP10.
- b) Put one drop same type oil in oil hole in each support bearing (two) of drive shaft.

CAUTION

Do not allow any oil on the clutch mechanism.

2.2) Grease bevel gears as follows:

- a) Smear molygrease, CDC part no. 12210957, on bevel gears of ribbon drive (figure IMP10) as required.

2.3) Inspect return reel cord for fraying and, if frayed, replace (procedure IMP17).

2.4) Clean printhead-slide shafts as follows:

- a) Using a clean, dry, lint-free cloth, wipe shafts until clean. Move printhead carriage as necessary to access shafts along entire length.

CAUTION

Do not use solvents or cleaning fluids.

- b) Apply four drops oil, CDC part no. 95011200, to each felt washer which rides on shafts.
- c) Move printhead carriage from end-to-end of shafts several times, then wipe shafts clean again.

2.5) Oil format tape and forms motion motor as follows:

- a) Apply one drop oil, CDC part no. 95011200, to oil hole for felt lubricating pad, figure IMP10.

2.6) Do Test Print exercise as follows:

- a) See that paper is loaded (procedure IMP3) and ribbon is ready.
- b) With power cord plugged into site power outlet, press ON/OFF switch to turn printer on.
- c) Pull safety switch up (figure IMP10).
- d) With printer offline (START/STOP switch not lit), activate Test Mode switch. Printer should continuously print alternating sets of the character "B" followed by an equal number of space characters. This should occur for a line, the paper should advance one line, and the process should continuously repeat until Test Switch is deactivated.

CAUTION

Do not allow the printer to constantly print continuous adjacent columns for more than 5 minutes maximum at a time, or solenoid assemblies will overheat and be damaged.

- e) Examine printout for print quality (light or missing dots or improper character width). If any problem exists, refer to table IMP1, DDLT for Impact Printer.

2.7) If not doing level 3 tasks, or any other maintenance at this time, replace printer cabinet (procedure IMP6) and pack tools/materials.

The following steps describe the level 3 tasks listed in the PMT table. However, perform all level 1 tasks and the first five level 2 tasks before doing level 3.

3.1) Remove and wash printhead and check print pins as follows:

- a) Remove printhead from printer (procedure IMP17).
- b) Wash residue from printhead using standard isopropyl alcohol normally used for cleaning.
- c) Use a magnifying device such as an eye-loupe and inspect print pins for being flush with surface of ruby guide. If not flush, return printhead to repair facility and use a replacement in the printer.

3.2) Reinstall printhead in printer (procedure IMP17).

3.3) Do Test Print exercise as described in level 2, step 2.6.

3.4) If no other maintenance is to be performed at this time, replace printer cabinet (procedure IMP6) and pack tools and materials.

## DIAGNOSTIC AND CORRECTIVE MAINTENANCE

Maintenance activity for a terminal subsystem falls into three general categories: preventive, diagnostic, and corrective. Preventive maintenance has already been discussed earlier in this section. This portion of the text concentrates on diagnostic and corrective maintenance. Diagnostic maintenance provides an organized means of diagnosing a malfunction and of identifying its source. Corrective maintenance consists of the procedures for correcting a diagnosed malfunction and of those procedures used to verify that the malfunction has been corrected. This terminal subsystem uses the checkout tests of procedure TS6 (Terminal Subsystem Checkout) both as a means of verifying that a malfunction exists and that a malfunction has been corrected. It uses the diagnostic decision logic tables and the procedures in this section to efficiently diagnose and correct a malfunction.

### CAUTION

Because many of the circuits used in this system are of the MOS integrated circuit type, always observe the rules for handling MOS type circuits as described in appendix B of this manual. Failure to do so can result in these circuits being destroyed by an excessive discharge of static electricity.

### DIAGNOSTIC TABLES

The key for isolating a subsystem malfunction to its probable cause is proper use of the cookbook-type diagnostic tables that follow. These tables, termed diagnostic decision logic tables (DDLTs), or simply decision tables, identify and isolate a malfunction in an equipment to a replaceable module, or where equipment design does not permit this approach, to a replaceable part or component. The tables present test setup and resulting symptom information in a logical, organized manner, and where necessary, they refer to procedures for testing, adjusting, or replacing a suspect component. References to procedures are also made in a sequenced manner so that they refer to the easiest procedure or most likely cause first and progress to the most difficult procedure or least likely cause. To further facilitate use of the decision tables and their associated procedures, they are grouped in the following manner:

- Terminal subsystem (TS) tables and procedures
- Keyboard display terminal (CRT) tables and procedures
- Nonimpact printer (NIP) tables and procedures
- Impact printer (IMP) tables and procedures

The following paragraphs describe the decision tables in greater detail. Anyone not familiar with the format and structure of diagnostic decision logic tables should read the following paragraphs and study the sample table in figure 6-1 carefully before attempting to use the decision tables later in this section. Also, anyone using decision tables for the first time should always start at the beginning of the tables and continue through to the end.

The diagnostic decision logic table is a specialized format for displaying logic in a way that is superior to the conventional logic flowchart because the logic is more visible. The DDLT analyzes a situation down to a set of specific conditions and then directs the customer engineer to those actions that will correct the situation. Basically, the table is arranged in four sections, or quadrants: the Conditions quadrant, the Situations quadrant, the Sequence quadrant, and the Actions quadrant. Figure 6-1 illustrates the layout of a diagnostic decision logic table; the sample table is for purposes of illustration only and is not a table from this terminal subsystem.

Starting from the top, each table has a title. The title for the DDLT in figure 6-1 for example would be, Table CR1. DDLT for Card Reader (Sheet 1 of 1). Next the table has an entry (Visual Checks in sample table) indicating the kind of test that the table covers. Next the table has an Assume block. This block contains setup information or information that is prerequisite to performing the rest of the test contained in the table. The remainder of the table consists of the quadrants noted previously; these quadrants are used in a clockwise direction, starting from the conditions quadrant.

### **Conditions Quadrant**

The conditions quadrant of a DDLT contains test conditions and questions that can be answered with either a yes or a no. The CE should read and answer all of the questions in the conditions quadrant and write the answers to each question (Y or N) in a vertical column before proceeding to the situations column.

### **Situations Quadrant**

The Situations quadrant of the example table contains 10 vertical columns of Ys and/or Ns, and one column with the word Other in it. Each of the first 10 columns

VISUAL CHECKS											
ASSUME											
Card-reader power cord is connected to ac outlet. Power is on. If power is not on, see procedure 1.											
CONDITIONS	SITUATIONS										
	1	2	3	4	5	6	7	8	9	10	11
Is POWER ON indicator illuminated?	Y	N	N	N	Y	Y	Y	Y	Y	Y	
Cycle rear-panel toggle switch S1. Press READ CHECK indicator/switch. Do all other indicators illuminate?	Y	N	N	Y	N	N	Y	Y	Y	Y	
Do any indicators illuminate?	-	N	N	-	N	Y	-	-	-	-	
Press and release RESET indicator/switch. Is RESET indicator illuminated?	Y	-	-	-	-	-	N	Y	Y	Y	
Do all three motors start when RESET indicator/switch is pressed (observe card-feed drum and coils of stacker motors)?	Y	-	-	-	-	-	-	N	N	Y	
Do any motors start?	-	N	Y	-	-	-	-	Y	N	-	
Did motor power drop within 10 to 30 seconds after releasing RESET indicator/switch?	Y	-	-	-	-	-	-	-	-	N	
ACTIONS	SEQUENCE										
Go to sheet 2, Electromechanical Checks.	X	-	-	-	-	-	-	-	-	-	
Check that toggle switch S1 (rear panel) is up.	-	1	-	-	-	-	-	-	-	-	
Check that removable power cord is connected securely to card reader.	-	2	-	-	-	-	-	-	-	-	
Check fuses (rear panel).	-	3	-	-	-	-	-	-	-	-	
Check switch board and associated cabling (procedure 40). Replace, if required (procedure 41).	-	4	-	2	2	2	3	-	-	-	
Refer to CB10X manual.	-	5	4	4	3	4	5	3	3	3	
Check +17-volt power supply (procedure 36).	-	-	1	-	-	-	-	-	-	-	
Check for +17 V dc between ground and control-board connector P2, pins 2 and 3 and between ground and switch board connector, pins 2 and 3 (two pins joined by foil).	-	-	2	-	-	-	-	-	-	-	
Check cable between control board and switch board.	-	-	3	-	-	-	-	-	-	-	
Replace lamp in failing indicator (procedure 41).	-	-	-	1	-	1	-	-	-	-	
Check failing indicator and/or switch (procedure 40) and replace, if required (procedure 41).	-	-	-	3	-	3	-	-	-	-	
Check READ CHECK indicator/switch (procedure 40) and replace, if required (procedure 41).	-	-	-	-	1	-	-	-	-	-	
Check +5-volt power supply (procedure 35).	-	-	-	-	-	-	1	-	-	-	
Check RESET indicator/switch (procedure 40) and replace, if required (procedure 41).	-	-	-	-	-	-	2	-	-	-	
Replace control board (procedure 44).	-	-	-	-	-	-	4	-	2	2	
Check for ac power at motor connectors (procedure 37).	-	-	-	-	-	-	-	1	-	-	
Check failing motor. Replace motor, if required (procedure 46 for card-feed motor, or procedure 47 for card-stacker motor).	-	-	-	-	-	-	-	2	-	-	
Check common cable connections to motors.	-	-	-	-	-	-	-	-	1	-	
Check that T0 switch (control board) has labeled side, T0, up.	-	-	-	-	-	-	-	-	-	1	
Call Regional Tech Support.	-	-	-	-	-	-	-	-	-	-	X

Figure 6-1. Example of a Diagnostic Decision Logic Table

represents a unique set of answers to the questions asked in the conditions quadrant. A dash (-) in a column indicates that the answer to the associated condition is irrelevant; that is, the answer may be either a yes or a no without affecting the result. In using the tables, the CE should look for a match between the Y and N column written down while answering the questions posed in the conditions quadrant and the Y and N answers listed in a column of the situations quadrant.

As an example, refer to the shaded area of the sample figure and assume that each question in the conditions quadrant was answered no (N) as it was tested. The full column of N answers to the conditions questions would actually match situations column 2 even though situations column 2 contains three dashes. This is true because the dashes indicate that their respective conditions questions are irrelevant. As can be seen by examining the conditions questions, it is indeed irrelevant to ask which indicators light or which motors run if it is already known that no indicators light and no motors run.

When using the tables, look for a match between the conditions answers and the situations columns starting from the left situations column and moving toward the right one. Do this because overriding situations are normally listed first (on the left) within the situations quadrant. Overriding situations are those that move you out of the table and on the next test, table, or action.

### **Sequence Quadrant**

The sequence quadrant contains numbers that indicate the sequence in which corrective actions are to be taken. The sequence of actions for a particular set of conditions appears in the same vertical column as the situations column that matches the conditions. For example, the sample figure shows the sequence 1, 2, 3, 4, and 5 directly under the situations 2 column. These sequence numbers indicate that the first action to be taken is to, Check that toggle switch S1 (rear panel) is up; the next action to be taken is to, Check that removable power cord is connected securely to card reader; and the last action to be taken (5) is to, Refer to CB10X manual. The sequence of actions normally selects either the easiest procedure or most likely cause first and progresses to the most difficult procedure or least likely cause.

In the sample figure, also notice that some of the sequence columns contain only an X. The X indicates that there is only one possible action to take. As an example, the X in the situation 11, or Other column of the sample table, indicates that the

only action available is to call for assistance. The Other term in the situation 11 column indicates that none of the previous situations match the answer written down for the conditions questions.

### **Actions Quadrant**

The actions quadrant lists specific actions that the CE is to take in the process of troubleshooting an equipment. The actions listed are taken in the order listed in the sequence quadrant.

Notice that either the conditions or the actions quadrants can direct the CE to perform specific procedures. A condition, for example, could direct the CE to run a particular checkout procedure before asking a question about the results (yes or no answer) of the checkout procedure. An action, on the other hand, could direct a CE to perform a checkout procedure, perform an adjustment or remove-and-replace procedure, exit this table and go to another table, or to call for assistance in troubleshooting the malfunction.

To facilitate locating the corrective action procedures that are part of this section, an index at the end of this section lists all of the corrective action procedures and their respective page numbers.

### **GENERAL INSTRUCTIONS**

If you are unfamiliar with this terminal or with the use of the DDLT as a troubleshooting tool, go back and read the material under the preceding Diagnostic and Corrective Maintenance heading carefully. Then, start at the beginning of the tables and work through to the end of the section, ensuring that all malfunctions detected are corrected. If a table pertains to equipments or functions not present in a particular terminal configuration, skip to the following table or tables and continue in this manner until all applicable tables are completed.

### **DDLTs AND PROCEDURES**

Figure 6-2 shows the arrangement of the diagnostic and corrective maintenance information throughout the remainder of this section.


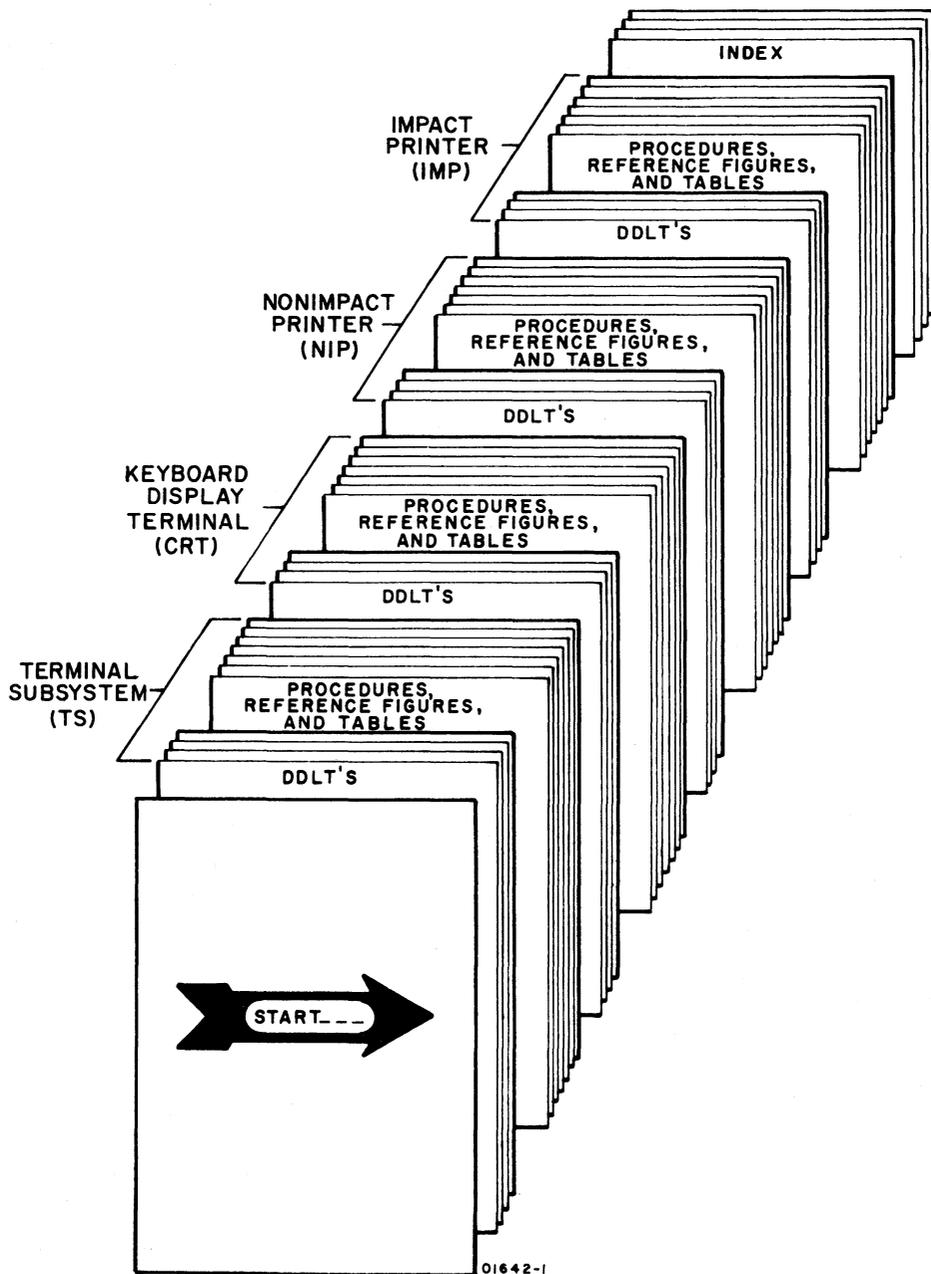


Figure 6-2. Arrangement of Diagnostic and Corrective Maintenance Information



## NOTE

If you are unfamiliar with diagnostic decision logic tables, read the explanation of their use described earlier in this section. Then, start at the beginning of the next page and work your way through to the end of this section until you correct any fault.

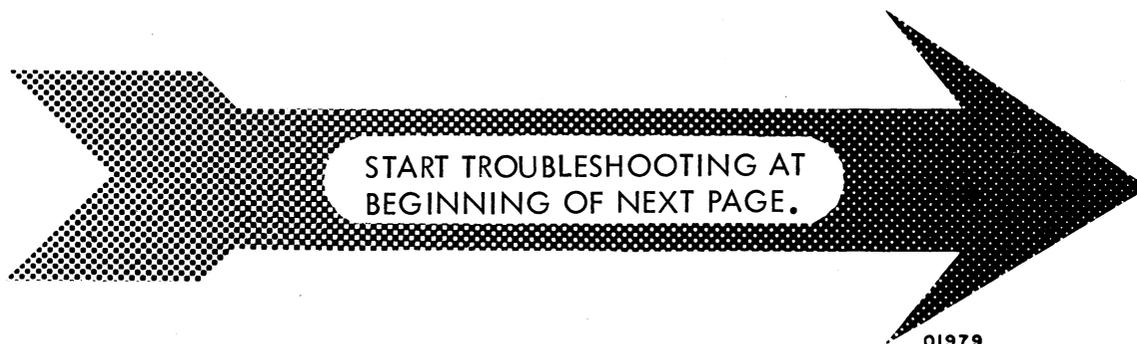

## NOTE

Because the diagnostic decision logic tables (DDLTs) require much time, money, and effort — you, the user, determine whether they will continue in future manuals as a diagnostic aid.

Please use the comment sheet at the back of this manual to let us know the following: 1) Did you actually use these tables? 2) Do you think they are valuable and why or why not? 3) Do you feel this is the best approach to a "cookbook" troubleshooting manual that you have seen, considering that the DDLTs tie everything together; that is, diagnostics, procedures, figures, and tables? 4) To you, what is their most serious shortcoming? 5) How would you improve the DDLTs? Remember, the comment sheet is your direct link with the writer.



TABLE TS1. DDLT FOR TERMINAL SUBSYSTEM

OPERATIONAL CHECKS FOR TERMINAL SUBSYSTEM										
ASSUME										
Subsystem equipments installed per instructions in appendix of associated Operators Guide/Reference Manual (see preface). Proper subsystem cabling verified per figure TS1. If printer is part of subsystem, it has paper loaded properly (procedure NIP1 or IMP3), and if an impact printer, it has ribbon and format tape installed properly (procedures IMP4 and IMP5).										
CONDITIONS	SITUATIONS									
	1	2	3	4	5	6	7	8	9	10
Apply subsystem power per procedure TS1. Do all equipments appear to have power?	Y	Y	Y	Y	Y	Y	Y	N	N	O T H E R
Does any equipment have power?	-	-	-	-	-	-	-	Y	N	
Run through offline portion of subsystem checkout procedure (procedure TS6). Does procedure complete without errors?	Y	Y	Y	Y	Y	N	N	-	-	
Run through online portion of subsystem checkout procedure (procedure TS6). Does procedure complete without errors?	Y	N	N	N	N	-	-	-	-	
If errors are occurring, are they restricted to one equipment?	-	-	-	N	Y	Y	N	-	-	
Original problem does not recur. Could error have been random error external to terminal subsystem?	Y	-	-	-	-	-	-	-	-	
Contact communication facility customer service personnel. Do they acknowledge communication line problems?	N	Y	-	N	N	-	-	-	-	
Contact system CPU operating and/or technical support personnel. Do they acknowledge system problems?	N	-	Y	N	N	-	-	-	-	
ACTIONS	SEQUENCE									
Check PMT tables and do any required PMPTs. Have terminal operator operate terminal and observe to ensure no further errors occur.	X	-	-	-	-	-	-	-	-	-
Inform terminal operator and site supervisor of communication line problems and of approximate time until problems are cleared.	-	X	-	-	-	-	-	-	-	-
Inform terminal operator and site supervisor of system problems and of approximate time until problems are cleared.	-	-	X	-	-	-	-	-	-	-
Turn off subsystem power per procedure TS2 and remove ac line cords for equipments from outlets. Check subsystem cabling per procedure TS4.	-	-	-	1	3	3	1	-	-	-
Go to DDLTs for CRT and begin troubleshooting.	-	-	-	2	2	2	2	-	2	-
Repeat procedure TS6. If offline still OK and online fails, notify communication line supplier and/or CPU system personnel of suspected communication line or system fault. Try to get verification before leaving site; if unable to verify, call for assistance.	-	-	-	3	-	-	-	-	-	-
Go to DDLTs for equipment indicating fault and begin troubleshooting.	-	-	-	-	1	1	-	X	-	-
Check site power. If not OK, notify site electrician or power company personnel as appropriate.	-	-	-	-	-	-	-	-	1	-
Call for assistance.	-	-	-	4	4	4	3	-	-	X
Note: After completing any repairs, verify that subsystem is operational by rerunning procedure TS6, and check PMT tables, found earlier in this section, for any required preventive maintenance and do PMTPs as required.										

## **Procedure TS1 – Turning On Subsystem Power**

Before turning on subsystem power, verify that required subsystem cables are connected. These include the following:

- Keyboard-to-display module cable
- Keyboard display-to-communication system cable (data set or current loop)
- Keyboard display-to-peripheral printer cable (if printer is included)

Also ensure that all of the units have input power cables plugged into an appropriate site outlet; this includes modem if data set communication system is used.

Turn on subsystem power as follows:

At the site modem cabinet:

- 1) If modem is used and has a power on/off switch, turn modem power on. Modems without power switches go on when plugged in.

At the printer (as per procedure NIP1 or IMP1):

- 2) If printer is present, check that ac power cord is connected to site power outlet.
- 3) Press power-on switch to turn printer power on.
- 4) If impact printer, wait 5 seconds after turning power on and then press START/STOP switch/indicator to light indicator.

At the keyboard display (as per procedure CRT1):

- 5) Check that keyboard display ac power cord is connected to site power outlet.
- 6) Move CB1 on rear panel of terminal to on position (up). Within about 30 seconds a blinking cursor should appear on the display screen in upper left or lower left corner; if not, turn up INTENSITY control on display front panel until cursor appears.

The preceding steps should turn power on at a properly operating subsystem. If trouble occurs in applying power to a terminal equipment, refer to the DDLT for that equipment and begin troubleshooting.

## **Procedure TS2 – Turning Off Subsystem Power**

To turn off subsystem power, do the following:

At the printer (as per procedure NIP2 or IMP2):

- 1) If impact type printer, bring printer offline by pressing START/STOP switch/indicator to extinguish indicator.
- 2) Move printer on/off switch to off position.

At the keyboard display (as per procedure CRT2):

- 3) Move CB1 on terminal rear panel to off position (down).

The preceding steps turn power off for each equipment that may be present in a terminal installation. If a modem is used for the communication line interface, it also must be switched off or its power cord removed from the ac outlet. As noted in the preceding steps, the individual equipment procedures also give a power-on and a power-off procedure.

## **Procedure TS3 – Removing/Replacing Subsystem Cables**

### **NOTE**

If keyboard cable is to be removed and checked, reference procedure CRT4 in next subsection for keyboard cable removal.

To remove any other interconnecting cable within the subsystem at either or both ends, proceed as follows:

- 1) Turn power off to subsystem cabinets interconnected by cable to be removed (refer to appropriate power-off procedure).
- 2) Loosen both retaining screws on each connector to be removed.
- 3) Pull cable connector straight back and off of its mating connector on equipment.

Replace any interconnecting cable within the subsystem at either or both ends as follows:

- 4) Verify cable/connector is correct (refer to figure TS1).
- 5) Slide cable connector straight onto its mating connector on equipment.
- 6) Tighten both retaining screws on each connector replaced.
- 7) Reapply power to appropriate equipments if required at this time (see appropriate power-on procedures).

## **Procedure TS4 – Checking Subsystem Cables**

To check any interconnecting cables within the subsystem proceed as follows:

- 1) Refer to procedure TS3 and do steps 1 through 3 to remove cables to be inspected.
- 2) Carefully inspect connector pins on both ends for possible damage. If damage is found on connector attached to cable, discard cable and replace with a new one. If damage is found on equipment connector, remove and replace either connector or panel mounting connector (depends on parts spared for field replacement) per appropriate equipment procedure. In either case, after correcting problem, replace cable per procedure TS3.
- 3) Use information from appropriate Keyboard Interface or Interface Connector Pin Assignments tables (tables TS2, TS3, and TS4), or from current-loop interface figures (figures TS2 and TS3) to do a pin-to-pin continuity check using an ohmmeter or continuity-check test light.
- 4) If fault (short or open circuit) is found, repair if possible and replace cable per procedure TS3. If fault is not repairable, replace cable per procedure TS3.

## **Procedure TS5 – Removing/Replacing Subsystem Equipments**

To remove any equipment within the subsystem, proceed as follows:

- 1) Turn off subsystem power per procedure TS2.
- 2) Remove ac power cord from site outlet for equipment to be removed.
- 3) Remove input/output cables from equipment to be removed (procedure TS3).
- 4) Remove equipment from subsystem.

To reinstall any equipment in the subsystem, do the following:

- 5) Refer to installation procedures in appendix of associated Operators Guide/Reference Manual (see preface): uncrate and install equipment per instructions.
- 6) After replacing any equipment, verify equipment and subsystem operation by performing procedure TS6.

## Procedure TS6 – Terminal Subsystem Checkout

The following procedure provides both offline and online checks for the terminal subsystem.

### NOTE

If, in doing any of the following checkout steps, an error is found, use pencil and paper to note the error condition and the conditions under which it occurred (keyboard control or rear panel switch settings, etc.). Then try to complete the entire checkout procedure if possible. This will facilitate using the equipment DDLTs to troubleshoot errors, and will permit you to describe the error and test conditions accurately if the error cannot be rectified via the DDLTs and it becomes necessary to call for assistance.

To check offline operation of the display terminal, proceed as follows:

- 1) Make a quick visual inspection of the input/output cable connections between the terminal equipments, and check to ensure that the ac power cords for each terminal equipment is plugged into an appropriate outlet.
- 2) Move TEST/NORMAL switch on rear panel of display terminal to TEST position.
- 3) Move keyboard display ON LINE/LOCAL and FULL DUP/HALF DUP switches to LOCAL and HALF DUP positions.
- 4) Press PAGE key on the keyboard down to select page mode operation.
- 5) Ensure that 96/64 key on keyboard is up to select 96-character code set.

The on condition of a voltage level terminal can easily be noted in the following step if the CO indicator lights as CB1 is turned on. If the indicator fails to come on, however, it does not necessarily indicate that the terminal does not have power because either the indicator light may be burned out or the particular modem used on the terminal may require an internal switch setting (CURRENT LOOP switch is enabled) that blocks the action of the CO indicator (holds it off).

- 6) Move circuit breaker CB1 on display terminal rear panel to up position (on).
- 7) Wait about 30 seconds after performing preceding step and then adjust INTENSITY control on display front panel until a raster appears on the display screen (see figure TS4). Then turn INTENSITY control counter-clockwise until only the cursor (blinking dash) is clearly visible in upper left corner of screen.

The following two steps are video quality checks.

- 8) Fill display screen with uppercase H pattern in the following manner:
  - a) Press SHIFT LOCK key on keyboard.
  - b) Press and hold REPEAT and H keys. Display begins automatically filling with H characters. Near the end of each display line (73rd character position), a beeper signal sounds to indicate the end of a line is approaching. Display screen continues to fill with Hs until REPEAT key is released. A full screen (24 display lines) is indicated as the cursor moves from the lower right corner of the screen back to the upper left corner; Hs will continue to be written over the previous Hs. When this occurs, release the REPEAT key and then the H character key.
  - c) Press SHIFT LOCK key on keyboard to release shift lock action.
- 9) Check the H display pattern entered in the preceding step to ensure that:
  - a) Nominal size is about 7.8 inches (198 mm) wide by 5 inches (127 mm) high.
  - b) Characters are of about uniform height and width throughout the pattern.
  - c) Characters display clearly and crisply throughout the pattern.
  - d) Side, top, and bottom edges are neither bowed out (barreled) nor curved inward (pincushioned).
- 10) Clear display screen by pressing CLEAR key on keyboard.
- 11) Move FULL DUP/HALF DUP switch on keyboard to FULL DUP position and then key in a few characters on the keyboard. Each character appears on the screen as it is keyed in.
- 12) Move ON LINE/LOCAL switch on keyboard to ON LINE position and then key in a few characters on the keyboard. Each character appears on the screen as it is keyed in.
- 13) Move FULL DUP/HALF DUP switch on keyboard to HALF DUP position and then key in a few characters on the keyboard. Two characters will display as each key is pressed.
- 14) Return FULL DUP/HALF DUP switch on keyboard to FULL DUP position.
- 15) Press CONTROL and then G key; audible alarm will sound for about 200 ms.

- 16) Manually check X/Y positioning function of the keyboard display in the following manner:
  - a) Remove display cabinet hood (refer to procedure CRT5 later in this section if necessary).
  - b) Ensure that internal X/Y POSITION switch is in enable position (refer to figure CRT1).
  - c) Press the following keys one at a time in sequence: ESC, 1, space bar, and 7. Cursor moves to lower left corner of screen.
  - d) Press the following keys one at a time in sequence: ESC, 1, o, and 7. Cursor moves to lower right corner of screen.
  - e) Press the following keys one at a time in sequence: ESC, 1, space bar, and space bar. Cursor moves to upper left corner of screen.
  - f) Ensure X/Y POSITION switch is in normal operating position (enabled or disabled) for this terminal installation, but do not replace cabinet hood until checkout procedures are complete.
- 17) Press skip key (→) a few times; each time key is pressed, cursor moves ahead a character position without affecting displayed data.
- 18) Press backspace key (←) a few times; each time key is pressed, cursor moves back a character position without affecting displayed data.
- 19) Press CONTROL key and then U key on keyboard; cursor will move ahead a character position without affecting displayed data.
- 20) Press LINE FEED key on keyboard; cursor will move down a line from present position without affecting displayed data.
- 21) Press CARRIAGE RETURN key on keyboard; cursor will move to left margin of display screen and may or may not line feed, depending on setting of internal AUTO LINE FEED switch.
- 22) Press cursor-up key (↑) on keyboard; cursor will move up a line from present position without affecting displayed data.
- 23) Press CONTROL and Z keys on keyboard; cursor will move up a line from present position without affecting displayed data.
- 24) Press RESET key on keyboard; cursor will reset to upper left corner of display screen without affecting displayed data.

- 25) Press skip key (→) a few times to move cursor off of left margin and into a field of displayed characters, and then press the CONTROL and V keys. The display line containing the cursor will clear from the character position immediately above the cursor to the end of the line; the cursor does not move.
- 26) Press the CONTROL and W keys and then key in a few characters on the keyboard; characters keyed in will blink on and off approximately twice a second.
- 27) Press the CONTROL and N keys and then key in a few characters on the keyboard; characters keyed in following the blink field of the preceding step will display at reduced intensity.
- 28) Press the CONTROL and O keys and then key in a few characters on the keyboard; characters keyed in following this entry will display at normal character intensity and will not blink. Display line should now consist of: 1) normal brightness characters, 2) a field of blinking characters, 3) a field of reduced intensity characters, and 4) a field of normal brightness characters.
- 29) Press CONTROL and X keys; this key combination is the same as pressing the CLEAR key. Display screen will clear of all displayed data and cursor will reset to upper left corner of display screen.
- 30) Go to procedure CRT3, Checking the Keyboard, and perform the checks listed there.
- 31) By using appropriate numeric keys and CARRIAGE RETURN key (also LINE FEED if display does not auto line feed on carriage return), enter numbers 01 in first two character positions of first display line, numbers 02 in first two character positions of second display line, and so on until numbers 24 are entered in first two character positions of 24th display line.
- 32) Press PAGE key on keyboard and release it to up position so that scroll mode operation of display is now selected.
- 33) Press 96/64 key on keyboard to select 64-character ASCII subset.
- 34) Press and hold REPEAT key and any alpha character key on the keyboard without actuating either SHIFT or SHIFT LOCK keys. Twenty-fourth display line will fill with uppercase version of character key pressed. As 24th line fills, it and each line above it scrolls up one line position (line 01 scrolls off screen at top), cursor resets to left margin of the now clear 24th line, and character being entered begins filling 24th line again. This manner of scrolling continues as long as REPEAT and character keys are held down. To stop process, release REPEAT key and then character key.

This completes the offline checks for the display terminal. The following are offline checks for the peripheral printers that may be part of the terminal subsystem. If these checks are to be run now, continue; if not, return keyboard display control switches (on keyboard) and the rear panel TEST/NORMAL switch to their normal operating positions.

- 35) Press PAGE key on keyboard down to reselect page mode operation of display.
- 36) Press 96/64 key on keyboard to release it (up) and select 96-character code set.

#### NOTE

The CLEAR key on the display keyboard should be used to clear the display logic whenever the PAGE switch is moved from its up (scroll mode) to its down (page mode) position. Failure to do so may result in page mode operation with a random home position for the cursor (position other than upper left corner of screen).

- 37) Press CLEAR key on keyboard to clear display and reset cursor to upper left corner of screen.
- 38) Move ON LINE/LOCAL switch on keyboard display to LOCAL position.

The following steps (39 through 44) relate to terminals configured with nonimpact printer peripherals, while steps 45 through the end of the offline checks are for terminals with impact printer peripherals. The nonimpact printer formats full print lines in 80-character lines and then performs an automatic line feed and carriage return. To feed a line and return the carriage before the end of a full display/print line, press the LINE FEED key and then the CARRIAGE RETURN key on the keyboard display.

- 39) Push ON switch on control panel of nonimpact printer down to turn on printer power.

During the following checks and during normal operation of the terminal, it is essential that the keyboard display and printer baud rates match one another to transfer data properly. The nonimpact printer has a maximum baud rate of 300. Verify keyboard display baud rate settings by referring to figure CRT1. The middle position of the HIGH RATE/300/LOW RATE switch on the keyboard display is factory preset to a data transfer rate of 300 baud.

- 40) Key to a few uppercase characters using SHIFT or SHIFT LOCK key, and then release SHIFT or SHIFT LOCK key and key in a few lowercase characters. As each character is keyed, the character keyed displays on the CRT screen and prints on the printer.
- 41) Press LINE FEED key and the CARRIAGE RETURN key. Both display and printer perform a line feed and then a carriage return operation.
- 42) Repeat steps 40 and 41 a few times to ensure printer prints, spaces, line feeds and carriage returns properly.
- 43) Press the backspace key (←) on the keyboard display to ensure printer backspaces properly.
- 44) Key in a few characters on the keyboard display, and then press printer LF (line feed) and CR (carriage return) keys to ensure they operate properly. If printer fails to perform correctly in any of the preceding steps or if it does not print properly, turn to the Nonimpact Printer portion (NIP) of this section and troubleshoot the printer. This completes offline testing of a terminal using a nonimpact printer peripheral; go to the online checkout procedures to complete checkout of the terminal subsystem.

Steps 45 through 57 following are only for terminals configured with an impact printer peripheral. The impact printer normally formats print lines to correspond with its 132-character print buffer. That is, it prints a line only after its 132-character buffer is filled or after it receives an acceptable printer control code (carriage return, line feed, form feed, or vertical tabulation). In the case of either a full print buffer or a carriage return control code, the printer prints out the contents of the print buffer and does a carriage return. In the case of the other control codes, the printer prints out the contents of the print buffer, does a carriage return, and then does the action indicated by the particular control code used (line feed, vertical tabulation, or form feed). The best way to match the printer format to the display format therefore is to terminate a display line with two control key inputs on the keyboard — LINE FEED and CARRIAGE RETURN, form feed and CARRIAGE RETURN, or vertical tabulation and CARRIAGE RETURN for example.

To check operation of the impact printer, perform the following:

- 45) Verify that ac power cord is plugged into appropriate power outlet, and that input/output cable between printer and display terminal is securely connected.

During the following checks and during normal operation of the terminal, it is essential that the keyboard display and printer baud rates match one another to transfer data properly. Refer to figures CRT1 and IMP7 and procedure IMP8 later in this section to ensure proper settings of baud rate switches in both display and printer. While checking baud rate switch settings, also ensure that settings of printer and display parity bit selection match.

- 46) Verify that paper, ribbon and format tape are all properly installed in printer (procedures IMP3, IMP4 and IMP5, respectively).
- 47) Move power ON/OFF rocker switch on front panel to ON position.

#### NOTE

If cabinet or front access panel is removed, printer will only operate with the interlock switch pulled up (interlock switch is white button just behind control panel). Also note that FORM FEED and Test Print switches only function when printer is offline, that is when START/STOP indicator on control panel is extinguished.

- 48) Activate Test Print switch, which may be located either on control panel or on circuit card 1A02 inside printer cabinet. If switch is not on control panel, identify its location via figure IMP6 later in this section. When switch is activated, printer will print alternating Bs and blanks across a full horizontal print line of 132 characters, do a line feed, and print another line of Bs and blanks. This process continues until the Test Print switch is pressed again. Allow several lines to print and then stop test print process (see figure TS5).

#### CAUTION

Do not permit the printer to print in the preceding manner for more than a few minutes because excessive printing of this type may overheat and damage the print solenoids.

- 49) Use the printed pattern from the preceding step to check the vertical and horizontal alignment of the characters and print lines and columns. If any alignment problems are encountered, go to sheet 3 of table IMP1, the Diagnostic Decision Logic Table (DDL) for the Impact Printer and begin troubleshooting the printer.

#### CAUTION

If forms runaway occurs when FORM FEED switch is tested, stop runaway by moving ON/OFF power switch to OFF position; go to impact printer troubleshooting procedures (IMP1, sheet 1) to diagnose cause of runaway.

- 50) Press FORM FEED switch. Forms should advance to top-of-forms position; if not, see procedure IMP3.
- 51) Press START/STOP switch on printer control panel; indicator in switch lights to indicate printer is ready to print.
- 52) Key in a few uppercase characters on the keyboard display, and then key in a few lowercase characters.
- 53) Press LINE FEED and then CARRIAGE RETURN keys on keyboard display. As keys are pressed, printer will print out characters entered on keyboard in preceding step, and when printing is complete, the printer will perform the line feed and carriage return operations.
- 54) Repeat steps 52 and 53 a few times to ensure printer prints, spaces, line feeds, and carriage returns properly.
- 55) Press CONTROL and K keys on the keyboard display; printer will vertical tab if format tape in printer has tab stops or will do a form feed.
- 56) Press CONTROL and L keys on the keyboard display; printer will do a form feed operation and stop at top of next form. If printer fails to perform correctly in any of the preceding steps or if it does not print properly, turn to the impact printer portion (IMP) of this section and troubleshoot the printer. This completes offline testing of a terminal using an impact printer peripheral; go to Online Checkout procedures, following, to complete checkout of the terminal subsystem.
- 57) If troubleshooting of the impact printer is not required, close rear access panel and front access panels, if removed or opened during checkout procedures; ensure that interlock switch is down before replacing front access panel.


This completes offline checkout procedures for the impact printer and for the terminal subsystem. If terminal is being returned to operation or if online checks are to be performed at this time, leave printer controls as they are. If terminal is being shut down or impact printer will not be used for a time, press the START/STOP switch on the printer control panel to extinguish the indicator in the switch. If returning to online operation at this time, be sure to return all of the keyboard display controls, including rear panel TEST/NORMAL switch, to the normal operating positions.

To check out the online operation of the terminal subsystem, perform the following steps.

- 58) Ensure power to all terminal equipments is off: circuit breaker CBI at rear of display terminal is down and printer power switch is off.
- 59) Make a quick visual inspection of the input/output cable connections between the terminal equipments, and check to ensure that the ac power cords for each terminal equipment is plugged into an appropriate outlet.

Prior to doing step 60, remove modem power.

- 60) Connect display terminal to the communication facility (modem or current loop). Turn on power for the communication facility (switch on loop battery for current loop terminals or switch or plug into ac outlet on modem).
- 61) Move FULL DUP/HALF DUP switch on keyboard display to normal operating position for this terminal installation.
- 62) Move TEST/NORMAL switch on keyboard display to NORMAL.
- 63) Ensure ON LINE/LOCAL switch on keyboard display is in ON LINE, and baud rate and parity select switches on keyboard are set to positions appropriate for this system installation.
- 64) Ensure PAGE switch on keyboard display is in desired operating position: switch down selects page mode and switch up selects scroll mode.
- 65) Ensure 96/64 switch on keyboard display is in desired position. Down selects 64-character code set; up selects 96-character code set.
- 66) Move circuit breaker CB1 on rear panel of keyboard display up to turn on terminal power.
- 67) Turn on printer power: press nonimpact printer ON switch down, or move impact printer ON/OFF rocker switch to ON position and press START/STOP switch to light indicator in switch.
- 68) Wait 30 seconds after performing two preceding steps, adjust INTENSITY knob for proper cursor brightness, and press CLEAR key. If operating in scroll mode, cursor is located at left margin of line 24; if page mode, cursor is located in upper left corner of display screen.
- 69) On the keyboard of the display terminal, key in a system log-in or sign-in message and verify that system responds correctly. This completes online checkout of the terminal subsystem.
- 70) Key in the system log-out message on the keyboard, and turn terminal equipment off if they are not to be used shortly. If terminal fails to perform any of the preceding steps correctly, return to the beginning of the DDLTs (table TS1) and begin troubleshooting procedures, using the notes taken during this procedure as a guide.
- 71) Replace display cabinet hood and any printer panels that may have been removed during checkout procedures.

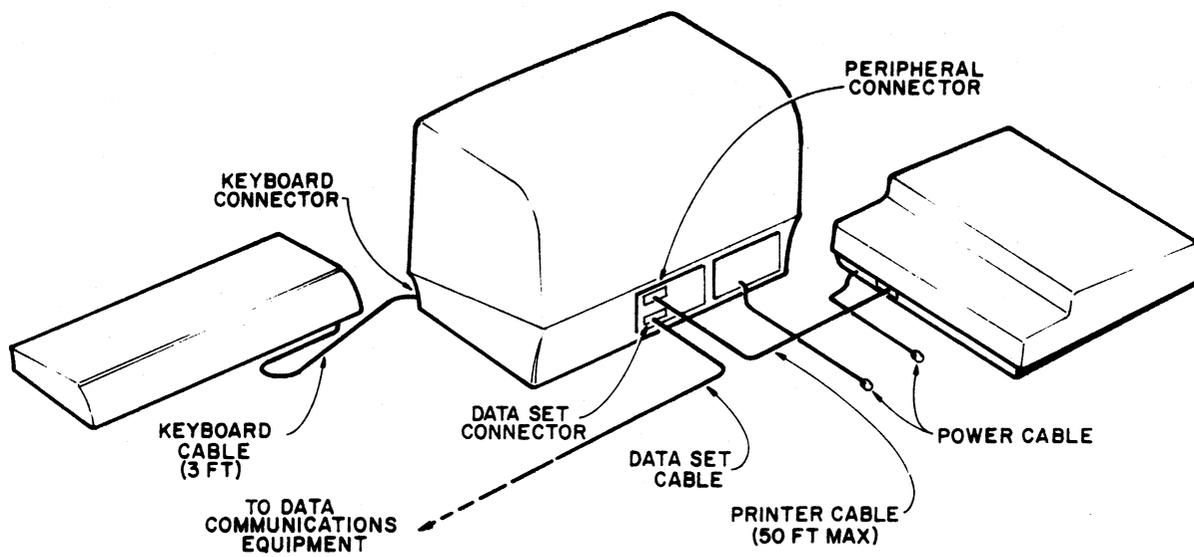

01959

NOTE: DATA SET AND PERIPHERAL CABLES USE ITT CANNON DBC-25P CONNECTORS ON EACH END. STANDARD TERMINAL CABLE PART NUMBERS (CDC) ARE: 61406100 (10.5 FT), 61406101 (20.5 FT), 61406102 (30 FT), 61406103 (40 FT), AND 61406104 (50 FT). FTZ-SHIELDED TERMINAL CABLE PART NUMBERS (CDC) ARE: 61406110 (10.5 FT), 61406111 (20.5 FT), 61406112 (30 FT), 61406113 (40 FT), AND 61406114 (50 FT).

Figure TS1. Terminal Cabling

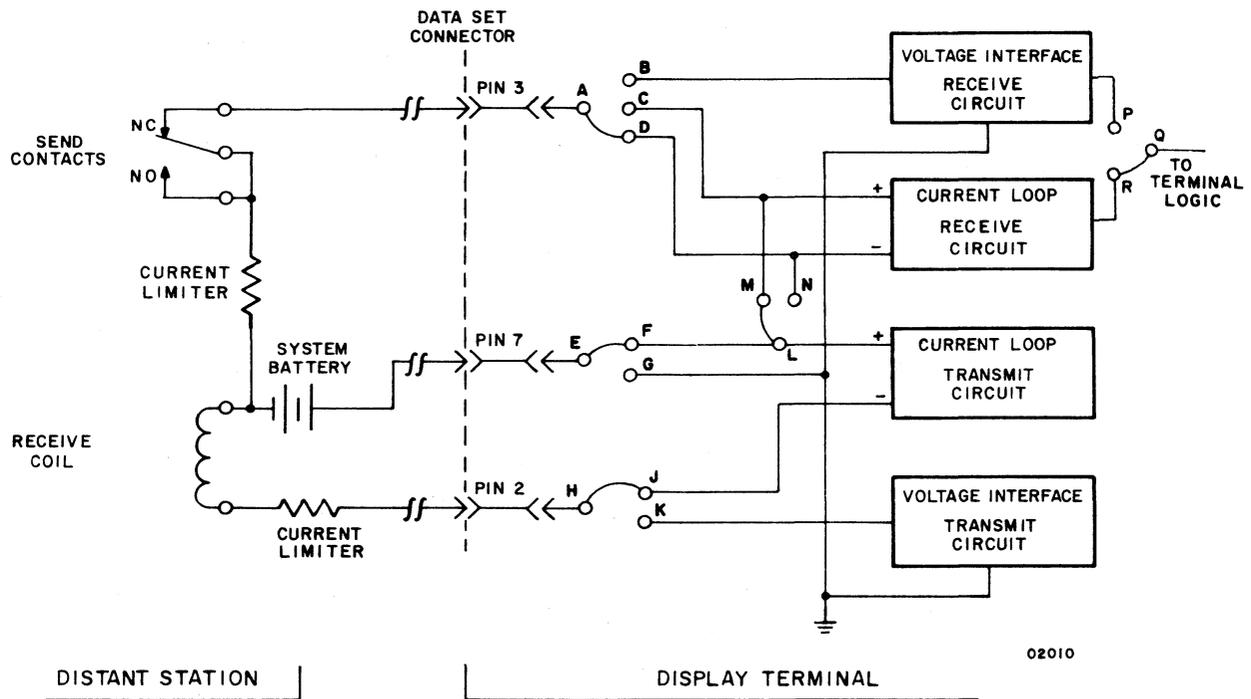


Figure TS2. Data Set Connector Pin Assignments for Unipolar, Full-Duplex, Current Loop Communication Channel\*


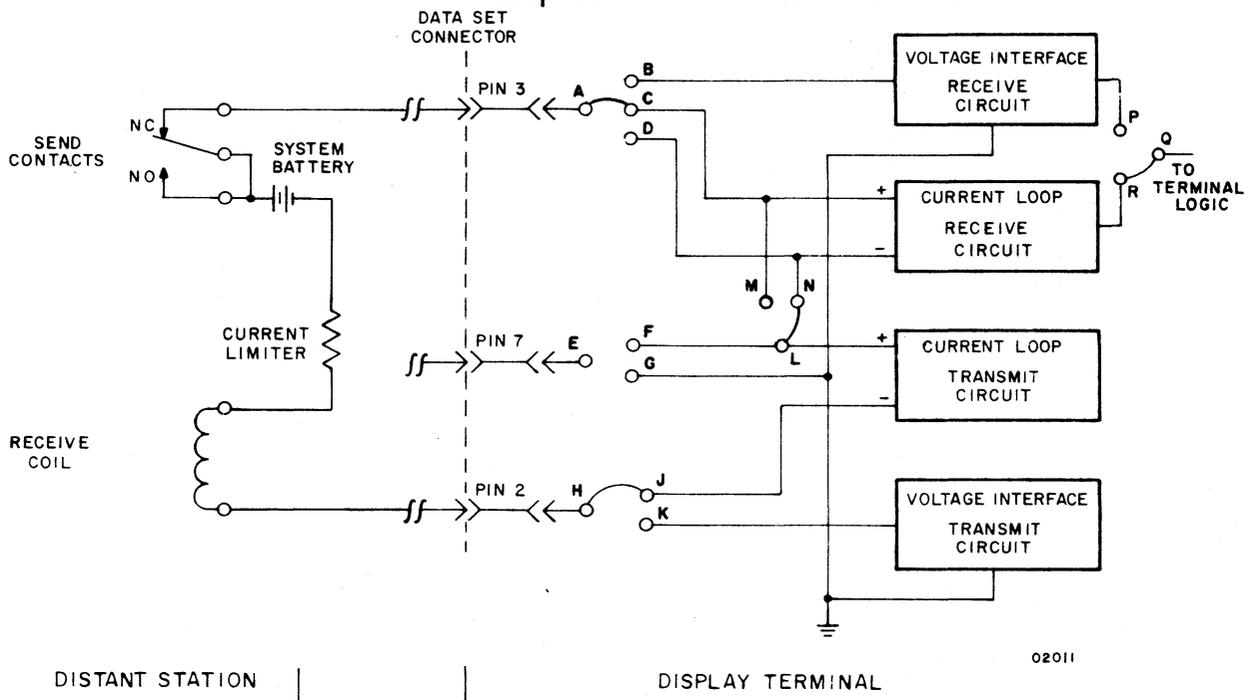


Figure TS3. Data Set Connector Pin Assignments for Unipolar, Half-Duplex, Current Loop Communication Channel\*

\* Current loop circuits are only available in terminals with that feature installed. System battery is 24 V dc and current limiters are selected for 20-mA flow.

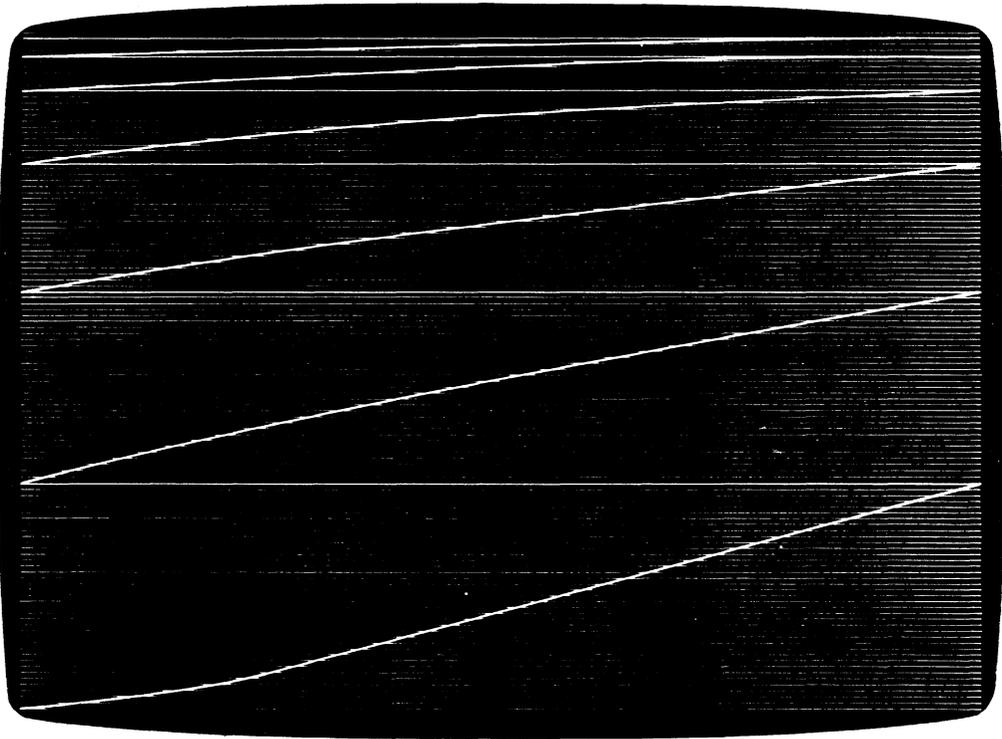

02057

Figure TS4. Raster Display



**TABLE TS2. VOLTAGE LEVEL CHANNEL (RS-232-C/CCITT V.24)  
INTERFACE CONNECTOR PIN ASSIGNMENTS**

PIN NUMBER	CCITT	EIA	SIGNAL NAME	ORIGIN
1	101	AA	Protective Ground	Modem/Terminal
2	103	BA	Transmitted Data	Terminal
3	104	BB	Received Data	Modem
4	105	CA	Request to Send (RTS)	Terminal
5	106	CB	Clear to Send (CTS)	Modem
6	107	CC	Data Set Ready (DSR)	Modem
7	102	AB	Signal Ground	Modem/Terminal
8	109	CF	Received Line Signal Detector (CO)	Modem
9	—	—	Not Used	—
10	—	—	Not Used	—
11	—	—	Secondary Request to Send (SRTS)*	Terminal
12	122	SCF	Secondary Received Line Signal Detector (SCO)	Not Used
13	121	SCB	Secondary Clear to Send (SCTS)	Not Used
14	118	SBA	Secondary Transmitted Data	Not Used
15	114	DB	Transmission Signal Element Timing	Not Used
16	119	SBB	Secondary Received Data	Not Used
17	115	DD	Receiver Signal Element Timing	Not Used
18	—	—	Not Used	—
19	120	SCA	Secondary Request to Send (SRTS)	Terminal
20	108.2	CD	Data Terminal Ready (DTR)	Terminal
21	110	CG	Signal Quality Detector	Not Used
22	125	CE	Ring Indicator	Not Used
23	111	CH	Data Signal Rate Selector	Terminal
24	113	DA	Transmit Signal Element Timing	Not Used
25	—	—	Not Used	—

\* Data Set Connector has pin 11 jumpered to pin 19.

**TABLE TS3. PERIPHERAL CONNECTOR PIN ASSIGNMENTS**

PIN NUMBER	CCITT	EIA	SIGNAL NAME	ORIGIN
1	101	AA	Protective Ground	Printer/Terminal
2	—	—	Not Used	—
3	104	BB	Received Data	Terminal
4	—	—	Not Used	—
5	—	—	Not Used	—
6	107	CC	Data Set Ready (DSR)	Terminal
7	102	AB	Signal Ground	Printer/Terminal
8	109	CF	Received Line Signal Detector (CO)	Terminal
9	—	—	Not Used	—
↓	↓	↓	↓	↓
25	—	—	Not Used	—

TABLE TS4. KEYBOARD INTERFACE SIGNAL LINES

PIN	SIGNAL	PIN	SIGNAL
1	CO	14	High Rate
2	Page	15	Low Rate
3	Data 2 <sup>6</sup>	16	Odd Parity
4	Data 2 <sup>5</sup>	17	Even Parity
5	Data 2 <sup>4</sup>	18	Signal Ground
6	Data 2 <sup>3</sup>	19	Open
7	Data 2 <sup>2</sup>	20	Frame Ground
8	Data 2 <sup>1</sup>	21	Open
9	Data 2 <sup>0</sup>	22	Open
10	Data Ready	23	+5 V dc
11	Online/Local	24	Signal Ground
12	Full/Half Duplex	25	-12 V dc
13	Break	Shell	Frame Ground



TABLE CRT1. DDLT FOR KEYBOARD DISPLAY

POWER, RASTER, CURSOR, AUDIBLE ALARM, KEYBOARD CONTROL LOGIC, AND VIDEO QUALITY CHECKS										
ASSUME										
Display terminal is installed per instructions in appendix of Operators Guide/Reference Manual, and is connected to an appropriate ac power source.										
CONDITIONS	SITUATIONS									
	1	2	3	4	5	6	7	8	9	10
Does cursor appear on display screen when power is turned on per procedure TS1 or procedure CRT1?	N	N	N	Y	Y	Y	Y	Y	-	
Turn INTENSITY control on front panel up (clockwise). Does raster appear?	N	N	Y	N	Y	Y	Y	Y	-	O
Does circuit breaker CB1 remain set as power is turned on?	N	Y	-	-	-	-	-	-	-	T
Can keyboard display portion of procedure TS6 be completed successfully?	-	-	-	-	N	Y	Y	Y	-	H
Does video quality appear OK; does H pattern measure approximately 5.3 in (134 mm) high by 8.6 in (218 mm) wide; is display pattern straight on screen; and are all characters clear, crisp, and of uniform height and width?	-	-	-	-	-	N	Y	Y	-	E
Does audible alarm sound during appropriate steps of procedure TS6?	-	-	-	-	-	-	N	Y	-	R
ACTIONS	SEQUENCE									
Go to table CRT2.	X	-	-	-	-	-	-	-	-	-
Check/replace audible alarm per procedure CRT19.	-	-	-	-	-	-	1	-	-	-
Check INTENSITY control per procedure CRT11.	-	5	-	4	-	-	-	-	-	-
Turn front panel INTENSITY knob fully clockwise and then back it off 1/4 turn. Remove cabinet hood per procedure CRT5. Locate INTENSITY RANGE control (figure CRT14) and vary it to see if raster or cursor appears. If cursor appears, adjust INTENSITY RANGE control until cursor is clearly visible and raster just disappears.	-	1	-	1	-	-	-	-	-	-
Go to table CRT3.	-	4	-	3	3	-	-	-	-	-
Replace control logic PC board per procedure CRT20 if not replace in table CRT3.	-	2	X	-	2	-	2	-	-	-
Replace monitor PC board per procedure CRT12 if not replaced in table CRT3.	-	3	-	2	-	-	-	-	-	-
Check crt cap per procedure CRT15.	-	9	-	-	-	-	-	-	-	-
Replace high-voltage transformer per procedure CRT13 if not replaced in table CRT3.	-	6	-	-	-	-	-	-	-	-
Replace monitor crt per procedure CRT16.	-	8	-	-	-	-	-	-	-	-
Replace yoke assembly per procedure CRT17.	-	7	-	-	-	-	-	-	-	-
Adjust video per procedure CRT10.	-	-	-	-	-	1	-	-	-	-
Replace keyboard per procedure CRT4.	-	-	-	-	1	-	-	-	-	-
Return to table TS1.	-	-	-	-	-	-	-	X	-	-
If vertical linearity (uniform character height) cannot be attained via adjustment, replace vertical choke per procedure CRT14; repeat procedure CRT10.	-	-	-	-	-	2	-	-	-	-
Call for assistance.	-	10	-	5	4	-	-	-	-	X
Notes: 1) Entry to this table is via table TS1. 2) Exit from this table is to: further troubleshooting via subsequent crt tables; go back to table TS1; or call for assistance. 3) All subsequent crt tables exit either: to this table, or to call for assistance.										







### **Procedure CRT1 – Turning On Display Terminal Power**

To turn on power to the display terminal do the following:

- 1) Ensure that circuit breaker CB1 on terminal rear panel is off (down).
- 2) Ensure that terminal ac power cord is plugged into appropriate outlet.
- 3) Ensure that all interequipment cabling is properly connected; refer to figure TS1.
- 4) If RS-232-C communication channel is being used, ensure that modem ac power cord is plugged in and that modem power is on.
- 5) Check to ensure that all external keyboard control switches are set for desired mode of terminal operation; refer to Operators Guide/Reference Manual if necessary.
- 6) Move circuit breaker CB1 on terminal rear panel to on position (up).  
In approximately 30 seconds, a blinking cursor should appear on display screen in upper left corner (page mode) or lower left corner (scroll mode); if not, increase intensity until cursor appears.

### **Procedure CRT2 – Turning Off Display Terminal Power**

To turn off power to the display terminal, do the following:

- 1) Move circuit breaker CB1 on terminal rear panel to off position (down).

### **Procedure CRT3 – Checking the Keyboard**

To check the keyboard for proper operation, do the following:

- 1) Ensure that the cable between the video display assembly and keyboard assembly of the terminal is properly connected. If keyboard is mounted under front of display chassis, it is necessary to raise the lower front edge of the display chassis to slide the keyboard assembly forward before checking cable connection.
- 2) Ensure that ON LINE/LOCAL and FULL DUP/HALF DUP switches on keyboard are in LOCAL and HALF DUP positions.
- 3) Ensure that PAGE key on keyboard is down to select page mode operation.
- 4) Ensure that 96/64 switch on keyboard is up to select 95 character ASCII subset.
- 5) Turn on keyboard display per procedure CRT1 if it is not already on.



- 6) Key in the following alphanumeric characters and symbols, in sequence, using the SHIFT or SHIFT LOCK keys as necessary to access uppercase or lowercase. The first character entry of the sequence is a space (space bar on keyboard). There are 95 key entries in the following listing; at the 73rd character position of the display line, a beeper signal will sound.

```

      ! " # $ % & ' ( ) * + , - . / 0 1 2
3    4 5 6 7 8 9 : ; < = > ? ` a b c d e
f    g h i j k l m n o p q r s t u v w x
y    z { | } ~ @ A B C D E F G H I J K L
M    N O P Q R S T U V W X Y Z [ \ ] ^ _

```

These characters and symbols should appear on display screen just as they are keyed in.

- 7) Remove cabinet hood of display assembly per procedure CRT5.
- 8) Set Internal Test switch on control logic PC board to enable position (refer to figure CRT1).
- 9) Press LINE FEED and then CARRIAGE RETURN keys on keyboard to move cursor to the beginning of a new line.
- 10) Key in the following control codes in sequence. Use the CONTROL key plus alpha key for the symbol listed, except when a specific control key name or symbol is listed. In these latter cases, the key entry only (without CONTROL) is sufficient. Positioning of the SHIFT or SHIFT LOCK keys during these entries has no effect.

@	A	B	ETX	D	E
F	G	←	I	LINE FEED	K
L	CARRIAGE RETURN	N	O	P	Q
R	S	T	U	V	W
X	Y	↑	ESC	M	H
J	C	RUBOUT			

Compare the symbols generated for these entries with the control code symbols shown in figure CRT2.

- 11) Check action of REPEAT key by pressing and holding it and then any character key; character entry should repeat until REPEAT key is released.

- 12) Return Internal Test switch to disable position; refer to figure CRT1 for switch location if necessary.
- 13) Return all keyboard control switches to their normal operating positions.
- 14) If keyboard fails on any of the preceding tests, replace keyboard per procedure CRT4. Then rerun this procedure and go to table CRT1 or to procedure TS6, depending on which one directed you to this procedure.

#### **Procedure CRT4 – Replacing the Keyboard**

To replace the display terminal keyboard, do the following:

- 1) Turn terminal power off per procedure CRT1.
- 2) If keyboard is mounted under front edge of display assembly, lift lower front edge of display just enough to slide keyboard out from under it.

#### CAUTION

If necessary to remove keyboard by lifting display assembly be careful not to allow the assembly to tip over backwards.

- 3) Disconnect keyboard display interconnecting cable per procedure TS3.
- 4) Turn keyboard assembly over and remove six screws holding keyboard cover to keyboard chassis (see figure CRT3).
- 5) Return keyboard to upright position and lift off cover (see figure CRT3).
- 6) Remove cable connector from edge of keyboard PC board.
- 7) Remove two screws that hold PC board and mask to chassis on one end, and loosen two screws on other slotted end. Lift PC board and mask out of chassis.
- 8) Install new keyboard by sliding it under two screws still in chassis and position it properly over remaining two mounting-screw holes.
- 9) Insert two screws removed in step 7 and tighten all four screws to secure PC board and mask to chassis.
- 10) Attach connector to PC board.

- 11) Place cover over assembly, positioning cover so that keys do not bind.
- 12) Hold cover in place, turn assembly over and insert six screws in bottom of chassis. Tighten screws to secure chassis to cover.
- 13) Complete installation of new keyboard by doing steps 2 and 3 in reverse action and sequence.
- 14) Check operation of replacement keyboard per procedure CRT3. Whether or not replacement keyboard corrects malfunctions, return to DDLT for further tests or directions.

### **Procedure CRT5 – Removing the Display Cabinet Hood**

To remove the display cabinet hood, proceed as follows:

#### WARNING

Rough handling or abuse of the display assembly can cause the crt to implode with tremendous force, thereby presenting a hazard to persons in the immediate area. Always exercise care when working on or near the crt. Also be careful not to nick or scratch the crt since this can weaken it. Wear safety goggles and heavy gloves when handling the crt.

#### WARNING

With the cabinet hood removed and power on, shock hazards exist in the areas of the high-voltage transformer, the crt anode lead, and portions of the monitor PC board. Try to avoid touching areas of the crt beyond the yoke assembly and keep tools away from the high-voltage transformer and crt unless terminal power is off and the crt has been discharged.

- 1) Remove two hood-retaining screws at rear of cabinet (figure CRT4).
- 2) Move cabinet hood slightly back and then lift up and off cabinet base.

To install cabinet hood, do the following:

- 3) Position cabinet hood on track at rear of base and slide hood forward into place.
- 4) Secure hood to base with two retaining screws at rear of cabinet.

## Procedure CRT6 – Check/Replace Rear Panel Components

The panel on the rear of the display terminal carries the peripheral connector, the data set connector, the ac line cord, the TEST/NORMAL switch, the RFI line filter (internally), and circuit breaker CB1 (terminal on/off switch). Of these components, the RFI line filter and CB1 are replaceable items. The following procedure describes how to troubleshoot these two items and how to replace them if necessary. Normally, the line filter or CB1 is only suspect for a malfunction if either CB1 trips repeatedly upon successive attempts to set it, or display terminal does not appear to have power (even though CB1 remains set when switched on).

To check the line filter and CB1, do the following:

- 1) Set multimeter for measuring ac input power and set range switch for measuring anticipated voltage (120 or 220/240 V ac).
- 2) Withdraw display terminal power plug slightly from outlet so that voltage can be checked directly at that point. Check line voltage by placing one probe of meter on hot prong of plug and by placing other probe of meter on neutral prong of plug. Readings should be from 104 to 127 V ac for a 120-V terminal, from 195 to 246 V ac for a 220/240-V low-line terminal, and from 216 to 268 V ac for a 220/240-V normal-line terminal. If voltage reading is not within proper range, notify power company of problem; if readings are within tolerance, continue with following steps.
- 3) Remove display terminal hood per procedure CRT5.
- 4) If circuit breaker CB1 will not remain set when turned on (up), go to step 8 of this procedure; if CB1 remains set when turned on, continue with the following steps.
- 5) Leaving display terminal power on, locate connector CP2/CJ2 and carefully move it to a position so that voltage readings can be taken from the back side of CJ2 (see figures CRT5 and CRT6).

### WARNING

If LOW/NORMAL connector in following step requires correction, be sure to turn display terminal power off and unplug line cord from outlet before attempting to alter the connection. Failure to unplug the line cord presents a shock hazard that could result in serious injury or death.

- 6) On 220/240-V display terminals, check to ensure that connection of neutral line is to the proper LOW or NORMAL connector going to CJ2. The LOW connector is used on display terminals having a line voltage input in the 195 to 246 V ac range, and the NORMAL connector is used for display terminals having a line voltage input in the 216 to 268 V ac range (see figure CRT6).

- 7) Leaving multimeter with settings used for readings in step 2, make the appropriate following voltage measurement(s) at the rear of CJ2. If power is off, turn power on per procedure CRT1.

<u>120-V Terminals</u>	<u>220-V Terminals</u>	<u>240-V Terminals</u>
CJ2-1 to CJ2-2	CJ2-1 to CJ2-4	CJ2-1 to CJ2-6

If proper voltage is measured at CJ2, rear panel assembly is OK; return to DDLT for further tests or directions. If no voltage is measured at CJ2, continue procedure by doing the following steps.

- 8) Ensure that display terminal power is off (procedure CRT2) and unplug ac line cord from outlet.

### CAUTION

If display terminal uses a modem communication facility interface, ensure that modem power is off and/or modem ac line cord is unplugged before performing the following step. Peripheral printer power should also be off if printer is part of display terminal configuration (see procedure TS2 if necessary).

- 9) Remove data set cable and peripheral equipment cable (if present) from display terminal rear panel per procedure TS3.
- 10) Disconnect CJ2/CP2, which connects ac entry panel to power transformer primary (see figure CRT5).
- 11) Disconnect CJ1/CP1 from inside of rear panel (just behind the external data set and peripheral connectors on rear panel).
- 12) Remove six rear-panel retaining screws (see figure CRT6), and withdraw rear panel from display chassis just far enough to remove ground wire connections on back side of rear panel.
- 13) Remove ground wires from E2, E3, and E4 inside of terminal rear panel, just above data set and peripheral connectors.
- 14) Remove entire rear panel assembly from display chassis.
- 15) Remove ac entry panel cover by removing two retaining screws near center of cover (see figure CRT6) and lifting cover off rear panel assembly.

- 16) Use ohmmeter on a low-resistance setting (RX1) and on a higher resistance setting (RX100) to make the following checks on the RFI line filter (FL1).

<u>Attach Probe To</u>	<u>Check with 2nd Probe</u>	<u>Reading</u>
FL1-1	FL1-4	Continuity (0 ohm)
	FL1-2	No continuity
	FL1-3	No continuity
	FL1-5	No continuity
FL1-3	FL1-5	Continuity (0 ohm)
	FL1-2	No continuity

If the preceding readings cannot be obtained, the line filter is faulty and must be replaced; however, continue with the following steps to check the circuit breaker (CB1) at this time.

- 17) Use ohmmeter to check continuity of CB1 across CB1-1 and CB1-2 terminals (on back of circuit breaker). Make this check with circuit breaker switched to off position to ensure that no continuity exists when CB1 is off; then make check with CB1 on to ensure that continuity (0 ohm) exists when CB1 is on. If both of these readings cannot be obtained, CB1 requires replacement.

Steps 18 through 21, following, describe how to replace CB1, and following these steps are instructions for replacing line filter FL1. To remove CB1, proceed as follows:

- 18) Remove wires from CB1-2 and CB1-1; wire on CB1-1 comes from FL1-4, while wire on CB1-2 comes from TB1-1.
- 19) Remove two screws (on outside of rear panel) that hold CB1 to rear panel, and then remove CB1 from rear panel.

To install CB1, do the following:

- 20) Position CB1 in rear panel from inside so that the mounting holes align with mounting holes in rear panel, and then secure CB1 to rear panel with two screws removed in step 19.
- 21) Connect wire from FL1-4 to terminal CB1-1, and then connect wire from TB1-1 to terminal CB1-2 (see figure CRT6).

To remove line filter FL1, do the following:

- 22) Remove two hex standoffs (for ac entry panel cover) that secure FL1 to rear panel.
- 23) Remove wire running from FL1-4 to CB1-1 by removing connector on terminal CB1-1.
- 24) Unsolder wires from FL1-1, -2, -3, -4, and -5, and then remove FL1 from rear panel assembly.

To install line filter FL1, do the following:

25) On 120-V ac terminals make the following solder connections:

- Connect black (hot) ac input wire to FL1-1
- Connect white (neutral) ac input wire to FL1-3
- Connect green (chassis ground) wire from ground lug E1 to FL1-2
- Connect short yellow wire, removed in steps 23 and 24, to FL1-4, and then connect other end (fast-on connector) to CB1-1
- Connect yellow wire from CJ2-2 to FL1-5

On 220/240-V ac terminals make the following solder connections:

- Connect brown (hot) ac input wire to FL1-1
- Connect blue (neutral) ac input wire to FL1-3
- Connect green/yellow (chassis ground) wire from ground lug E1 to FL1-2
- Connect short yellow wire, removed in steps 23 and 24, to FL1-4, and then connect other end (fast-on connector) to CB1-1
- Connect yellow wire from CJ2 LOW/NORMAL connector to FL1-5

26) Position line filter FL1 on rear panel mounting lugs and secure with hex standoffs.

To reinstall rear panel assembly in display chassis, do the following:

- 27) Replace ac entry panel cover and secure with two retaining screws.
- 28) Position rear panel assembly near rear of display chassis so that ground wires, removed in step 13, can be fastened to lugs E2, E3, and E4 with hex retaining nuts.
- 29) Position rear panel assembly so that it can be secured with six retaining screws removed in step 12, secure panel with screws, and then reconnect CJ1/CP1 (refer to step 11).
- 30) Reconnect CJ2/CP2 connector from rear panel to power transformer primary.
- 31) Reconnect display terminal signal cables per procedure TS3, and then return to DDLT to determine if there are any further tests or directions to be done before replacing cabinet hood and turning display terminal power on per procedure TS1.

## **Procedure CRT7 – Check/Replace Power Supply Assembly**

This procedure describes how to check power supply operation and how to replace either faulty power supply components or the entire power supply assembly.

Procedure CRT6 should be done prior to this one to ensure that the proper ac input to the power supply is available via connector CJ2/CP2. Also, before beginning this procedure, be sure there is sufficient space available for removing the monitor from the display chassis and setting it beside the display chassis while the two units remain interconnected.

To check power supply operation, do the following:

- 1) Turn power off per procedure CRT2 and unplug ac line cord from outlet.
- 2) Remove display terminal cabinet hood per procedure CRT5.
- 3) Discharge crt (see step 2 of procedure CRT13 if necessary).
- 4) Remove two upper screws holding monitor chassis to bezel of display chassis.
- 5) Loosen two lower screws holding monitor chassis to bezel of display chassis but do not remove these two screws. They should be just loose enough to slip lower front legs of monitor chassis up and off of them later in this procedure (refer to figure CRT7).
- 6) Remove two hex screws from rear two chassis legs of monitor assembly, and ensure that any ground wires attached to the monitor chassis at either of these two points are free of the display chassis.

Before doing next step, ensure there is enough room to set monitor chassis on bench or desktop just to left (side away from logic module) of display chassis base.

### WARNING

Use extreme care in touching or handling the monitor chassis because rough handling can cause the crt to implode with tremendous force, which could result in serious injury. Do not nick or scratch glass or subject crt to undue force while handling display assembly. Wear protective gloves and safety goggles during this next step as a precaution.

- 7) Grasp display assembly by the chassis support brackets, lift it up and back, and pivot it slightly clockwise. Place it on a surface just to the left of display chassis (side away from logic module assembly). As this is being done, check to ensure that interconnecting cables are free enough to enable monitor to clear display chassis without stress on cables or component parts of either assembly.
- 8) Visually check both assemblies to ensure that no interconnecting cabling has pulled loose during the preceding step.
- 9) Plug ac power cord into appropriate outlet and turn display terminal power on per procedure CRT1.
- 10) Using a multimeter set to measure about 25 to 50 V ac and, with one lead connected to a good ground (E2, E3, or E4 on rear panel), check for ac voltage readings at J4 and J5 on power supply PC board and at ac inputs to CR1 (see figure CRT8). Reading should be about 20 V ac (RMS) each at J4 and J5 and about 8.6 V ac (RMS) at each CR1 input.
- 11) If any of the check points in the preceding step fail to indicate an ac voltage, turn display terminal power off (procedure CRT2), remove connector from any one of the test points that failed to show a reading, connect meter lead to that connector, and then, reapply power (procedure CRT1) to see if reading is now obtainable. If no ac reading can be obtained in this manner, power transformer is faulty and requires replacement; go to step 13 of this procedure.

If measurements in step 10 indicated ac voltage was present or if the check in this step gives an ac reading, turn terminal power off (procedure CRT2), disconnect meter lead from tested connector, return connector to proper location on power supply, turn terminal power back on (procedure CRT1), and continue with next step.

- 12) Check and record voltage readings at connector HJ2/HP2 per listing for that connector on figure CRT8; make each check twice, once with HP2/HJ2 connected and once at HJ2 on power supply PC board with HP2 removed from HJ2. Notice that there are both ac and dc, and negative and positive outputs from this connector; be sure to set meter properly for output to be measured.

The following lists possible results from these two readings, and indicates the possible actions for each result.

- a) All outputs measure as indicated in figure CRT8; return to DDLT for further tests or directions.
- b) 19 V ac measures too high or too low during both checks; replace power supply transformer.

- c) 19 V ac is low with HP2/HJ2 connected and OK with HP2 removed; possible short in load (check circuits beyond HP2 connector).
- d) -12, +12, or +5 V dc is too high with or without HP2/HJ2 connected; replace power supply PC board.
- e) -12, +12, or +5 V dc is low with HP2/HJ2 connected and OK with HP2 removed; troubleshoot for shorts in load (circuits beyond HP2).
- f) -12, or +12 V dc has no output or low output with or without HP2/HJ2 connected; replace power supply PC board.
- g) +5 V dc has no output or low output with or without HP2/HJ2 connected; replace power supply PC board first, and if fault is not corrected, replace CR1.
- h) +23 V dc too high with or without HP2/HJ2 connected; replace power supply transformer.
- i) +23 V dc low with HJ2/HP2 connected and OK with HP2 removed; check for short in load (circuits beyond connector HP2).
- j) +23 V dc low or no output with or without HP2/HJ2 connected; replace power supply PC board first, and if fault is not corrected, replace power supply transformer.
- k) A power supply fault exists, but none of the above actions correct it; replace power supply assembly.

To remove the power transformer from the display assembly chassis, do the following:

- 13) Power-off terminal per procedure CRT2 and remove ac power plug from site outlet.
- 14) Tag wires from power transformer to J3, J4, and J5 on power supply PC board, and tag wires from power transformer to AC terminals on CR1. Remove the wires just tagged from their respective connectors.
- 15) Disconnect CJ2/CP2 and HJ2/HP2 (see figure CRT8).
- 16) Remove hex nut holding transformer safety ground wire to display chassis and then remove ground wire from lug.
- 17) Remove four hex nuts holding power transformer to power supply chassis, and remove power transformer.

To install power transformer in the display assembly chassis, do the following:

- 18) Position power transformer over mounting lugs on power supply chassis. See figure CRT8 for proper transformer positioning.
- 19) Do steps 14 through 17 preceding in reverse order and sequence of action. If new transformer, use tagged wires of old one as a guide.

To remove rectifier CR1 from the power supply assembly, do the following:

- 20) Power-off terminal per procedure CRT2 and remove ac power plug from site outlet.
- 21) Tag wires connecting to CR1 for later identification and then remove wires from CR1.
- 22) Remove two hex nuts holding CR1 to power supply chassis, and then remove CR1 from chassis.

To install CR1, do the following:

- 23) Apply thermal compound to bottom of CR1 mounting bracket and to power supply chassis where CR1 mounts.
- 24) Position CR1 on power supply chassis mounting lugs and secure CR1 with two hex nuts removed in step 22.
- 25) Connect wires to CR1 that were removed in step 21, preceding.

To remove power supply PC board, do the following:

- 26) Turn off terminal power per procedure CRT2 and remove ac plug from outlet.
- 27) Tag wires going to connectors J3, J4, J5, and J6 on power supply PC board, and then remove these wires from board connectors.
- 28) Remove four screws (one at each corner of PC board) holding power supply PC board to power supply chassis, and then remove the PC board.

To install power supply PC board, do the following:

- 29) Position power supply PC board over four mounting holes in power supply chassis as shown in figure CRT8, and then secure PC board to chassis with four screws removed in step 28, preceding.
- 30) Replace wires removed in step 27, preceding.

To remove power supply assembly, proceed as follows:

- 31) Turn off terminal power per procedure CRT2 and remove ac plug from outlet.
- 32) Remove hex nut that secures power transformer safety ground wire, and then remove ground wire.
- 33) Disconnect connectors CJ2/CP2 and HJ2/HP2 (see figure CRT8).
- 34) Remove four hex nuts that secure power supply chassis cabinet base: one screw is in front and one screw is behind the power supply transformer, and one screw is at each corner of the chassis opposite the transformer.
- 35) Lift power supply assembly up and out of display cabinet base.

To install the power supply assembly, do the following:

- 36) Position power supply assembly over mounting lugs in display cabinet base, set assembly down on lugs, and then secure assembly in place with four hex nuts removed in step 34, preceding.
- 37) Reconnect connectors CJ2/CP2 and HJ2/HP2, and then connect and secure safety ground wire between power transformer and display chassis with hex nut.
- 38) Return to beginning of this procedure and repeat appropriate steps for testing power supply operation before returning to the DDLTs for further tests or directions.

To install the monitor assembly, do the following:

- 39) Do steps 4 through 7 of this procedure in reverse order and sequence of action to install the monitor assembly on the display chassis base. Ensure that terminal power is off (procedure CRT2) and ac line cord is unplugged before doing these steps.

#### **Procedure CRT8 – Check/Replace 15-V Regulator Components**

This procedure describes how to check operation of the 15-V dc regulator, and how to replace faulty components if necessary. This procedure should normally not be done without first doing procedures CRT6 (Check/Replace Rear Panel Components) and CRT7 (Check/Replace Power Supply Assembly).

To check operation of the 15-V dc regulator, do the following:

#### **NOTE**

Some regulators have an input fuse on them (see figure CRT10). If regulator has no output, as determined during the following procedure, check fuse before replacing any other components.

- 1) Remove cabinet hood per procedure CRT5.
- 2) If terminal power is not already on, turn power on per procedure CRT1.
- 3) Set multimeter for measuring +15 volts dc.
- 4) Test output of regulator by measuring voltage on pins 8 and 22 of BP4 with respect to pin 3 (ground) of BP4 (see figure CRT9), and record the voltages measured.

- 5) Turn terminal power off per procedure CRT2.
- 6) Disconnect connector BP5 (from the 15-V regulator to the monitor PC board via BP4), turn terminal power back on per procedure CRT1, and then measure and record outputs from BP5-1 and BP5-3 with respect to BP5-2 (ground). Refer to figures CRT9 and CRT10.
- 7) Readings in both steps 4 and 6 should be  $+15 \pm 0.75$  V dc. If readings are OK, return to the DDLTs for further tests or directions; if not, examine the following list and take the appropriate action.
  - a) If both readings are too high, check/replace diodes or replace pass transistor and regulator circuits (see following steps of this procedure).
  - b) If reading is low in step 4, and OK in step 6, check for shorts in load (monitor PC board), or replace pass transistor and regulator circuits (see following steps in this procedure).
  - c) If readings are too low in both steps 4 and 6, replace pass transistor and regulator circuits (see following steps of this procedure).

If any of the actions in the preceding list are taken, return to steps 2 through 7 of this procedure to retest regulator operation after completing the action and before returning to the DDLTs for further instructions.

To check regulator diodes, proceed as follows:

- 8) Turn terminal power off per procedure CRT2 and remove ac plug from outlet.
- 9) Set ohmmeter for making resistance checks on RX1 scale.

It may be necessary to remove the regulator assembly to make the following resistance checks. If so, skip to step 13 to remove the regulator and then return to complete the following checks.

- 10) Measure the forward resistance of each diode by placing the + meter lead on the anode of the diode and the - meter lead on the cathode (banded end of diode; see figure CRT10). The resistance measured in this direction should be about 1 or 2 ohms. If higher resistance is measured, diode should be replaced.
- 11) Set ohmmeter for making high resistance checks (RX1000 scale).
- 12) Measure the reverse resistance of each diode by placing the - meter lead on the anode of the diode and the + meter lead on the cathode (banded end of diode; see figure CRT10). The resistance measured in this direction should be greater than 1 kilohm. If not, diode should be replaced. If diode checks are OK, skip to steps of this procedure for removing and replacing the pass transistor and regulator circuits. If diode checks are not OK, proceed with the following steps for removing and replacing a diode.

To remove regulator assembly and replace faulty diode, do the following:

- 13) Ensure that terminal power is off and ac plug is removed from outlet (see step 8, preceding).
- 14) Disconnect BP2, from power supply to regulator, and BP5, from regulator to monitor PC board (see figure CRT9).
- 15) Remove two screws securing regulator heat sink to monitor chassis, and withdraw regulator assembly from rear of monitor chassis.
- 16) Place heat sink clips around diode to be removed to protect adjacent components from heat damage.
- 17) Unsolder faulty diode and remove from circuit.
- 18) Check new diode per steps 9 through 12, preceding, before installing it in circuit.
- 19) Solder new diode in circuit using heat sink clips to protect both the new diode and the adjacent components from heat damage.
- 20) Recheck all diodes per steps 9 through 12, preceding, to ensure none have been damaged during soldering.
- 21) Install regulator assembly in monitor chassis by performing steps 14 and 15 in reverse order and sequence of action.

To remove and replace pass transistor and regulator circuits, do the following:

- 22) Ensure that terminal power is off and ac line cord removed from outlet (see step 8, preceding).
- 23) Remove the two screws holding each of the circuits to the regulator heat sink, and then, pull each circuit out of its respective socket.
- 24) Clean surface of heat sink where circuits make contact with it, ensure that old mica insulating washers do not remain stuck to heat sink, and then apply thermal compound (CDC 51003962) to area of heat sink where circuits are mounted.
- 25) Remove mica insulating washers from new circuits and apply thermal compound to back side of each circuit. Then, install mica washer on each circuit.
- 26) Install circuits in heat sink socket and secure in place with screws (2 each) removed in step 23. When installing new circuits, ensure that pass transistor is installed in upper socket and regulator circuit in lower socket (refer to figure CRT9).
- 27) After replacing circuits, retest regulator operation per steps 2 through 7 of this procedure before returning to the DDLTs for further directions.

## Procedure CRT9 – Measuring Voltages on Monitor PC Board

This procedure describes how to measure +15, +5, -190, +45, and +465 V dc on the monitor PC board. This procedure should follow procedure CRT8 since all of the voltages on the monitor PC board are derived from the +15-V dc output of the regulator circuit. Refer to figure CRT11 to locate the points on the PC board for making the following measurements.

To measure +5 and +15 V dc on the monitor PC board, do the following:

- 1) Set voltmeter to measure +15 V dc.
- 2) Remove display cabinet hood per procedure CRT5.
- 3) Ensure that terminal power is on (see procedure CRT1).
- 4) Connect - lead of voltmeter to ground (E1 on monitor chassis).
- 5) Connect + lead of voltmeter to pin 8 of BP4, and check that meter reads +15  $\pm$ 0.75 V dc.
- 6) Move + lead of voltmeter to pin 22 of BP4, and check that meter again reads +15  $\pm$ 0.75 V dc.
- 7) Move + lead of voltmeter to + side of capacitor C5A, and check that meter reads +5  $\pm$ 0.25 V dc.

To measure -190 V dc, do the following:

- 8) Set voltmeter to measure -190 V dc.

### NOTE

If meter has polarity reversing switch, reverse meter lead connections given in the following steps (9 and 10) and use reversing switch instead.

- 9) Connect + meter lead to ground (E1 on monitor chassis).
- 10) Connect - meter lead to R1A as shown in figure CRT11, and check that meter reads -190  $\pm$ 25 V dc.

To measure +45 V dc, do the following:

- 11) Set voltmeter to measure +45 V dc.
- 12) Connect - lead of meter to ground (E1 on monitor chassis).
- 13) Connect + lead of meter to diode CR4A as shown in figure CRT11, and check that meter reads +45  $\pm$ 4.5 V dc.

To measure +465 V dc, do the following:

- 14) Set voltmeter to measure +465 V dc.
- 15) Connect - lead of meter to ground (E1 on monitor chassis).
- 16) Connect + lead of voltmeter to pin 16 of BP4, and check that meter reads +465  $\pm$ 47 V dc.
- 17) Check that all measured voltages fall within the indicated tolerances. Failure of any voltage to be within tolerance normally indicates a fault either in the source voltage (+15 V dc from the 15-volt regulator), in the monitor PC board, or in the high-voltage transformer. Whether or not a fault is indicated, return to the DDLT for further tests or directions.

### **Procedure CRT10 – Video Monitor Adjustments**

To adjust the video monitor for correct video display, do the following. Refer to figures CRT12, CRT13, and CRT14 to locate adjustment controls noted in the following steps.

- 1) If adjustment is required because of yoke replacement or crt replacement, check that high voltage lead is connected, video PC board connectors are all in place, and BP5 and AP4 from +15-V dc regulator are connected.
- 2) Connect power cord to ac outlet and turn power on per procedure CRT1.

#### WARNING

With power applied, high voltage is present at high-voltage transformer and crt anode lead. Exercise caution when working in these areas so as to avoid a severe shock.

- 3) Move TEST/NORMAL switch on terminal rear panel to TEST position, and move keyboard FULL DUP/HALF DUP and ON LINE/LOCAL switches to FULL DUP and LOCAL positions.
- 4) Ensure that PAGE key on keyboard is down to select page mode of operation.
- 5) Ensure that 96/64 key on keyboard is up to select 96-character code set.
- 6) Press CLEAR key on keyboard.
- 7) Adjust INTENSITY control on terminal front panel until blinking cursor is clearly visible on screen but raster cannot be seen.

## NOTE

Before making centering and tilt adjustments, attach clear plastic overlay that precedes figure CRT16 to center of display screen with masking tape.

To make tilt adjustments, do the following:

- 8) Fill display area of screen with uppercase Hs in the following manner:
  - a) Press SHIFT LOCK key on keyboard down.
  - b) Press and hold REPEAT and then H keys. If display line feeds and carriage returns at end of first line, continue holding REPEAT and H keys until screen fills with Hs. If display does not automatically line feed at end of first line, release REPEAT and H keys, press LINE FEED key and then CARRIAGE RETURN key. This will move cursor to left margin of second display line. Continue process of filling one line at a time with Hs until all 24 lines of display are filled.
- 9) Check to see if video display of Hs appears tilted on the screen. If so, do steps 9a, 9b, and 9c.
  - a) Loosen yoke clamp screws until yoke can be rotated on neck, but will remain in position to which it is moved.
  - b) Rotate yoke back and forth on neck until H pattern display is no longer tilted.
  - c) Hold yoke in position to keep display pattern straight on screen and tighten clamp screw on yoke.

To center the display pattern on the screen, do the following:

- 10) Check to see if display pattern is centered on display screen. If not, adjust centering tabs on yoke (see figure CRT13) until display is centered. Initial setting for centering tabs should be 180 degrees apart.

To make linearity adjustments, do the following:

- 11) Observe that H patterns on the left and right sides of the screen are same height as those in center of screen. If not, adjust vertical linearity pot on monitor PC board until height is uniform (see figure CRT14).
- 12) Observe H characters on screen to make certain that left or right side of display is not distorted. If distortion is present, loosen yoke and ring magnet clamps slightly and slide shielding sleeve back and forth on neck gently until minimum distortion is obtained.

Adjustment of shielding sleeve (horizontal linearity) affects horizontal width. Refer to size adjustments later in this procedure and perform horizontal linearity and horizontal width adjustments alternately until best overall results are obtained.

- 13) After yoke and shielding sleeve are correctly adjusted and crt ground clip is properly under sleeve, tighten yoke and ring magnet clamp screws until they are snug (do not use force).

To adjust the height and width of the display pattern, do the following:

- 14) Adjust vertical height by turning adjustment screw (figure CRT14) until height of display pattern is about 5.25 in (133 mm).
- 15) Adjust horizontal width of display pattern to 8.0 in (203 mm) by turning width adjustment (figure CRT14) until proper width is obtained. Use a nonmetallic 3/32-inch hex driver for making this adjustment.

To make focus adjustments, do the following:

- 16) Press the CLEAR key on the keyboard to clear the display screen of the Hs display.
- 17) Enter a display screen of lowercase m's; refer back to step 8b of this procedure if necessary. Ensure that SHIFT LOCK key is released before attempting to enter lowercase m's.
- 18) Turn front panel INTENSITY control all of the way up (clockwise) and then back it off about 1/4 turn.
- 19) Turn Contrast control (figure CRT14) to full clockwise position.
- 20) Adjust the Intensity Range control (figure CRT14) so that raster (background scan lines) just disappears but the m characters on the screen remain clearly visible. To check for proper adjustment, turn up front panel INTENSITY control to ensure that raster can still be seen, and then turn front panel INTENSITY control back down to normal viewing brightness.
- 21) Adjust the Focus control (figure CRT14) to obtain the best resolution of m characters on entire display area.
- 22) Adjust the magnet ring tabs (figure CRT13) to minimize any tails or halos visible on the displayed characters, especially those characters at corners of display area.
- 23) If necessary, repeat steps 20 through 22 to obtain best possible character display and resolution across the entire display area. Refer to figure CRT15 for characteristics to be looked for in the display.

The following steps check the display area for barreling and pincushion distortion. If the check indicates that correction is required, the following items are needed to make adjustments.

- 1/4-inch diameter wooden dowel approximately 12 inches long
- 1/4-inch masking tape
- Cutting tool or scissors
- CRT plastic overlay to fit a 12-inch crt screen. A plastic overlay precedes figure CRT16 that has an ideal rectangle marked on surface to help align raster.
- Adhesive, CDC part number 51004063
- 2.0-gauss correction magnet (yellow code), CDC part number 51917051
- 3.0-gauss correction magnet (silver code), CDC part number 51917052
- 4.0-gauss correction magnet (red code), CDC part number 51917053
- 5.7-gauss correction magnet (green code), CDC part number 51917054

To check and make adjustments for geometric distortion, do the following:

- 24) Press CLEAR key on keyboard to clear the display.
- 25) Enter a full display screen of uppercase Hs; refer to step 8 of this procedure if necessary. Ensure that SHIFT LOCK key is pressed before entering the Hs.
- 26) Check for geometric distortion (barreling and pincushioning) of the display pattern. Attach overlay noted previously to crt screen with masking tape so that center rectangle of overlay fits over display pattern on screen. If display pattern edges balloon out of double overlay lines at sides, barreling distortion is present. If edges of display pattern squeeze in past inner double line at center of sides, pincushioning distortion is present. Refer to figures CRT17 and CRT18.
- 27) To correct barreling or pincushioning distortion, first fasten the 2.0-gauss magnet (yellow code) to one end of the wooden dowel with masking tape. Use enough tape to hold magnet securely to dowel (see figure CRT18).
- 28) While using mirror to watch display pattern, move magnet back and forth around yoke coil toward side of pattern requiring correction. Note the effects on the display pattern as the magnet is moved to various positions. Also note that the direction in which the magnet is facing affects the display: a magnet with the colored end facing in one direction across the yoke coils has the effect of pulling the display edges out, while reversing the colored end of the magnet has the effect of squeezing the display edges in. Refer to figure CRT19.

- 29) If in doing step 28 the display pattern overreacts, break the 2.0-gauss magnet in half with a pliers and repeat the process. If the display pattern does not react enough, use progressively larger magnets (3.0, 4.0, or 5.7) or more than one magnet to achieve the desired results.
- 30) When desired or best possible correction is achieved, note the position of the magnet relative to the yoke coils. Then turn crt power off, remove magnet from dowel, and fasten magnet into position on yoke with adhesive. It may be necessary to hold magnet in place with masking tape while adhesive cures.
- 31) If necessary to correct distortion on other perimeter edges of display pattern, apply power to the terminal and repeat this process from step 24.
- 32) When all necessary corrections have been made, remove masking tape from correction magnets mounted on yoke and remove overlay from face of crt. Replace cabinet hood and prepare terminal for use or return to DDLT for further tests and checks if necessary.

#### **Procedure CRT11 – Check/Replace Front-Panel INTENSITY Control**

To check the INTENSITY control on the front panel of the display terminal, proceed as follows:

- 1) Turn off power per procedure CRT2 and remove ac plug from outlet.
- 2) Remove terminal cabinet hood per procedure CRT5.
- 3) Set ohmmeter to RX1000 scale.
- 4) Disconnect cable connector BP3/BJ3 leading from monitor assembly to INTENSITY control on terminal front panel. See figure CRT20.
- 5) Attach one lead of ohmmeter to BJ3-2 (center terminal of connector leading to INTENSITY control), and connect the other ohmmeter lead to one of the outer terminals of BJ3.
- 6) Check to see that ohmmeter reads 0 when INTENSITY control is turned fully in one direction and reads 100 kilohms when the control is turned fully in the opposite direction.
- 7) Remove ohmmeter lead from first outer terminal of BJ3 (as attached in step 5) and attach lead to second outer terminal. Check for 0 ohms and 100 kilohms again at opposite extremes of INTENSITY control rotation.
- 8) If either check in step 6 or 7 fails, replace INTENSITY control.

To replace INTENSITY control, do the following:

- 9) Test new control per steps 5 through 7 of this procedure to ensure that new control is OK.
- 10) Pull knob off front of control to gain access to hex retaining nut on front side of terminal.
- 11) Remove retaining nut using 1/2-inch socket.
- 12) Withdraw old control from rear side of front panel.
- 13) Insert new control in front panel, secure with retaining nut, and slide knob on front of control.
- 14) Move cable BJ3 from rear of control to proper position in chassis and reconnect BJ3 to BP3 cable that goes to monitor assembly.
- 15) Turn on terminal power per procedure CRT1.
- 16) Wait 30 seconds for terminal to warm up and then adjust INTENSITY control for proper viewing.
- 17) Replace cabinet hood per procedure CRT5 and return the DDLTs for directions.

#### **Procedure CRT12 – Replacing Monitor PC Board**

To remove the monitor PC board, do the following:

- 1) Turn off power per procedure CRT2 and remove ac plug from outlet.
- 2) Disconnect connector BP1 (see figure CRT21).
- 3) Disconnect ground wire BP7 from BJ7 on monitor board.
- 4) Disconnect crt lead BP6 from location BJ6 and disconnect ground wire BP8 from location BJ8.
- 5) Disconnect connector BP4 (see figure CRT21).

#### CAUTION

To avoid breaking the plastic retainer clips, be careful when compressing the clips to remove the PC board. Make sure that all four clips are compressed before attempting to lift PC board off of chassis. If board is not free of all four clips, either the clips or the PC board may break when attempting to remove the board.

- 6) To remove PC board from four plastic mounting pegs, carefully compress retainer clip on peg, and at same time, lift that portion of the board near peg gently until board moves up over retainer clip; then stop lifting (see figures CRT21 and CRT22). Do the same for all four clips and pegs. When board is free of all clips, lift board up and off of pegs.
- 7) Install new PC board by positioning board over mounting pegs to match holes in board with pegs, and then gently press the board down on pegs until board slides over retainer clips on pegs and is securely in place. If any difficulty is encountered as board goes over clips, gently press board down over one clip at a time until it is secure.
- 8) Replace connectors BP1, BP4, BP6 and ground wires BP7 and BP8 per figure CRT21.
- 9) Refer to procedure CRT10 if required to adjust monitor for proper video display.

### **Procedure CRT13 – Replacing High-Voltage Transformer**

To remove the high-voltage transformer, do the following:

- 1) Turn power off per procedure CRT2 and disconnect ac line cord.

#### WARNING

Be careful not to nick or scratch surface of cathode-ray tube when discharging tube. Nicks and scratches weaken the glass and can cause tube to implode with tremendous force. Wear safety goggles and protective gloves when handling or working on the crt.

- 2) Connect a heavily insulated wire to ground, then carefully slide other end of wire under rubber anode cover on top of crt. It may be necessary to raise anode cover slightly to start wire under it. Slide wire far enough under cover to discharge tube.
- 3) Remove high-voltage lead by raising rubber cover and compressing spring-loaded anode lead; then remove high-voltage lead from paper insulator attached to standoff on monitor chassis.
- 4) Remove transformer primary wires from connector BP4 by removing BP4 and inserting end of paper clip into top of connector to release flag-terminal spring; withdraw flag terminal from bottom of BP4.

- 5) Remove screw attaching high-voltage lead insulator to hexagonal stand-off and remove insulator. Remove standoff, and then nut and washers from screw securing transformer to monitor chassis. Remove transformer from monitor chassis (see figure CRT23).

To replace the high-voltage transformer, do the following:

- 6) Connect transformer to chassis as shown in figure CRT23.
- 7) Connect high-voltage lead through paper insulator and to anode hole in crt; then slide rubber anode cover into position over anode lead and hole. If compressing anode lead spring is difficult, use a pliers with tape- or tubing-covered jaws to compress spring while anode lead is inserted in crt hole.
- 8) Connect flag-type terminals on primary wires to BP4 by inserting them into bottom of BP4 connector (see figure CRT23 for proper connections).
- 9) Replace connector BP4 on monitor PC board.

#### **Procedure CRT14 – Replacing the Vertical Choke**

To replace the vertical choke on the monitor chassis, do the following:

- 1) Turn power off per procedure CRT2 and unplug the terminal line cord.
- 2) Disconnect BP4 (largest connector at rear of monitor PC board). Wires from BP4, pins 6 and 7 go to the vertical choke (see figure CRT5).
- 3) Remove flag terminals from BP4-6 and BP4-7 by inserting small end of paper clip in space between flag terminal and insulation at top of connector. This compresses wedge-shaped spring clip on terminal so that it can be withdrawn from bottom of connector.
- 4) Remove nuts from two screws holding choke to monitor chassis, and then lift grounding wire off of rear screw, but do not remove wire from PC board connector.
- 5) Lift vertical choke up and off mounting screws.
- 6) Position new choke on monitor chassis so that wires from choke are toward monitor PC board.
- 7) Place ground wire removed in step 4 on rear mounting screw and secure ground wire and choke to chassis by replacing and tightening nuts removed in step 4.
- 8) Push flag terminals removed in step 3 into connectors BP4-6 and BP4-7 by pushing them up into connector from bottom until they lock in place. Arrange the choke wires so that they are not twisted or crossed over before inserting them.
- 9) Reconnect BP4 to rear of monitor PC board.
- 10) Go to procedure CRT10 and check for any required video adjustments.

## Procedure CRT15 – Check/Replace CRT Cap

To check the crt cap, do the following:

- 1) Turn off power per procedure CRT2 and unplug ac line cord from outlet.
- 2) Remove terminal cabinet hood per procedure CRT5.
- 3) Disconnect connector BP4 (large connector) from rear of monitor PC board.
- 4) Disconnect connectors BP6/BJ6 and BP8/BJ8 from monitor PC board (see figure CRT21).
- 5) Carefully remove crt cap from rear of crt neck (see figure CRT24).
- 6) Using an ohmmeter, make continuity checks between the following BP4 connector pins and crt cap sockets:

<u>BP4 Pin Number</u>	<u>CRT Cap Socket Number</u>
1	7
2	1
4	6
15	4
20	3

- 7) Using an ohmmeter, make a continuity check between BP6 wire (black wire) and crt cap socket 2. All checks in steps 6 and 7 should indicate continuity (0 ohms); if not, cap requires replacement.

To remove the crt cap, do the following:

- 8) Do steps 1 through 5 preceding.
- 9) Remove flag terminals from BP4 as indicated in the BP4 pin number list of step 6 preceding. Do this by inserting small end of paper clip into top of BP4 connector to release wedge-shaped spring clip on flag terminal, and then withdrawing flag terminal from bottom of connector.

To install the crt cap, do the following:

- 10) Insert wires coming from crt cap into connector BP4 as per listings in step 6 preceding. To install flag terminals in BP4, push them into bottom of BP4 connector until they lock in place.
- 11) Connect black wire coming from crt cap socket 2 to BJ6 on monitor PC board, and then connect green wire attached to black wire to BJ8 on monitor PC board (see figure CRT21).
- 12) Align keyslot in crt cap with keyguide on rear of crt, and then carefully push cap onto guide and crt pins until cap is seated on rear of crt.

## **Procedure CRT16 - Replacing Monitor CRT**

To remove the monitor crt, perform the following:

- 1) Turn off power per procedure CRT2 and remove ac power cord from outlet.
- 2) Remove terminal cabinet hood per procedure CRT5.
- 3) Refer to procedure CRT13 and discharge/disconnect high-voltage lead per step 2.
- 4) Remove monitor module from cabinet per procedure CRT18.
- 5) Pull crt cap carefully from end of crt neck (see figure CRT24). Do not remove the vinyl keyguide, which helps to protect end of tube when crt cap is removed. During installation, keyguide also ensures that cap goes on end of new tube properly.
- 6) Disconnect crt ground clip assembly from E1 on monitor chassis.

### WARNING

Use extreme care when working around crt because rough handling, nicks or scratches, or undue pressure on neck can cause crt to implode. This in turn can present a serious hazard from flying glass to personnel working in the area.

- 7) Loosen clamps on yoke and ring-magnet assembly on neck of tube (figure CRT25).
- 8) Remove crt ground clip from underneath shielding sleeve. Slide ring-magnet assembly back and off end of crt neck. Gently slide yoke and shielding sleeve (between neck and yoke) back on crt neck to ensure that it is loose enough for later removal.
- 9) Remove four screws holding crt mounting plate to monitor chassis at front; be careful that crt does not slip and fall as these screws are removed. Also remove static discharge spring as these screws are removed (see figure CRT26).

### WARNING

Never allow weight of crt to rest only on neck of tube while front of tube is unsupported.

- 10) Support crt neck with one hand and carefully remove yoke and shielding sleeve with other hand.
- 11) Withdraw crt carefully from wire chassis of monitor module. Place crt facedown on stable, flat surface that has been covered with a clean, soft cloth.
- 12) Remove replacement crt from shipping carton and place facedown on stable, flat surface that has been covered with a clean, soft cloth. Then place old tube in empty shipping carton.

To install crt in monitor assembly, do the following:

- 13) Being careful not to let weight of crt rest on neck, pass crt neck through front of monitor chassis until neck is back in area of yoke and front mounting plate can be fastened to chassis struts.
- 14) Install front mounting plate and static discharge spring on front of monitor chassis and over front of crt screen (see figure CRT26). Secure plate and spring with four screws and nuts removed in step 9.
- 15) Position shielding sleeve on neck with one hand and slip yoke over neck and sleeve. Slide yoke forward into position (see figure CRT25). Sleeve should extend out from back of yoke as yoke moves up against flare at rear of tube (see figure CRT27).
- 16) Slip clamp over back tabs of yoke and tighten screws slightly until yoke remains in place, but can still be moved easily.
- 17) Slide ring-magnet assembly over shielding sleeve until it contacts rear of yoke assembly.
- 18) Slip crt ground clip under shielding sleeve (figure CRT27). It may be necessary to loosen yoke clamp slightly to get ground clip into position. Once ground clip is in position, tighten both yoke and ring-magnet clamp slightly to hold entire assembly in position.
- 19) Ensure that keyguide is in place over pins at rear of crt (see figure CRT24).
- 20) Carefully position tube cap over end of crt and gently push cap onto pins, ensuring that slot in cap aligns with keyguide.
- 21) Install monitor assembly in cabinet per procedure CRT18.
- 22) Install high-voltage lead into anode hole on crt; refer to step 7 of procedure CRT13 if necessary.
- 23) Reconnect crt ground clip assembly to E1 on monitor chassis.
- 24) Ensure that connectors BP1 and BP4 are securely connected at rear of monitor PC board, and visually inspect installation to make certain that all other wires are properly connected.
- 25) Perform monitor adjustment procedures per procedure CRT10 if necessary.

## Procedure CRT17 – Replacing CRT Yoke

To remove the yoke assembly from crt neck, do the following:

- 1) Turn off terminal power per procedure CRT2 and remove ac line cord from site outlet.
- 2) Remove cabinet hood per procedure CRT5.

### WARNING

Use extreme care when working around crt because rough handling, nicks or scratches, or undue pressure on neck can cause crt to implode. This in turn can present a serious hazard from flying glass to personnel working in the area.

- 3) Connect heavily insulated wire to ground and, while carefully lifting rubber cover, discharge crt anode by sliding other end of grounded wire under cover and into anode hole in crt.
- 4) Disconnect ground clip ring lug from E1 on monitor chassis.
- 5) Pull connector BP4 off rear edge of monitor PC board. BP4 is largest of PC board connectors and has wires leading from it to yoke assembly.
- 6) Disconnect flag terminals 9, 10, 18, and 19 from BP4 connector; these are four wires leading from yoke to BP4. To do this insert small end of paper clip into top of connector in space between flag terminal and insulation and pull gently on wire until wedge-shaped, spring clip comes out bottom of connector. The paper clip must compress the spring clip enough to withdraw it from connector.
- 7) Pull crt tube cap carefully off end of crt (see figure CRT24). Do not remove the vinyl keyguide from end of tube.
- 8) Loosen clamp screws for ring-magnet and yoke clamps (see figure CRT25).
- 9) Remove ground clip from under shielding sleeve. Gently slide shielding sleeve, ring-magnet and yoke assemblies back and off neck of crt.

To install yoke, do the following:

- 10) Position shielding sleeve approximately as shown in figure CRT27, but with opening straight down and aligned with pin 7 of crt tube, and then slide sleeve up onto neck of crt.
- 11) Position yoke with wires hanging downward (red and green wires to left and blue and yellow wires to right from rear), and then slide yoke onto neck of crt over shielding sleeve.

## WARNING

Never tighten yoke or ring-magnet clamps more than enough to hold yoke and ring magnet in place on crt neck. If clamps are tightened too much, it is possible to break neck of crt, which could result in serious injury to any persons in the area.

- 12) Move yoke clamp onto neck and over end tabs of yoke; tighten clamp just enough to hold yoke in place, but not enough to prevent moving the yoke on the neck of crt.
- 13) Place ring-magnet assembly on neck and slide it forward until it butts against rear of yoke.
- 14) Slip crt ground clip under shielding sleeve and slide clip forward until rear of clip is past rear of crt tube (it may be necessary to loosen yoke clamp to do this).
- 15) Tighten yoke clamp and ring-magnet clamp just enough to hold yoke and ring magnet in position.
- 16) Position crt cap at rear of crt tube so that keyslot in cap aligns with keyguide on neck. Press cap carefully onto pins of crt tube until cap seats.
- 17) Insert flag terminals into connector BP4 (larger of two connectors at rear of monitor PC board). Push terminals in from bottom side of BP4 until spring clips secure them in place.
  - a) Push green wire from yoke into BP4-9
  - b) Push yellow wire from yoke into BP4-10
  - c) Push red wire from yoke into BP4-18
  - d) Push blue wire from yoke into BP4-19
- 18) Connect BP4 to rear edge of monitor PC board and connect ground-clip ring lug to E1 on monitor chassis.
- 19) Ensure that rear panel circuit breaker CB1 is off (down) and then plug terminal line cord into appropriate ac outlet.
- 20) Go to Video Monitor Adjustments procedure (CRT10) and perform required adjustments.

## Procedure CRT 18 – Replacing Video Monitor Assembly

To remove the video monitor assembly, perform the following:

- 1) Turn off power per procedure CRT2 and remove ac power cord from outlet.
- 2) Remove connector BP1 from rear of monitor PC board (figure CRT21).
- 3) Disconnect flag terminal 14 from BP1 by inserting small end of paper clip into top of connector in space available between flag terminal and insulation and then pulling wire gently out from bottom of connector. Flag terminals have small wedge-shaped spring clips on end that must be compressed to remove terminals from connector.
- 4) Disconnect connectors BP2 and BP3 (figure CRT20).
- 5) Disconnect all ground wires from post E1 on monitor chassis.
- 6) Loosen bottom two screws holding monitor chassis assembly to bezel. Remove upper two screws and two screws holding monitor chassis to display module chassis at rear (see figure CRT28).

### WARNING

Use extreme care when handling the video monitor assembly because rough handling can cause the crt to implode with tremendous force. This could result in serious injury. Do not nick or scratch crt glass or subject it to any undue pressure during replacement. When handling crt, always wear safety goggles and heavy gloves for protection.

- 7) Grasp monitor assembly by mounting frames with both hands and carefully lift assembly up and out of display module chassis (see figure CRT28). As this is done, check that no cabling is caught or remains connected to video monitor assembly. Place monitor on a secure, stable surface.

To install video module, perform the following:

- 8) Verify left-bottom and right-bottom screws in bezel are partially screwed in so as to receive slots on lower-front monitor chassis struts (refer to figure CRT28).
- 9) Pick up monitor module by wire chassis struts and carefully lower it into display module cabinet until slots in lower-front struts slip over screws in bezel.

- 10) Steady monitor module with one hand while positioning one of rear support struts over post in cabinet base, and then start a screw into the post to hold monitor chassis in place.
- 11) Insert three remaining screws that hold monitor chassis to cabinet base and to bezel of display module cabinet. Tighten four screws that hold monitor assembly to bezel first and two screws that hold monitor assembly to cabinet base last. Do not overtighten any of these screws; just ensure that they are securely snugged down.
- 12) Reconnect all connectors and wires removed in steps 2 through 5 of this procedure. If monitor assembly is a replacement, it will require adjustment; refer to procedure CRT10.

### **Procedure CRT19 – Check/Replace Audible Alarm**

To check the alarm, do the following:

- 1) Turn power off per procedure CRT2 and unplug ac power cord from outlet.
- 2) Remove terminal cabinet hood per procedure CRT5.
- 3) Locate alarm near bottom center of control logic PC board chassis (see figure CRT29).
- 4) Set ohmmeter to measure resistance on RX1 scale.
- 5) Touch positive (+) meter probe to terminal marked + on the alarm. Touch negative (-) meter probe to remaining alarm terminal.
- 6) If alarm sounds as probes are touched to terminals, alarm is OK; if it does not sound, replace it.

To remove alarm, do the following:

- 7) Remove logic PC board assembly from cabinet chassis per procedure CRT20.
- 8) Remove faulty alarm from logic chassis by holding alarm with one hand and then using pliers to rasp or break off retaining teeth that hold alarm in chassis. When alarm is free of chassis, remove and discard alarm.

To install alarm, do the following:

- 9) Test new alarm per steps 4 through 6 preceding.
- 10) Snap new alarm into logic chassis from rear side.
- 11) Replace logic PC board assembly in cabinet chassis per procedure CRT20.
- 12) Check that switch settings of switches on logic PC board have not been altered during this procedure by checking switch settings against settings marked on decal on logic chassis.
- 13) Return to DDLTs for further test procedures or directions.

## Procedure CRT20 – Replacing Control Logic PC Board

To remove the control logic PC board (figure CRT29), do the following:

- 1) Turn terminal power off per procedure CRT2 and unplug ac line cord from outlet.
- 2) Remove cabinet hood per procedure CRT5.
- 3) Remove chassis ground wires (green) from rear side of logic module chassis by removing hex nut and wires.
- 4) Remove logic module retaining screw at each lower end of module chassis.
- 5) Remove support brace nut from module chassis.
- 6) Lift module up slightly and remove cable connectors AJ1, AJ2, and AP3 (power connector) from near bottom of module.
- 7) Locate audible alarm near bottom center of control logic PC board chassis, and remove wires leading to alarm terminals: red wire to + terminal on alarm and white wire to other terminal on alarm.
- 8) Remove entire logic module assembly from cabinet chassis.
- 9) Remove two screws holding module cover-plate (side with switch-setting decal) and lift cover-plate off module.

### NOTE

In performing the following step, do not warp the PC board when removing it from the plastic supports. Doing so may damage the foil paths or components on the PC board, or may even break the PC board itself.

- 10) Lay the module down with PC board and components facing up, and begin easing the board up around each of the six plastic support posts a little at a time. Continue working around the board and each support post until the board is free. A needle-nose pliers with the jaw ends taped or covered with tubing may be used to compress the posts slightly to facilitate raising the board around each post.

Should one of the support posts break while removing the logic PC board, replace it in the following manner:

- 11) Use pliers to compress rear side of support post while pulling post out from front side (inside) of logic module chassis plate.
- 12) Insert new post from front side (inside) of logic module chassis plate, and press in until it locks in place.

To replace control logic PC board, do the following:

- 13) Position PC board over logic module chassis plate so that holes in board align with support posts on plate, and then lower board onto posts. Work around board pressing it down around each post a little at a time until board is secure on all six support posts.
- 14) Check switch settings on board to ensure that they are set per the SITE blocks on cover-plate decal (see figure CRT1).
- 15) Do steps 3 through 9 in reverse order and action to complete installation of logic PC board and return to DDLT for next test or directions.

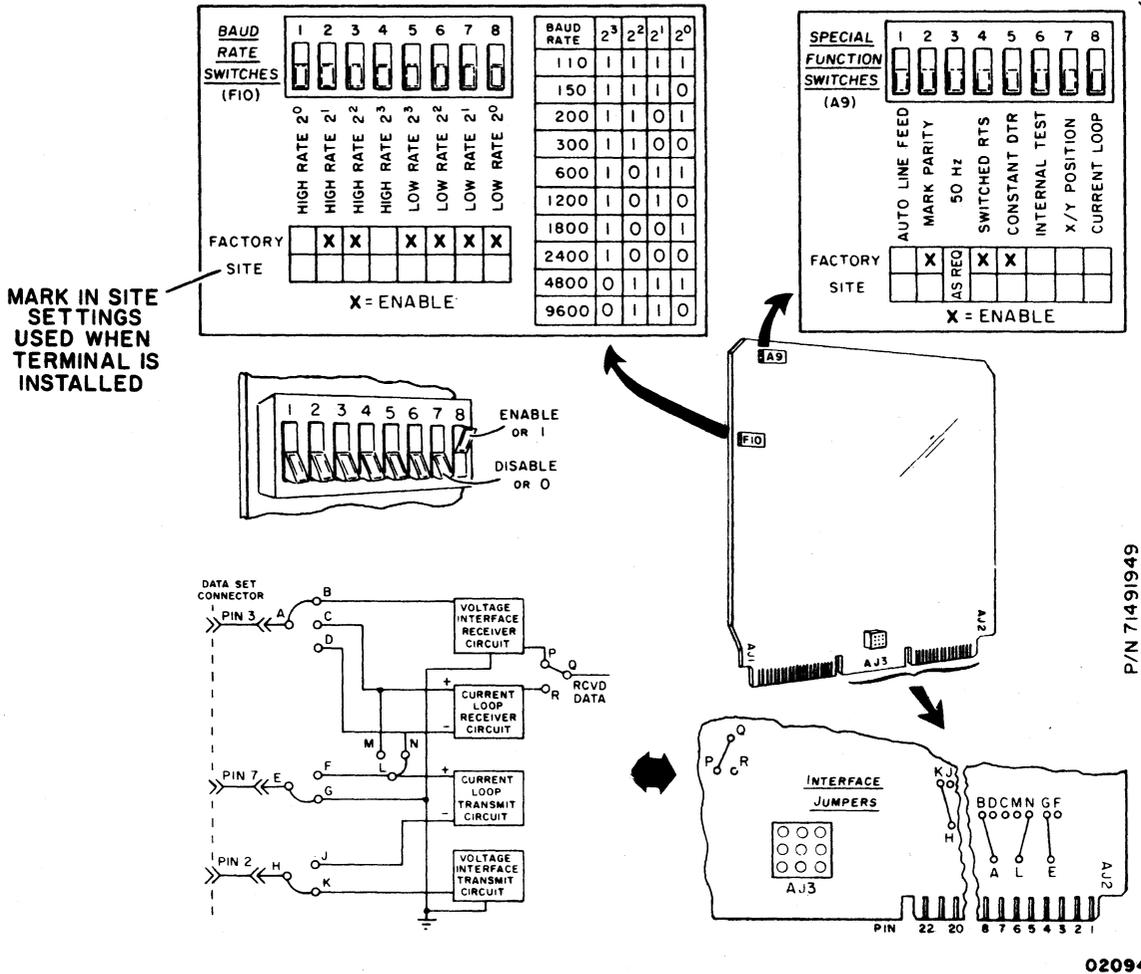


Figure CRT1. Keyboard Display Internal Switches and Controls



Figure CRT2. Control Code Dot Matrix Formations and Octal Codes\*

02004

\* ASCII delete code (DEL) is listed with alphanumeric code set in appendix (see code 177g)

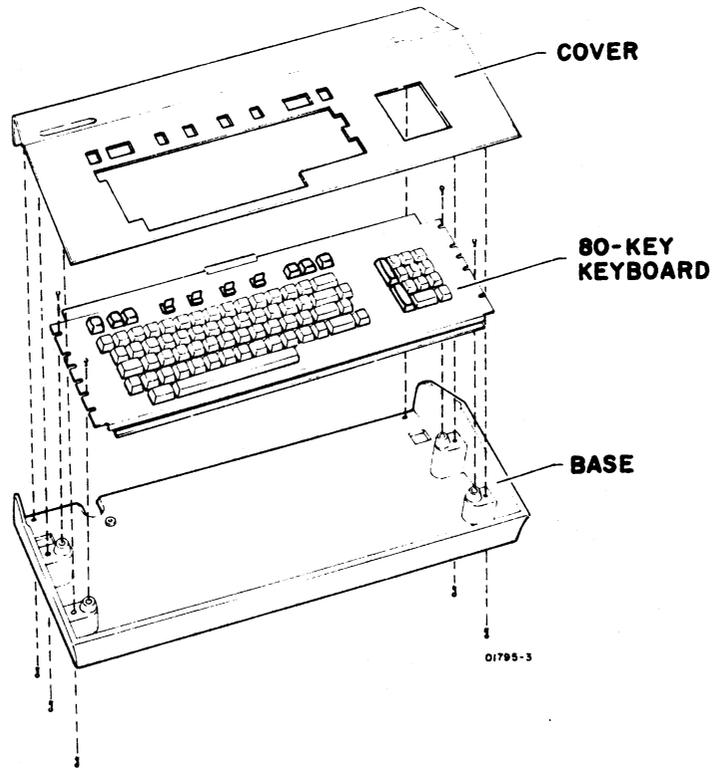


Figure CRT3. Keyboard Module Components

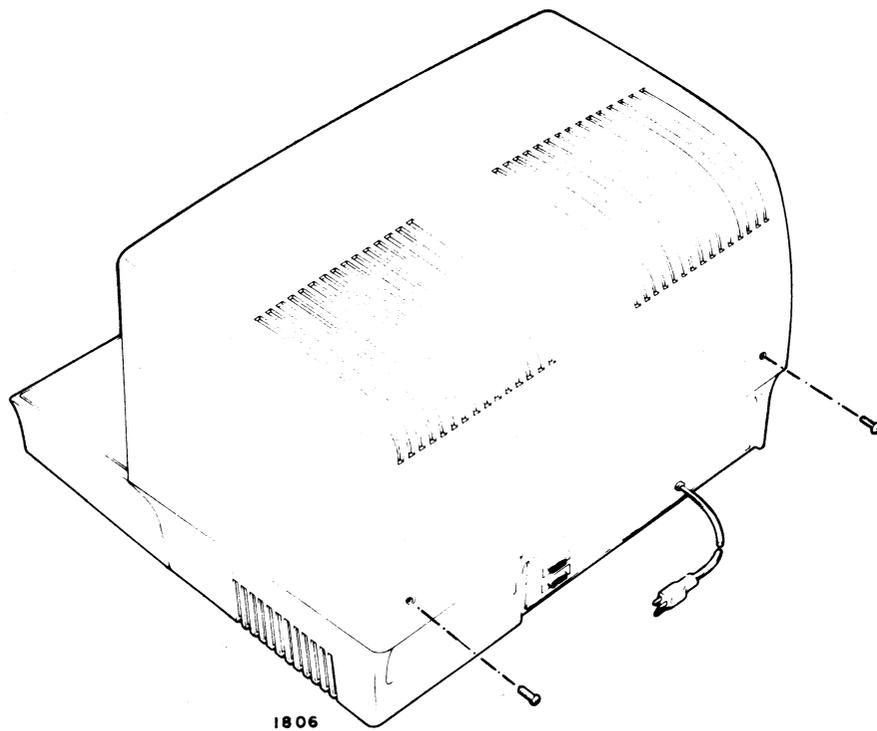


Figure CRT4. Keyboard Display Cabinet Hood Removal




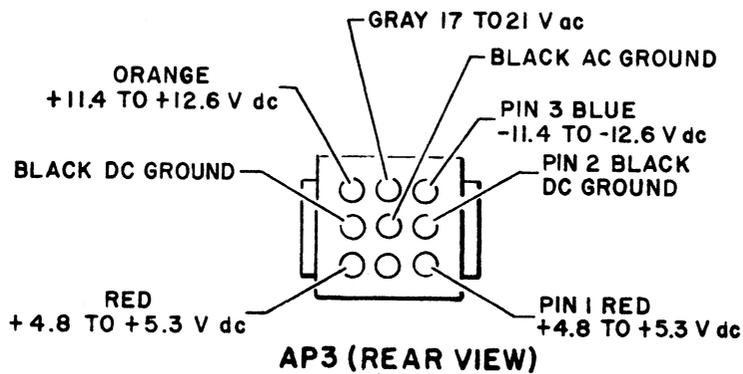





Figure CRT5. CP2/CJ2 and Rear Panel Locations

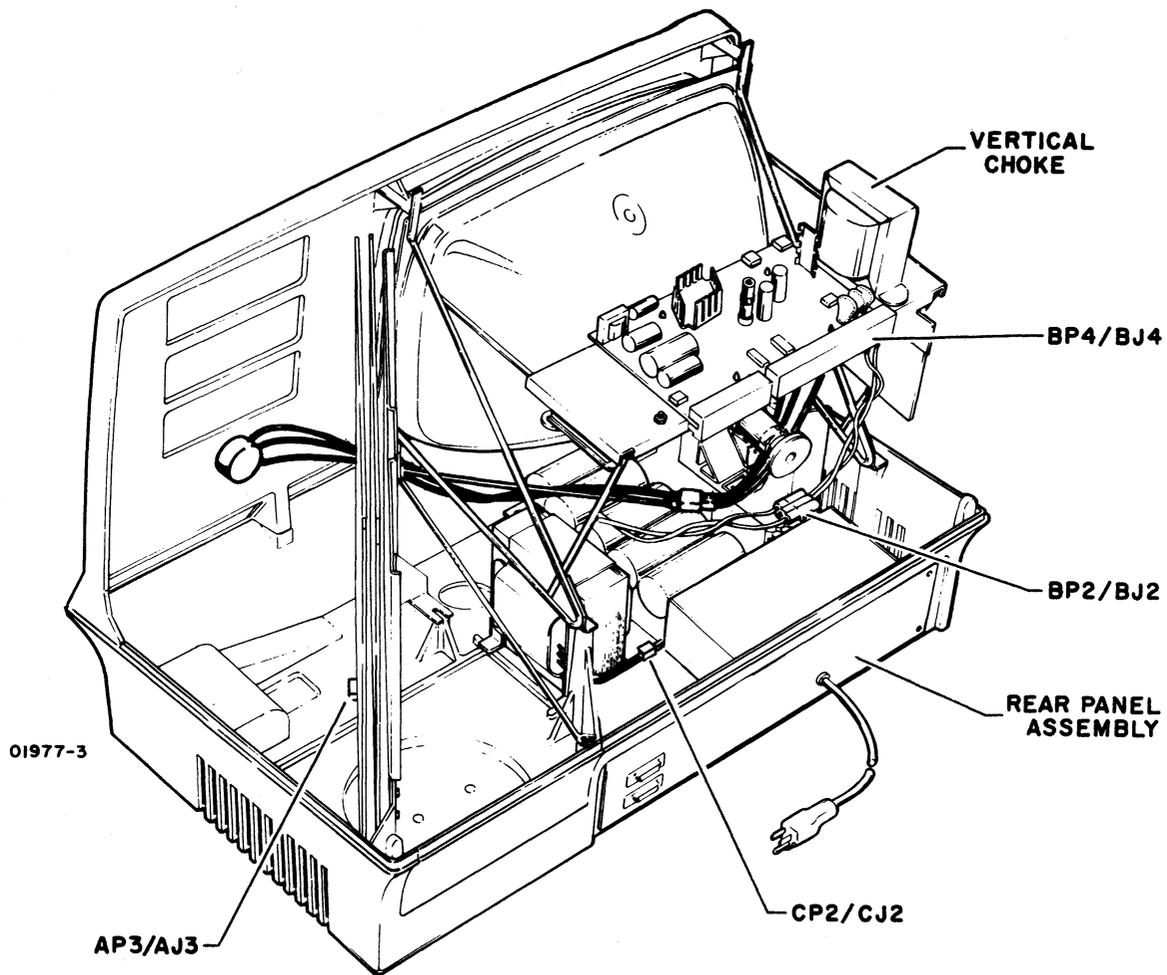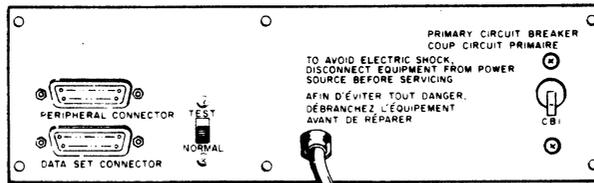

FRONT VIEW

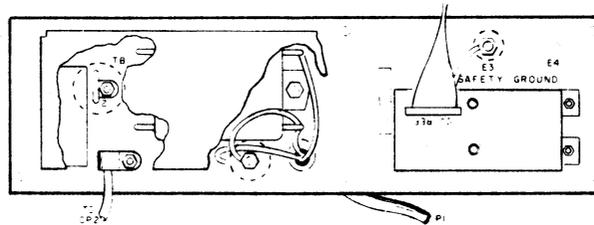

REAR VIEW

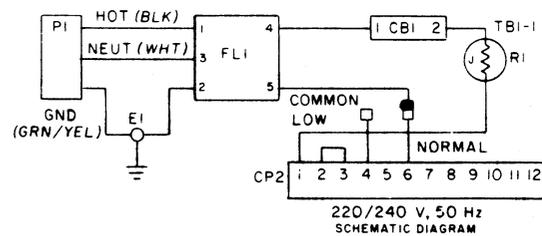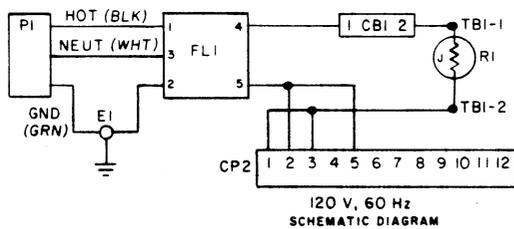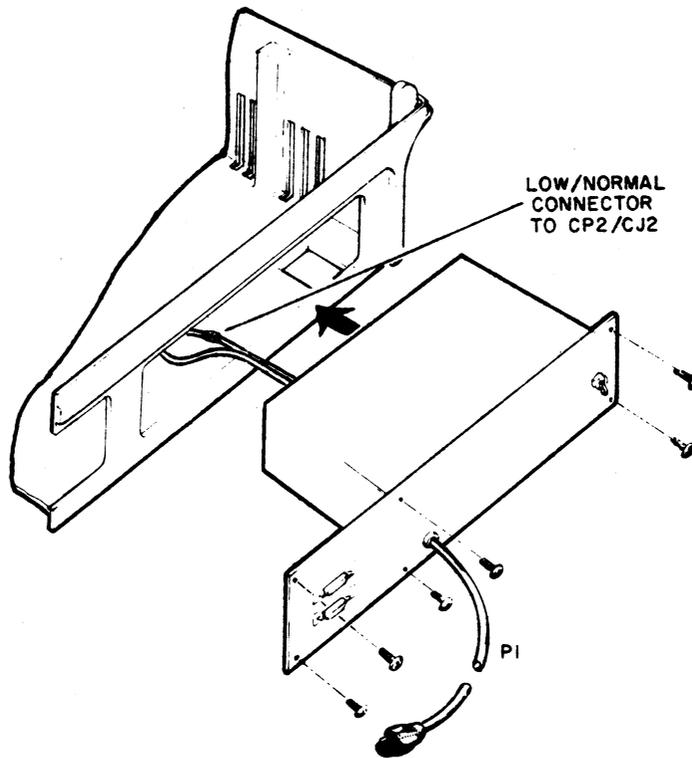

02604

Figure CRT6. Rear Panel Removal and Connections


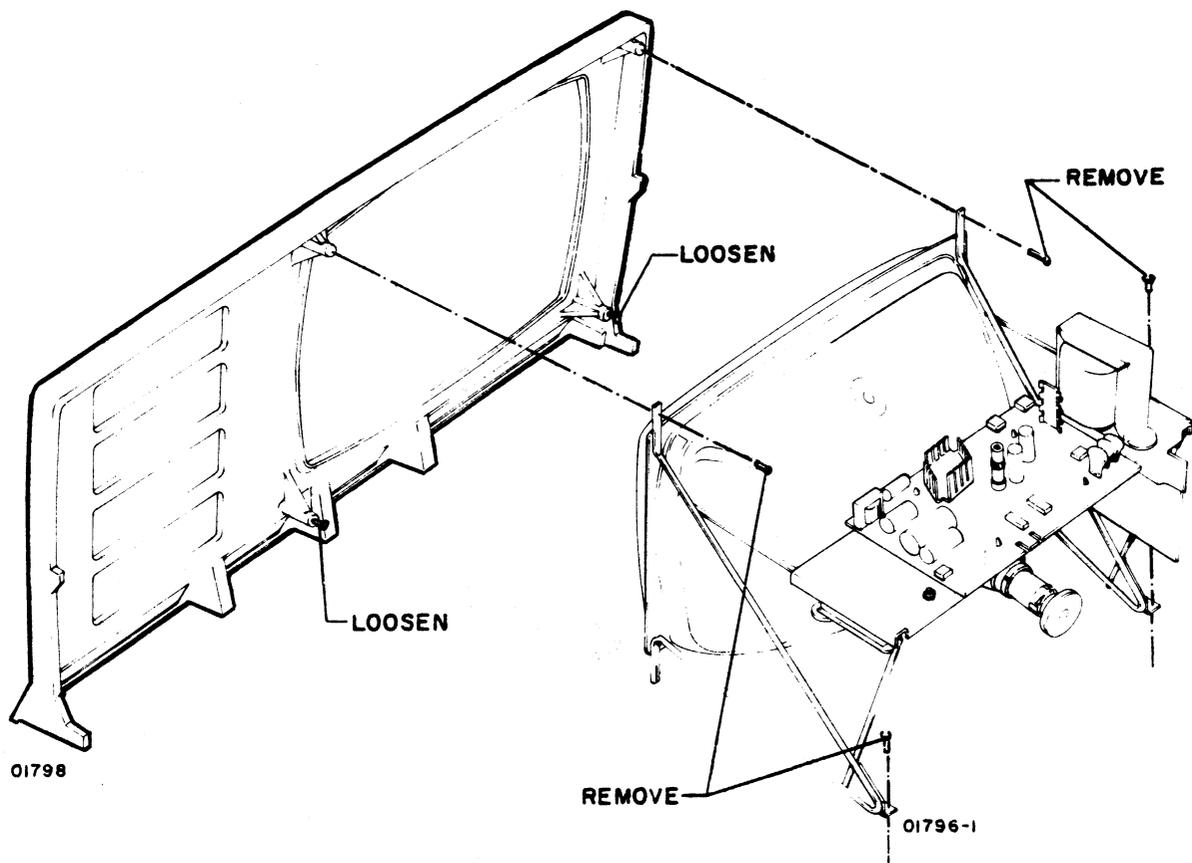


Figure CRT7. Monitor Assembly and Bezel Screw Removal

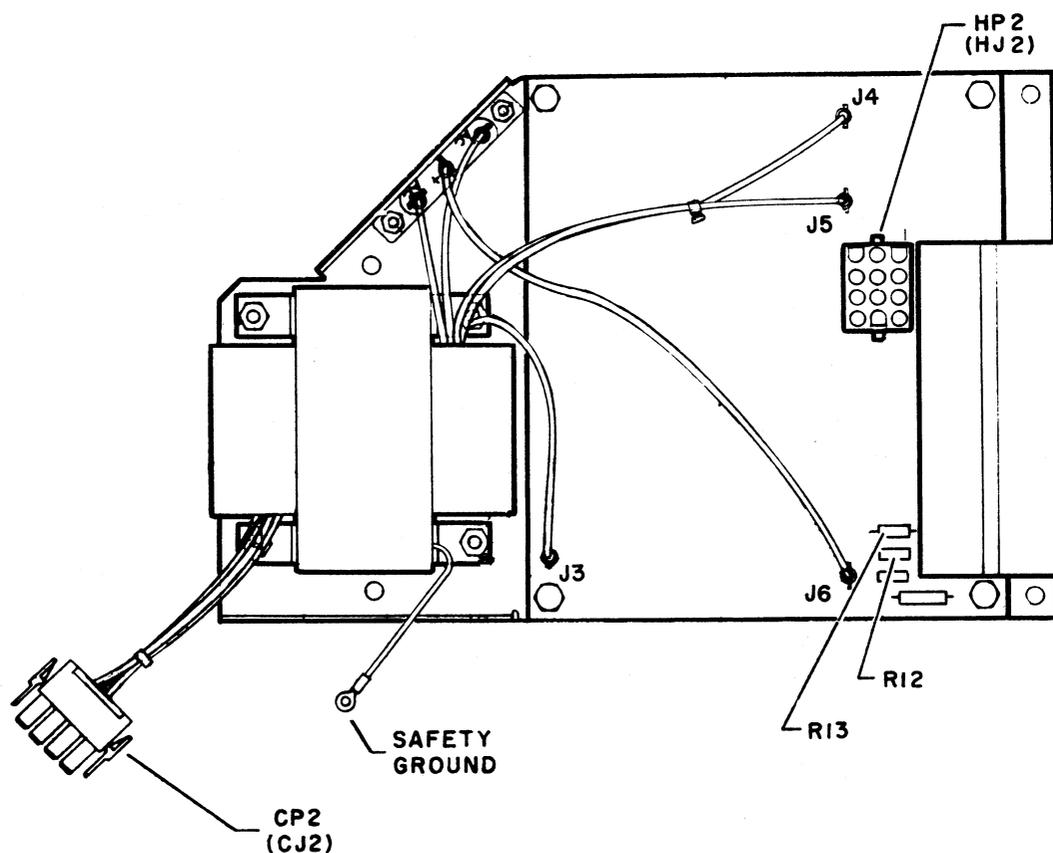

02634

<u>HJ2 Pin No.</u>	<u>Output</u>	<u>Tolerances</u>
1	19 V ac at 0.1 A, maximum	$\pm 1.9$ V ac
2	Not used	
3	+23 V dc at 1.5 A, maximum	-1.5 to +2.3 V dc
4 through 6	Ground	
7	12 V dc at 0.2 A, maximum	$\pm 600$ mV dc
8 and 9	Ground	
10	-12 V dc at 0.2 A, maximum	$\pm 600$ mV dc
11 and 12	+5 V dc at 6.0 A, maximum	$\pm 250$ mV dc

<u>Nominal Input</u>	<u>Tolerance Range</u>	<u>CJ2 Pin No.</u>
120 V ac	102 to 128 V ac	1 (hot) and 2 (neutral)
220 V ac	198 to 246 V ac	1 (hot) and 4 (neutral)
240 V ac	216 to 268 V ac	1 (hot) and 6 (neutral)

Figure CRT8. Power Supply Module Layout and Input/Output Voltages

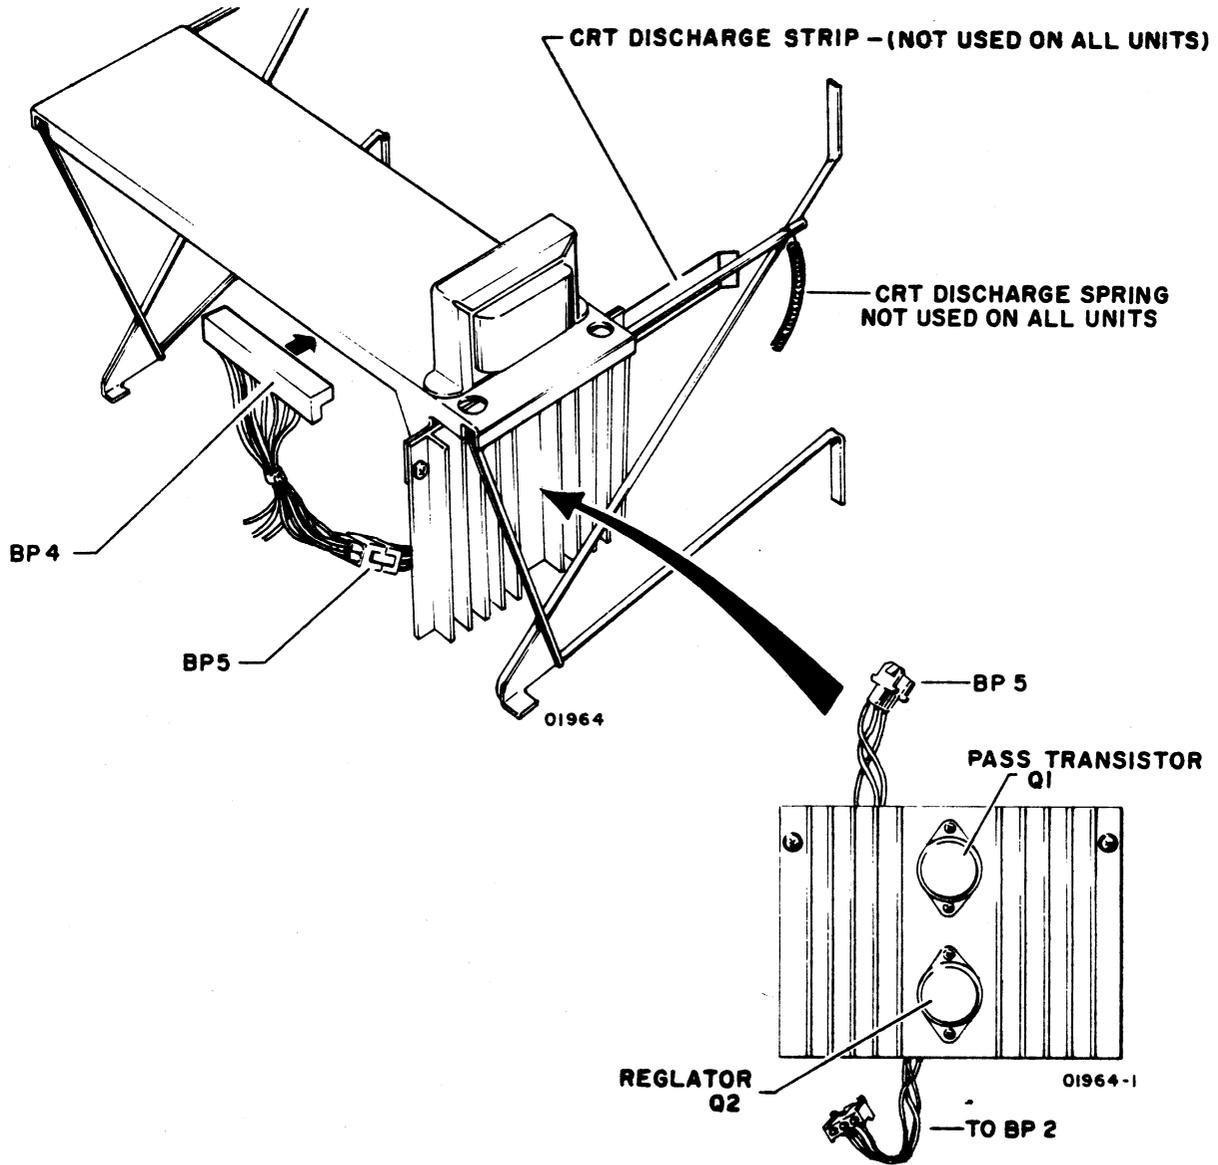


Figure CRT9. +15-V dc Regulator Location

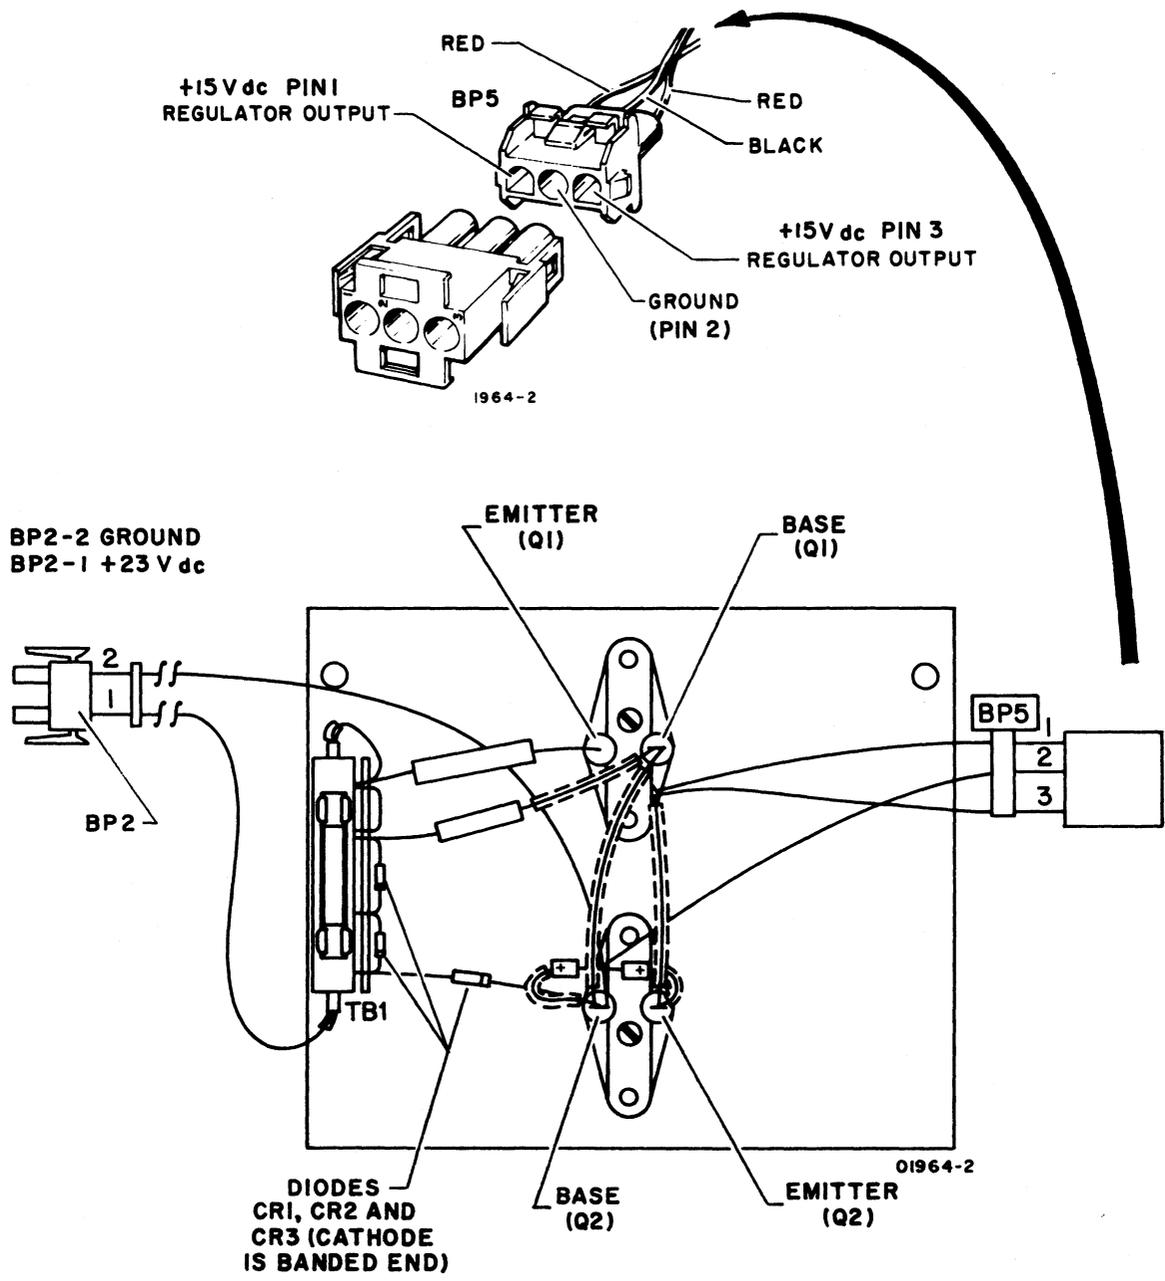


Figure CRT10. +15-V dc Regulator Assembly Detail (Rear View)

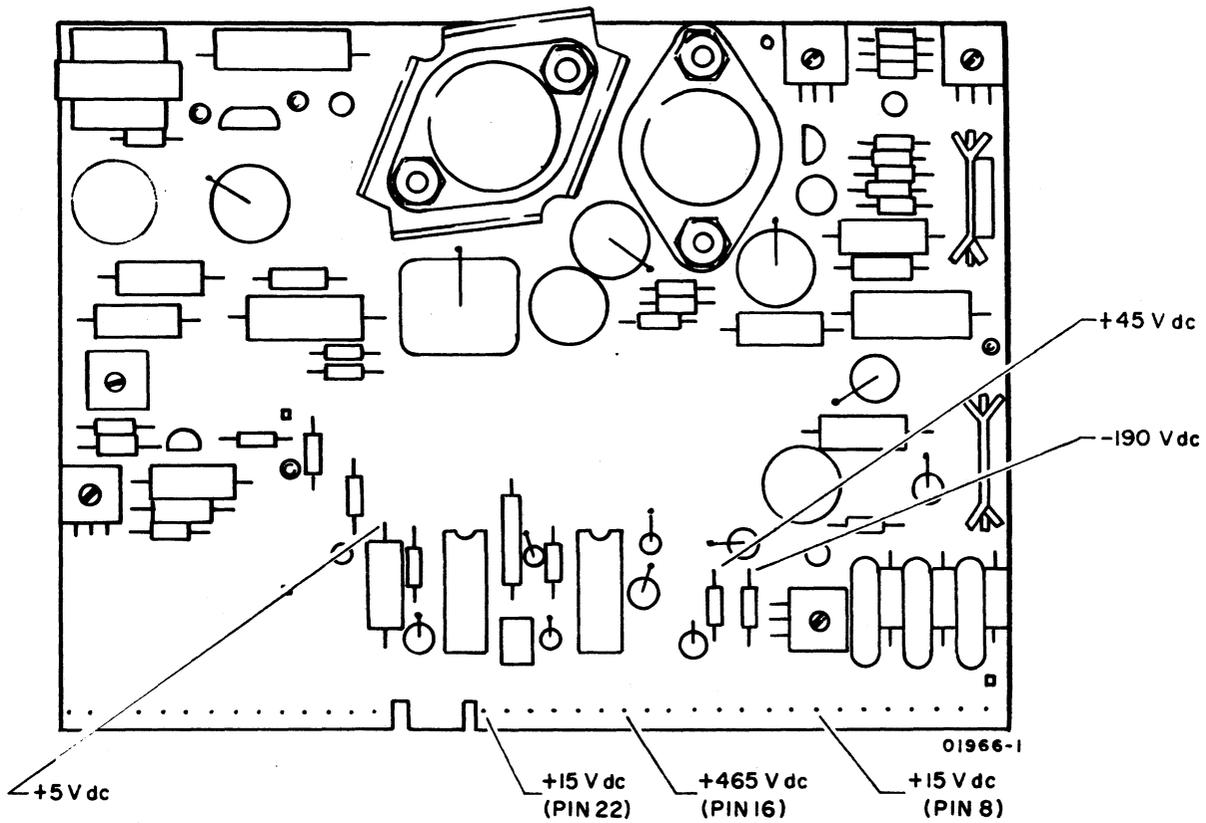


Figure CRT11. Monitor PC Board Voltages

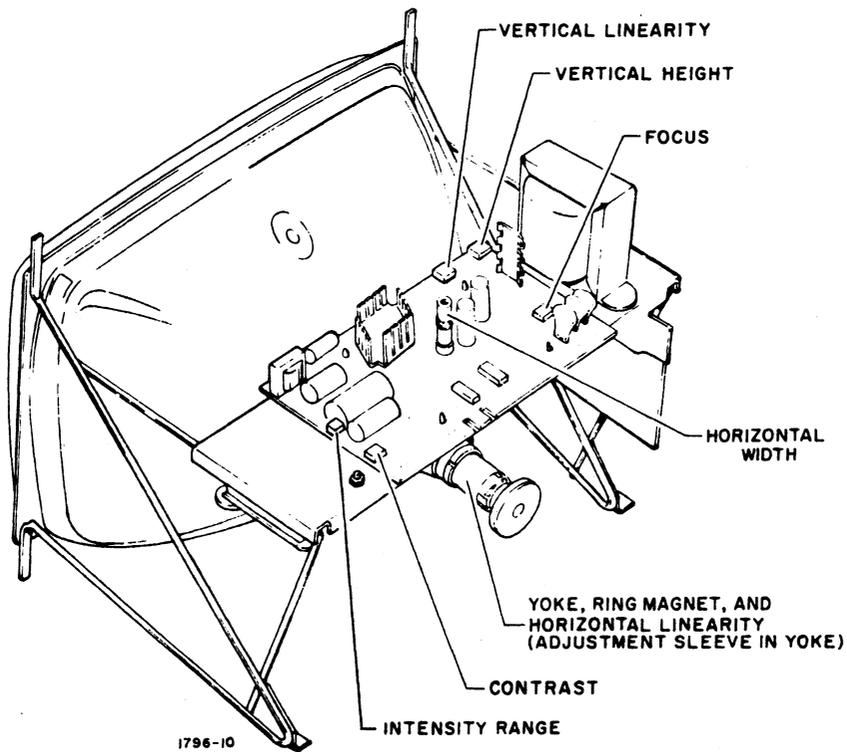


Figure CRT12. Location of Video Monitor Adjustments

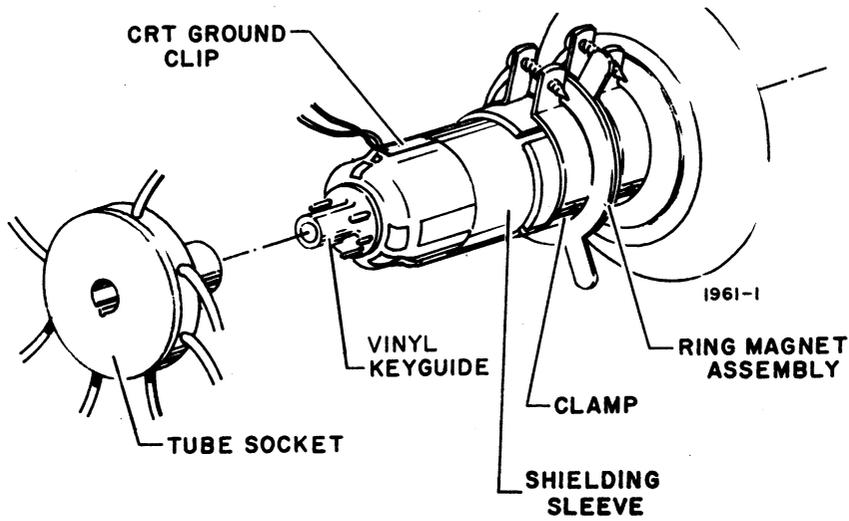


Figure CRT13. Yoke Adjustments


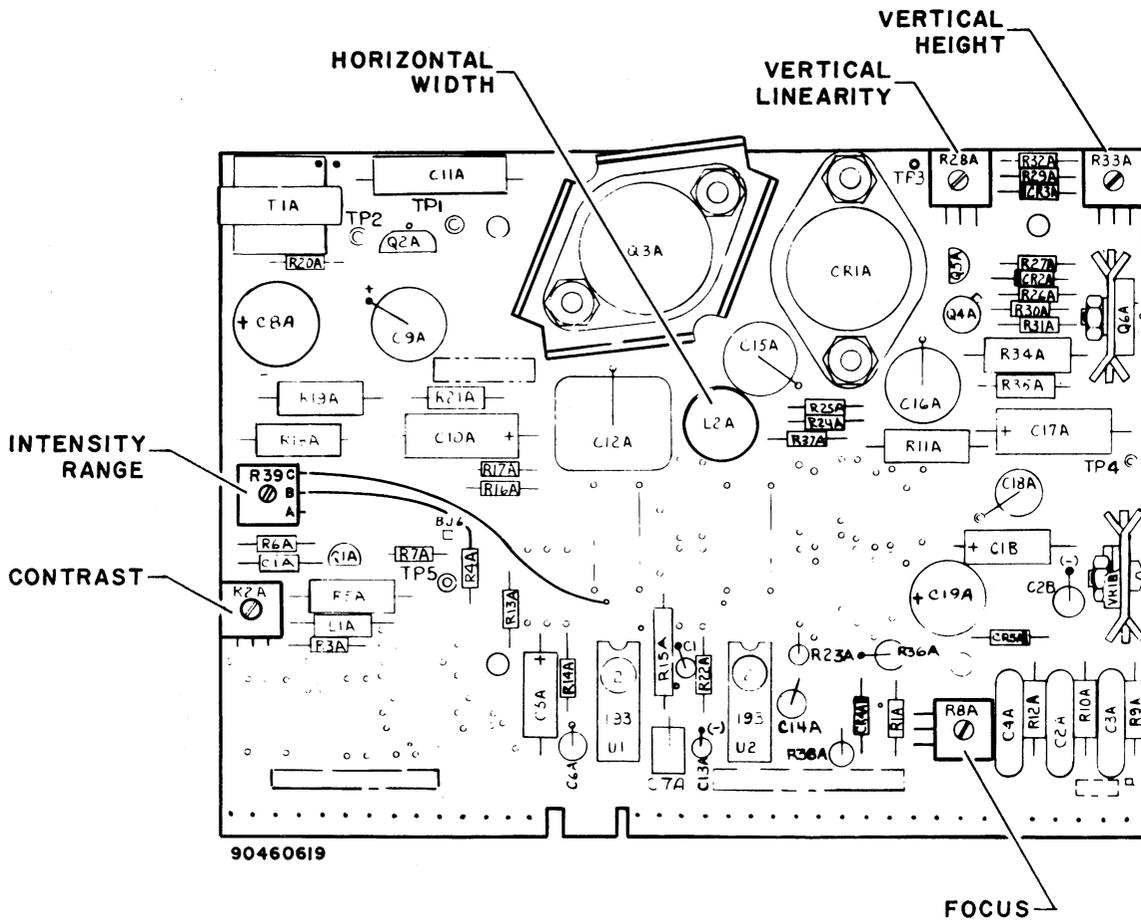



Figure CRT14. Monitor PC Board Adjustments

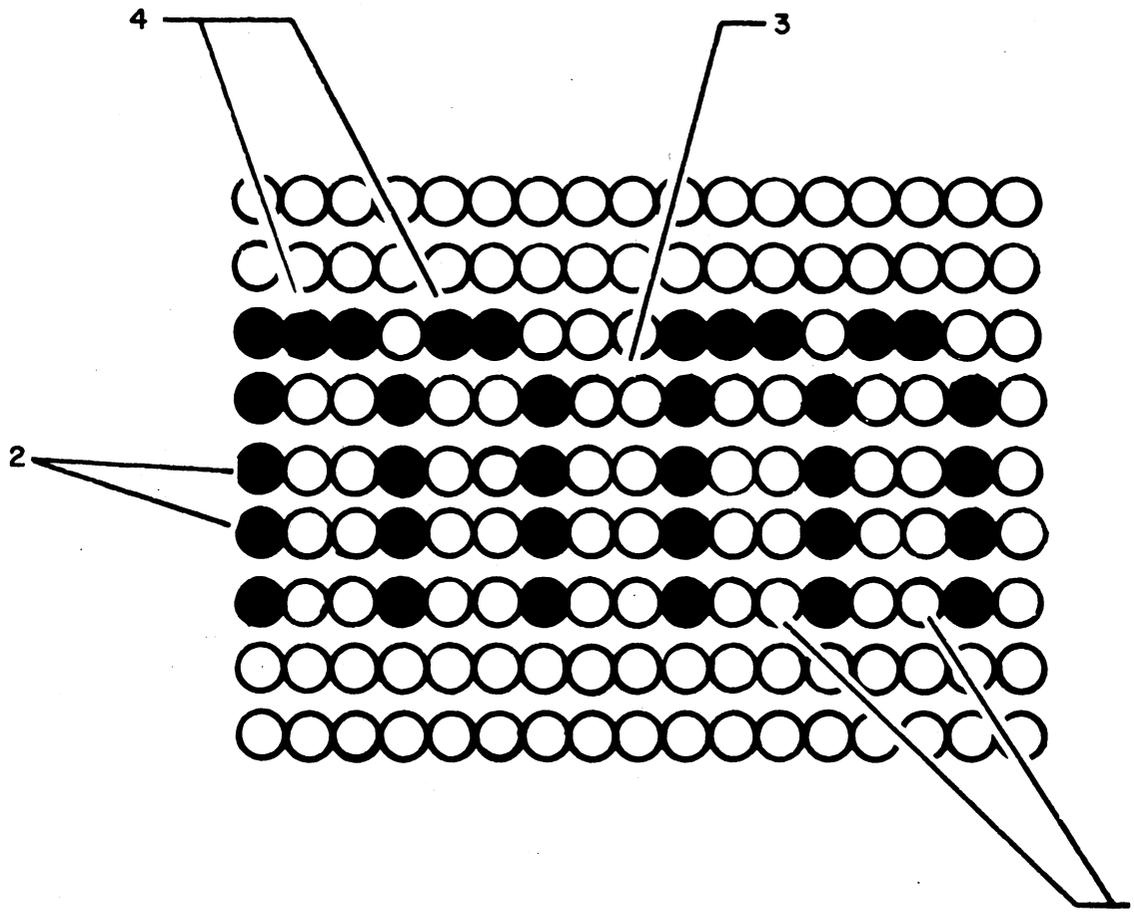

02576-1

- NOTE: OBSERVE THE INDICATED POINTS FOR OPTIMUM CHARACTERISTICS OF:
- 1) DOT SIZE AND SHAPE
  - 2) SPACING BETWEEN VERTICAL STROKES
  - 3) CHARACTER SEPARATION
  - 4) TAILS OR SMEARING

Figure CRT15. Character Resolution

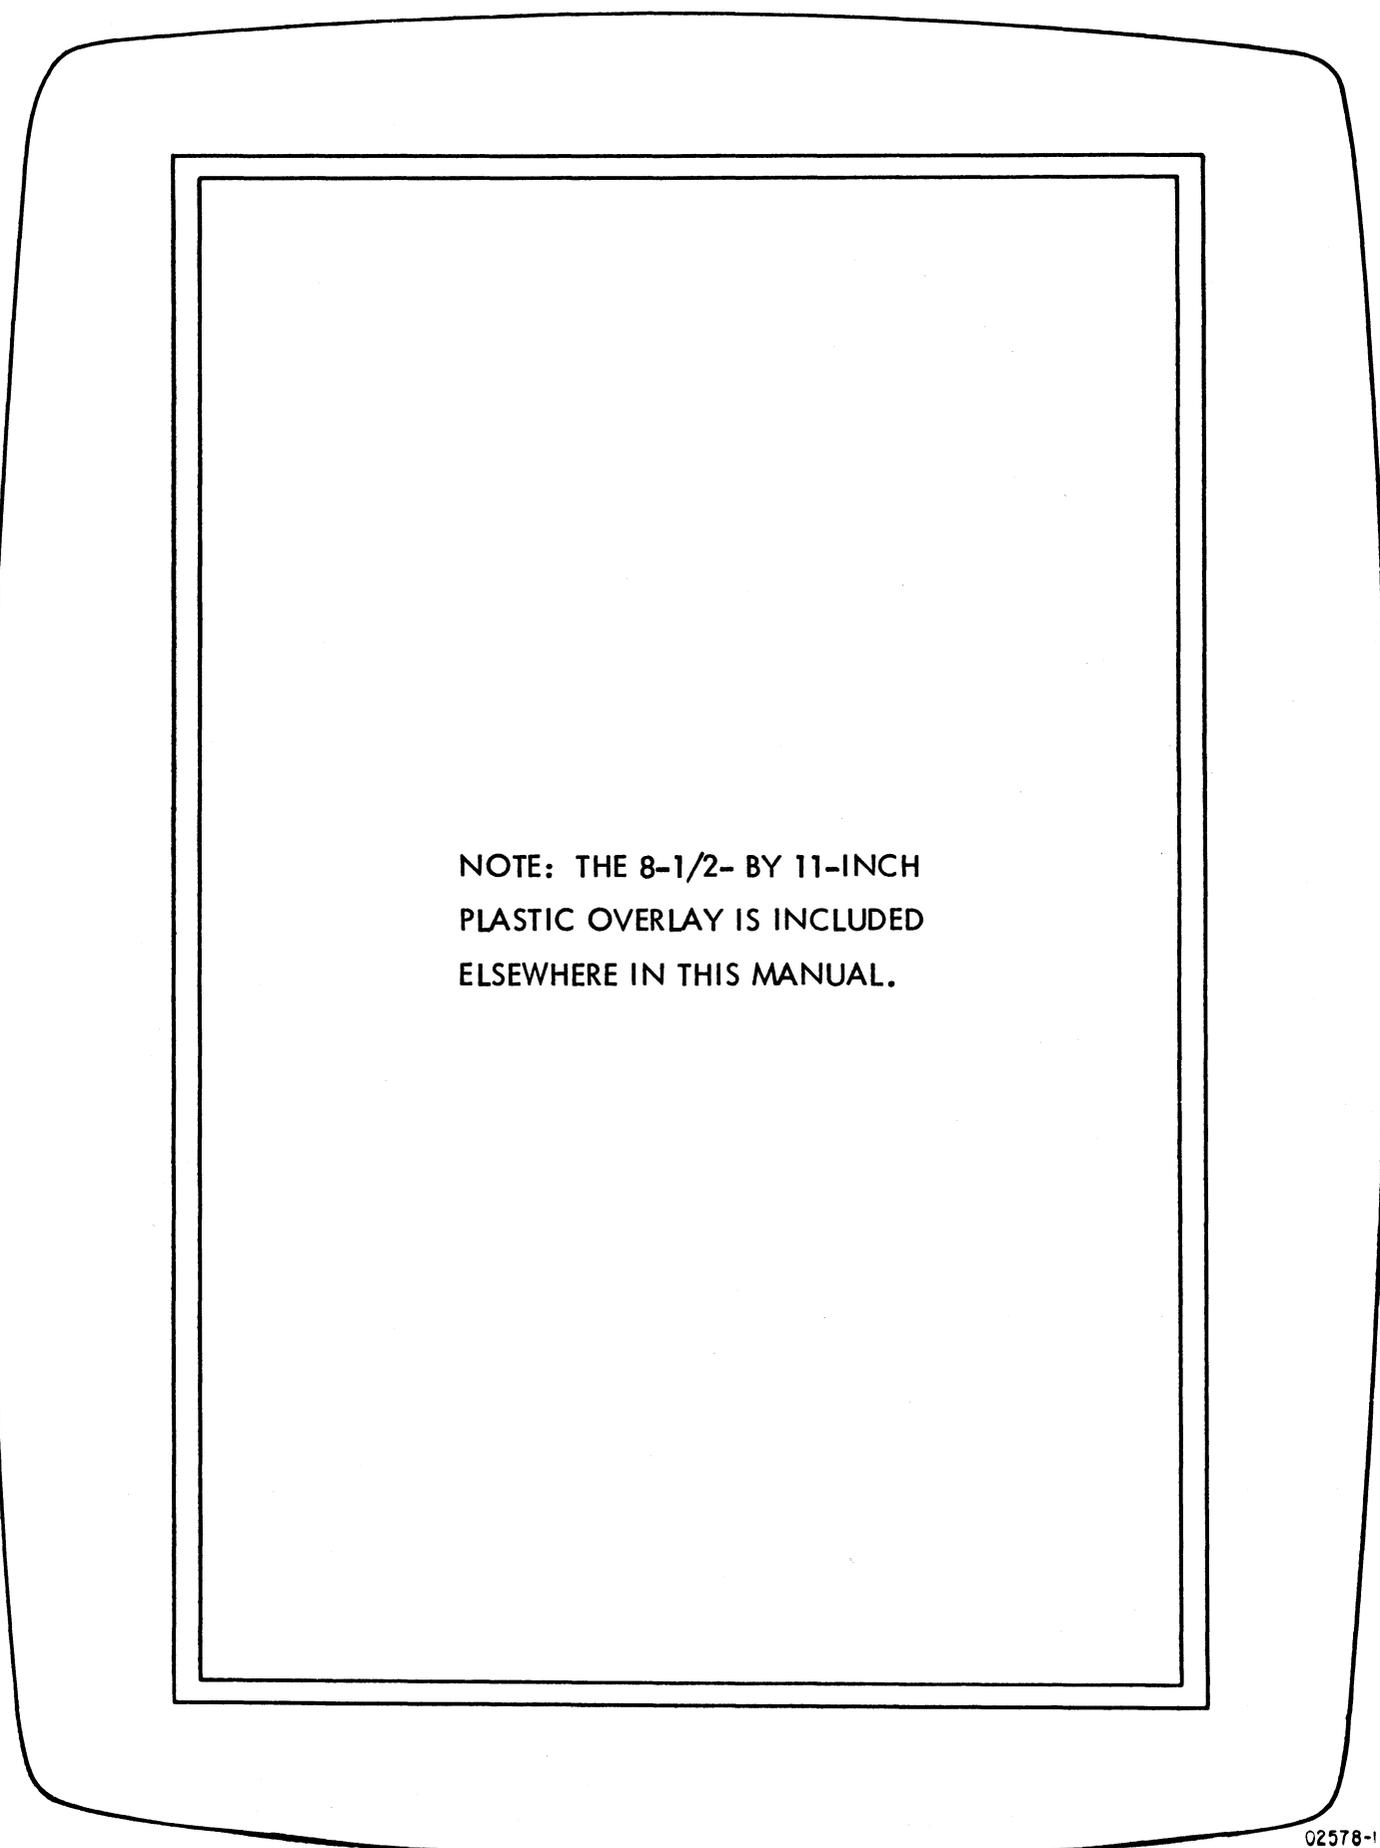

NOTE: THE 8-1/2- BY 11-INCH  
PLASTIC OVERLAY IS INCLUDED  
ELSEWHERE IN THIS MANUAL.



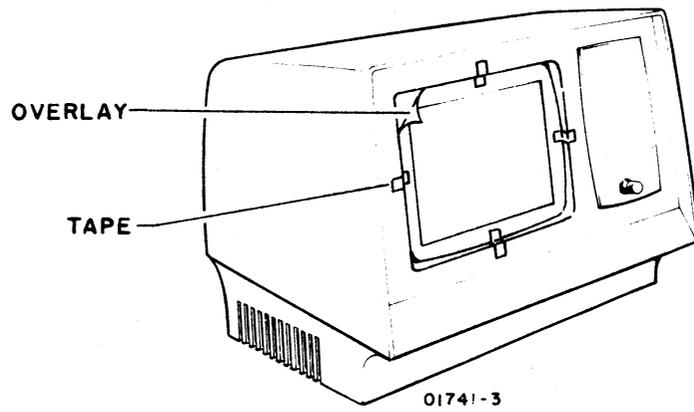


Figure CRT16. Applying Overlay to CRT Screen

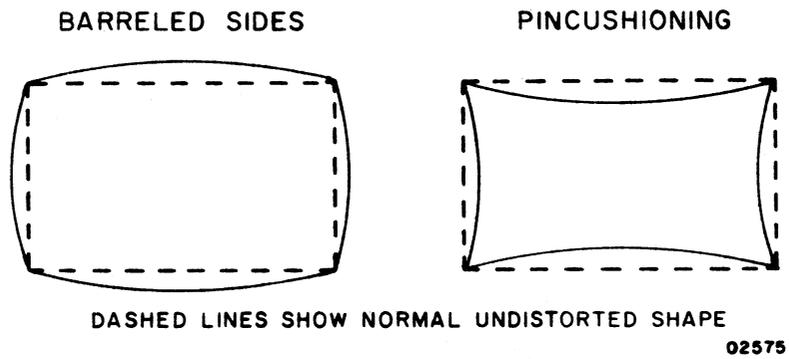


Figure CRT17. Identifying Display Distortion



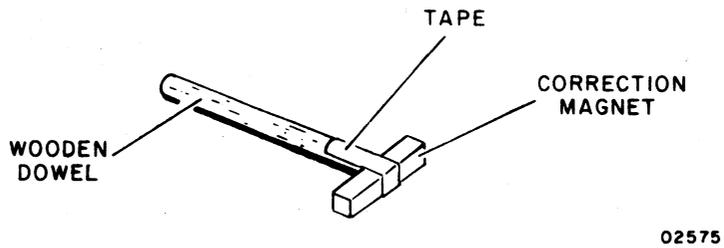


Figure CRT18. Attaching Correction Magnet to Dowel

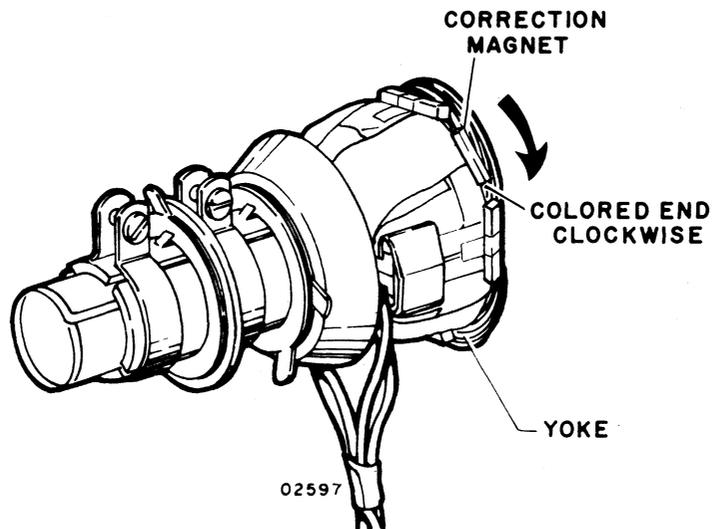

MAGNET ADDED TO YOKE TO CORRECT PINCUSHIONING (SEE NOTE)

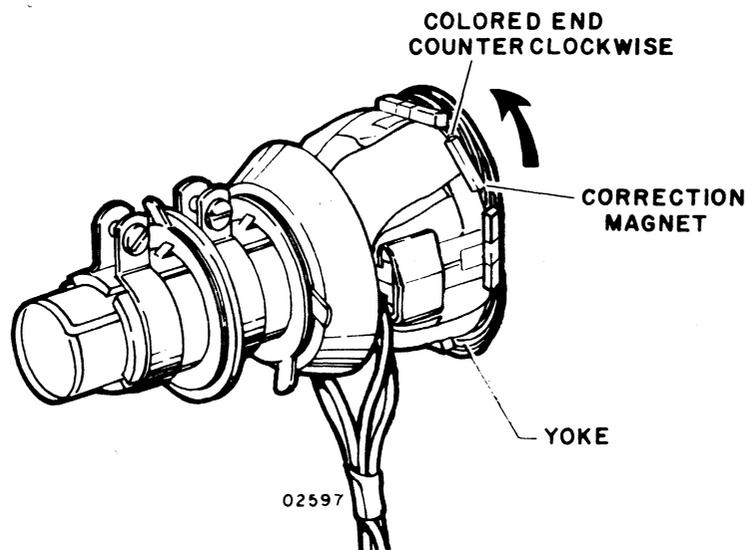

MAGNET ADDED TO YOKE TO CORRECT BARRELING (SEE NOTE)

NOTE: IF BOTH BARREL AND PINCUSHION DISTORTION WERE BEING CORRECTED, THE COLORED END OF THE CORRECTION MAGNETS WOULD BE PLACED ON THEIR RESPECTIVE SIDE OF THE YOKE AND THE RESULT WOULD BE A MIXTURE OF THE TWO EXAMPLES SHOWN.

Figure CRT19. Magnet Placement and Distortion Correction

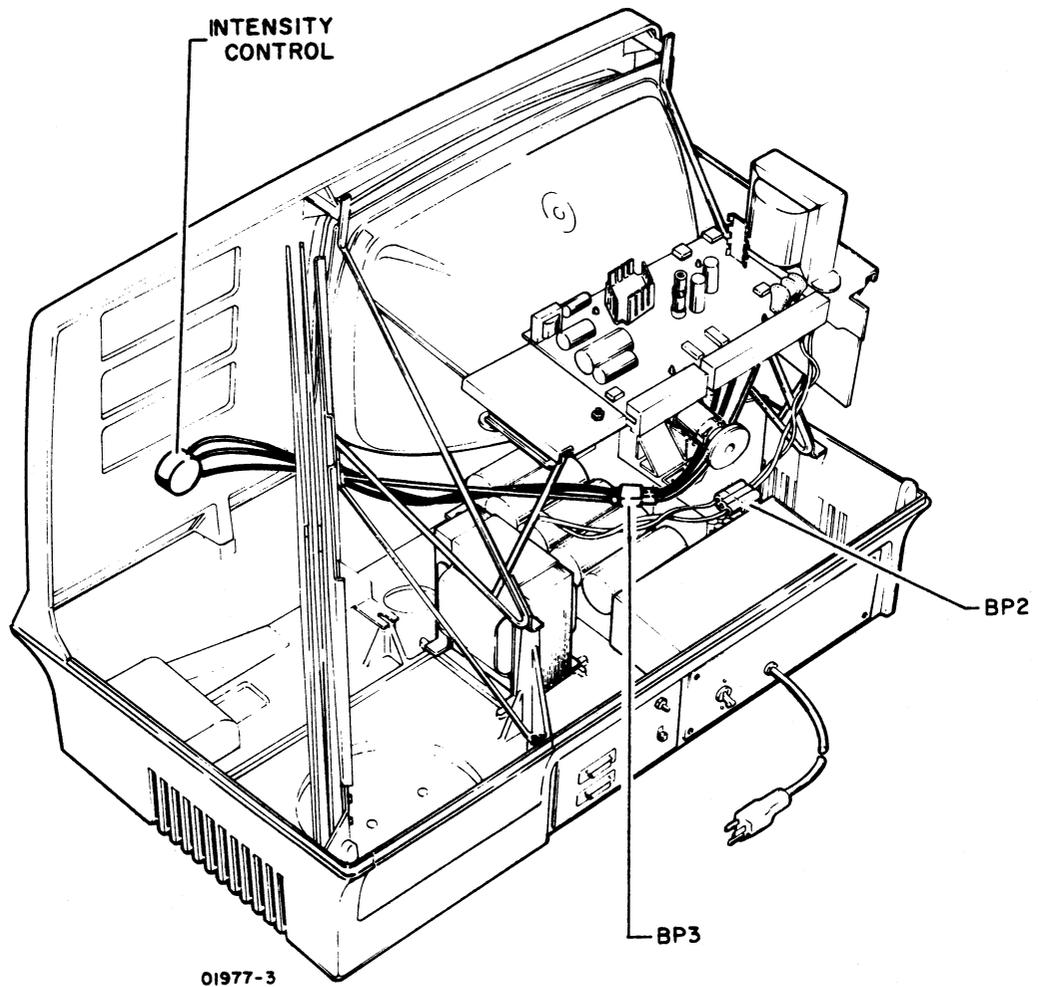


Figure CRT20. Intensity Control Assembly Location

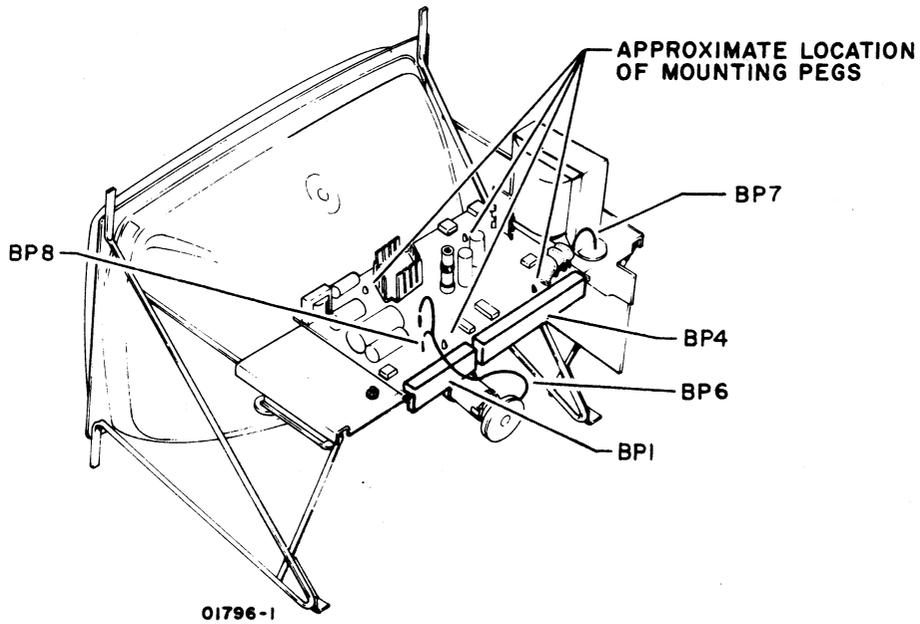


Figure CRT21. Monitor PC Board Connections



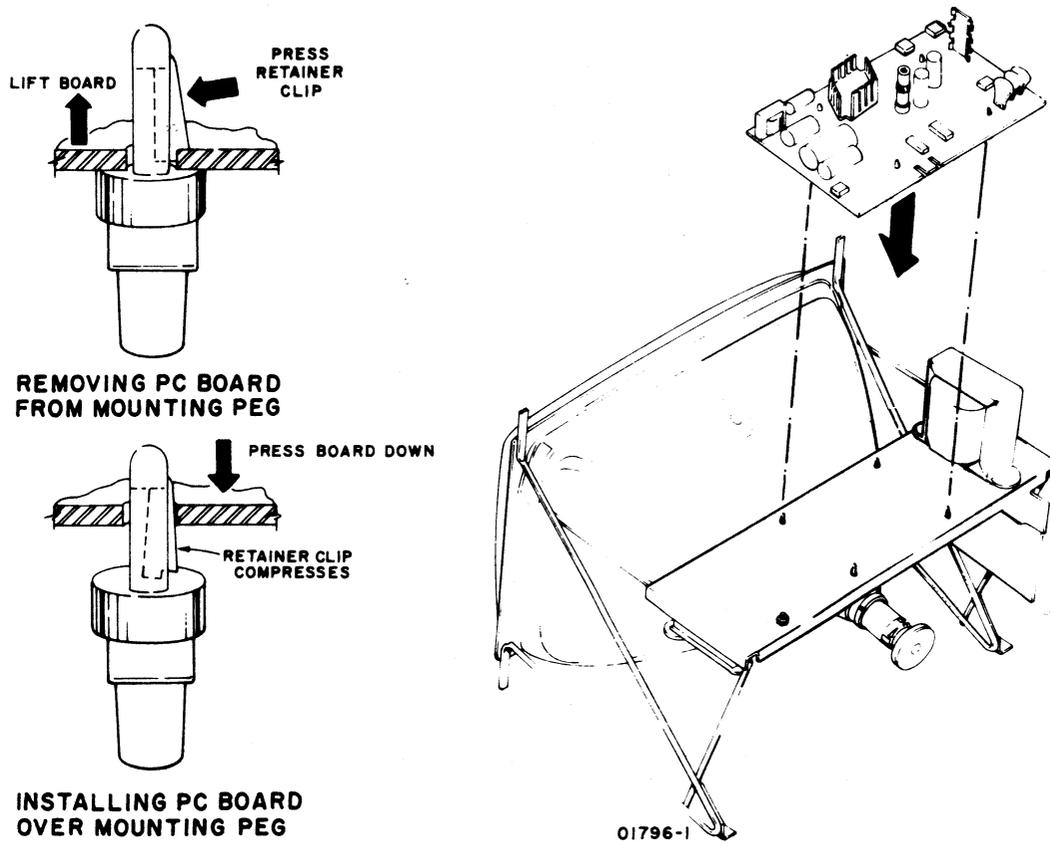


Figure CRT22. Monitor PC Board Placement

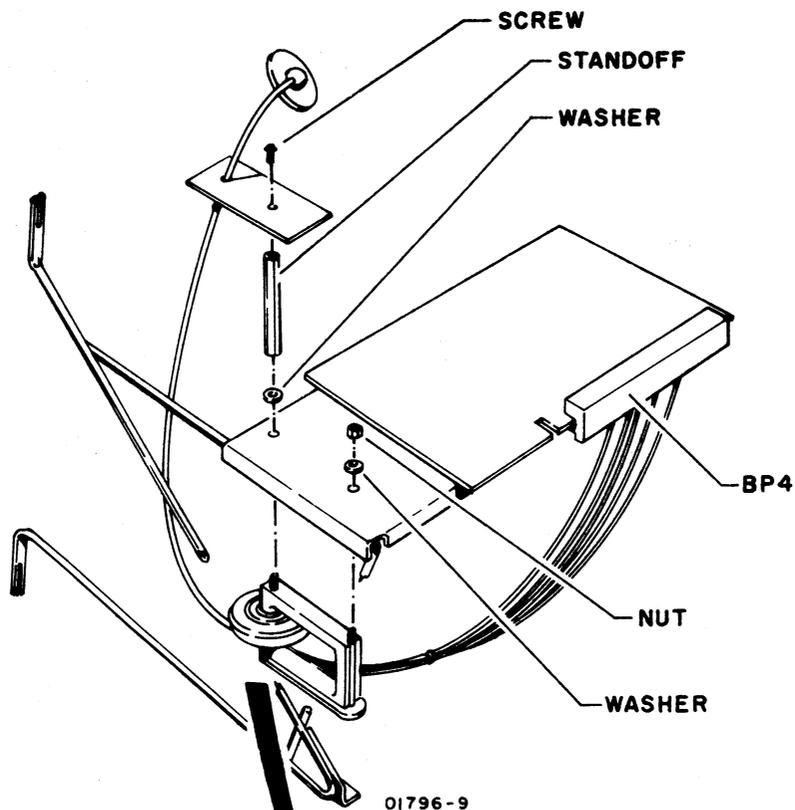

01796-9

HIGH-VOLTAGE  
TRANSFORMER

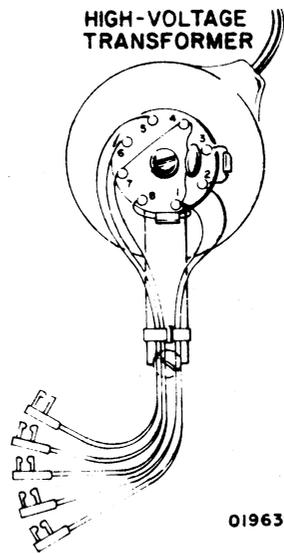

01963-1

- T1-8 to BP4-16
- T1-2 to BP4-17
- T1-5 to BP4-13
- T1-6 to BP4-5
- T1-7 to BP4-14

NOTE: HIGH-VOLTAGE TRANSFORMER ALSO COMES IN A VERSION WITH A RECTANGULAR BASE. CONNECTOR NUMBERING ON BOTH VERSIONS IS THE SAME.

Figure CRT23. High-Voltage Transformer Installation

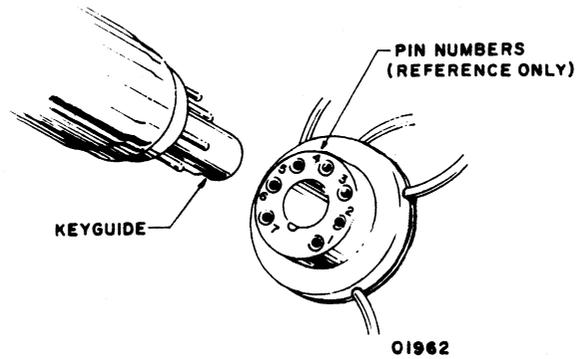


Figure CRT24. CRT Cap Removal

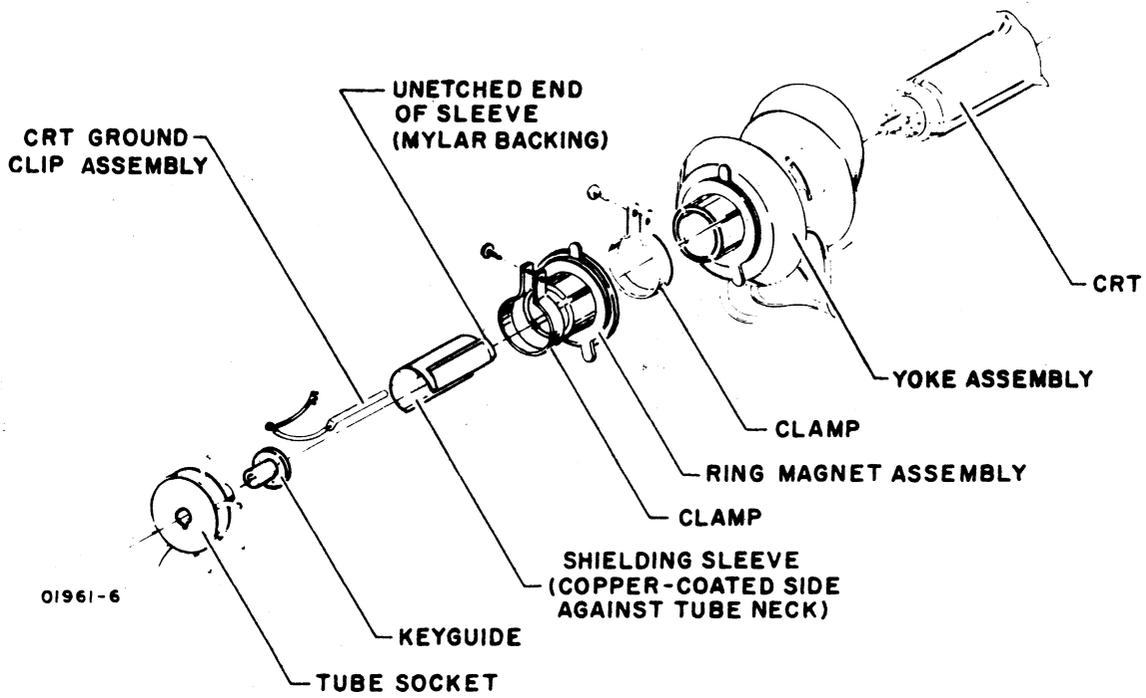


Figure CRT25. CRT Yoke Assembly

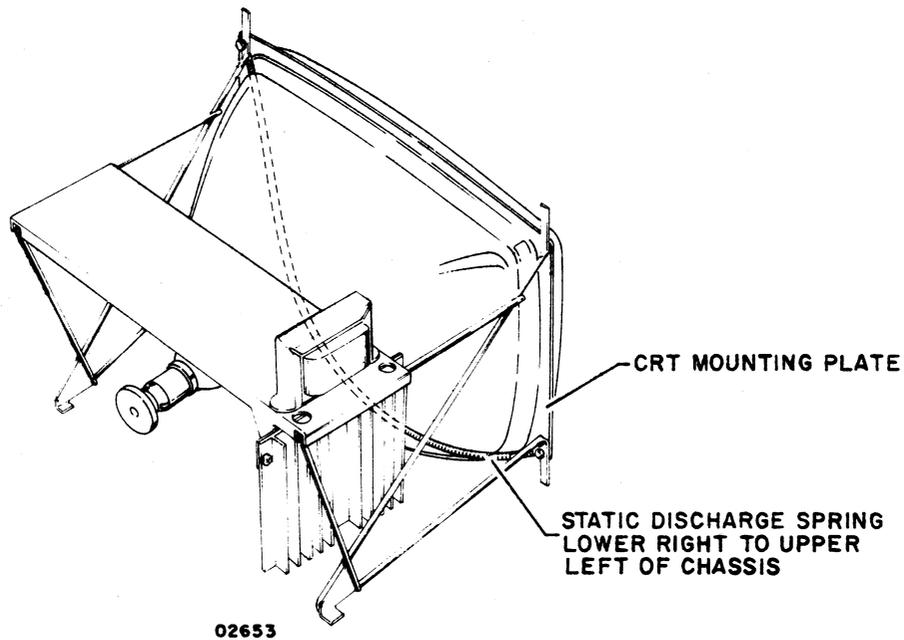


Figure CRT26. Static Discharge Spring Location

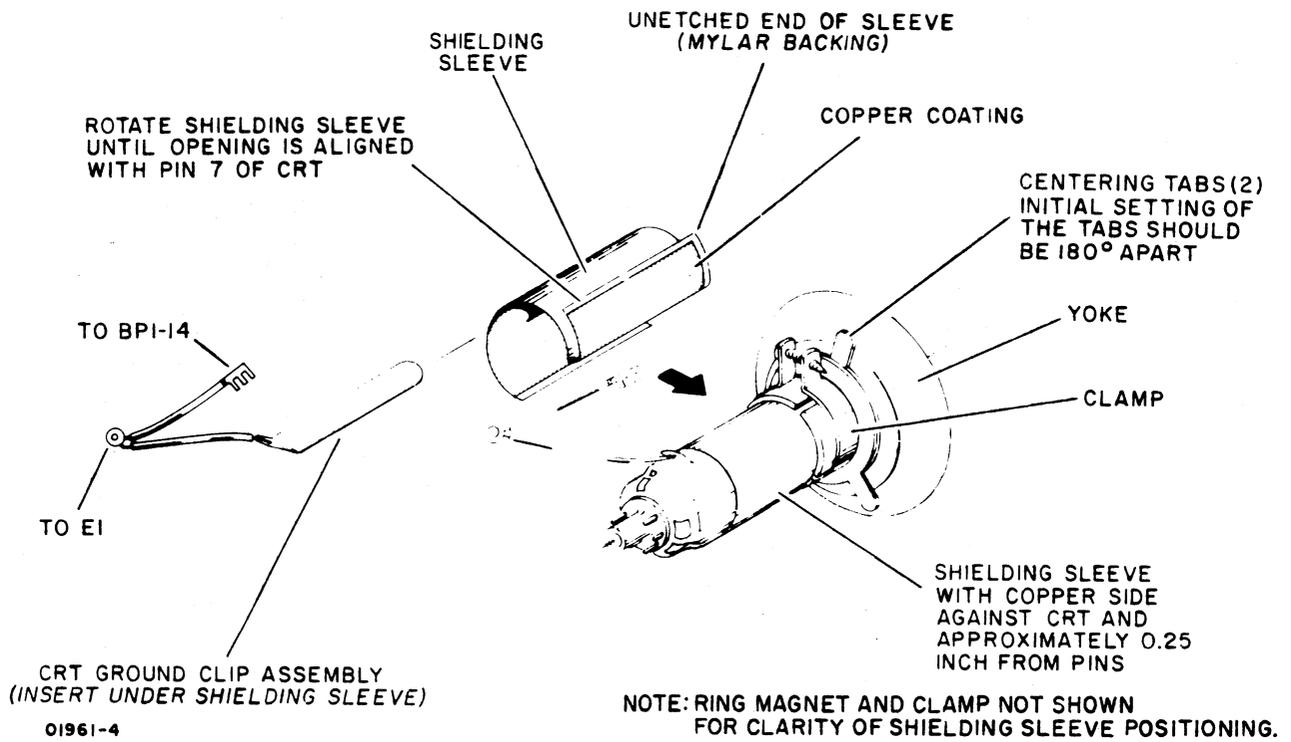


Figure CRT27. Position of Shielding Sleeve

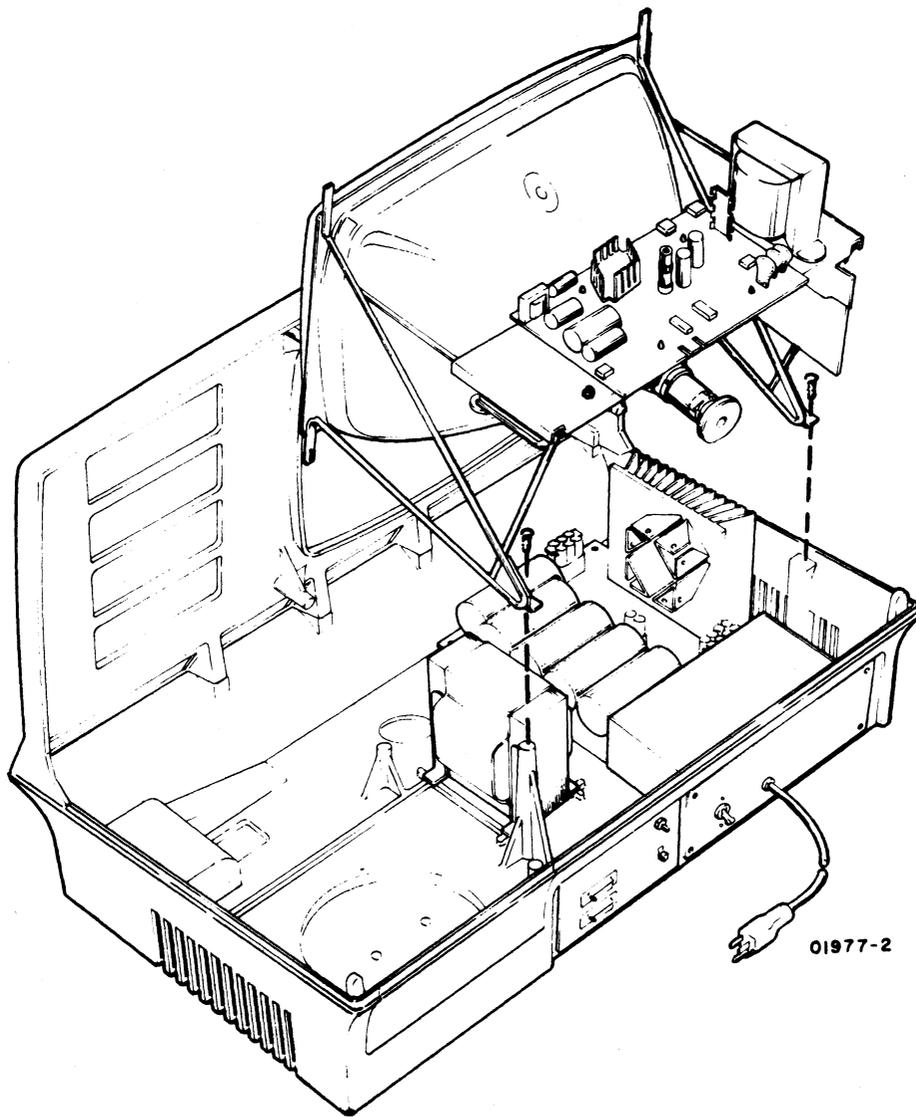


Figure CRT28. Monitor Assembly Removal

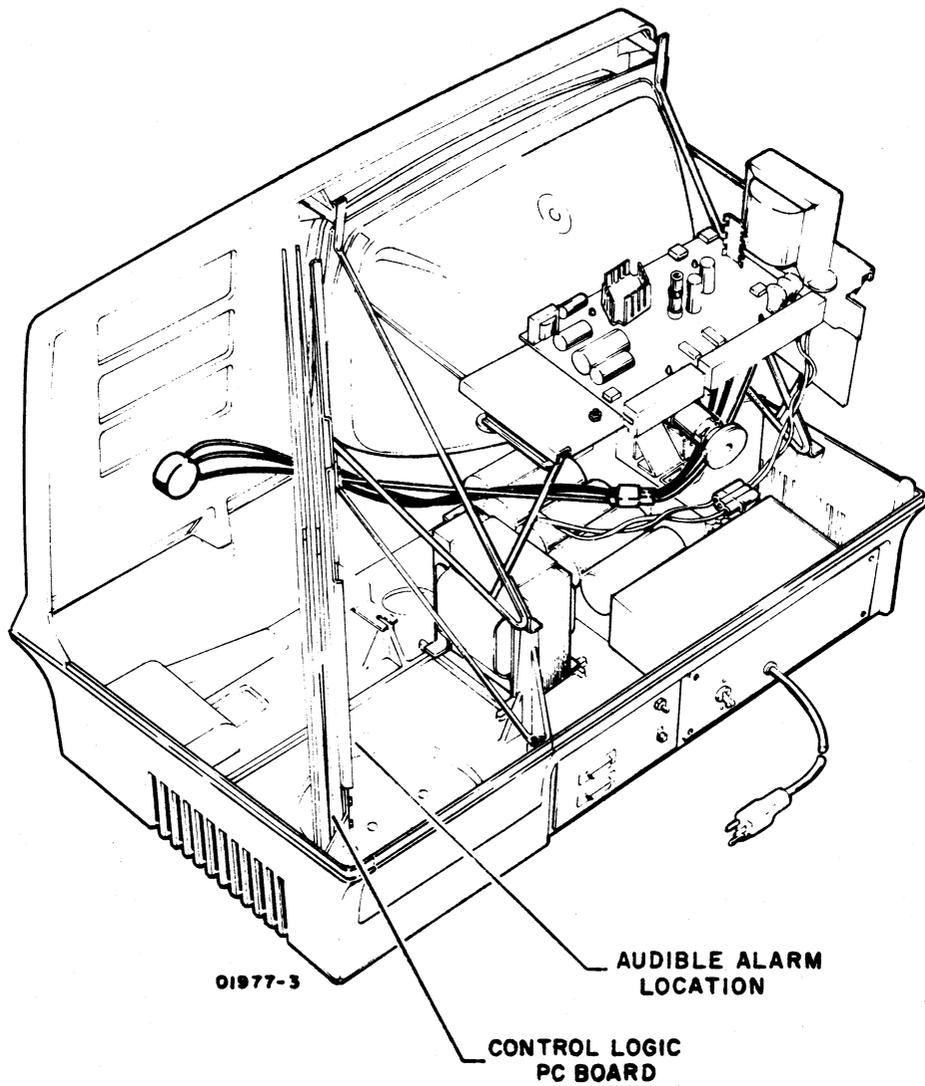


Figure CRT29. Location of Audible Alarm and Control Logic PC Board



TABLE NIP1. DDLT FOR NONIMPACT PRINTER (SHEET 1 OF 2)

POWER ON, SWITCHES, AND SUBSYSTEM TEST SECTION 6 CHECKS								
ASSUME								
Nonimpact printer is properly installed per procedures in appendix of associated Operators Guide/Reference Manual (see preface). Printer has paper installed and power turned on per procedure NIP1. Display terminal is operational and a printer error has either occurred or is suspected. Do nonimpact printer test portion of procedure TS6.								
CONDITIONS	SITUATIONS							
	1	2	3	4	5	6	7	8
Is power on at printer?	Y	Y	Y	Y	Y	Y	N	O T H E R
Does line feed (LF switch) operate correctly?	Y	Y	Y	Y	Y	N	-	
Does carriage return (CR switch) operate correctly?	Y	Y	Y	Y	N	-	-	
Does printer track keyboard inputs correctly; that is does it print uppercase and lowercase characters properly, line feed, carriage return, and backspace upon respective keyboard inputs? If so, key in a few lines of characters for use in print quality checks in table NIP2.	Y	Y	Y	N	-	-	-	
Is printhead movement correct?	Y	Y	N	-	-	-	-	
Do all characters print?	Y	N	-	-	-	-	-	
ACTIONS	SEQUENCE							
Perform print quality checks, sheet 2 of this DDLT.	X	-	-	-	-	-	-	
Perform carriage return LED adjustment, procedure NIP6.	-	-	-	-	1	-	-	
Perform printhead actuation adjustment, procedure NIP7.	-	3	-	-	-	-	-	
Check fuse at rear of unit.	-	-	-	-	-	-	1	
Check power available from site outlet.	-	-	-	-	-	-	2	
Remove cabinet top and check internal cable connections.	-	2	-	-	-	-	3	
Check power ON switch (continuity check with ac power cord disconnected from site outlet).	-	-	-	-	-	-	4	
Replace power supply, procedure NIP12.	-	-	-	-	-	-	5	
Check input/output cable connections at printer and other end.	-	1	1	1	-	-	-	
Check serial input clock timing, procedure NIP10.	-	6	4	4	-	-	-	
Replace print mechanism, procedure NIP11.	-	4	2	2	2	X	-	
Call for assistance.	-	5	3	3	-	-	-	X
Note: After completing any repairs or maintenance, verify that the printer is operational by rerunning system checkout (procedure TS6).								

TABLE NIP1. DDLT FOR NONIMPACT PRINTER (SHEET 2 OF 2)

PRINT QUALITY CHECKS							
ASSUME							
Printer operation checks per sheet 1 of this DDLT completed.							
CONDITIONS	SITUATIONS						
	1	2	3	4	5	6	7
Is horizontal character spacing correct?	Y	Y	Y	Y	Y	N	O
Is printing dark enough across entire page?	Y	Y	Y	Y	N	-	T
Is print density even across page?	Y	Y	Y	N	-	-	H
Is print density even from top to bottom of characters?	Y	Y	N	-	-	-	E
Does the printhead move steadily (not oscillate) during print operations?	Y	N	-	-	-	-	R
ACTIONS	SEQUENCE						
Nonimpact printer checks OK. Return to table TS1.	X	-	-	-	-	-	-
Perform head compensation adjustment, procedure NIP5.	-	-	-	-	1	-	-
Perform printhead actuation adjustment, procedure NIP7.	-	-	1	1	2	-	-
Perform retriggerable OS adjustment, procedure NIP3.	-	-	-	-	-	1	-
Check 1-kHz oscillator time, procedure NIP2.	-	-	2	2	3	-	-
Perform brake LED and one-shot adjustment, procedure NIP4.	-	1	-	-	-	-	-
Replace print mechanism, procedure NIP11.	-	2	3	3	4	2	-
Call for assistance.	-	-	-	-	-	-	X
Note: After completing any repairs or maintenance, verify that the printer is operational by rerunning system Checkout (procedure TS6).							

## **NONIMPACT PRINTER CORRECTIVE MAINTENANCE PROCEDURES — GENERAL**

Following pages contain all of the procedures that are referenced either from table NIP1, DDLT for Nonimpact Printer, or from elsewhere within this manual. In addition, other procedures which may serve useful (NIP8 and 9) are provided.

Parts replacement level for the nonimpact printer is to the printer mechanism (including circuit cards), power supply assembly, fuse, and printer interface control board in the display terminal. If a procedure allows a lower level of replacement than the standard on-site spare parts list, such as complete parts list in printer manual, or calls for adjustments more detailed than it may be able to perform on site because of limited equipment/or facilities — then it is up to the customer engineer to resolve a problem by using the lowest level field-replaceable assembly or part available.

### WARNING

Any time the NIP cabinet hood is removed, if it is necessary to work near the exposed underside of the power ON switch or near any of the ac input power lines, always shut power off and disconnect ac power cord from site power outlet.

#### **Procedure NIP1 — Paper Loading and Power On**

Select paper as recommended under the heading Nonimpact Printer Paper at the end on this procedure, and perform the following steps:

- 1) See that printer power ON switch is not lit (press to turn off).
- 2) Open paper cover by pressing at rear of cover.
- 3) Remove paper spindle by lifting straight up.
- 4) Remove old paper core and install new paper roll on spindle.
- 5) Set paper roll behind printer, lift paper rod and thread paper around paper rod and between paper guides (see figure NIP1).
- 6) Feed paper through printer by turning paper feed roll by hand.
- 7) Roll up slack and replace spindle and paper in the paper roll slot of printer.
- 8) Close paper cover.
- 9) Press printer power ON switch so it lights indicating power on.
- 10) Press the LF (line feed) switch to ensure that the paper is feeding properly.

## Nonimpact Printer Paper

The nonimpact printer uses continuous-roll, thermal-sensitive paper for printing. Recommended paper is white background with blue print. This paper is available in 100-ft (30.5-m) rolls in cartons of 24 rolls (CDC part number 90500521 for a full carton).

### **Procedure NIP2 – 1-kHz Oscillator Adjustment**

The 1-kHz oscillator clocks the counter which controls the printer operation timing. Therefore, it is important to ensure that the frequency output is correct. See figure NIP2 for 1-kHz oscillator location and proceed as follows.

- 1) Connect all power to the printer.
- 2) Connect oscillator probe to 1-kHz test point at front of control logic board.
- 3) Check frequency of oscillator. Frequency must be 1 kHz  $\pm$ 20 Hz (1  $\pm$ 0.02 ms per cycle).
- 4) If adjustment is required, adjust 1-kHz oscillator potentiometer on control logic board to obtain required frequency.

### **Procedure NIP3 – Retriggerable One-Shot (ROS) Adjustment**

During a carriage advance or backspace operation, ROS time is used to reduce the stepping motor winding current to a lower hold level after stepping and braking have occurred. If the ROS time is too short, horizontal print spacing can be affected. During the slowdown portion of the carriage return time, the ROS time determines the time between stepping pulses. Therefore, the slowdown of the printhead during carriage return is affected by ROS timing. See figure NIP2 for one-shot location and proceed as follows.

- 1) Connect oscilloscope probe to ROS test point at front of control logic board.
- 2) Connect all power to printer.
- 3) Use keyboard inputs to advance printer carriage while observing ROS pulses on oscilloscope.
- 4) ROS must be a 10-ms pulse for every carriage advance step.
- 5) Adjust ROS potentiometer on logic control board to obtain the proper pulse duration.

## **Procedure NIP4 – Brake LED Block And Brake One-Shot Adjustment**

During carriage advance and backspace operations, the printhead is brought into contact with the paper by the platen solenoid, printing occurs, the printhead is moved back from the paper, and then the stepping motor moves the head to the next column position. For proper printing, the printhead must be horizontally stationary at each column position when printing at maximum speed. Oscillations of the printhead cannot be tolerated since print quality would be affected. Oscillations can be caused by improper position of the brake LED block or improper setting of the brake one-shot time. Motor braking is initiated by the brake LED and its duration is controlled by the brake one-shot time. In this procedure, a visual check of the clock disc is made to determine if oscillations are present. The platen solenoid is disabled because oscillations would be damped by the head contacting the platen. (See figures NIP 3 and NIP5).

- 1) Disable platen solenoid by holding finger on platen solenoid guide bar arm to prevent solenoid operation.
- 2) Connect all power to the printer.
- 3) Use keyboard of **display terminal to cause repetition of carriage advance for approximately 60 columns followed by backspaces for approximately 60 columns.**
- 4) Observe top of brake LED block in relation to clock disc. Block should be aligned with a slot in clock disc and disc must appear to stand still (no oscillating) for both carriage advance and backspace. If adjustment is required, perform steps 5 through 7.
- 5) Loosen one (center) slotted-head screw that secures brake and slew LED brackets.
- 6) Loosen one socket-head lock screw to permit adjustment of brake LED block position.
- 7) Alternately adjust brake LED block position and brake one-shot time, until conditions of step 4 are obtained. Adjust brake LED block position by turning slotted-head eccentric. Adjust brake one-shot time by adjusting brake potentiometer at front of control logic board (figure NIP2). Tighten screws.

## NOTE

If difficulty occurs in damping out oscillations, check oscillation of printhead cable. If cable oscillates more than 1/4 inch, replace entire print mechanism (procedure NIP11). If oscillation is less than 1/4 inch, recheck ROS time as outlined in procedure NIP3. If oscillations still are present check output of brake LED. See procedure NIP2.

### **Procedure NIP5 – Head Compensating Circuit Adjustment**

The purpose of this circuit is to control the heating time of the printhead elements. The heating time is automatically varied by the circuit to compensate for different printing speeds. The purpose of this procedure is to provide an initial setting of the circuit time when printing at maximum speed. Then, when the printer is operable, the time may be readjusted to provide desired print quality. See figure NIP2 and proceed as follows.

- 1) Apply all power to printer.
- 2) Connect oscilloscope probe to test point PRT at front of signal processing board. Trigger internal (+).
- 3) Use keyboard REPEAT and character keys to activate printer while observing test point pulse on oscilloscope.
- 4) The output transistor must turn on for the time indicated below for the particular speed at which the printer is to be operated. Adjust head compensating potentiometer on signal processing board to obtain a pulse duration of 6.5 ms.
- 5) Secure potentiometer screw with cement (Loctite, or equivalent).
- 6) When printer is operable, check print quality. If quality is not acceptable, refer to procedure NIP8, Print Quality Adjustments.

## **Procedure NIP6 – Carriage Return LED Block Adjustment**

This procedure describes adjustments for the positions of the LED blocks associated with carriage return. These LEDs are start of line, slowdown, end of line, and slew. The LEDs are positioned to provide carriage return operation within the maximum time permissible (200 ms) and minimize printhead oscillation at column 1. This procedure should be performed when any of the carriage return components have been replaced or when any of the LED block positions have been changed. See figure NIP2 and proceed as follows.

- 1) Loosen the LED block clamping screw on each of the start of line, slowdown, and end of line LED blocks.
- 2) Set the initial positions of the three LED blocks as follows:
  - a) Position left side of start of line LED block  $7/16$  inch from left side frame.
  - b) Position slowdown LED block until spacing between start of line block and slowdown block is  $5/16$  inch.
  - c) Position right side of end of line LED block  $3/16$  inch from right side frame.
- 3) Connect all power to the printer.
- 4) Manually move printhead to approximately column 15 and initiate a discrete carriage return operation.

### **NOTE**

A discrete carriage return operation can be initiated by pressing the CR switch.

- 5) Measure distance between printhead carriage and left side frame. Distance should be  $3/16$  inch (see figure NIP5).

- 6) If adjustment of printhead home position is required, loosen two socket-head screws in cable drive drum (figure NIP3) and rotate drum until printhead is 3/16 inch from left side frame. Tighten screws.
- 7) Move printhead to approximately column 60 and initiate a discrete carriage return operation. For this step the carriage return command must be maintained (hold CR switch down).
- 8) If printhead oscillates at home position, move start of line LED block left or right in small increments (approximately 0.001 inch) until head stops oscillating.
- 9) Release CR switch.
- 10) Repeat steps 7 through 9, except start with printhead at a column near column 80 (75 to 79).
- 11) With keyboard display and printer connected and with display terminal power on, use the keyboard to cause printhead to step to column two. Actuate a discrete carriage return. If printhead does not return to column one, move start of line LED block to the left in small increments (approximately 0.001 inch) until carriage return from column two is achieved.
- 12) If start of line LED block was moved in step 11, repeat steps 7 through 10. If start of line block is again moved to stop oscillations, repeat step 11.
- 13) Trigger oscilloscope on CR test point at front of control logic board (figure NIP2) and set trigger to external (+). Connect oscilloscope probe to SD test point.
- 14) Use keyboard REPEAT and character keys to cause continuous printing and automatic carriage return by the end of line LED.
- 15) Measure time between oscilloscope trigger (rise of CR) and rise of SD. Time must be  $110 \pm 5$  ms.
- 16) If adjustment is required, loosen one (center) slotted-head screw and one socket-head screw to permit adjustment of slew LED block (see figure NIP5). Turn slotted-head eccentric and adjust slew block position until requirement of step 15 is met. Tighten two screws.

## NOTE

In the process of adjusting the slew LED block, the block should not be positioned at the extreme left. If positioned to the extreme left, the slew block may be in contact with the eccentric adjustment of the platen solenoid arm. Repositioning the clock disc will center the adjustment and provide future adjustment range without mechanical interference.

To reposition the clock disc, loosen the clock disc set screws, and with the motor shaft held stationary (by holding the printhead), move the clock disc by a one-half slot separation and then tighten, ensuring that the disc does not rub the brake or slew blocks. Readjust the brake and slew (step 16) blocks for proper printer operation.

- 17) Trigger oscilloscope on SD test point on control logic board and set trigger to external (-). Connect one oscilloscope probe to SD test point.
- 18) Use keyboard to step printhead from column 1 to column 6. SD should fall as printhead steps into column 6. Adjust position of slowdown LED block to meet this condition.
- 19) Use keyboard REPEAT and character keys to cause continuous printing and automatic carriage return by end of line LED.
- 20) Trigger on CR test point (+ trigger), and look at SD with the probe. Recheck the CR time from EOL to SD at step 15. Adjust the slew if this condition is not met. On printers with adjustable home position (HPOS) time, HPOS should be set for 40 to 60 ms. Be sure that a slew pulse does not occur close to the leading edge of the SD phototransistor pulse.

## NOTE

The 40 to 60 ms is only a guide and should not be used as a criterion for rejection. The objective is to arrive at CR time of 160 to 185 ms when warmed up and an absolute maximum of 200 ms when cold.

Final position of slowdown block should be such that the nominal distance between slowdown and start of line blocks is  $5/16 \pm 1/16$  inch. (This criterion is included as a guide; note that this is only a nominal value.)

- 21) Insert paper in printer.
- 22) Trigger oscilloscope on  $\overline{MT}$  test point and set trigger to external (-). Connect one oscilloscope probe to  $\overline{MT}$  test point and second probe to EOL test point.
- 23) Use keyboard REPEAT and character keys to cause continuous printing and automatic carriage return by end of line LED.
- 24) Adjust position of end of line LED block so that rise of EOL comes within 1 ms after rise of  $\overline{MT}$  for column 80. Make sure column 80 print is present.
- 25) Trigger oscilloscope on CR test point and set trigger to external (+). Connect oscilloscope probe to BSY test point.
- 26) Use keyboard REPEAT and character keys to cause continuous printing and automatic carriage return by end of line LED.
- 27) Measure time that BSY stays true after CR trigger. Time should be 150 to 175 ms (200 ms maximum). If this requirement is not met, repeat steps 13 through 16, and 17 through 20.
- 28) Tighten all LED block clamping screws.

### **Procedure NIP7 – Printhead Actuation Adjustment**

This procedure contains instructions for adjustment of the printer to obtain proper printhead actuation and noise control. The platen solenoid housing must be positioned to prevent plunger bottoming and to ensure free plunger movement. The upper eccentric stop is adjusted to absorb some of the impact as the printhead contacts the paper. Uniform print density from top to bottom of a character and across the entire line is obtained by adjustment of the platen assembly. The lower eccentric stop is adjusted to provide proper guide bar arm travel between the two stops. The damper pad is adjusted to contact the solenoid plunger and reduce noise without restricting the plunger movement. (See figures NIP3, 6, and 7.)

- 1) Disconnect all power and signal inputs to the printer.
- 2) Remove paper. If switch bracket is in the way, remove two screws and move bracket out of way.

- 3) Move plunger into platen solenoid housing until printhead just contacts rubber platen. Check to see that after head contacts platen, plunger can be pushed approximately 1/32 inch into housing and does not bind. If adjustment is required, perform steps 4 through 6.
- 4) Loosen two slotted-head screws which mount the platen solenoid housing to the frame.
- 5) Manually move printhead down until it just contacts platen and hold it in this position. Move solenoid housing until plunger bottoms. Mark solenoid housing position on side frame. Release printhead. Move solenoid housing back approximately 1/32 inch from mark on frame. Tighten two screws.
- 6) Check to see that plunger moves freely in housing and does not bind. If binding occurs, loosen two screws and skew housing until plunger is free. Make sure that 1/32-inch dimension obtained in step 4 is maintained.
- 7) Insert paper. Connect power and signal inputs to the printer and use keyboard REPEAT and character keys to print several lines of different characters (preferably uppercase characters).
- 8) Check print density from top to bottom of character. If density varies, perform step 9. If density is uniform, proceed to step 10.
- 9) Loosen four socket-head screws (two on each side) securing platen assembly to side plates. Tilt assembly forward or backward to obtain uniform print density from top to bottom of character. Tighten four screws. Recheck print density.
- 10) While printing, place a 0.010-inch feeler gauge between upper eccentric stop and guide bar arm. If upper eccentric stop is properly adjusted, print quality should deteriorate significantly when gauge is inserted. If adjustment is required, perform step 11. If adjustment is correct, proceed to step 12.
- 11) Loosen one socket-head screw to permit rotation of upper eccentric. Rotate eccentric in counterclockwise direction until print becomes light. Back off eccentric just enough to restore good quality print. Repeat step 10.
- 12) If print density varies from left to right across the page, it is necessary to reposition the platen assembly. Loosen two socket-head screws securing side of platen assembly where light printing is occurring and move this side of assembly forward to obtain uniform print density. Tighten screws. Recheck step 10.

#### NOTE

When moving platen assembly, take care not to tilt assembly. Tilting will affect print quality.

- 13) Disconnect all power and signal inputs to the printer.
- 14) Using a feeler gauge, check the clearance between the upper stop eccentric and the guide bar arm. The clearance must be 0.020 to 0.025 inch (see figure NIP6). If adjustment is required, loosen one socket-head screw to permit rotation of lower stop eccentric. Place a 0.022-inch gauge between the guide bar arm and upper stop eccentric. Rotate lower stop eccentric until contact is made between guide bar arm, gauge, and upper eccentric. Tighten screw.
- 15) Connect all power and signal inputs to the printer and repeat step 7 to again cause printing.
- 16) Check print quality. If print has a dark cast or printhead drags on paper during carriage return, the solenoid plunger damper pad may be adjusted too tight, restricting solenoid plunger movement. If print quality is good, but vibration and noise is discernible, the damper pad may be adjusted too loose. Loosen locknut and turn damper pad adjusting screw to increase pad pressure until print quality is affected. Then back off screw just enough to obtain good print quality. Tighten nut (see figure NIP7).

#### **Procedure NIP8 – Print Quality Adjustments**

Table NIP2 lists the different types of poor print quality and references the adjustment procedures which can be performed to correct the problem.

#### **Procedure NIP9 – Out-of-Paper Switch Adjustment**

The Out-of-Paper switch must be adjusted to actuate when paper is inserted in the printer and deactuate when paper is removed. Adjustment is accomplished by positioning the switch. See figure NIP8 and proceed as follows.

- 1) Remove paper from printer.
- 2) Slowly insert paper into printer while listening for switch to actuate. An ohmmeter may be used in a noisy environment.
- 3) After switch actuates, observe actuator arm to ensure that some over-travel is present.
- 4) Slowly remove paper while listening for switch to deactuate.
- 5) After switch deactuates, observe actuator arm to ensure that some over-travel is present.
- 6) If adjustment is required, loosen two switch-mounting screws on left side frame and position switch to meet requirements of steps 3 and 5. Tighten screws and repeat steps 2 through 5.
- 7) Connect power to printer and check ready output line at pin 36 of input/output connector P37. Voltage should be +5 volts with paper inserted and 0 volt with paper removed.

## Procedure NIP10 – Serial Input Clock Adjustment

The serial input clock must be adjusted so that it occurs as close as possible to the center of each data bit time. This provides tolerance for input signal distortion. There are two interacting adjustments required to properly position the clock pulses: (1) delay one-shot time and (2) multivibrator frequency. The delay one-shot time determines the position of the first clock at data bit one time. The multivibrator frequency determines the position of the subsequent clock pulses. See figures NIP2 and NIP9 and proceed as follows.

- 1) Connect all power to the printer.
- 2) Using a dual trace oscilloscope, trigger the oscilloscope on the falling edge of  $\overline{DOS}$  (test point OS at front of signal processing board).
- 3) Set the oscilloscope time base to display one character time.
- 4) Apply an input signal from a square wave generator set to the baud rate of the printer or apply an input code consisting of alternating 101s.
- 5) Connect one probe of the oscilloscope to the DATA test point.
- 6) Connect the other probe to  $\overline{MV}$  (CK test point).
- 7) Check the clock position (rise of  $\overline{MV}$ ) for data bit one time. If the clock is not centered, adjust the one-shot potentiometer.
- 8) Check the clock position for the last data bit time. If the clock is not centered, adjust the multivibrator potentiometer.
- 9) If the oscilloscope has a 5X magnifier, turn on the magnifier and repeat step 7.
- 10) Move the trace to the left and repeat step 8.

### NOTE

Steps 7 and 8 should be repeated several times because of the interaction of the two adjustments.

## Procedure NIP11 – Replacing Print Mechanism

Perform the following steps to replace the print mechanism (see figure NIP10).

- 1) Remove ac power cord from site outlet.
- 2) Disconnect internal connector which is on end of printer mechanism signal cable and is located at back of power supply just above RS-232-C input/output connector.
- 3) Tilt printer cabinet up on either left or right side and loosen the four, large, shock-mounting retainer screws which hold the print mechanism to the chassis base and are accessible through four large, round holes in the base of the cabinet.

### CAUTION

Do not tilt printer cabinet up on its back with an input/output connector attached to the rear of the cabinet or serious connector damage will result.

- 4) While holding print mechanism so it does not fall, remove the four retainer screws and separate mechanism from cabinet base. Carefully lower cabinet base and print mechanism to normal resting position.

### NOTE

An alternate removal method is to remove the four hex nuts (and washers) that secure the metal baseplate under the printer mechanism. Two of these nuts are at the front corners of the mechanism and the other two also hold the power supply shield. This method then requires removing the mechanism from the baseplate.

- 5) Replace print mechanism by doing the preceding steps in reverse order (making sure mechanism is approximately centered in its mounting slots) and then check operation thoroughly by following table NIP1, DDLT for Nonimpact Printer.

### **Procedure NIP12 – Replacing Power Supply**

Perform the following steps to replace the power supply (see figure NIP10).

- 1) Remove ac power cord from site outlet.
- 2) Disconnect both quick-disconnect connectors from cable at right side of power supply.
- 3) Remove two nuts which hold power supply shield in place (screws are on cover flange between power supply and print mechanism) and lift cover free to provide clearance for power supply removal.
- 4) Unscrew four large screws (2 each side) from power supply mounting flanges and slide power supply out from under print mechanism cable.
- 5) Replace power supply by doing the preceding steps in reverse order and then check operation thoroughly by following table NIP1, DDLT for Nonimpact Printer.

### **Procedure NIP13 – Replacing/Adjusting Miscellaneous Parts**

If required to replace/adjust parts below the on-site spares level (on-site spares being: power supply, fuses, and printer mechanism) refer to the Nonimpact Printer Hardware Maintenance Manual (see preface for publication number).

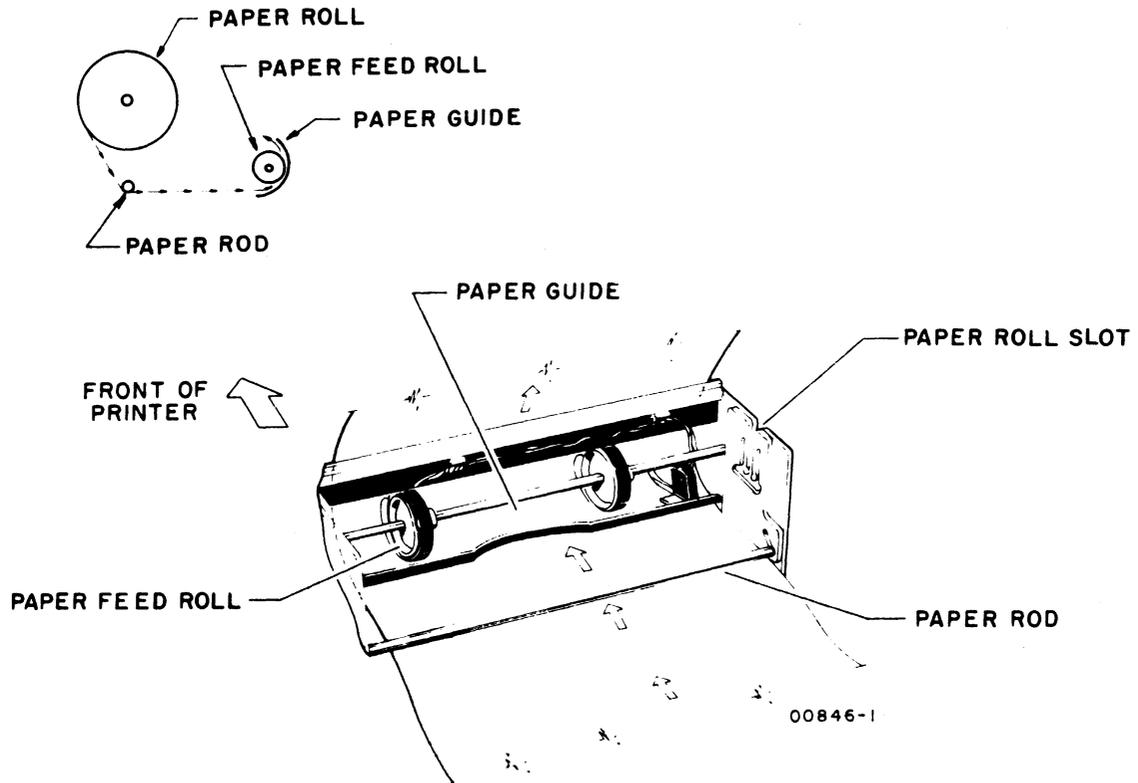


Figure NIP1. Paper Loading, Nonimpact Printer

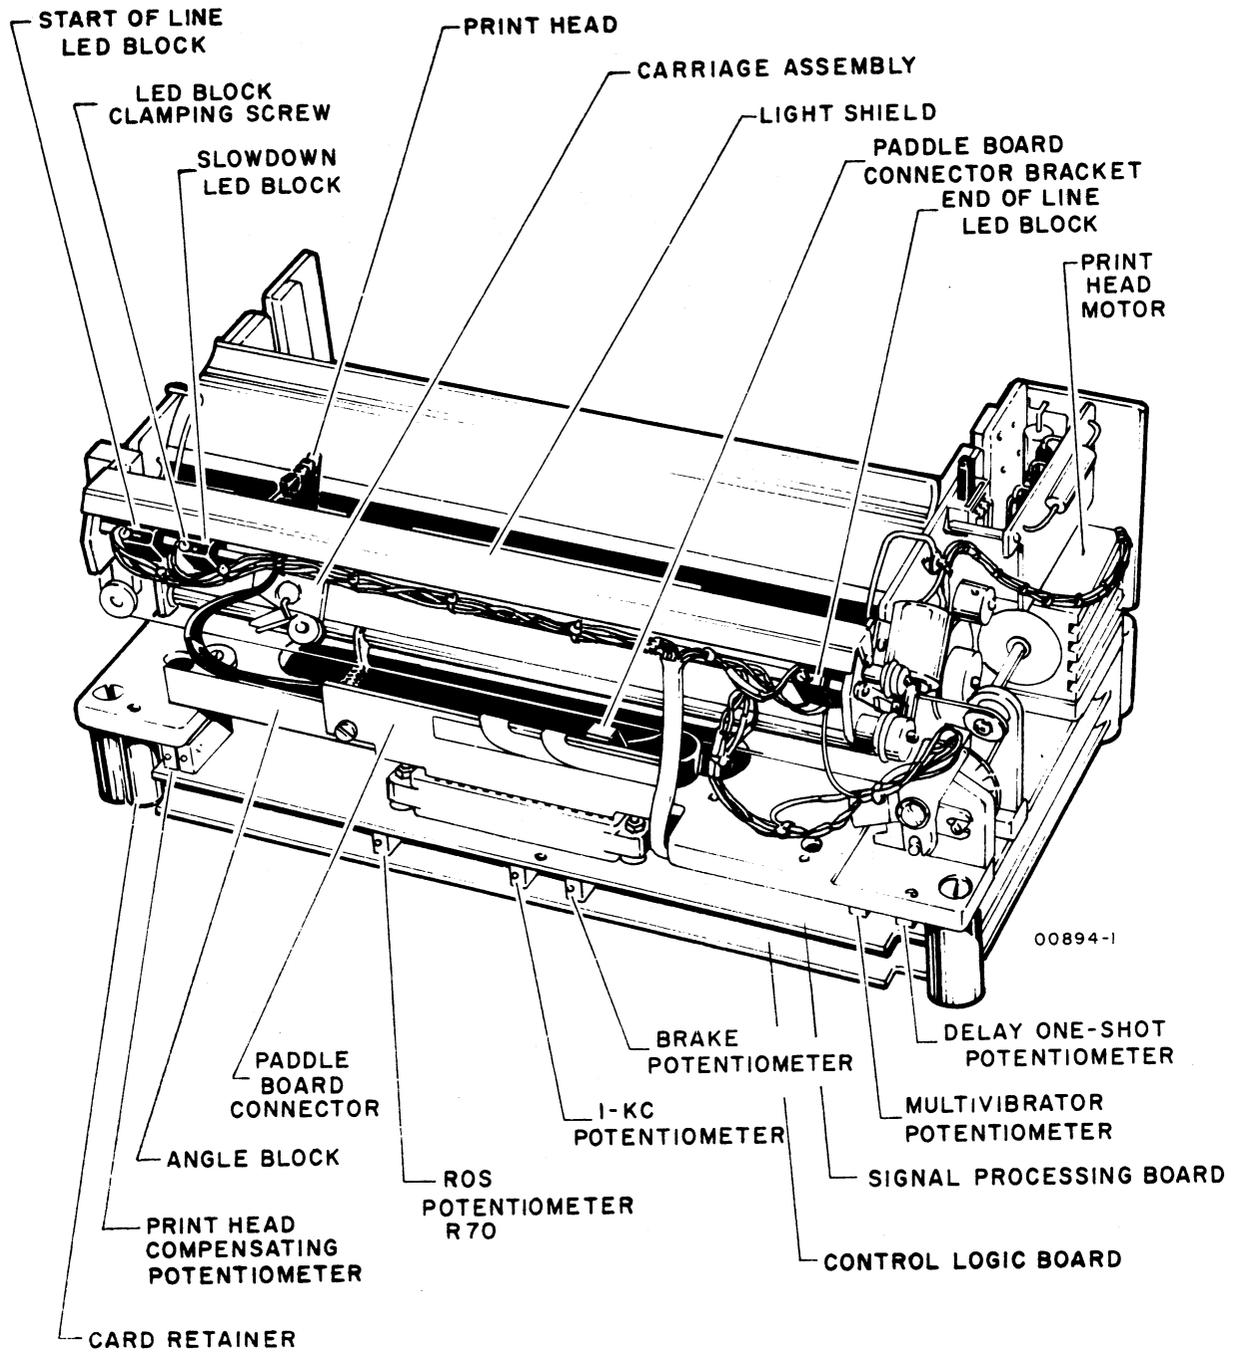


Figure NIP2. Printer, Front View

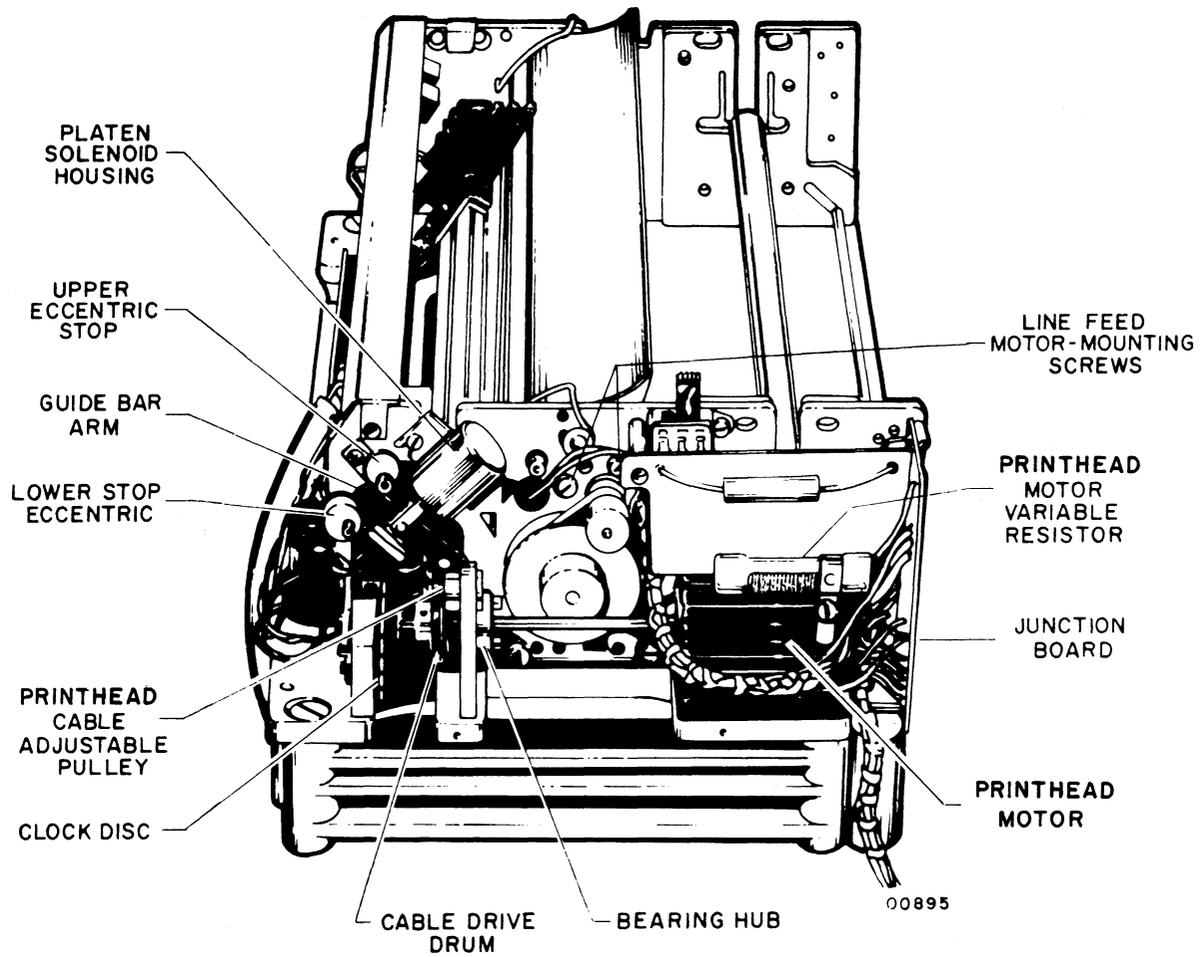


Figure NIP3. Printer, Right Side View


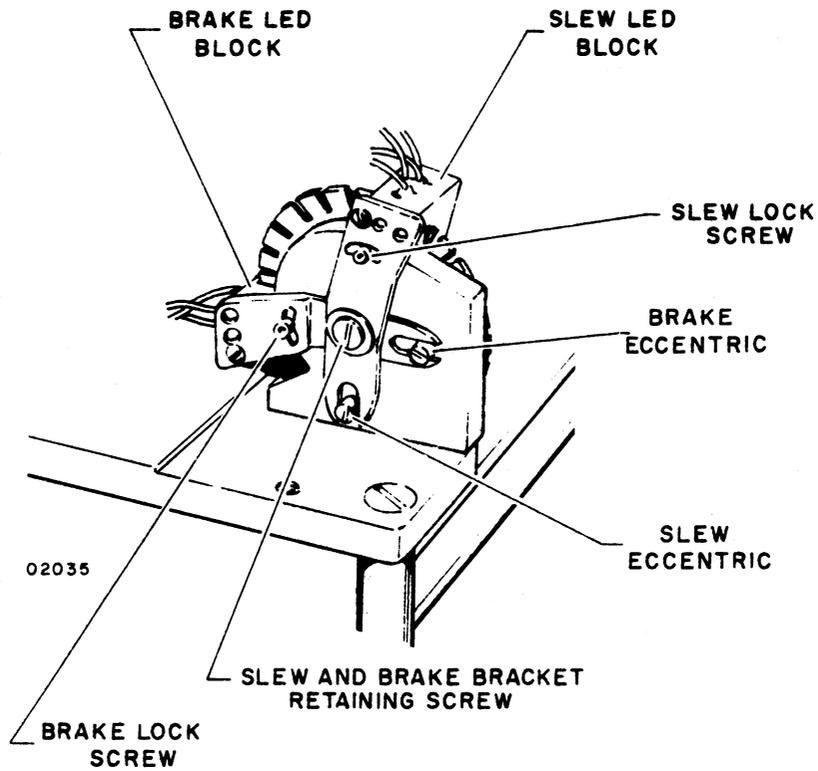


Figure NIP4. Printer, Right Front View

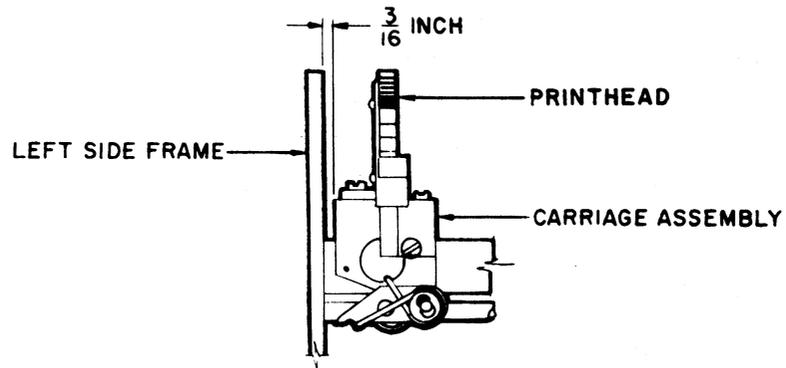

02076

Figure NIP5. Printhead Home Position

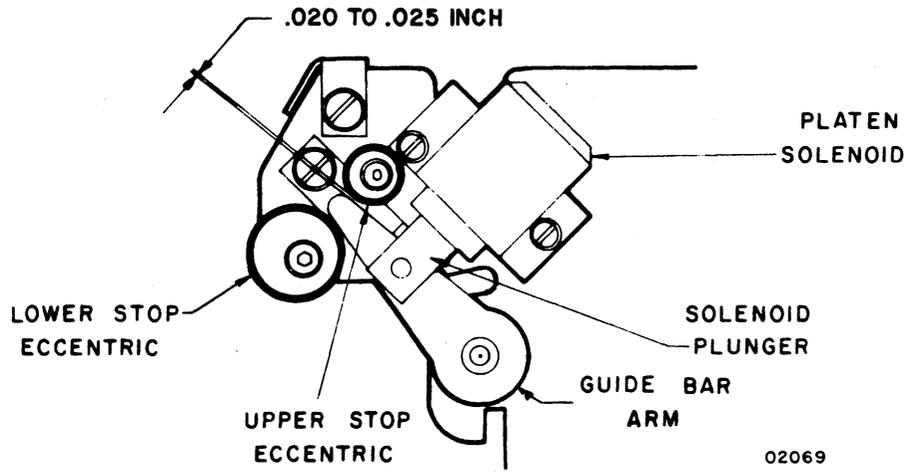


Figure NIP6. Guide Bar Arm Travel

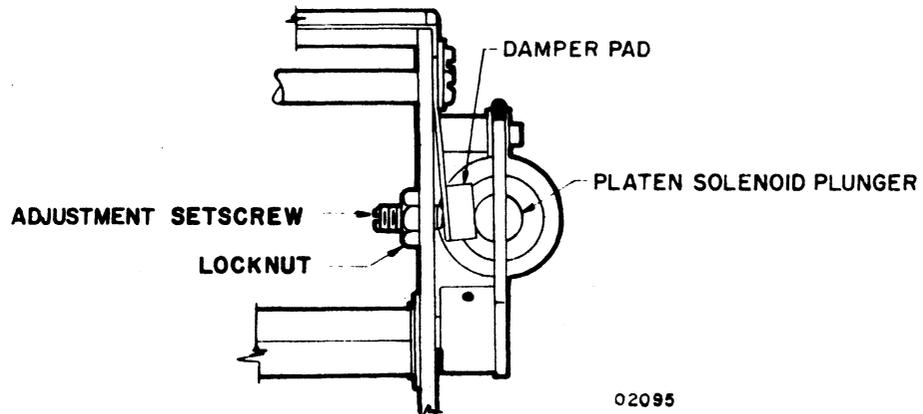


Figure NIP7. Damper Pad Adjustment

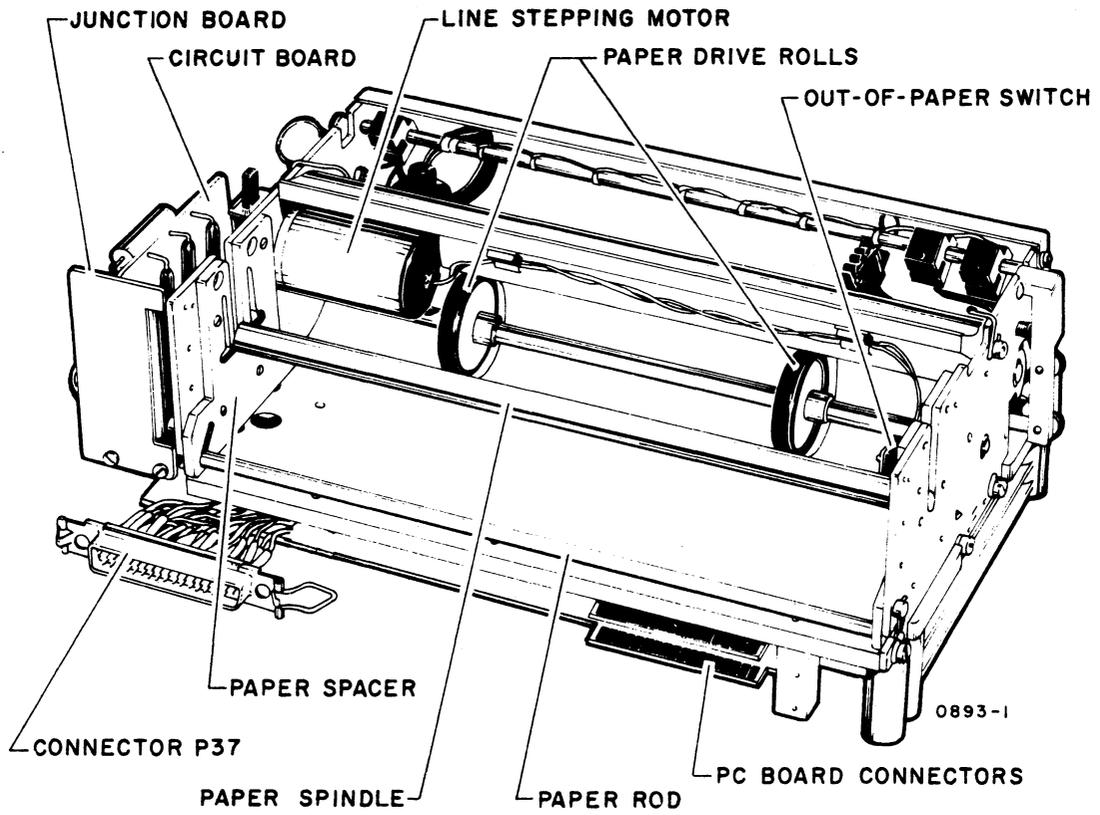


Figure NIP8. Printer, Rear View

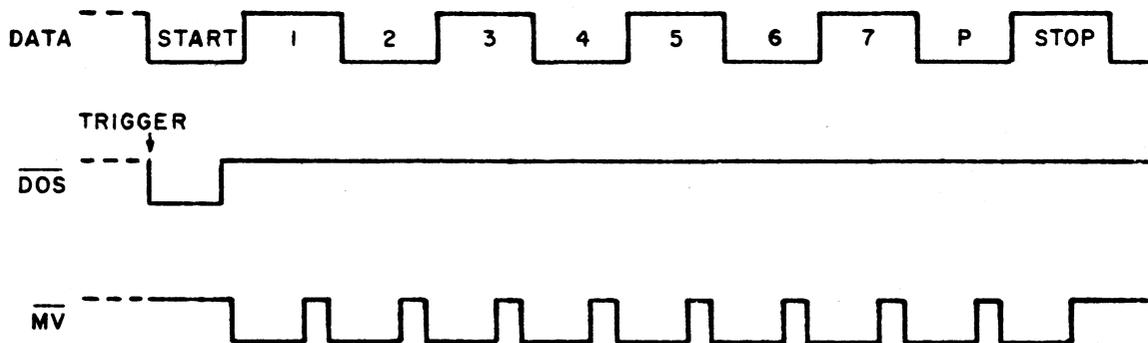


Figure NIP9. Serial Clock Timing

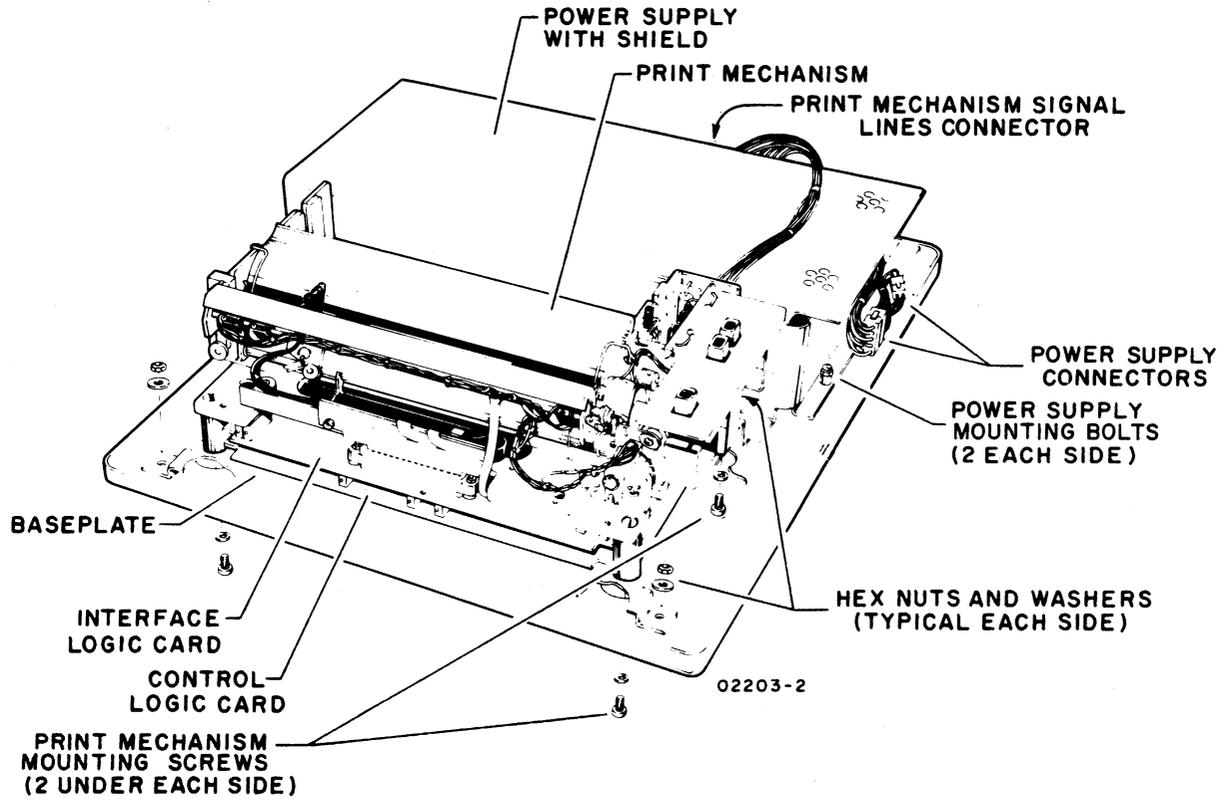


Figure NIP10. Location of Major Replaceable Modules

TABLE NIP2. PRINT QUALITY

PROBLEM	ADJUSTMENT PROCEDURE
Too light across entire page	NIP5, Head Compensating Circuit Adjustment NIP7, Printhead Actuation Adjustment
Uneven density across page	NIP7, Printhead Actuation Adjustment
Uneven density from top to bottom of character	NIP7, Printhead Actuation Adjustment

TABLE IMP1. DDLT FOR IMPACT PRINTER (SHEET 1 OF 4)

POWER ON AND EXTERNAL SWITCH CHECKS (EXCLUDING TEST PRINT)								
ASSUME								
Printer installed properly per procedure in appendix of associated Operators Guide/Reference Manual (see preface). Paper, ribbon, and format tape loaded (procedure IMP3, 4, and 5) and power ON/OFF switch pressed to ON (procedure IMP1).								
CONDITIONS	SITUATIONS							
	1	2	3	4	5	6	7	8
Is power on at printer (ON/OFF switch on and drive motor running)?	Y	Y	Y	Y	N	N	N	O T H E R
Is ON/OFF switch on but motor not running?	-	-	-	-	-	Y	N	
Does FORM FEED operate correctly?	Y	Y	N	N	-	-	-	
Does forms runaway condition (continuous paper feed) occur? (Stop runaway by pressing power OFF.)	-	-	Y	N	-	-	-	
Does START/STOP switch light/extinguish when pressed/repressed?	Y	N	-	-	-	-	-	
ACTIONS	SEQUENCE							
Perform TEST PRINT, sheet 2 of this DDLT.	X	-	-	-	-	-	-	-
Check that front access panel is in place activating interlock switch (or if front panel open, interlock switch pulled up).	-	-	-	-	-	-	1	-
Check power available from site outlet (see specifications in section 1 for 60-Hz and 50-Hz printer input power).	-	-	-	-	-	-	2	-
Check ON/OFF circuit breaker indicator portion for continuity (figures IMP12 and IMP13); replace ON/OFF switch/indicator if necessary (procedure IMP17).	-	-	-	-	2	-	-	-
Check internal cables/connections (figures IMP11, 12, 13, and 14 and procedure IMP14).	-	-	-	-	1	1	4	-
Disconnect ac power cord and check power cord and ON/OFF switch for continuity; replace as necessary (procedure IMP17).	-	-	-	-	-	-	3	-
Check/replace power transformer 2T01 (procedure IMP17).	-	-	-	-	3	2	6	-
Check/replace line filter 3LF01 (procedure IMP17).	-	-	-	-	-	3	5	-
Check/replace drive motor (procedure IMP17).	-	-	-	-	-	4	7	-
Check/replace format tape (procedure IMP5) and format reader (procedures IMP15 and IMP17).	-	-	1	1	-	-	-	-
Open logic chassis panel (procedure IMP6) and observe printed circuit boards for proper seating (figure IMP6).	-	1	2	2	-	-	-	-
Check/replace fuse(s) on power supply board (procedure IMP12); replace power supply board (procedure IMP7).	-	-	3	3	-	-	-	-
Check/replace fuse(s) on driver board (procedure IMP12); replace driver board if required (procedure IMP9).	-	-	-	4	-	-	-	-
Replace common controller board (procedure IMP7).	-	2	-	5	-	-	-	-
Replace RS-232 interface board (procedure IMP7).	-	-	-	6	-	-	-	-
Switch power OFF and check subject switch for continuity; replace if required (procedure IMP17).	-	3	4	7	-	-	-	-
Check subject switch cables/wires to/from switch and circuits (procedure IMP14).	-	4	-	8	-	-	9	-
See detailed diagrams/information in field service manual for printer (see preface) and check/adjust/replace further procedures IMP15, 16, and 17.	-	5	5	9	-	5	8	-
Call for assistance.	-	-	-	-	-	-	-	X
Note: After completing any repairs or maintenance, verify that the printer is operational by activating TEST PRINT.								

TABLE IMP1. DDLT FOR IMPACT PRINTER (SHEET 2 OF 4)

TEST PRINT										
ASSUME										
Power on and external switch checks of sheet 1 of this DDLT ran OK and power is still on.										
CONDITIONS	SITUATIONS									
	1	2	3	4	5	6	7	8	9	
With START/STOP switch extinguished (offline), activate TEST PRINT switch. Does printer produce printout of Impact Printer TEST PRINT Pattern exactly as shown in figure TS5.	Y	N	N	N	N	N	N	N	N	O T H E R
Are forms feeding correctly (by not being in runaway condition or otherwise incorrectly advancing)? (Stop runaway by pressing power OFF.)	Y	N	N	Y	Y	Y	Y	Y	Y	
Is printhead movement correct?	Y	N	-	N	Y	Y	Y	Y	Y	
Is there any printout?	Y	N	-	-	N	Y	Y	Y	Y	
Are all portions of all characters printed?	Y	N	-	-	-	N	Y	Y	Y	
Is each character printed the proper one?	Y	N	-	-	-	-	N	Y	Y	
Is ribbon advancing properly? (Ribbon will advance in either direction depending on position of reversing levers; check this.)	Y	N	-	-	-	-	-	N	N	
ACTIONS	SEQUENCE									
Perform print quality checks; sheet 3 of this DDLT.	X	-	-	-	-	-	-	-	-	
Open logic chassis panel (procedure IMP6) and observe printed circuit boards for proper seating (figure IMP6).	-	1	2	1	1	1	1	1	-	
Check/replace fuse(s) on driver board (procedure IMP12), replace driver board if required (procedure IMP9).	-	2	5	2	2	2	-	-	-	
Replace common controller board (procedure IMP7).	-	3	4	-	3	3	2	-	-	
Replace LSI equivalent board (procedure IMP7).	-	-	6	3	4	-	3	-	-	
Press power to OFF and check for TEST PRINT switch continuity, replace if required (procedure IMP17).	-	4	-	-	-	-	-	-	-	
Check/replace fuse(s) in power supply board (procedure IMP12); replace power supply board if required (procedure IMP9).	-	-	3	-	-	-	-	3	-	
Check TEST PRINT switch cables/wires to/from switch and circuits (procedure IMP14).	-	5	-	-	-	-	-	-	-	
Check/replace switching relay and/or power triacs on logic chassis backplane (procedure IMP17).	-	-	-	-	-	-	-	-	2	
See detailed field service manual and parts manual (see preface) and check/adjust/replace until fault is found (procedures IMP15, 16, and 17).	-	7	7	6	9	7	4	4	-	
Check/adjust/replace printhead (procedures IMP15, 16, and 17).	-	-	-	-	6	5	-	-	-	
Check/replace format tape (procedure IMP5) and format reader (procedures IMP15 and IMP17).	-	-	1	-	-	-	-	-	-	
Check cables between driver board and printhead (procedure IMP14).	-	-	-	-	5	4	-	-	-	
Replace line start board (procedure IMP10).	-	6	-	4	7	-	-	-	-	
Replace character start board (procedure IMP11).	-	-	-	5	8	6	-	-	-	
Call for assistance.	-	-	-	-	-	-	-	-	X	
Note: After completing any repairs or maintenance, verify that the printer is operational by activating TEST PRINT.										

TABLE IMP1. DDLT FOR IMPACT PRINTER (SHEET 3 OF 4)

PRINT QUALITY CHECKS											
ASSUME											
TEST PRINT operation per sheet 2 of this DDLT completed and resulting printout available for print quality analysis.											
CONDITIONS	SITUATIONS										
	1	2	3	4	5	6	7	8	9	10	
Is printing dark enough across entire page?	Y	Y	Y	Y	Y	Y	Y	Y	Y	N	O T H E R
Is printing density even for each of the seven vertical dots in the 7-horizontal by 7-vertical dot matrix of each character?	Y	Y	Y	Y	Y	Y	Y	Y	N	-	
Are the dots which compose each character evenly spaced from each other horizontally?	Y	Y	Y	Y	Y	Y	N	-	-	-	
Are adjacent characters uniformly spaced from each other horizontally across entire page?	Y	Y	Y	Y	Y	N	-	-	-	-	
Is the leftmost column of characters uniformly aligned on the left margin?	Y	Y	Y	Y	N	-	-	-	-	-	
Are the 132 columns of characters uniformly aligned one under the other down entire page?	Y	Y	Y	N	-	-	-	-	-	-	
Is spacing between lines of characters even/proper down entire page?	Y	Y	N	-	-	-	-	-	-	-	
Are 132 characters printed in each line?	Y	N	-	-	-	-	-	-	-	-	
ACTIONS	SEQUENCE										
Print quality checks OK. Perform remaining printer checks, sheet 4 of this DDLT.	X	-	-	-	-	-	-	-	-	-	
Check/adjust forms density control lever (see paper loading procedure IMP3).	-	-	-	-	-	-	-	1	1	-	
Check for worn out ribbon and replace if necessary (see ribbon changing/loading procedure IMP4).	-	-	-	-	-	-	-	2	2	-	
Check format tape for correct punching or for worn format tape; replace if necessary (procedure IMP5).	-	-	1	-	-	-	-	-	-	-	
Check/adjust printhead alignment with platen (procedure IMP15); replace printhead assembly if necessary (procedure IMP17).	-	-	-	-	-	-	-	3	3	-	
Check/adjust ribbon tracking (procedure IMP15).	-	-	-	-	-	-	-	4	4	-	
Check/adjust drive belts for clutch and printhead (procedure IMP15); replace if necessary (procedure IMP17).	-	3	-	1	2	1	1	-	-	-	
Check/adjust code disc assembly (procedure IMP15); replace parts if necessary (procedure IMP17).	-	-	-	2	4	2	2	-	-	-	
Check/adjust line start and character start synchronization (procedure IMP16); replace parts as necessary (procedure IMP17).	-	2	-	3	3	3	3	-	-	-	
Check/adjust format reader and paper motion system (procedure IMP15); replace parts as necessary (procedure IMP17).	-	-	2	-	-	-	-	-	-	-	
Check/adjust dashpot to prevent printhead assembly rebounding on returning home (procedure IMP15); replace worn out parts as necessary (procedure IMP17).	-	-	-	-	1	-	-	-	-	-	
Check/adjust end-of-line switch (procedure IMP15), replace parts as necessary (procedure IMP17).	-	1	-	-	-	-	-	-	-	-	
See detailed field service manual and parts manual (see preface) and check/adjust/replace until fault is found (procedure IMP15, 16, and 17).	-	4	3	4	4	4	4	5	5	-	
Call for assistance.	-	-	-	-	-	-	-	-	-	X	
Note: After completing any repairs or maintenance, verify that the printer is operational by activating TEST PRINT.											

TABLE IMP1. DDLT FOR IMPACT PRINTER (SHEET 4 OF 4)

PRINTER/CRT INTERFACE CHECKS			
ASSUME			
Power is on at the printer and all printer switch operations (including TEST PRINT) check OK per preceding sheets of this table. Printer input/output cable connected either to keyboard display PERIPHERAL CONNECTOR and keyboard display terminal is operational.			
CONDITIONS	SITUATIONS		
	1	2	3
Do the impact printer test portion of procedure TS6 from the step where the START/STOP switch is pressed to light the switch indicator up to the end of the impact printer test. Assure that keyboard switches are set per beginning of printer checkout steps and that rear panel TEST/NORMAL switch of display is in TEST position. After these test steps, use keyboard REPEAT and character key to print several print lines (132 characters a line). Does printer perform all checks properly?	Y	N	O T H E R
Caution: Do not allow a printer to continuously print adjacent columns for more than 5 minutes maximum at a time or solenoid assemblies will overheat and be damaged.			
ACTIONS	SEQUENCE		
Printer works OK. Return to table TS1.	X	-	-
Check input/output cable at printer and at other end.	-	1	-
Open logic chassis panel (procedure IMP6) and observe for proper printed circuit board seating in the printer logic rack (especially check RS-232 interface board).	-	2	-
Observe for proper connections from printer logic module to input/output connector.	-	3	-
Remove RS-232 interface board (procedure IMP7), and check that all switches/jumpers are properly set for this subsystem (procedure IMP8). Reinstall RS-232 interface board (procedure IMP7).	-	4	-
Replace RS-232 interface board (procedure IMP7) with a new board making sure new board has proper switch/jump settings for this subsystem (procedure IMP8).	-	5	-
Replace common controller board (procedure IMP7).	-	6	-
See detailed field service manual and parts manual (see preface) and check/adjust/replace until fault found (procedure IMP15, 16, and 17).	-	8	-
Replace LSI equivalent board (procedure IMP7).	-	7	-
Call for assistance.	-	9	X
Note: After completing any repairs or maintenance, verify that the subsystem is operational by rerunning test mode.			

## **IMPACT PRINTER CORRECTIVE MAINTENANCE PROCEDURES – GENERAL**

The following pages identify procedures referenced either from table IMP1, DDLT for Impact Printer, or elsewhere within this manual. In addition, other procedures which may serve useful are identified. This impact printer has two companion manuals (see preface), which cover the detailed remove/replace procedures, adjustments, and all parts data identification. Whenever such procedures are identified on the following pages, a reference appears to send the reader to the proper procedural details in the companion field service manual.

For the IMP, information provided in this hardware maintenance manual, plus detailed data in the companion field service and parts manuals, allows troubleshooting down to a very detailed level. This is in keeping with the policy of being able to perform detailed troubleshooting and repair at the customer site for medium and large printer equipments. This philosophy differs with the modular repair level approach used for small, lightweight printers such as the NIP.

Generally, it is at the discretion of the customer engineer making a service call to decide at which level adjustments or remove and replace procedures should be done for the best overall results at any particular site. This decision must take into consideration the availability of possible required spare parts, and availability/type of test equipment and tools which are required for different level adjustment/replace-ment procedures.

The two companion manuals support maintenance down to the level of internal clutch parts, PC board components, and complex adjustments which require special tools/talents. The maintenance philosophy of this hardware maintenance manual is to limit the detailed level of maintenance for a printer when used as a peripheral device with a display terminal. On the site, this means maintaining certain areas of the printer at a higher level than may be possible by using all information available in the manuals. Specifically, these limitations are defined as follows.

- Do not break the printhead assembly down to the solenoid level, etc., nor attempt to adjust extension of the stylus pins (print wire ends). This means do not loosen solenoid assemblies to adjust their armature position on the stylus pins. Rather, remove/replace the entire printhead assembly (procedure IMP7).
  
- On the hammer driver circuit board, replace fuses only (procedure IMP12), otherwise replace the whole board (procedure IMP9).
  
- Repair any of the four logic boards in the logic chassis only by replacing them at the board level (procedure IMP9) except for on-board fuses (procedure IMP12).
  
- Any/all light sensors should be replaced only at their board level (see procedures IMP10 and IMP11).

#### **Procedure IMP1 – Turning On Impact Printer Power**

To turn power on the impact printer, perform the following:

- 1) Verify ac power cord connected to proper power from site outlet.
  
- 2) Verify paper forms installed/aligned (procedure IMP3).
  
- 3) Verify ribbon installed (procedure IMP4).
  
- 4) Verify format tape installed (procedure IMP5).

- 5) Press ON/OFF switch to ON (switch illuminates when power is on).
- 6) Press START/STOP switch to START (switch illuminates when in start condition) to place printer online. If offline condition is desired for testing, leave this switch in stop condition (not illuminated).

If desirable to check printer operating capability, place START/STOP switch to STOP (not illuminated) and proceed as follows (if a fault should occur, start troubleshooting at table IMP1, DDLT for Impact Printer):

- 1) Press FORM FEED switch and observe that forms advance one page (as determined by a page sentinel on the format tape channel one).

#### NOTE

FORM FEED is inoperable when printer is in on-line condition (START/STOP switch illuminated). Also, do not activate FORM FEED switch with the format reader tape off or reader mechanism open because that causes a forms runaway condition (constant paper feeding). To stop such a runaway condition, press ON/OFF switch to OFF (extinguished), close the format reader on a format tape (procedure IMP5), and turn power switch to ON (lit) again.

- 2) Press TEST PRINT switch (illuminated) and observe the Impact Printer TEST PRINT Pattern, shown in figure TS5, prints. Press TEST PRINT switch again to stop this test (switch extinguished).

#### NOTE

TEST PRINT switch is operable only when printer is not online (START/STOP switch extinguished), the front cover interlock switch is closed, and when no power supply faults exist. If paper forms should run out, TEST PRINT will still operate.

## **Procedure IMP2 – Turning Off Impact Printer Power**

To turn off printer power, perform the following:

- 1) Press ON/OFF switch on front panel to off — it should extinguish.
- 2) If desired to remove all power applied to printer cabinet (such as for moving power supply components or just to be doubly safe when working inside cabinet), disconnect ac power cord from site outlet.

## **Procedure IMP3 – Installing/Aligning Paper Forms in Impact Printer**

To install/align paper forms in the impact printer, use the following procedure. Select paper forms from those recommended under the heading Impact Printer Forms at the end of this procedure.

- 1) Turn printer power off (ON/OFF switch), lift front access panel slightly, slide it to front of printer cabinet, and lower access panel carefully to its open hanging position at front of cabinet.
- 2) Place stack of fanfold forms behind printer, directly below forms feed slot.
- 3) Insert top form into forms feed slot under tension bars (figure IMP1) and continue to slide form in until it is visible at front of printer.
- 4) Stand at front of printer and open left tractor flap. Position form on left tractor feed pins and close tractor flap.
- 5) Replace front access panel. Using the column guide on panel for forms position reference, slide left tractor for desired left margin on paper (tractors have fairly stiff friction clamps which require firm pressure to release).
- 6) Open right tractor flap, slide right tractor as necessary to left or right so tractor feed pins fit in right side feed holes of taut, non-skewed paper form, and close right tractor flap.
- 7) Set Forms Density Control lever according to forms thickness. Move lever toward rear of cabinet for thicker, multiple-part forms and toward front for thin forms. After starting printing, adjust this lever for best print quality.
- 8) Turn printer on and activate FORM FEED switch to position format tape reader at top of forms position.

9) While pressing Clutch Retractor Lever, use Forms Positioning Knob to advance form to intended first line of print (directly under printhead's present position).

10) Release Clutch Retractor Lever. Forms should be ready for printing.

### Impact Printer Forms

Impact printers use fanfolded forms that have sprocket drive holes along each side. For best print quality and printer operation, the forms and ribbons used in impact printers should meet the following general requirements.

The printer will handle standard continuous forms paper with feed holes on each edge, with or without marginal perforations.

The forms may be from 4 to 16.75 in (101.6 to 425 mm) in width including margins, and 3.5 to 18 in (88.9 to 457 mm) long from fold to fold. When using the output paper basket, the forms length is limited to 11 in (279 mm) from fold to fold.

The forms must have sprocket holes punched along both margins  $0.25 \pm 0.03$  in ( $6.35 \pm 0.76$  mm) from the paper edge to the hole center lines. The distance between hole centerlines must be  $0.50 \pm 0.005$  in ( $12.7 \pm 0.13$  mm) nonaccumulative, and the diameter of the holes should be  $0.156 \pm 0.010$  in ( $3.9$  to  $0.25$  mm). Multiple-part forms must be suitably fastened with nonmetallic fasteners. The following list specifies the recommended forms in terms of parts and weights.

Parts	White Sulphite Bond Paper	Carbon Paper
1	15 pound continuous bond ( $56 \text{ g/m}^2$ )	
1	24 pound continuous bond ( $90 \text{ g/m}^2$ )	
2 and 3	12 pound continuous bond ( $45 \text{ g/m}^2$ )	8 pound ( $14 \text{ g/m}^2$ )
2 and 3	15 pound continuous bond ( $56 \text{ g/m}^2$ )	8 pound ( $19 \text{ g/m}^2$ )
4 and 5	12 pound continuous bond ( $45 \text{ g/m}^2$ )	6 pound ( $14 \text{ g/m}^2$ )

## **Procedure IMP4 – Installing Ribbon in Impact Printer**

This procedure describes the various operations required for installing ribbon in the impact printer. Use ribbon and ribbon materials as specified under the heading Impact Printer Ribbon Materials at the end of this procedure.

If the replacement ribbon for the printer comes supplied on a single spool, unload used ribbon from one spool for reuse as follows:

- 1) Press power ON/OFF switch to OFF and open front access panel.
- 2) Remove ribbon (on spools) from ribbon path in printer (figure IMP2).
- 3) Place spool with most ribbon on right ribbon mandrel (figure IMP2).
- 4) Place other spool on stationary rewind mandrel located just behind right ribbon mandrel.
- 5) Turn printer on.
- 6) When ribbon stops turning, remove both spools, pull ribbon leader from empty spool, and use empty spool for spool loading procedure which follows.

If the replacement ribbon for the printer comes supplied on a single spool, load it on an empty spool (unload/emptied per preceding steps) for the required second spool as follows:

- 1) Route ribbon from full spool onto empty spool as shown in figure IMP3. Wrap ribbon leader over one of arrow-shaped holding clamps on empty spool hub and pull ribbon back into point of arrow of clamp until solidly hooked. Do not pull so hard that clamp at hub bends up. A minimum of 6 in (152.4 mm) of ribbon must exist between point of attachment and reversing eyelet which is imbedded in ribbon end. This is to allow actuating reversing lever next to right mandrel when ribbon is fully unwound from right spool.
- 2) Wind 5 to 6 turns of ribbon onto empty spool. Ribbon is ready for loading in printer.

To load a ribbon that is already on two spools, refer to figure IMP2 and perform the following:

- 1) Place full spool on left ribbon mandrel.
- 2) Route ribbon around guide rollers making sure it passes through slot in ribbon-reversing sense lever.
- 3) Route ribbon between ribbon guide and printhead and around front guide roller on printhead.
- 4) Route ribbon behind rear guide roller on printhead and then all the way right to behind far guide roller.
- 5) Route ribbon in front of next guide, through slot in ribbon-reversing sense lever, and behind last guide roller.
- 6) Place empty spool on right ribbon mandrel.
- 7) Slide printhead all the way to right and allow it to spring back. This should route ribbon beneath tip of clamp on printhead and ribbon should now be ready for printing.

#### Impact Printer Ribbon Materials

The ribbon used in this impact printer is 0.5 in (12.7 mm) wide by 66 feet (20 m) long and runs on an angle across the printing area in order to print on the full width of the ribbon. The ribbon must have an eyelet located at least 6 in (152 mm) from each end for automatic ribbon reversal. Nylon or silk ribbons only must be used. A single spool ribbon must be attached to an empty spool before installation in the printer. The following are recommended ribbon materials:

<u>Item</u>	<u>CDC Part Number</u>
Ribbon and Spools	95371700
Empty Ribbon Spool	76616500
Cleaning Solvent	Any standard commercial type, i.e., Brief, Formula 409, etc.

## **Procedure IMP5 – Installing Format Tape in Impact Printer**

This procedure describes installing the required format tape in the impact printer. Without a format tape in place, printer use will result in a forms runaway condition (no control over forms advance). Use format tape and material as specified under the heading Impact Printer Format Tape Materials at the end of this procedure.

- 1) Press power ON/OFF switch to OFF.
- 2) Remove format reader housing by pulling it, bottom first, away from printer from left side.
- 3) Lift brush block tension lever.
- 4) Thread format tape loop between brush block and drive sprocket making sure that channel 1 is at the inside (see figure IMP4 and IMP5). Be certain that tape holes fit neatly over drive sprocket pins.
- 5) Route the remaining loop of format tape using either path A or path B as shown in figure IMP4 depending on tape length. Use path B when tension arm cannot take up all slack with tape in path A, or if tension arm is so extended as to touch housing when tape is in path A.
- 6) Lower brush block tension lever.
- 7) Replace format reader housing by pressing it, top first, over framework of format reader from left side. Format tape should be ready for operation.

### Impact Printer Format Tape Materials

The format tape used in this impact printer is a standard 1 in (25.4 mm) wide tape with sprocket holes on 0.1 in (2.54 mm) centers (figure IMP5). The standard format tape (CDC Part No. 76621000) comes with channel 3 (line feed) already punched. Channel 1 should be punched to correspond to the top of forms positions. Channel 2 may be punched at any vertical tab desired. The format tape may be any length from 5.5 to 12.5 in (139.7 to 317.5 mm).

The person servicing the customer site is not normally required to supply format tapes to the customer. If a person wishes, properly punched spare format tapes may be brought to the site for test purposes. If, however, tape must be punched at the site, a special Format Tape Punch (CDC Part No. 76657900) must be used along with adhesive Format Tape Splice (CDC Part No. 76628200). The proper use of these items is fully described in the companion field service manual for the impact printer (see preface). The customer may purchase and have on site whatever format tape and punching/splicing equipment/materials are necessary.

## **Procedure IMP6 – Opening/Removing Impact Printer Cabinet**

To gain access to interior parts/assemblies of the impact printer, open/remove the cabinet as described by the following procedures.

Open/remove the front access panel (to gain access to entire ribbon path and line start circuit board) as follows:

- 1) Raise front edge of access panel slightly up, carefully slide it toward front of printer until the two retaining tangs (one at the far back on each end of access panel) are fully forward in their slots in upper cabinet, and gently lower access panel until it hangs at front of printer cabinet.
- 2) Remove panel from cabinet (if desired; for example, in preparation for removing entire cabinet) by lifting panel up again, swinging left side toward back as far as comfortable without jamming it, moving right side of panel toward front and lifting it so right tang lifts out from under cabinet top, and moving entire panel toward the right and front so it lifts off cabinet.

Open the rear logic chassis panel (to gain access to back interior of cabinet including logic chassis, input/output connector, driver board, tractor assembly locks/connector, etc.) as follows:

- 1) Loosen the four twist-lock fasteners located along top and side of backpanel (which covers entire back of printer cabinet), one quarter turn counter-clockwise.
- 2) Carefully tilt top of panel back and lower it so it hangs on its retaining chain.

### WARNING

Interior of cabinet has hazardous voltage.  
Exercise extreme caution if power is left on or  
turn power off and disconnect ac power cord from  
site outlet.

Remove the entire upper cabinet (to gain access to front interior of cabinet including drive motor, clutch, drive belt, character start assembly, code disc, pulley assembly, etc.) as follows:

- 1) Open rear logic chassis panel by preceding two steps.
- 2) Disconnect tractor assembly cable connector on logic chassis backplane board (figure IMP10).

- 3) Release tractor assembly by reaching into upper left and right corners of rear panel opening, pressing the two tractor assembly locks, and lifting tractor assembly off. Set tractor assembly aside in a safe place.
- 4) Grasp upper cabinet firmly on each side and lift straight up to release it from its spring-loaded fasteners. Carefully continue raising cabinet until it clears interior parts and set it aside in a safe place.

Replace any/all of the items removed in this procedure by reversing the steps which removed them.

### **Procedure IMP7 – Removing/Replacing Logic Chassis PC Boards**

To remove PC boards from the logic chassis, perform the following:

- 1) Press power ON/OFF switch to OFF.
- 2) Open rear logic chassis panel (procedure IMP6).
- 3) Release friction clamp arms holding board (figure IMP6) in place.
- 4) Withdraw board from card cage.

To replace PC boards in the logic chassis, perform the following:

- 5) Press power ON/OFF switch to OFF.
- 6) If board contains switches and/or jumpers, check the settings/placements (figure IMP7) per terminal subsystem requirements.
- 7) Place board in correct location (figure IMP6) and carefully slide board in track until board touches connector sockets at back.
- 8) Carefully draw board into connector sockets by evenly and firmly locking both friction clamps.

### **Procedure IMP8 – Checking/Setting Internal Switches and Jumpers**

To check/set internal switches and jumpers for the impact printer, proceed as follows:

- 1) Open rear logic chassis panel (procedure IMP6).
- 2) Remove RS-232-C interface board 1A04 (procedure IMP7).
- 3) Verify that all switches and jumpers (figure IMP7) conform to the interface configuration required for correct operation with the keyboard display logic (refer to impact printer installation procedures in associated Operators Guide/Reference Manual; see preface).
- 4) Replace RS-232-C interface board in slot 1A04 (procedure IMP7).

### **Procedure IMP9 – Removing/Replacing Driver PC Board**

To remove the drive PC board 2A01 (figure IMP15), perform the following:

- 1) Press power ON/OFF switch to OFF.
- 2) Open rear logic chassis panel (procedure IMP6).

#### **NOTE**

Before replacing a suspected faulty driver board, inspect the four solenoid fuses on the board (procedure IMP12). If replacing a faulty fuse solves the problem, do not proceed with replacing the driver board.

- 3) Reach in through rear panel accessway and remove the two screws from printhead ribbon-cable retainer at lower center of driver board.
- 4) Carefully pull each of the four connectors from driver board (these are 2J01, 2J02, 2J03, and 2J04 as shown on figure IMP8) being careful to note/mark which is top/bottom of each connector so proper reconnection is possible.
- 5) Using a short stubby screwdriver, remove four screws located along bottom of driver board and lift driver board out of cabinet through rear panel accessway.

To replace the hammer driver board, perform the preceding removal steps in reverse order.

### **Procedure IMP10 – Removing/Replacing Line Start PC Board**

To remove the line start PC board 3A01 (figure IMP15), perform the following:

- 1) Press power ON/OFF switch to OFF.
- 2) Open front access panel (procedure IMP6).
- 3) Slide printhead halfway toward right and block it with some nonmetallic object between printhead and left chassis endplate (a thin, hardcover book may be placed, binding down, between printhead guide rods and between printhead and left endplate).
- 4) Reach down under left end of printhead guide rods and disconnect connector 3J02 from line start board (figure IMP10).
- 5) Using a short stubby screwdriver, remove both screws located diagonally in middle of line start board and lift board out.

To replace the line start PC board, perform the preceding removal steps in reverse order.

### **Procedure IMP11 – Removing/Replacing Character Start PC Board**

To remove the character start PC board 3A02 (figure IMP15), perform the following:

- 1) Press power ON/OFF switch to OFF.
- 2) Remove entire upper cabinet (procedure IMP6).
- 3) Disconnect connector 3J04 from character start board (figure IMP10).
- 4) Remove both screws located diagonally in middle of character start board and carefully remove board away from code disc assembly.

To replace the character start board, perform the preceding removal steps in reverse order.

## Procedure IMP12 – Check/Replace Fuses

Fuses are located in three different functional areas within the impact printer. These locations are: hammer driver board 2A01, power supply board 1A01 in the logic chassis, and (for 50-Hz units only) in each of the four secondary outputs from power transformer 2T01.

Check/replace hammer driver board fuse(s) as follows:

- 1) Press power ON/OFF switch to OFF.
- 2) Open rear logic chassis panel (procedure IMP6).
- 3) Carefully observe suspect fuse (figure IMP8) and replace with a new fuse if burned out.

Check/replace power supply board fuse(s) as follows:

- 1) Press power ON/OFF to OFF.
- 2) Open rear logic chassis panel (procedure IMP6).
- 3) Observe fuses (figure IMP9). Replace if burned out.

Check/replace each fuse in the secondary of 2T01 (figure IMP15) in a 50-Hz unit as follows:

- 1) Press power ON/OFF to OFF.
- 2) Remove entire upper cabinet (procedure IMP6).
- 3) Observe fuses (figure IMP10). Replace if burned out. Identification for these power transformer fuses is as follows:

Top fuse (2F01): 10 A (+28 V dc)  
Second fuse down (2F02): 6.25 A (+13 V dc)  
Third fuse down (2F03): 1 A (+16 V dc)  
Bottom fuse (2F04): 1 A (+24 V dc)

## **Procedure IMP13 – Removing/Replacing Internal Cables**

To remove any cable with the printer, on either or both ends, proceed as follows:

- 1) Press power ON/OFF switch to OFF.
- 2) Refer to internal cable/connector diagrams (figures IMP11, 12, 13, and 14) for cable general location/routing. See figures IMP11 and IMP16 for chassis connector locations.

### WARNING

For any cable/wiring on the primary side of the power transformer (2T01), the input power cord must be disconnected from the site power outlet. Also, whenever working near any portion of input power, whether input lines or various terminal blocks/pins, the power cord must be disconnected. It is good practice to always disconnect the input power cord when doing any remove/replace work inside the printer. The exception to this may be removing the slide-out logic chassis circuit cards or other similarly simple procedures which may require only the ON/OFF switch set to OFF. If in doubt, always disconnect the input power cord from the site outlet.

- 3) Open cabinet as required to gain access to cable (procedure IMP6).
- 4) While carefully noting pin orientation/location to enable proper reconnection (mark/tag if required), carefully disconnect desired cable.
- 5) Remove any/all cable ties which may hold cable in place. Make it a point to remember where such ties were placed for proper retying later.
- 6) Carefully work entire length of cable (and attached connectors) free from its route and out of printer.

Replace any cable within the printer as follows:

- 7) Verify having correct cable (see impact printer parts manual identified in preface of this manual).
- 8) Carefully work cable (and attached connectors) into its proper place (see impact printer parts manual and field service manual, both identified in preface of this manual).
- 9) Secure as required with cable ties.
- 10) Carefully reconnect connections properly.
- 11) Close cabinet and/or apply power (procedure IMP1) as desired.

#### **Procedure IMP14 – Checking Internal Cables**

To check internal cables, perform the following:

- 1) Open cabinet as required (procedure IMP6) to access cable.
- 2) Visually inspect connections. If loose or open, secure, and if using this procedure from a DDLT, return to the DDLT and check results before proceeding with following steps of this procedure.
- 3) Disconnect cable connections from both ends of suspected wire(s) (procedure IMP13, steps 1 through 4).
- 4) Carefully inspect connector pins on both ends for possible damage. If damaged pin(s) found, replace pin(s), connector in which pin(s) reside, or entire cable (procedure IMP13, steps 4 through 11) — whichever best meets existing spares availability and immediate customer needs. Refer to the impact printer parts manual (see preface) for all parts identification.
- 5) Using the interconnection diagrams provided in the impact printer field service manual (see preface), do a pin-to-pin continuity check with an ohmmeter or continuity-checking idiot-light.
- 6) If open wire(s) found, repair if possible/desired (solder loose connection at connector or replace broken wire in bundle) or replace faulty cable with a new one (procedure IMP13, steps 4 through 11).

## **Procedure IMP15 – Mechanical Checks/Adjustments**

A variety of detailed mechanical checks and adjustments may be performed on the impact printer at the customer site. The field service manual (see preface) contains the procedures for such tasks in its Maintenance section. The procedures provided there, which meet the maintenance philosophy for the printer as part of the terminal subsystem, are as follows:

- Belt Tension
- Clutch Assembly
- Ribbon Tracking
- Printhead (except printwire ends adjustment)
- Code Disc Assembly
- Paper Motion System
- Format Reader Brush
- Dashpot
- Ribbon Reversing Switch
- Out of Paper Switch
- Clamp Lever (tractor)
- End of Line Switch

When it appears necessary to perform any of these checks/adjustments, do so using the tools and materials specified in the procedures and listed at the beginning of the Maintenance section in the field service manual.

## **Procedure IMP16 – Electrical Checks/Adjustments**

A few electrical checks and adjustments may be performed on the impact printer at the customer site. The field service manual (see preface) contains the procedures for such tasks in the Maintenance section. When it appears necessary to perform any of these checks/adjustments, do so using the tools and materials specified in the procedures (and listed at the beginning of the Maintenance section in the field service manual). The electrical check/adjustment procedures provided there, which meet the maintenance philosophy for the printer as part of a terminal subsystem, are as follows:

- +5-V dc Output Voltage Adjustment
- Line Start and Character Start Synchronization (oscilloscope required)
- Character Firing Time and Width Adjustment (oscilloscope required)

## **Procedure IMP17 – Parts Replacement**

The field service manual (see preface) contains the procedures for replacing many subassembly parts within the impact printer. These are in addition to the remove/replace procedures given preceding in this section. A list of these parts replacement procedures follows. When it appears necessary to perform any of these replacements, do so using the tools and materials specified in the procedures (and listed at the beginning of the Maintenance section in the field service manual). The replacement procedures provided there, which meet the maintenance philosophy for the printer as part of a terminal subsystem, are as follows:


### CAUTION

When removing/replacing any assembly/part, always, as a minimum, press power ON/OFF switch to OFF. This prevents mechanism motion and also prevents electrical arcing when disconnecting circuits. If working near or replacing/disconnecting any input power circuits, always disconnect the input power cord from the site power outlet. It is good practice to always disconnect the input power cord whenever working on any of the circuits within the printer.

- Drive Motor
- Intermediate Pulley Assembly
- Clutch Drive Mechanism
- Right Ribbon Mechanism
- Support Shaft Assembly
- Dashpot Assembly
- Printhead Disassembly (removal part only, disassembly not recommended at customer site)
- Code Disc Pulley Assembly
- Left Ribbon Assembly
- Paper Motion System
- Format Reader Brush

- Format Reader Brush Block
- Format Reader Disassembly
- Platen Removal
- Cooling Fan Assembly

To replace items not included either in the preceding list or in the preceding procedures in this section (ON/OFF circuit breaker switch, power transformer, various backplane components, etc.) refer to the impact printer parts manual (see preface) for parts identification and disassembly/assembly drawings. Use the tools and materials specified at the beginning of the Maintenance section in the field service manual (see preface) and proceed to disassemble (remove) and replace the necessary item according to the parts drawings.

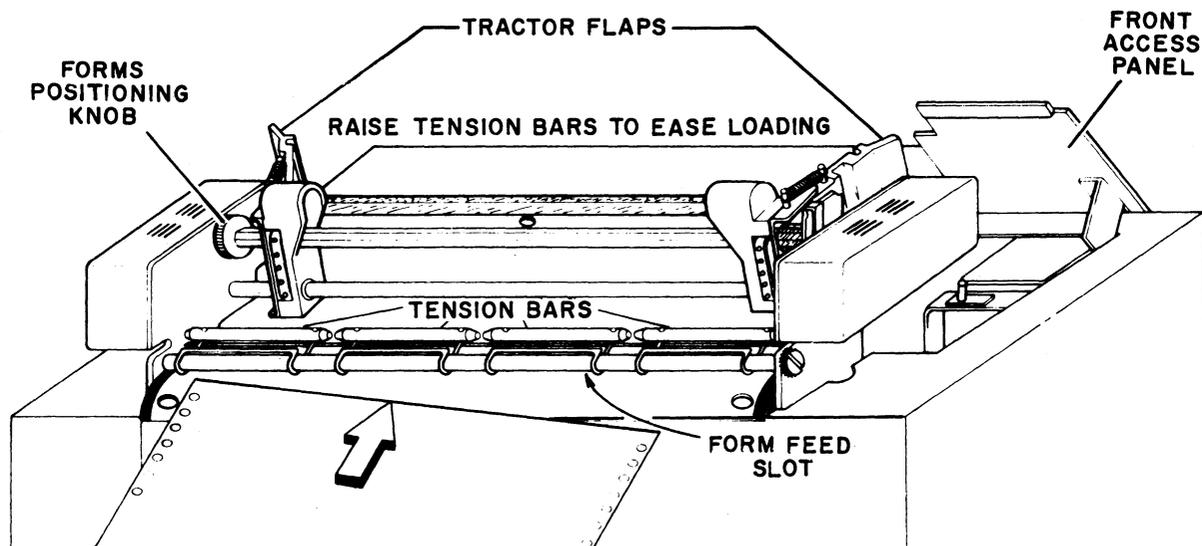

NOTE: FOR SINGLE-PART FORMS USE ONLY THE TWO CENTER TENSION BARS. SWING THE OUTER TWO TENSION BARS UP AWAY FROM THE FORMS. FOR MULTIPLE-PART FORMS, ALL FOUR TENSION BARS ARE NORMALLY USED. FOR NARROW FORMS, ANY TENSION BAR NOT COVERING THE FORM WITH AT LEAST HALF OF ITS WIDTH SHOULD BE LIFTED. IF FORMS TEAR AT THE SPROCKET HOLES, TENSION BAR SHOULD BE LIFTED UNTIL THE TEARING IS ELIMINATED.

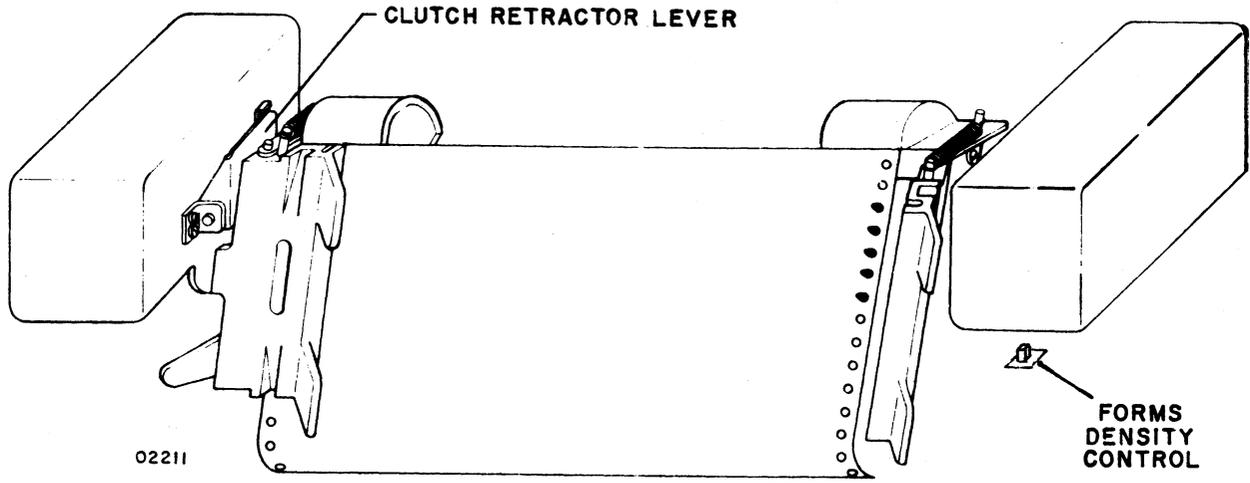


Figure IMP1. Forms Installing/Aligning in Impact Printer

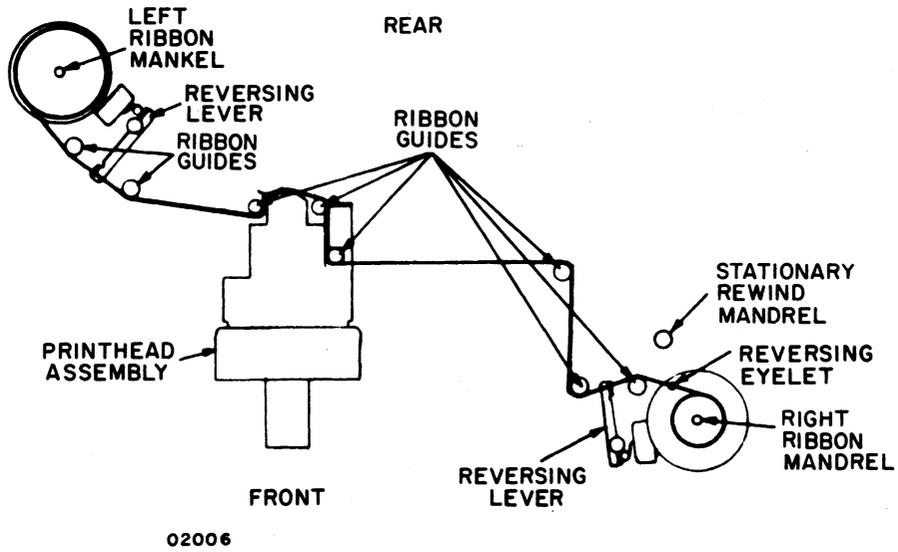


Figure IMP2. Ribbon Path in Impact Printer

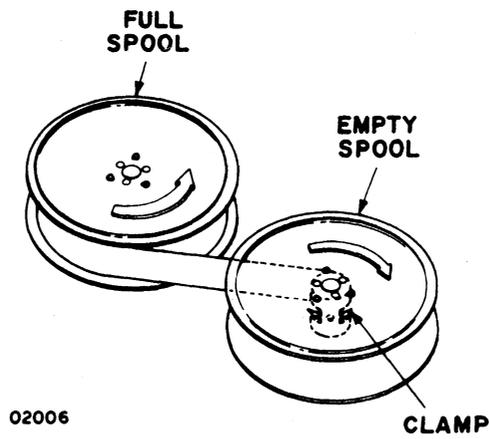


Figure IMP3. Ribbon Positioning on Spools

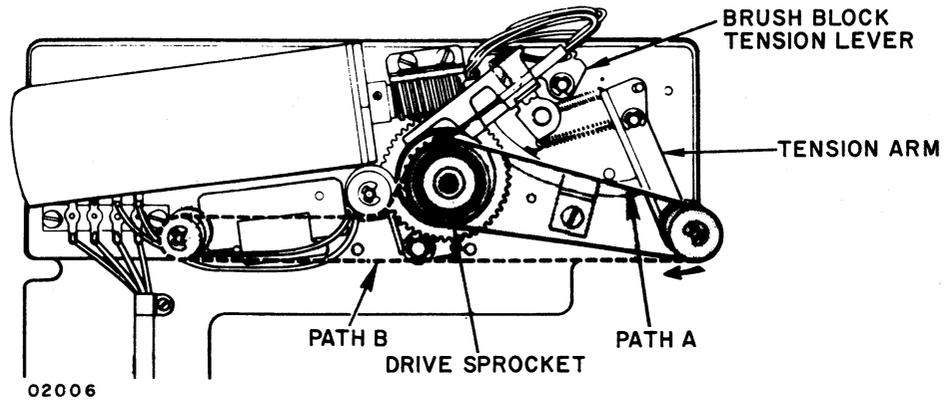


Figure IMP4. Format Tape Path in Impact Printer

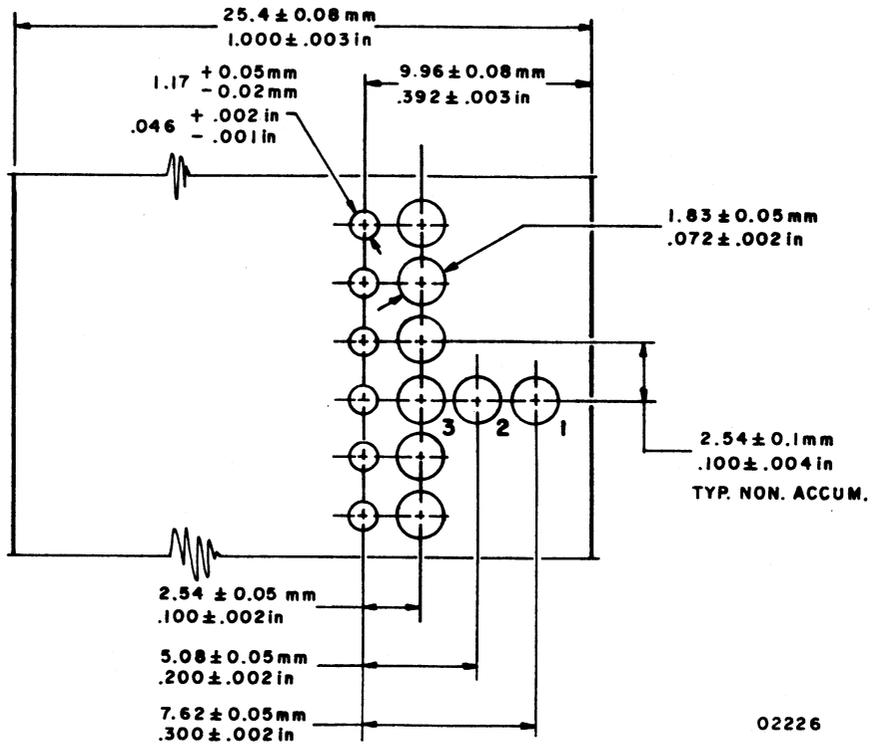


Figure IMP5. Format Tape Characteristics


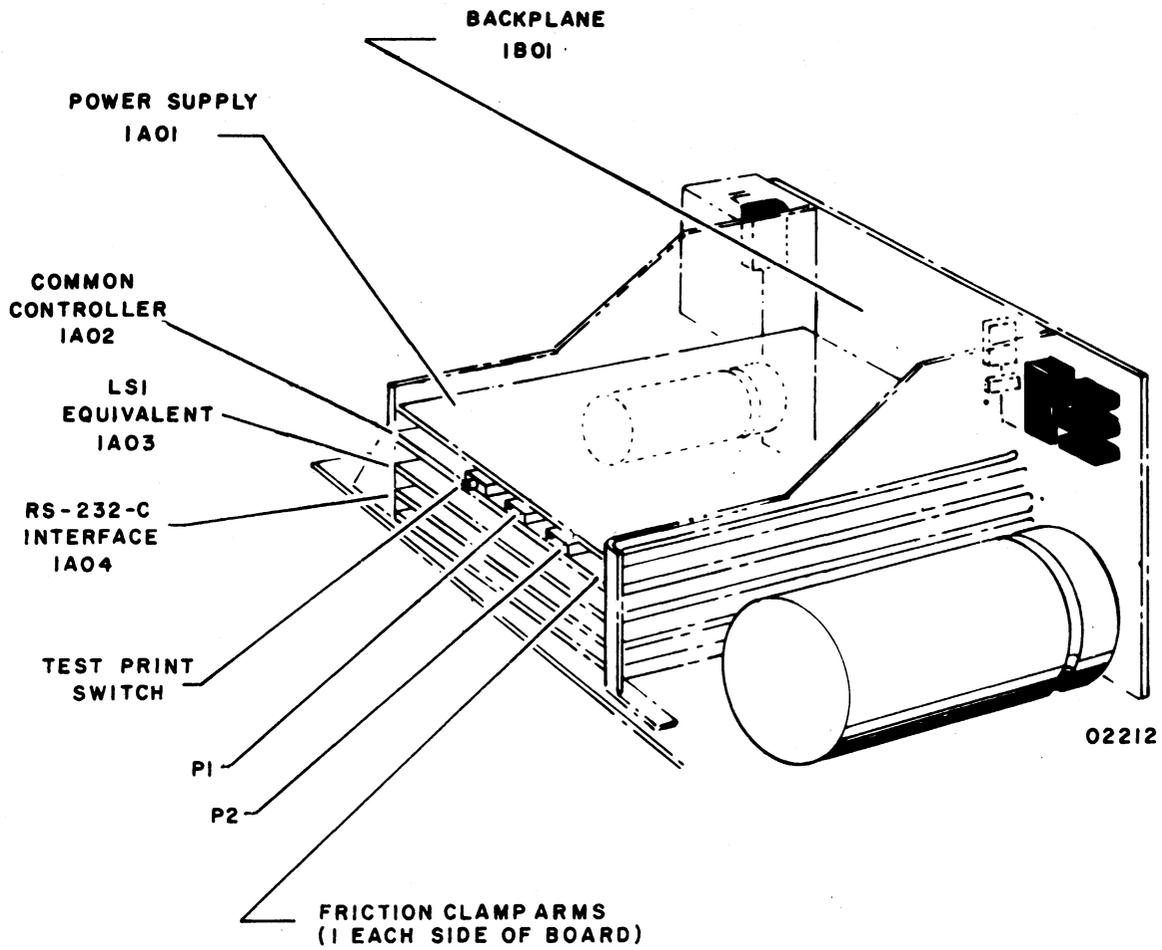


Figure IMP6. Logic Chassis Board Locations

	BAUD RATE SELECTION 150	BAUD RATE SELECTION 300	BAUD RATE SELECTION 600	BAUD RATE SELECTION 1200	BAUD RATE SELECTION 1800	BAUD RATE SELECTION 2400	BAUD RATE SELECTION 4800	BAUD RATE SELECTION 9600	REC CLOCK TIME 416 USEC	REC CLOCK TIME 202 USEC	REC CLOCK TIME 104 USEC	REC CLOCK TIME 52 USEC	REC CLOCK TIME 35 USEC	REC CLOCK TIME 26 USEC	REC CLOCK TIME 13 USEC	REC CLOCK TIME 6.5 USEC	EVENT PARITY	ODD PARITY	NO PARITY	5 DATA BITS	6 DATA BITS	7 DATA BITS	8 DATA BITS	BUFFER OVERFLOW	AUTO ANSWERING	REVERSE CHANNEL MARK	REVERSE CHANNEL SPACE	AUDIBLE ALARM OUT OF PAPER	AUDIBLE ALARM BEL CODE
J01																													
J02																													
J03																													
J04																													
J05																								X					
J06																									X				
SW1-1	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF																					
SW1-2	ON	ON	OFF	OFF	ON	OFF	OFF	OFF																					
SW1-3	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF																					
SW1-4	OFF	OFF	ON	ON	OFF	OFF	ON	OFF																					
SW1-5	ON	ON	ON	ON	ON	OFF	ON	OFF																					
SW1-6	ON	ON	ON	OFF	OFF	OFF	OFF	OFF																					
SW1-7	ON	ON	OFF	OFF	ON	ON	OFF	ON																					
SW1-8	ON	OFF	OFF	ON	OFF	ON	ON	ON																					
SW2-1									ON	ON	OFF																		
SW2-2									OFF	ON																			
SW2-3																			ON	ON	OFF	OFF							
SW2-4																			ON	OFF	ON	OFF							
SW2-5	ON	ON	ON	ON	OFF	ON	OFF	OFF																					
SW2-6	OFF	OFF	OFF	OFF	ON	OFF	ON	ON																					
J07																				X	X	X							

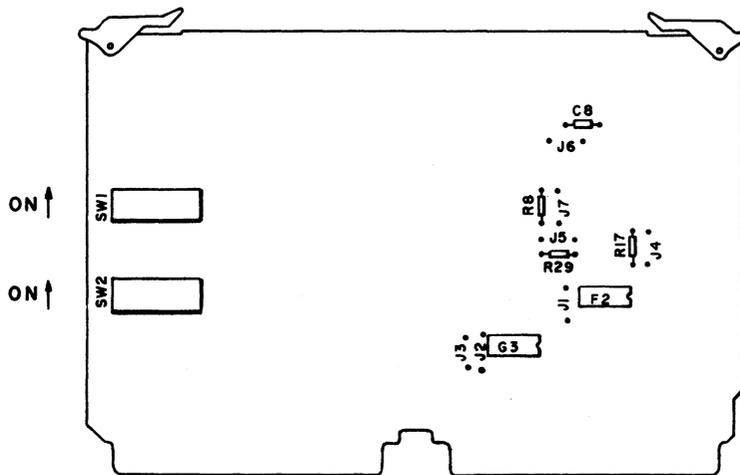

NOTES:

1) TO USE THE PRINTER ON OTHER BAUD RATES THAN SHOWN ABOVE, THE FOLLOWING FORMULA CAN BE USED  
LOAD VALUE IN DECIMAL =  $256 - \left( \frac{1}{32(\text{BAUD RATE})A} \right)$

WHERE:

A =  $1 \times 10^{-6}$  FOR SWITCH 2-5 CLOSED AND 2-6 OPEN

A =  $0.25 \times 10^{-6}$  FOR SWITCH 2-6 CLOSED AND 2-5 OPEN

THE LOAD VALUE IN DECIMAL MUST THEN BE CONVERTED INTO BINARY.  
THEN, THAT VALUE IS LOADED INTO THE SWITCHES.

2) SWITCHES 2-5 AND 2-6 CAN NEVER BE CLOSED OR OPEN AT THE SAME TIME.  
IF EITHER OF THESE OCCURS, EITHER A WRONG FREQUENCY OR NO FREQUENCY  
IS SUPPLIED TO THE BAUD RATE SELECTOR.

02290-1

Figure IMP7. Internal Switches and Jumpers (RS-232-C Interface Board)

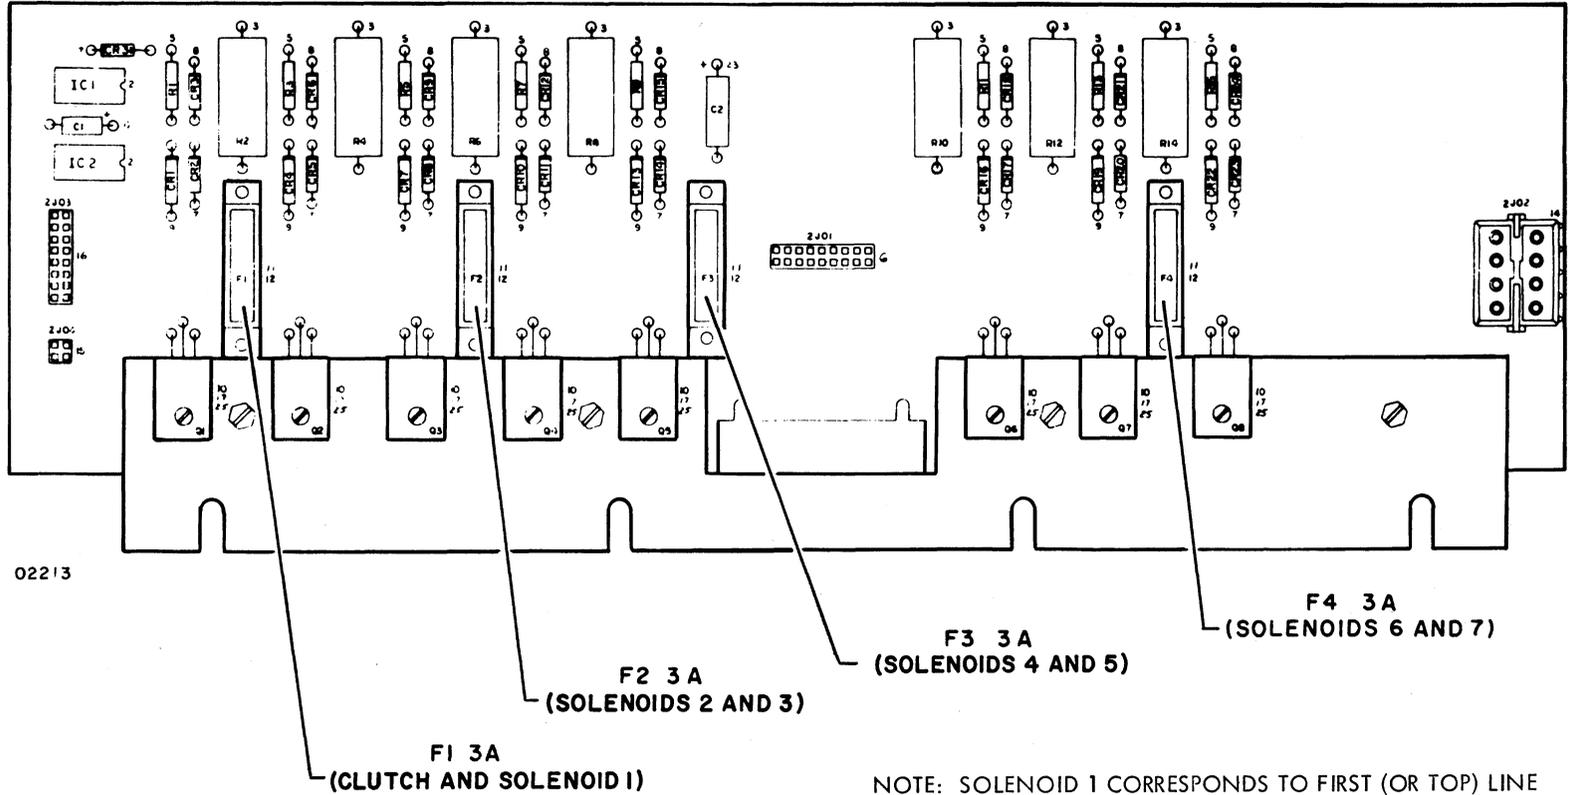


Figure IMP8. Solenoid Driver Board with Fuse Identification



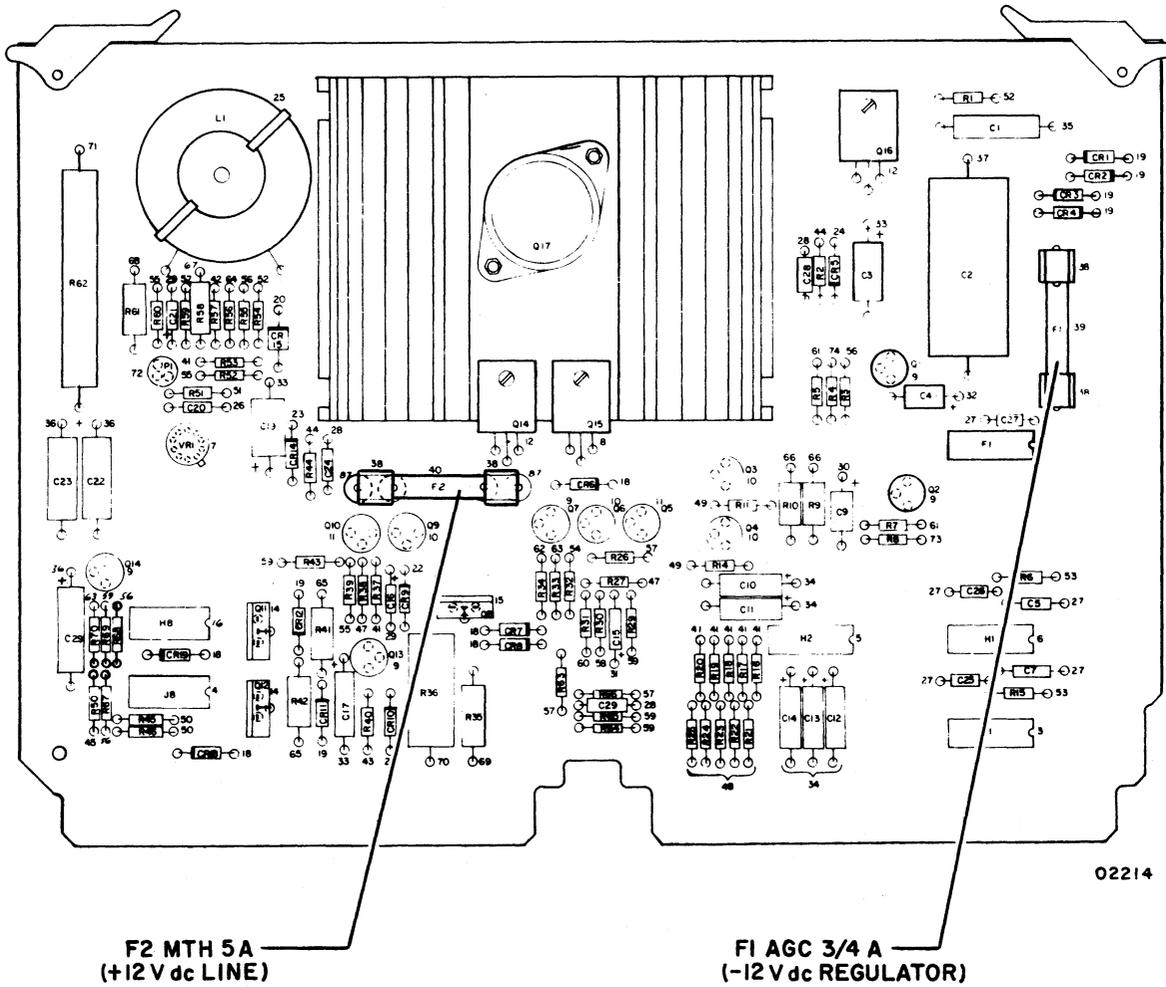


Figure IMP9. Power Supply Board with Fuse Identification

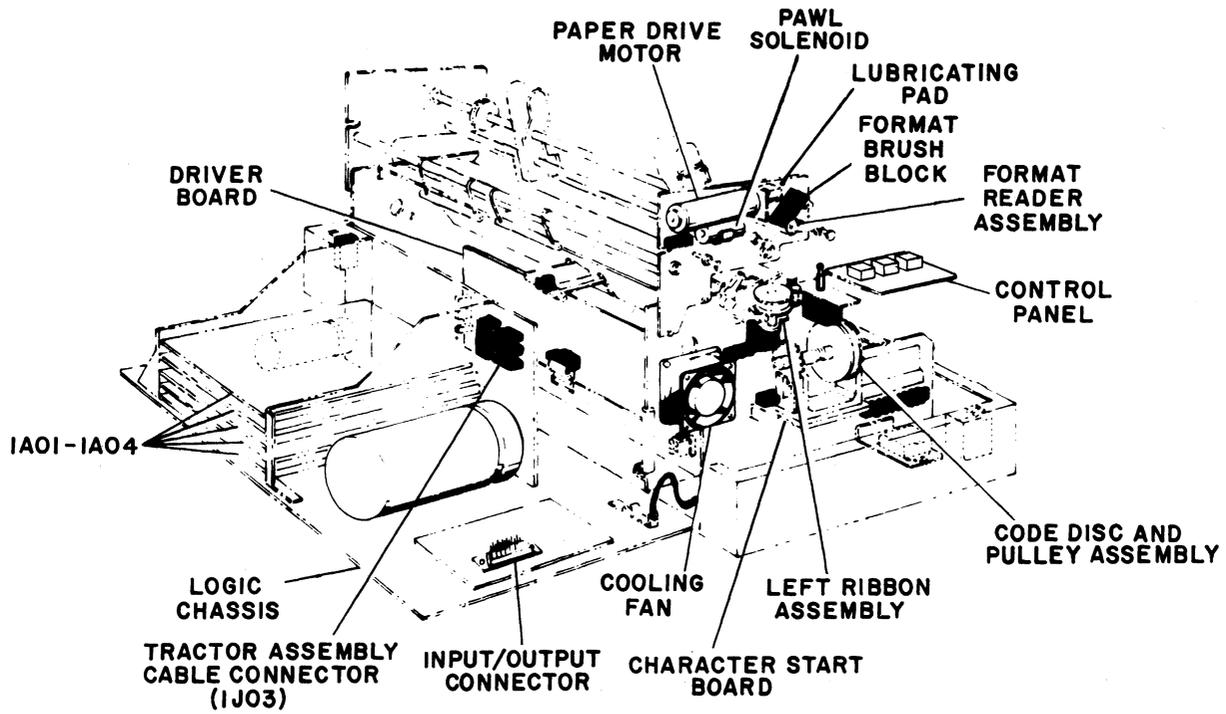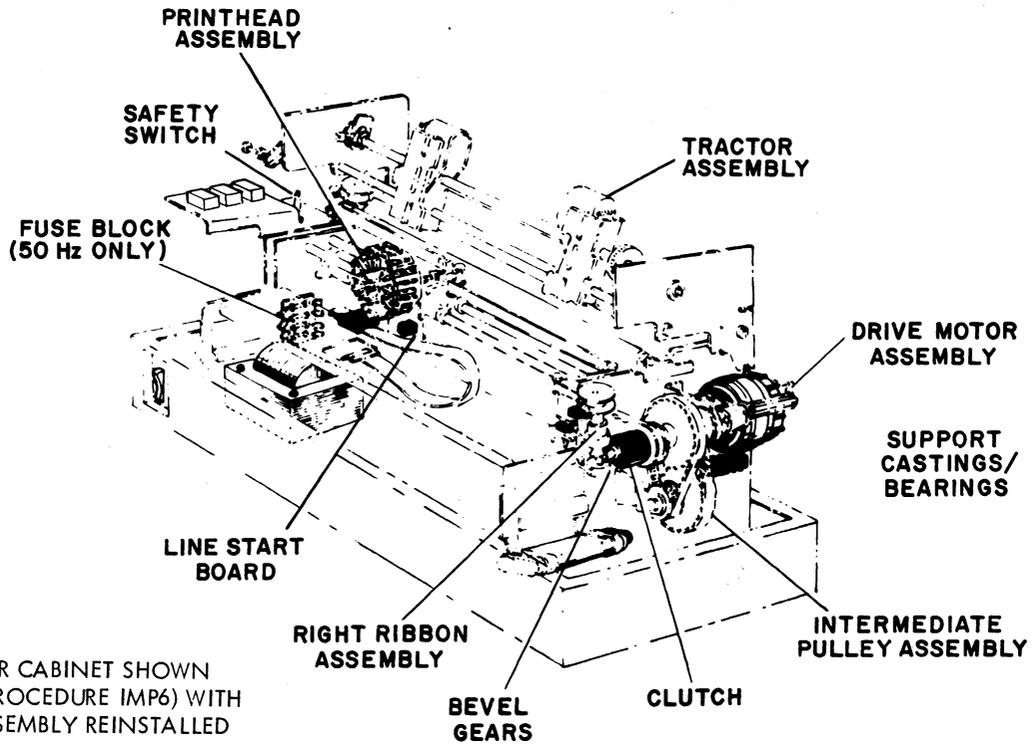

02223

Figure IMP10. Impact Printer Major Assemblies



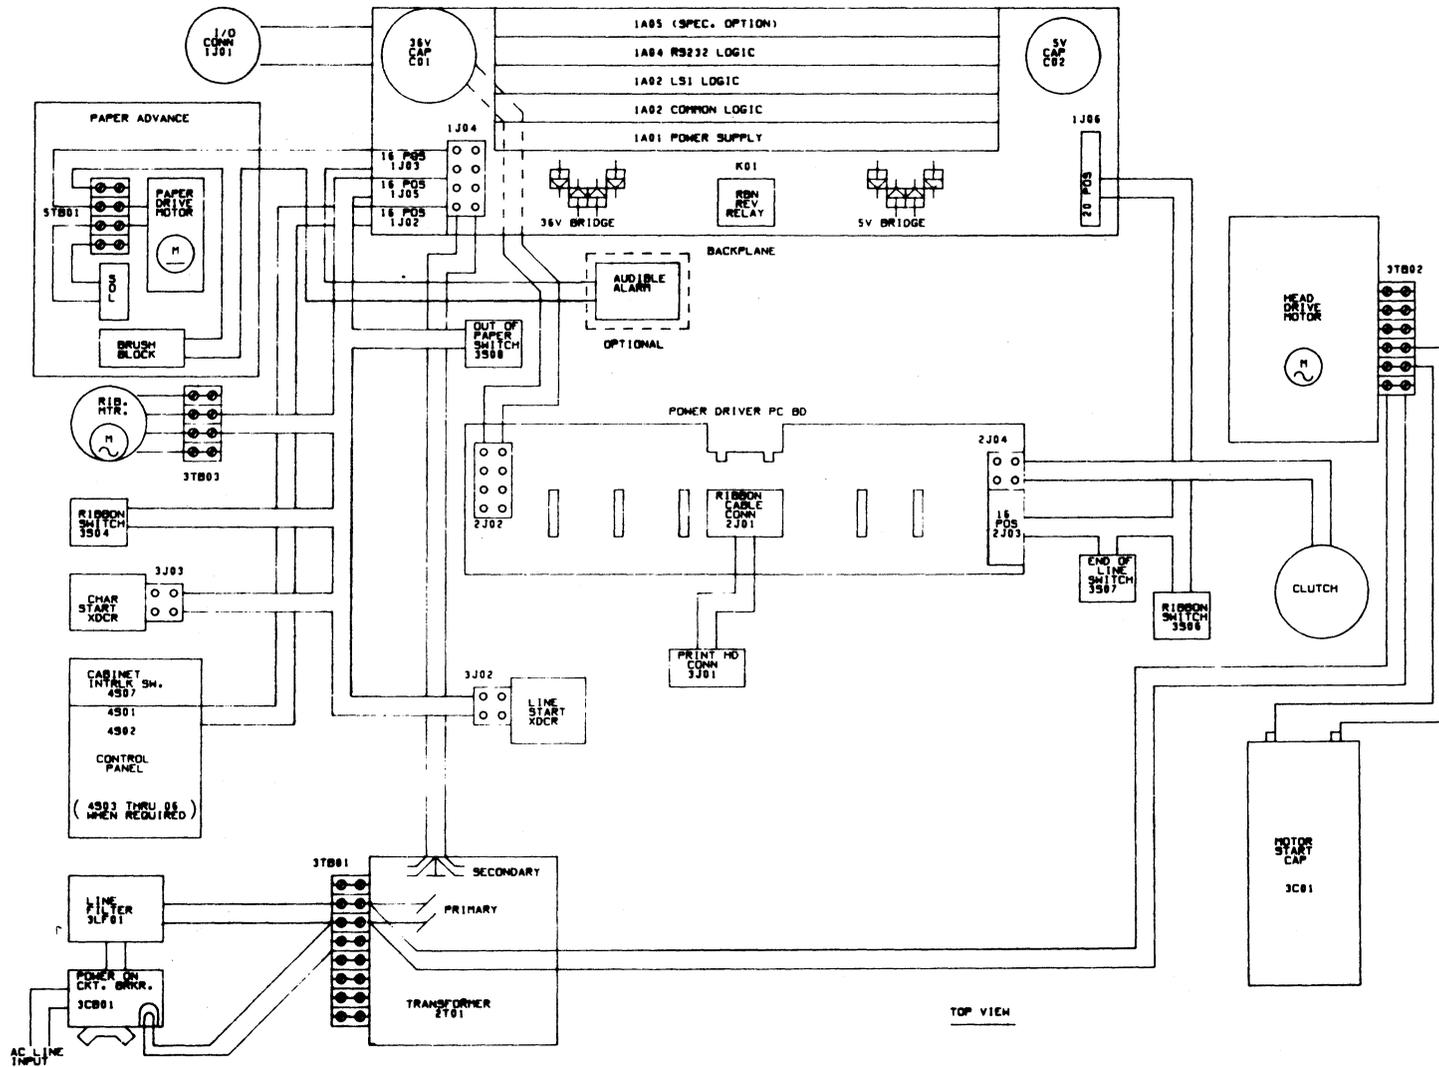


Figure IMP11. Impact Printer Internal Connectors

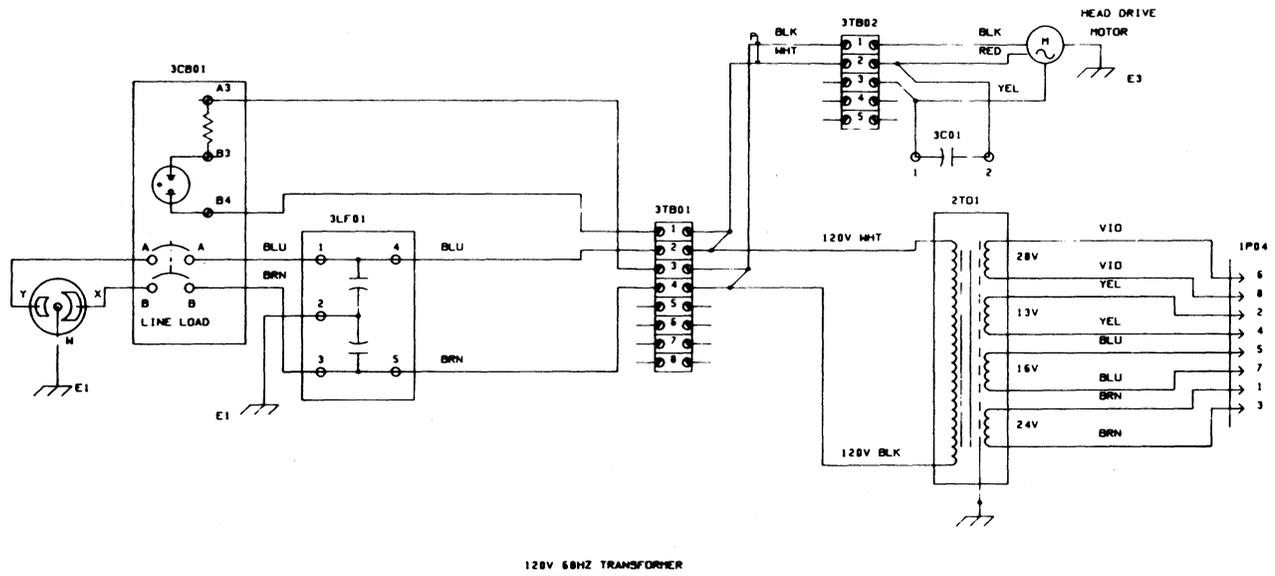

02216

Figure IMP12. 60-Hz AC Distribution

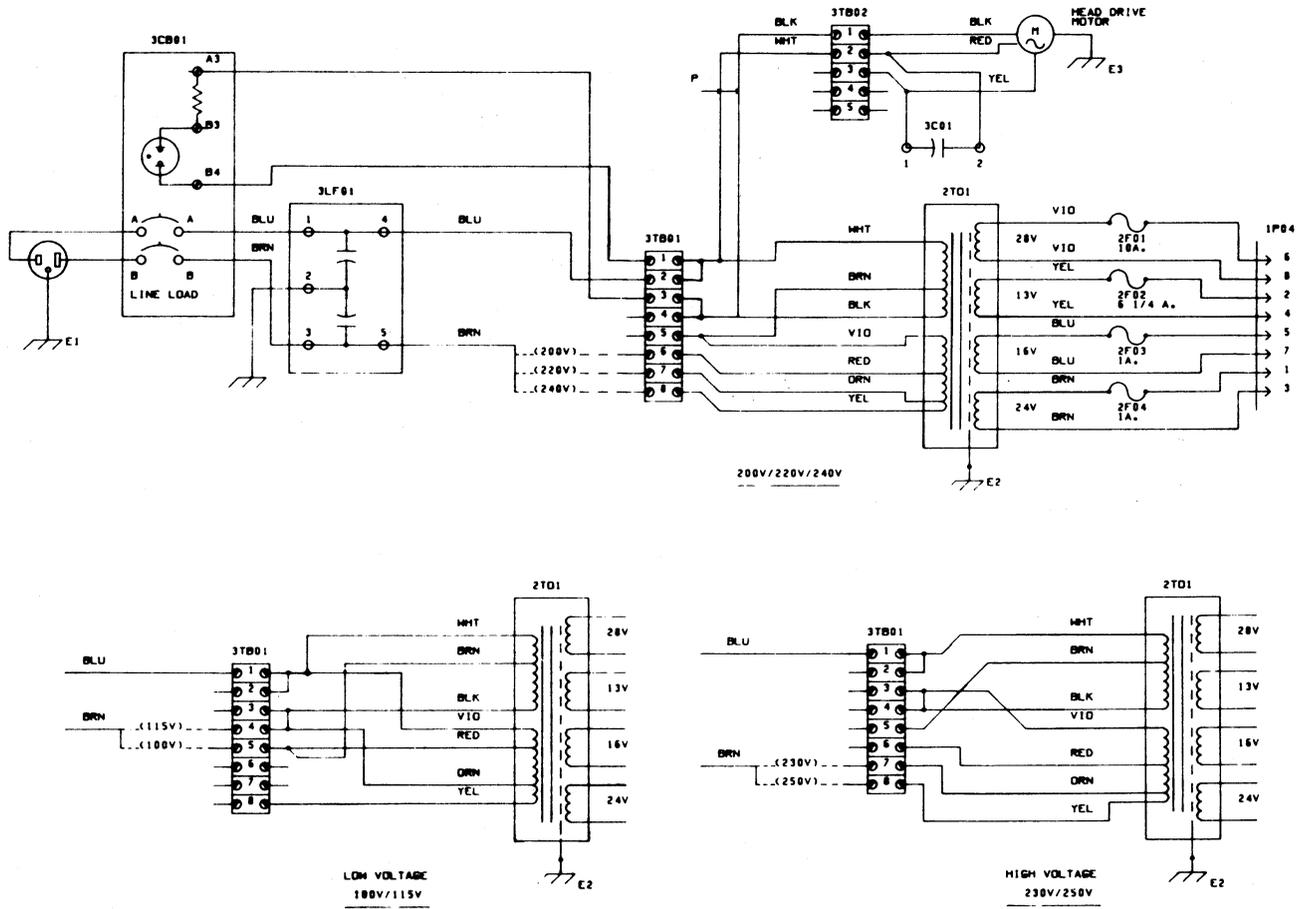

UNIVERSAL TRANSFORMER

02217

Figure IMP13. Universal AC Distribution




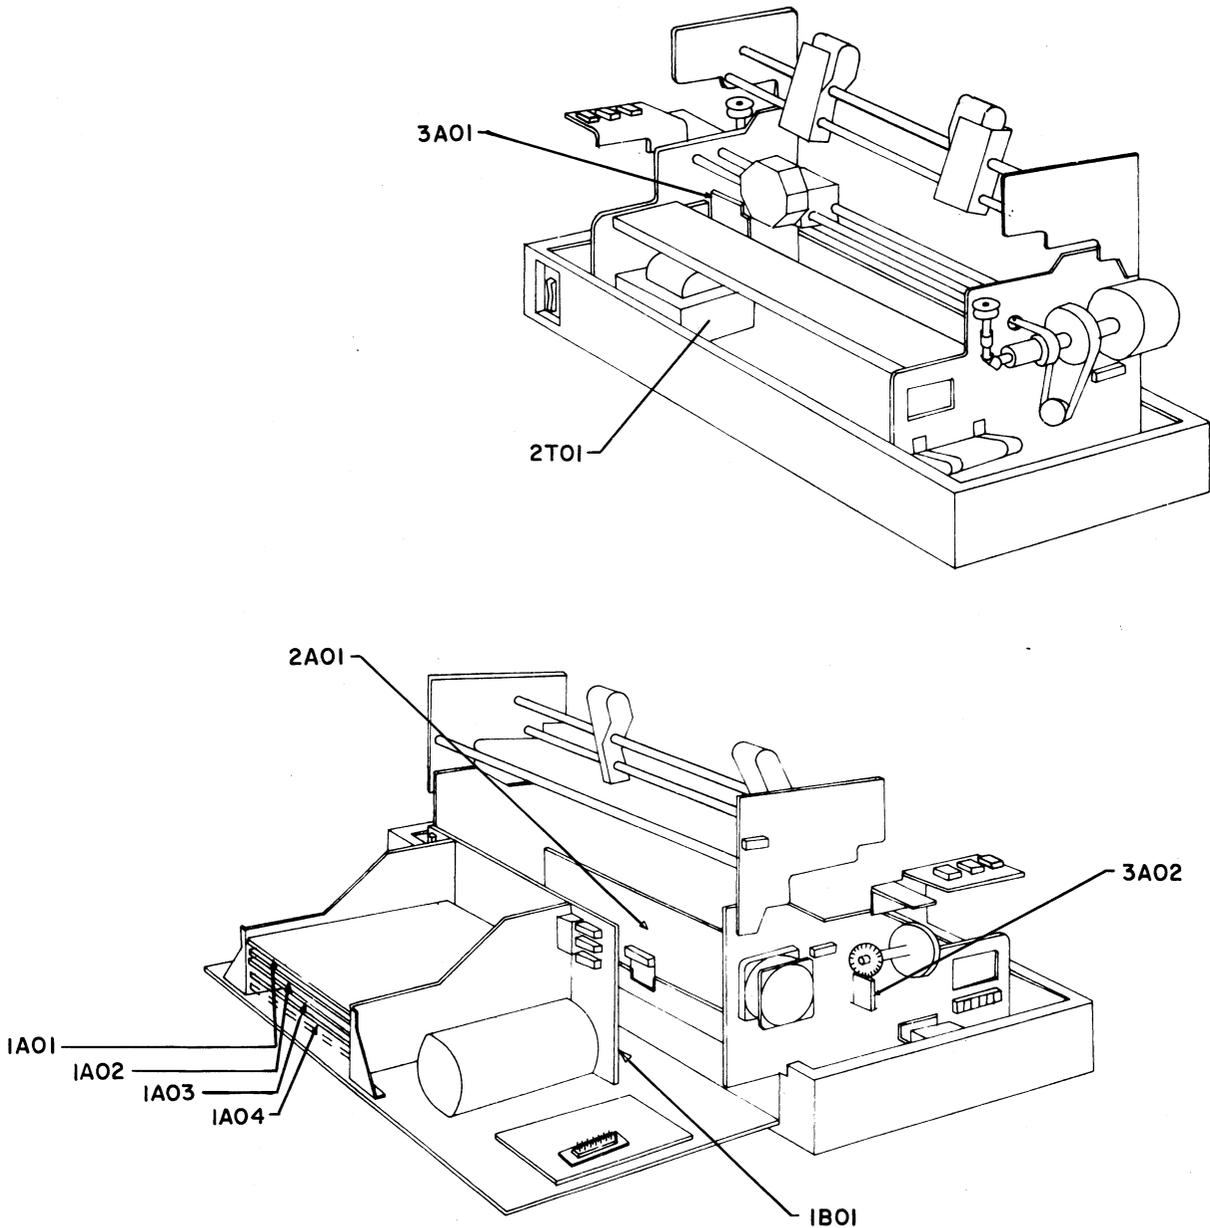


Figure IMP15. Configuration Drawing

POWER SUPPLY 00101, 00102, 00103	1A01 95365400
COMMON CONTROLLER 00201 THRU 00206	1A02 76647800
CONTROLLER - LSI EQUIV 00301 THRU 00304	1A03 76647600
RS232 INTERFACE 00401	1A04 95411000
00501	1A05


BACKPLANE  
00601, 00602

1B01  
95365600

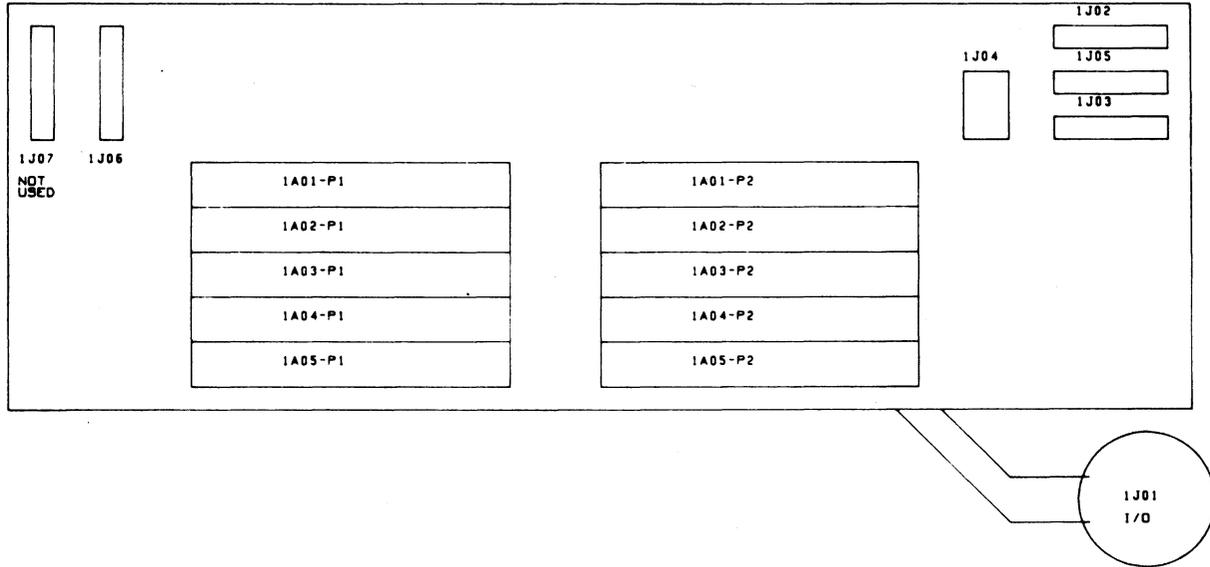


DRIVER BOARD  
00701

2A01  
76648000

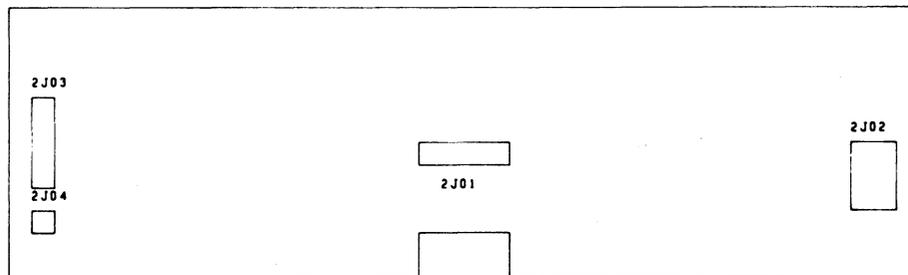


LINE START BOARD  
00801

3A01  
76648200

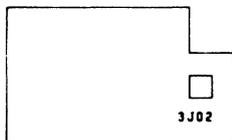

CHARACTER START BOARD  
00901

3A02  
76642000

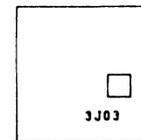

02224

Figure IMP16. Chassis Map

# INDEX

## POWER SEQUENCE

Turning On Subsystem Power .....	6A-2
Turning Off Subsystem Power .....	6A-3

## TERMINAL SUBSYSTEM

<u>Procedure</u>	<u>Page</u>	<u>Procedure</u>	<u>Page</u>	<u>Procedure</u>	<u>Page</u>
TS1 .....	6A-2	TS3 .....	6A-3	TS5 .....	6A-4
TS2 .....	6A-3	TS4 .....	6A-4	TS6 .....	6A-5
<u>Figure</u>	<u>Page</u>	<u>Figure</u>	<u>Page</u>	<u>Figure</u>	<u>Page</u>
TS1 .....	6A-14	TS3 .....	6A-15	TS5 .....	6A-17
TS2 .....	6A-15	TS4 .....	6A-16		
<u>Table</u>	<u>Page</u>	<u>Table</u>	<u>Page</u>	<u>Table</u>	<u>Page</u>
TS1 .....	6A-1	TS3 .....	6A-18	TS4 .....	6A-19
TS2 .....	6A-18				

## KEYBOARD DISPLAY

<u>Procedure</u>	<u>Page</u>	<u>Procedure</u>	<u>Page</u>	<u>Procedure</u>	<u>Page</u>
CRT1 .....	6B-5	CRT8 .....	6B-18	CRT15 .....	6B-30
CRT2 .....	6B-5	CRT9 .....	6B-21	CRT16 .....	6B-31
CRT3 .....	6B-5	CRT10 .....	6B-22	CRT17 .....	6B-33
CRT4 .....	6B-8	CRT11 .....	6B-26	CRT18 .....	6B-35
CRT5 .....	6B-9	CRT12 .....	6B-27	CRT19 .....	6B-36
CRT6 .....	6B-10	CRT13 .....	6B-28	CRT20 .....	6B-37
CRT7 .....	6B-14	CRT14 .....	6B-29		
<u>Figure</u>	<u>Page</u>	<u>Figure</u>	<u>Page</u>	<u>Figure</u>	<u>Page</u>
CRT1 .....	6B-39	CRT11 .....	6B-48	CRT21 .....	6B-56
CRT2 .....	6B-40	CRT12 .....	6B-48	CRT22 .....	6B-56
CRT3 .....	6B-41	CRT13 .....	6B-49	CRT23 .....	6B-57
CRT4 .....	6B-41	CRT14 .....	6B-49	CRT24 .....	6B-58
CRT5 .....	6B-42	CRT15 .....	6B-50	CRT25 .....	6B-58
CRT6 .....	6B-43	CRT16 .....	6B-53	CRT26 .....	6B-59
CRT7 .....	6B-44	CRT17 .....	6B-53	CRT27 .....	6B-59
CRT8 .....	6B-45	CRT18 .....	6B-53	CRT28 .....	6B-60
CRT9 .....	6B-46	CRT19 .....	6B-54	CRT29 .....	6B-61
CRT10 .....	6B-47	CRT20 .....	6B-55		

## KEYBOARD DISPLAY (CONTD)

<u>Table</u>	<u>Page</u>	<u>Table</u>	<u>Page</u>	<u>Table</u>	<u>Page</u>
CRT1	..... 6B-1	CRT2	..... 6B-2	CRT3	..... 6B-3

## NONIMPACT PRINTER

<u>Procedure</u>	<u>Page</u>	<u>Procedure</u>	<u>Page</u>	<u>Procedure</u>	<u>Page</u>
NIP1	..... 6C-3	NIP6	..... 6C-7	NIP11	..... 6C-14
NIP2	..... 6C-4	NIP7	..... 6C-10	NIP12	..... 6C-15
NIP3	..... 6C-4	NIP8	..... 6C-12	NIP13	..... 6C-15
NIP4	..... 6C-5	NIP9	..... 6C-12		
NIP5	..... 6C-6	NIP10	..... 6C-13		

<u>Figure</u>	<u>Page</u>	<u>Figure</u>	<u>Page</u>	<u>Figure</u>	<u>Page</u>
NIP1	..... 6C-16	NIP5	..... 6C-19	NIP9	..... 6C-21
NIP2	..... 6C-17	NIP6	..... 6C-20	NIP10	..... 6C-22
NIP3	..... 6C-18	NIP7	..... 6C-20		
NIP4	..... 6C-19	NIP8	..... 6C-21		

<u>Table</u>	<u>Page</u>	<u>Table</u>	<u>Page</u>
NIP1	..... 6C-1	NIP2	..... 6C-22

## IMPACT PRINTER

<u>Procedure</u>	<u>Page</u>	<u>Procedure</u>	<u>Page</u>	<u>Procedure</u>	<u>Page</u>
IMP1	..... 6D-6	IMP7	..... 6D-14	IMP13	..... 6D-18
IMP2	..... 6D-8	IMP8	..... 6D-15	IMP14	..... 6D-19
IMP3	..... 6D-8	IMP9	..... 6D-15	IMP15	..... 6D-20
IMP4	..... 6D-10	IMP10	..... 6D-16	IMP16	..... 6D-20
IMP5	..... 6D-12	IMP11	..... 6D-16	IMP17	..... 6D-21
IMP6	..... 6D-13	IMP12	..... 6D-17		

<u>Figure</u>	<u>Page</u>	<u>Figure</u>	<u>Page</u>	<u>Figure</u>	<u>Page</u>
IMP1	..... 6D-23	IMP7	..... 6D-27	IMP13	..... 6D-33
IMP2	..... 6D-24	IMP8	..... 6D-28	IMP14	..... 6D-34
IMP3	..... 6D-24	IMP9	..... 6D-29	IMP15	..... 6D-35
IMP4	..... 6D-25	IMP10	..... 6D-30	IMP16	..... 6D-36
IMP5	..... 6D-25	IMP11	..... 6D-31		
IMP6	..... 6D-26	IMP12	..... 6D-32		

<u>Table</u>	<u>Page</u>
IMP1	..... 6D-1

---

This section contains a genealogy chart, parts data, and spare parts data for the display terminal equipment.

## **GENEALOGY CHART**

The genealogy chart for the display terminal equipment provides equipment configuration information for the various display terminals available in this series. The chart also identifies the subassemblies required to assemble the various terminals.

## **PARTS DATA**

Assembly drawings and related parts lists clarify the appearance and the location of each part for only the display terminal equipment. For similar information on the nonimpact and impact printers, refer to their respective hardware maintenance and parts identification manuals (see preface).

Parts data shown in the genealogy chart for the display terminal appears in this section in the following order:

- Terminal top-level assembly
- Power supply
- Logic module
- Rear panel
- Keyboard
- Video display
- Front panel
- Monitor rear panel cable

Use the assembly drawings and parts lists to identify parts of the terminal in the following manner. First, locate the assembly drawing showing the part and identifying it with a Find Number (circled number). Then, use the Find Number to find the description and eight-digit part number of the part on the parts list associated with the assembly drawing. Table 7-1 explains the column headings found on the computer-generated Assembly Parts List.

**TABLE 7-1. EXPLANATION OF COLUMN HEADINGS ON ASSEMBLY PARTS LISTS**

COLUMN HEADING	EXPLANATION
FIND NO.	Identifies an electrical or mechanical part on an assembly drawing. If more than one listing appears for a find number, refer to LI, WK IN, and WK OUT.
LI (Line Item)	Gives a chronological or historical record of the addition of a new part to a find number. For example, 01 indicates that the part was the first one used, and 02 indicates the second, etc. See also WK IN and WK OUT.
PART NUMBER	Gives the Control Data Corporation part identification. Use this number when ordering replacements.
CD (Check Digit)	Gives the information-control system a means of cross-checking the correctness of a part number.
QUANTITY	Lists the total number of a part required to complete an assembly. The vertical line near the center of the column acts as a decimal point. Numbers to the left of the line are whole numbers. Those to the right of the line are tenths, hundredths, and thousandths.
U/M (Unit of Measure)	Indicates how the information-control system counts or supplies a part.
PART DESCRIPTION	Describes the physical appearance, type, or name of a part.
MC (Material Code)	Supplies additional descriptive data to the information-control system.
YLD (Yield)	A 2-digit number that indicates the usable portion of any quantity of parts expressed as a percentage.
ECO NO. IN	Engineering Change Order that adds a new part to an assembly. See also WK IN.
ECO NO. OUT	Engineering Change Order that deletes a part from an assembly. See also WK OUT.
S/N (Serial Number)	Used to specify an ECO's effectivity by serial number.
WK IN (Week In)	Lists the date when manufacturing begins using a new part and when it is available for parts replacement. For example, 7222 means a part is available as of the 22nd week of 1972.
WK OUT (Week Out)	Lists the date when manufacturing no longer uses a part in building an assembly. See also WK IN. Do not order a part after its week-out date.

00643-2


## SPARE PARTS DATA

Spare parts data includes only those parts of an equipment that have been approved for on-site replacement. Each equipment spare parts list is also a recommendation of parts to have on hand at the service centers for support of on-site maintenance. Each list includes parts at both the modular and discrete component level.

This section supplies spare parts information for both the display terminal equipment and the nonimpact printer. For spare parts information for the impact printer, refer to the Parts Identification Manual for the impact printer (see preface).

62957400 B

7-3

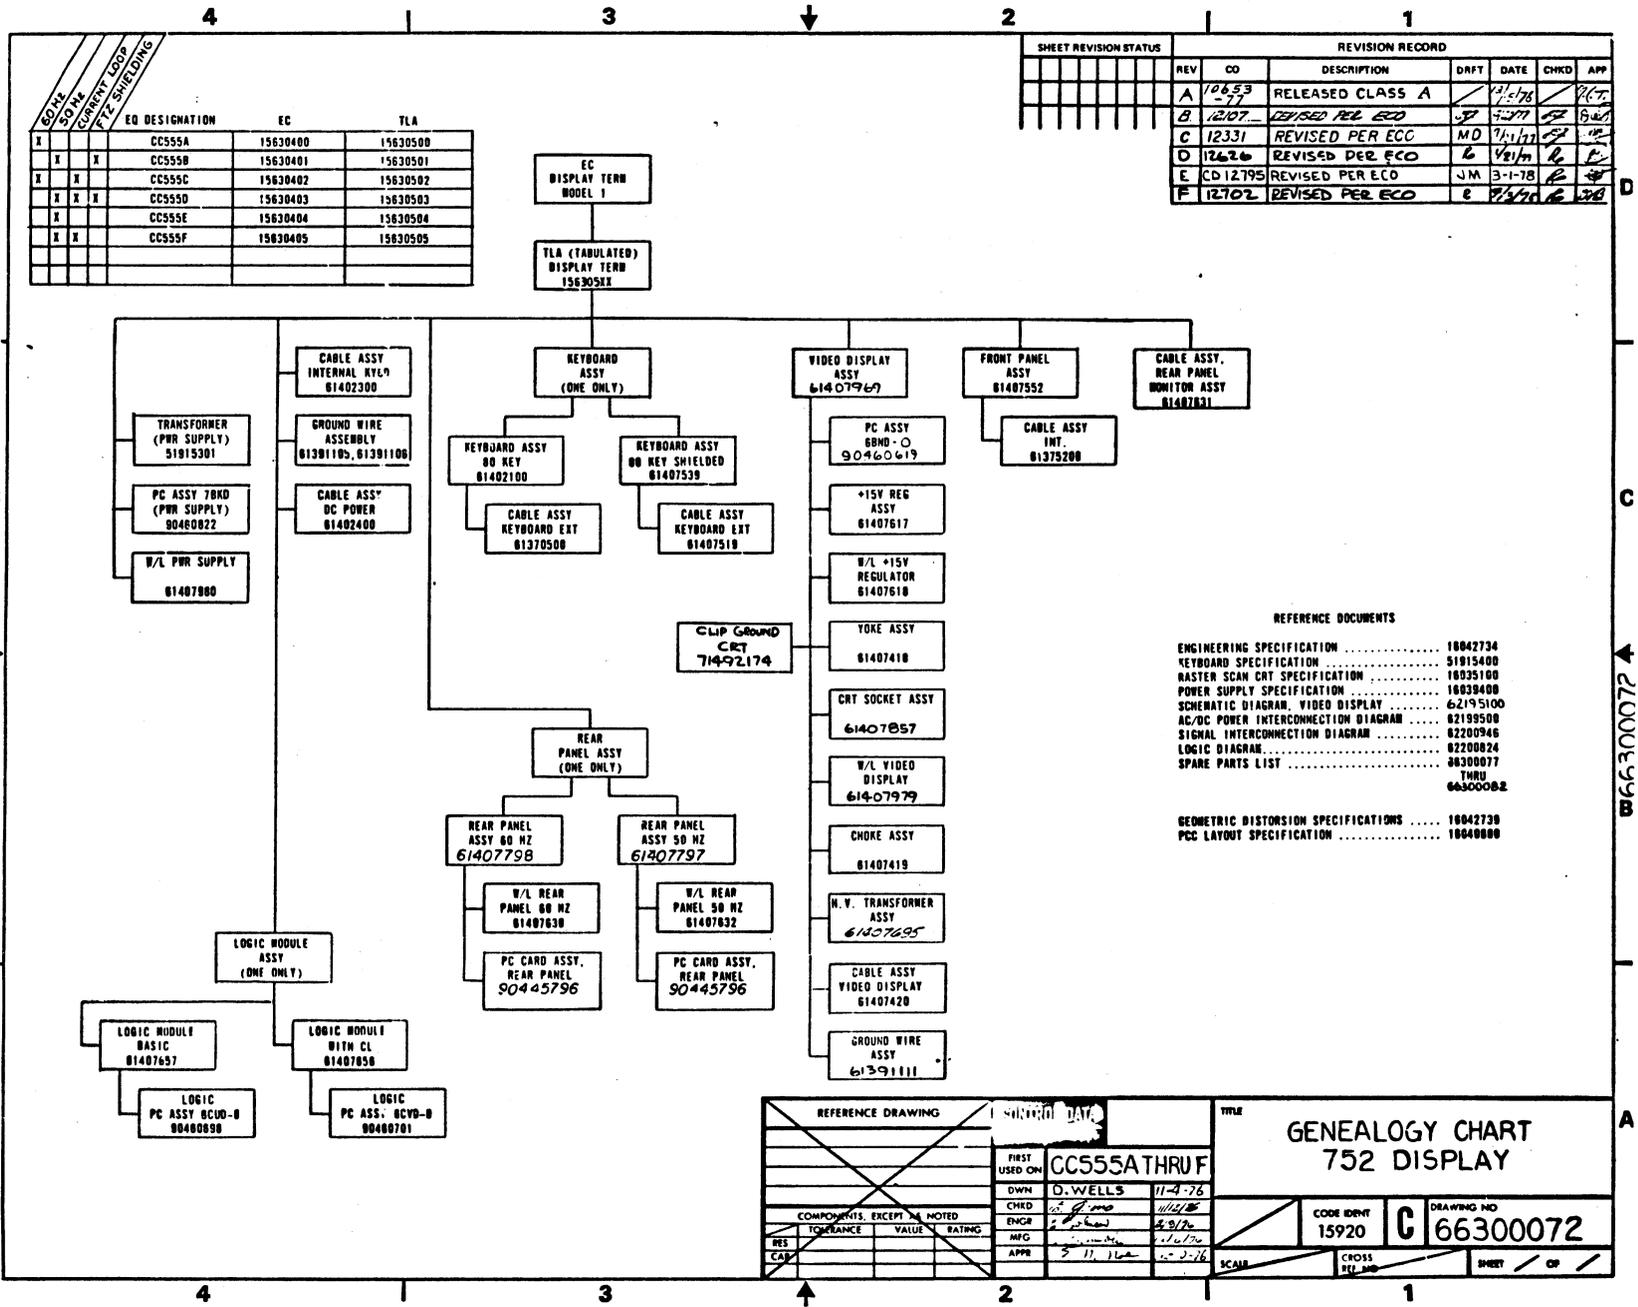


EQ DESIGNATION	EC	TLA
X	CC555A	15630400
X	CC555B	15630401
X	CC555C	15630402
X	CC555D	15630403
X	CC555E	15630404
X	CC555F	15630405

SHEET REVISION STATUS		REVISION RECORD					
REV	CO	DESCRIPTION	DRFT	DATE	CHKD	APP	
A	12653	RELEASED CLASS A		11-8-78			
B	12107	REVISED PER ECO	JF	7-27-77	JF	JF	
C	12331	REVISED PER ECO	MD	7-11-77	JF	JF	
D	12626	REVISED PER ECO	6	7-11-77	6	6	
E	CD 12795	REVISED PER ECO	JM	3-1-78	6	6	
F	12702	REVISED PER ECO	8	7-27-78	6	6	

REFERENCE DOCUMENTS

ENGINEERING SPECIFICATION	18842734
KEYBOARD SPECIFICATION	51915400
MASTER SCAN CRT SPECIFICATION	18035100
POWER SUPPLY SPECIFICATION	18039400
SCHEMATIC DIAGRAM, VIDEO DISPLAY	62195300
AC/DC POWER INTERCONNECTION DIAGRAM	82195500
SIGNAL INTERCONNECTION DIAGRAM	82200946
LOGIC DIAGRAM	82200824
SPARE PARTS LIST	88300077
THRU	66300082
GEOMETRIC DISTORSION SPECIFICATIONS	18842730
PCC LAYOUT SPECIFICATION	18840800

REFERENCE DRAWING		DATE		TITLE	
FIRST USED ON		CC555ATHRU F		GENEALOGY CHART 752 DISPLAY	
OWN		O. WELLS		11-8-78	
CHKD		[Signature]		[Signature]	
ENGR		[Signature]		[Signature]	
MFG		[Signature]		[Signature]	
APPR		5 11 78		[Signature]	
COMPONENTS, EXCEPT AS NOTED		TOLERANCE		VALUE	
RES		RATING		SCALE	
CAB		CROSS REF. NO.		SHEET / OF	
CODE IDENT		15920		DRAWING NO	
C		66300072			

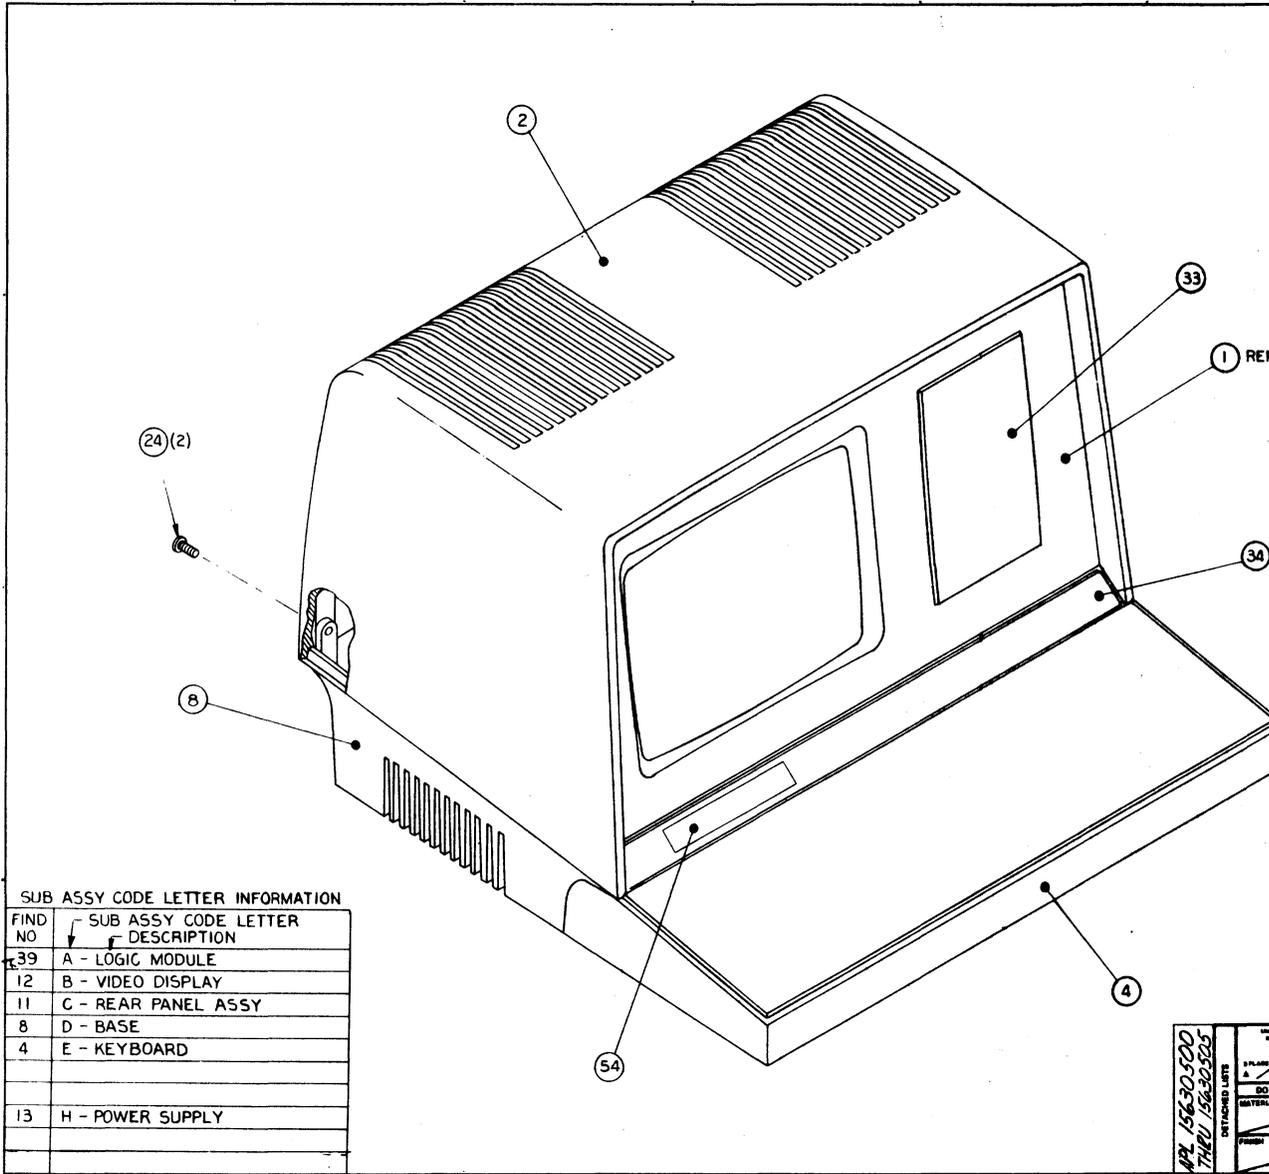

SHEET REVISION STATUS		REVISION RECORD				
REV	ECO	DESCRIPTION	DEPT	DATE	CHKD	APP
A	10653-77	RELEASED CLASS 'A'				

NOTES:


- 1 MARK "TOP ASSY 156305XX" IN AREA SHOWN PER CDC SPEC 10121508.
- 2 INSTALL CRT GND CLIP F/N 47 AS FOLLOWS:  
1. INSERT FLAG PIN IN CONNECTOR "BPI-14".  
2. ATTACH RING LUG TO STUD "E1" ON VIDEO DISPLAY ASSY (F/N 12).
- 3. INSTALL METAL CLIP UNDER LINEARITY SHIELD WHICH IS UNDER YOKE RING MAGNET ASSY.
- 3 IF REQUIRED, INSTALL F/N 48, 49, 50, 51 WITH ADHESIVE F/N 52 PER CDC SPEC P/N 16042739 GEOMETRIC DISTORTION CORRECTION.

SUB ASSY CODE LETTER INFORMATION

FIND NO	SUB ASSY CODE LETTER	DESCRIPTION
39	A	LOGIC MODULE
12	B	VIDEO DISPLAY
11	C	REAR PANEL ASSY
8	D	BASE
4	E	KEYBOARD
13	H	POWER SUPPLY

APL 15630500 THRU 15630505		UNDESIGNATED SPECIFIED DIMENSIONS ARE IN INCHES UNLESS SHOWN OTHERWISE		TITLE	
DO NOT SCALE DRAWING		PART AND PM		752 DISPLAY TERMINAL	
MATERIAL		D. WELLS		2-4-76	
CHECKED		DATE		CODE IDENT	
DRAWN		DATE		15920 D	
APPROVED		DATE		DRAWING NO	
				15630500 T-RU	
				15630505	
				SCALE	
				EG 15630400 SHEET 1 OF 2	

REVISION RECORD			
REV	ECO	DESCRIPTION	DATE

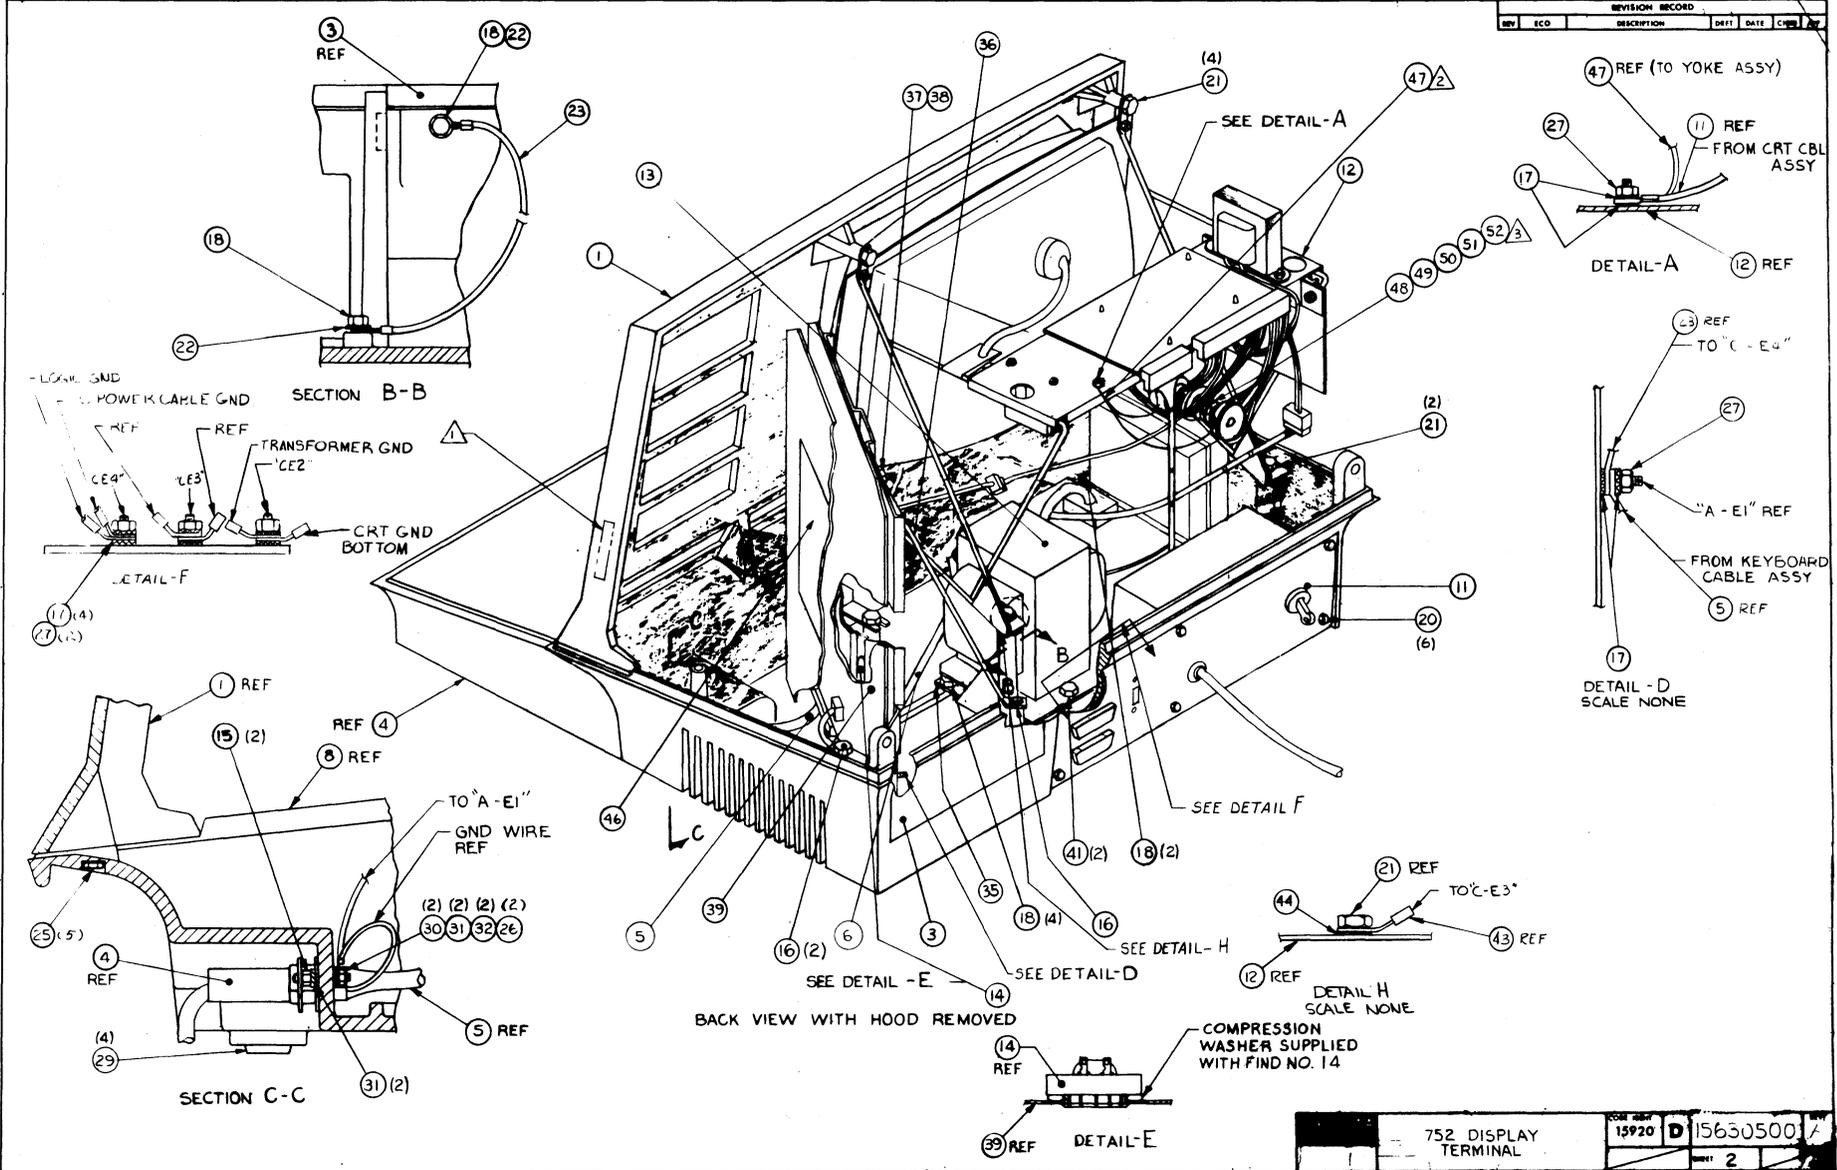

752 DISPLAY TERMINAL	15920	D	15630500
			2

BUILD ARC 440

### ASSEMBLY PARTS LIST

BUILD ARC 440										ASSEMBLY PARTS LIST		PRINT DATE	PAGE	FILE CHANGE NO.		
0860 12630500 3 A U 752 TERM BSC KYBD 60HZ										N	REL	12-27-76	1	10553-11		
ITEM NO	LI	PART NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	71452600	1			PC BEZEL 12IN CRT		P								
002	01	71452800	7			PC HOOD, TERMINAL (GOLD FINISH)		P								
003	01	71452900	3			PC PANEL, ACCESS (FINISH=GOLD)		P								
004	01	01402100	4			PC KEYBOARD ASSY (60 KEY)		N								
005	01	01402300	0			PC CABLE ASSY KYBD INTERNAL		A								
006	01	01402400	0			PC CABLE ASSY DC POWER		A								
008	01	71491930	3			PC BASE, TERMINAL (GOLD-FINISH)		P								
011	01	01407635	4			PC CABLE, INTENSITY		A								
012	01	01370905	4			PC VIDEO DISPLAY ASSY		G								
013	01	01407447	4			PC POWER SPLY ASSY		A								
014	01	51908902	3			PC ALARM AUDIBLE LUG FIG 2		P								
015	01	71455801	2			PC STANDOFF MALE/FEMALE 6-40 STL		P								
016	01	51850501	3			PC SCREW 10X1/2 TYPE A HEX HD		B								
017	01	10120403	4			PC WSHR NO.10 EXT TOOTH LK TYP A B		B								
018	01	51850529	4			PC SCREW SELF TAPPING		B								
020	01	00860303	7			PC MSCR SELF-LKG HEX HD 6-32X3/8 B		B								
021	01	00860311	0			PC MSCR SELF LKG HEX HD 6/32X3/8 B		B								
022	01	10125606	3			PC WASHER FLT NO.8 STL CP		B								
023	01	01391105	0			PC GND WIRE ASSY 7.5 16GA		A								
024	01	10127153	4			PC SCRW MACH PH 1/4-20X1/2 CRSHC B		B								
025	01	51850503	3			PC SCREW 3/4L SZ 10 HEX		B								

BUILD ARC 440

### ASSEMBLY PARTS LIST

BUILD ARC 440										ASSEMBLY PARTS LIST		PRINT DATE	PAGE	FILE CHANGE NO.		
0860 12630500 3 A U 752 TERM BSC KYBD 60HZ										N	REL	12-27-76	2	10553-11		
ITEM NO	LI	PART NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
026	01	95125301	2			OZ LUC TITE SEALANT RED		B								
027	01	10125108	0			PC NUT HEX MCH 10-32 STL CP OR Z B		B								
028	01	06300072	7			PC GENEALOGY CHART		U								
029	01	51805801	1			PC HUMPER, RUBBER .300H BLF-STKG B		B								
030	01	10125603	0			PC WASHER FLT NO.4 STL CP		B								
031	01	10126400	0			PC WSHR NO.4 EXT TOOTH LK TYP A B		B								
032	01	10125103	1			PC NUT HEX MCH 6-40 STL CP OR ZP B		B								
033	01	01407552	1			PC FRONT PANEL ASSY MOD 1		A								
034	01	71491845	3			PC PANEL BLANK, SWITCH (PLASTIC) P		P								
035	01	71487100	1			PC SPACER PHN SPLY MTG PLATE		P								
036	01	71489000	1			PC SUPPORT LOGIC MODULE		P								
037	01	10125105	0			PC NUT HEX MCH 6-32 STL CP OR ZP B		B								
038	01	10126401	0			PC WSHR NO.6 EXT TOOTH LK TYP A B		B								
039	01	01407657	0			PC LOGIC MODULE ASSY		A								
041	01	00860309	4			PC MSCR HEX PLN SLF-LKG 6-32X1/4 B		B								
043	01	01391104	3			PC GND WIRE ASSY 4.5 16GA		G								
044	01	10126402	0			PC WSHR NO.8 EXT TOOTH LK TYP A B		B								
046	01	71491949	3			PC LABEL POWER INTERCONN		P								
047	01	71492174	3			PC GROUND CLIP CRT		A								
048	01	51917054	2			PC MAGNET BAR		P								
049	01	51917051	0			PC MAGNET BAR		P								

BUILD ARC 440

### ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
12-27-76	3	10653-17

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE	
0860		12630500		3	A	U	752 TERM BSC KYBD 60HZ		N	HEL	12-15-76		12-21-76	
ITEM NO	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION		MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
050	01	51917052	6	1		PC MAGNET BAR								
051	01	51917053	4	1		PC MAGNET BAR								
052	01	51004063	7	100		PC ADHESIVE, AMBER SYN ELASTOMER		B						
053	01	16042739	9	REF		PC GEOM DIST CORRECTION								
054	01	15010307	5	1		PC ID EMBLEM, PRODUCT MEJIIIM AL		P						
055	01	62199500	0	REF		PC AC/DC PWR INTERCONN DIAG		D						
056	01	62200824	1	REF		PC LOGIC DIAG LIAT MOD I		D						
057	01	62200946	2	REF		PC INTCONN DIAG SIGNAL		D						
0050 TOTAL LINES														

BUILD ARC 440

### ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
12-29-74	1	10653-77

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860	15630501	3	A	0	752 TERM BSC KYRD 50M2	N	REL	12-15-76		12-23-76			
FIND NO	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	71491937	C	1		PC HEZEI CRT 12 IN SHIELDED	P						
002	01	71491938	A	1		PC HOOD TERMINAL SHIELDED	P						
003	01	71491939	A	1		PC PANEL ACCESS	P						
004	01	61407539	A	1		PC KEYBOARD ASSY ROKEY (SHIELD)	N						
005	01	61402300	0	1		PC CABLE ASSY KYRD INTERNAL	A						
006	01	61402400	A	1		PC CABLE ASSY DC POWER	A						
008	01	71401974	3	1		PC CASE TERM SHIELDED	P						
011	01	61407433	9	1		PC PANEL ASSY REAR 50M2	A						
012	01	61370905	4	1		PC VIDEO DISPLAY ASSY	G						
013	01	61407447	4	1		PC POWER SPLY ASSY	A						
014	01	51909902	3	1		PC ALADDI MULTIPLE LUG PIG 2	P						
015	01	71495801	2	2		PC STANOFF HALF/FEMALE 4-40 STL	P						
016	01	51958501	3	3		PC SCREW 10X1/2 TYPE A HEX HD	R						
017	01	10126403	4	4		PC WASH NO.10 EXT TOOTH LK TYP A	B						
018	01	51958529	4	4		PC SCREW SELF TAPPING	R						
020	01	00840303	7	4		PC WSCD SELF-LKG HEX HD 4-32X3/8	B						
021	01	00840311	0	4		PC WSCD SELF LKG HEX HD 4-32X3/8	R						
022	01	10125606	3	2		PC WASHFR FLY NO.4 STL CP	H						
023	01	61391104	4	2		PC GND WIRE ASSY 7.5 166A	A						
024	01	10127153	4	2		PC SCRW WASH PH 1/4-20X1/2 CRSRC	R						
025	01	51958503	9	5		PC SCREW 3/4L SZ 10 HEX	R						

BUILD ARC 440

### ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
12-29-74	2	10653-77

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860	15630501	3	A	11	752 TERM BSC KYRD 50M2	N	REL	12-15-76		12-23-76			
FIND NO	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
026	01	95125301	2	AR		OZ LOC TITE SEALANT RED	R						
027	01	10125108	0	4		PC NUT HEX MCH 10-32 STL CP DR Z	R						
028	01	66300072	7	REF		PC GENFALOGY CHAPT	D						
029	01	51805801	1	4		PC RUMPR, RUBBER .300H SLF-STKG	R						
030	01	10125603	0	2		PC WASHFR FLY NO.4 STL CP	B						
031	01	10126400	0	4		PC WASH NO.4 EXT TOOTH LK TYP A	B						
032	01	10125103	1	2		PC NUT HEX MCH 4-40 STL CP DR ZP	R						
033	01	61407552	1	1		PC FRONT PANEL ASSY MOD 1	A						
034	01	71491845	5	1		PC PANEL BLANK, SWITCH (PLASTIC)	P						
035	01	71407100	1	1		PC SPACFR PWR SPLY MTG PLATE	P						
036	01	71489000	1	1		PC SUPPART LOGIC MODULE	P						
037	01	10125105	6	1		PC NUT HEX MCH 6-32 STL CP DR ZP	R						
038	01	10126401	8	1		PC WASH NO.6 EXT TOOTH LK TYP A	B						
039	01	61407657	4	1		PC LOGIC MODULE ASSY	A						
041	01	00840309	4	2		PC WSCD HEX PLN SLF-LKG 4-32X1/4	R						
043	01	61391104	9	1		PC GND WIRE ASSY 4.5 166A	G						
044	01	10126402	6	1		PC WASH NO.4 EXT TOOTH LK TYP A	R						
046	01	71491949	5	1		PC LABEL POWER INTERCONN	P						
047	01	71492174	9	1		PC GROUND CLIP CRT	A						
048	01	51917054	2	1		PC MAGNET BAR	P						
049	01	51917051	4	1		PC MAGNET BAR	P						

BUILD ARC 440

### ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
12-29-76	3	10653-77

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE		ENG. RESP.		FILE DATE	
0860		15630501		3	A	0	752 TERM BSC KYRD 50HZ		N	REL	12-15-76				12-23-76	
TRND NO	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION		MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT		
050	01	51917052	6	1		PC	MAGNET BAR		P							
051	01	51917053	4	1		PC	MAGNET BAR		P							
052	01	51004063	7	100		PC	ADHESIVE, AMBER SYN ELASTOMER		R							
053	01	16042739	9			REF	PC GEOM DIST CORRECTION		D							
054	01	15010304	2	1		PC	FMBLEM MEDIUM RLUF		P							
055	0i	62199500	0			REF	PC AC/DC PWR INTERCONN DIAG		D							
056	0i	62200424	1			REF	PC LOGIC DIAG LIAT MOD I		D							
057	0i	62200946	2			REF	PC INTCONN DIAG SIGNAL		D							
							0050 TOTAL LINES									

BUILD ARC 440

**ASSEMBLY PARTS LIST**

BUILD ARC 440										PRINT DATE		PAGE		FILE CHANGE NO.	
										12-27-76		1		10653-77	
										STATUS DATE		ENG. RESP.		FILE DATE	
										12-15-76				12-21-76	
DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS								
0860	12630502	1	A	U	752 TERM BSC KYBD W/CL 60HZ	N	REL								
TP/IND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT		
001	01	71452600	1	1		PC BEZEL 12IN CRT		P							
002	01	71452800	7	1		PC HOOD, TERMINAL (GOLD FINISH)		P							
003	01	71452900	3	1		PC PANEL, ACCESS (FINISH=GOLD)		P							
004	01	61402100	4	1		PC KEYBOARD ASSY (80 KEY)		N							
005	01	61402300	0	1		PC CABLE ASSY KYRD INTERNAL		A							
006	01	61402400	8	1		PC CABLE ASSY DC POWER		A							
008	01	71491930	3	1		PC BASE, TERMINAL (GOLD-FINISH)		P							
011	01	61407635	4	1		PC CABLE, INTENSITY		A							
012	01	61370905	4	1		PC VIDEO DISPLAY ASSY		G							
013	01	61407447	4	1		PC POWER SPLY ASSY		A							
014	01	51908902	3	1		PC ALARM AUDIBLE LUG FIG 2		P							
015	01	71455801	2	2		PC STANDOFF MALE/FEMALE 4-40 STL		P							
016	01	51850501	3	3		PC SCREW 10X1/2 TYPE A HEX HD		B							
017	01	10126403	4	8		PC WSHR NO.10 EXT TOOTH LK TYP A		B							
018	01	51850529	4	8		PC SCREW SELF TAPPING		B							
020	01	00860303	7	6		PC MSCR SELF-LKG HEX HD 6-32X3/8		B							
021	01	00860311	0	6		PC MSCR SELF LKG HEX HD 8/32X3/8		B							
022	01	10125606	3	2		PC WASHER FLT NO.8 STL CP		B							
023	01	61391105	6	2		PC GND WIRE ASSY 7.5 16GA		A							
024	01	10127153	4	2		PC SCR W WACH PH 1/4-20X1/2 CRSHC		B							
025	01	51850503	9	5		PC SCREW 3/4L SZ 10 HEX		B							

BUILD ARC 440

**ASSEMBLY PARTS LIST**

BUILD ARC 440										PRINT DATE		PAGE		FILE CHANGE NO.	
										12-27-76		2		10653-77	
										STATUS DATE		ENG. RESP.		FILE DATE	
										12-15-76				12-21-76	
DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS								
0860	12630502	1	A	U	752 TERM BSC KYBD W/CL 60HZ	N	REL								
TP/IND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT		
026	01	95125301	2	AR		OZ LUC TITE SEALANT RED		B							
027	01	10125108	0	4		PC NUT HEX MCH 10-32 STL CP OR Z		B							
028	01	96300072	7	REF		PC GENEALOGY CHART		D							
029	01	51805801	1	4		PC BUMPER, RUBBER .300H BLP-STKG		B							
030	01	10125603	0	2		PC WASHER FLT NO.4 STL CP		B							
031	01	10126400	0	4		PC WSHR NO.4 EXT TOOTH LK TYP A		B							
032	01	10125103	1	2		PC NUT HEX MCH 4-40 STL LP OR ZP		B							
033	01	61407552	1	1		PC FRONT PANEL ASSY MOD 1		A							
034	01	71491845	3	1		PC PANEL BLANK, SWITCH (PLASTIC)		P							
035	01	71487100	1	1		PC SPACER PWR SPLY MTG PLATE		P							
036	01	71489000	1	1		PC SUPPORT LOGIC MODULE		P							
037	01	10125105	6	1		PC NUT HEX MCH 6-32 STL LP OR ZP		B							
038	01	10126401	8	1		PC WSHR NO.6 EXT TOOTH LK TYP A		B							
039	01	61407656	0	1		PC DC ENTRY PNL ASSY		A							
041	01	00860309	4	2		PC MSCR HEX PLN SLF-LKG 6-32X1/4		B							
043	01	61391104	9	1		PC GND WIRE ASSY 4.5 16GA		G							
044	01	10126402	6	1		PC WSHR NO.8 EXT TOOTH LK TYP A		B							
046	01	71491949	3	1		PC LABEL POWER INTERCONN		P							
047	01	71492174	9	1		PC GROUND CLIP CRT		A							
048	01	51917054	2	1		PC MAGNET BAR		P							
049	01	51917051	8	1		PC MAGNET BAR		P							

BUILD ARC 440

### ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
12-27-76	3	10653-11

REV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. DESP.	FILE DATE			
0860	13630502	1	A	U	752 TERM RSC KYRD W/CL 60HZ	N	REL	12-15-76		12-21-76			
TRND NO	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
050	01	51917052	0	1		PC MAGNET BAR							
051	01	51917053	0	1		PC MAGNET BAR							
052	01	51004063	7	100		PC ADHESIVE, AMBER SYN ELASTOMER	B						
053	01	16042739	Y	REF		PC GEOM DIST CORRECTION	D						
054	01	15010307	3	1		PC ID EMBLEM, PRODUCT MEDIUM AL	P						
055	01	02194500	U	REF		PC AC/DC PWR INTERCONN DIAG	D						
056	01	02200824	1	REF		PC LOGIC DIAG LIAT MOD I	D						
057	01	02200946	2	REF		PC INTCONN DIAG SIGNAL	D						
						0050 TOTAL LINES							

BUILD ARC 440										ASSEMBLY PARTS LIST				PRINT DATE	PAGE	FILE CHANGE NO.					
										752 TERM BSC KYBD 50HZ				12-27-76	1	10653-77					
DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE											
0860	13630503	9	A	U		N	REL	12-15-76		12-21-76	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT	
001	01	71491937	0		1	PC	BEZEL CRT 12 IN SHIELDED	P													
002	01	71491938	0		1	PC	HOOD TERMINAL SHIELDED	P													
003	01	71491939	0		1	PC	PANEL ACCESS	P													
004	01	61407539	0		1	PC	KEYBOARD ASSY 80KEY (SHIELDED)	N													
005	01	61402300	0		1	PC	CABLE ASSY KYBD INTERNAL	A													
006	01	61402400	0		1	PC	CABLE ASSY DC POWER	A													
008	01	71491974	3		1	PC	BASE TERM SHIELDED	P													
011	01	61407633	9		1	PC	PANEL ASSY REAR 50HZ	A													
012	01	61370905	4		1	PC	VIDEO DISPLAY ASSY	G													
013	01	61407447	4		1	PC	POWER SPLY ASSY	A													
014	01	51908902	3		1	PC	ALARM AUDIBLE LU9 FIG 2	P													
015	01	71455801	2		2	PC	STANDOFF MALE/FEMALE 4-40 STL	P													
016	01	51858501	3		3	PC	SCREW 10X1/2 TYPE A HEX HD	B													
017	01	10126403	4		8	PC	WSHR NO.10 EXT TOOTH LK TYP A	B													
018	01	51858529	4		8	PC	SCREW SELF TAPPING	B													
020	01	00860303	7		6	PC	MSCR SELF-LKG HEX HD 6-32X3/8	B													
021	01	00860311	0		6	PC	MSCR SELF LKG HEX HD 6/32X3/8	B													
022	01	10125606	3		2	PC	WASHER FLT NO.8 STL CP	B													
023	01	61391105	0		2	PC	GND WIRE ASSY 7.5 160A	A													
024	01	10127153	4		2	PC	SCRW MACH PH 1/4-20X1/2 CRSRC	B													
025	01	51858503	9		5	PC	SCREW 3/4L SZ 10 HEX	B													

BUILD ARC 440										ASSEMBLY PARTS LIST				PRINT DATE	PAGE	FILE CHANGE NO.					
										752 TERM BSC KYBD 50HZ				12-27-76	2	10653-77					
DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE											
0860	13630503	9	A	U		N	REL	12-15-76		12-21-76	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT	
026	01	95125301	2		AR	OZ	LOC TITE SEALANT RED	B													
027	01	10125108	0		4	PC	NUT HEX MCH 10-32 STL CP OR Z	B													
028	01	66304072	7		REF	PC	GENEALOGY CHART	U													
029	01	51858501	1		4	PC	BUMPER, RUBBER .300H SLF-STKG	B													
030	01	10125603	0		2	PC	WASHER FLT NO.4 STL CP	B													
031	01	10126400	0		4	PC	WSHR NO.4 EXT TOOTH LK TYP A	B													
032	01	10125103	1		2	PC	NUT HEX MCH 4-40 STL CP OR ZP	B													
033	01	61407552	1		1	PC	FRONT PANEL ASSY MOD 1	A													
034	01	71491845	5		1	PC	PANEL BLANK, SWITCH (PLASTIC)	P													
035	01	71487100	1		1	PC	SPACER PWR SPLY MTO PLATE	P													
036	01	71489000	1		1	PC	SUPPORT LOGIC MODULE	P													
037	01	10125105	0		1	PC	NUT HEX MCH 6-32 STL CP OR ZP	B													
038	01	10126401	0		1	PC	WSHR NO.6 EXT TOOTH LK TYP A	B													
039	01	61407656	0		1	PC	DC ENTRY PNL ASSY	A													
041	01	00860309	4		2	PC	MSCR HEX PLN SLF-LKG 6-32X1/4	B													
043	01	61391104	9		1	PC	GND WIRE ASSY 4.5 160A	G													
044	01	10126402	0		1	PC	WSHR NO.8 EXT TOOTH LK TYP A	B													
046	01	71491949	5		1	PC	LABEL POWER INTERCONN	P													
047	01	71492174	9		1	PC	GROUND CLIP CRT	A													
048	01	51917054	2		1	PC	MAGNET BAR	P													
049	01	51917051	0		1	PC	MAGNET BAR	P													

BUILD AMC 440

**ASSEMBLY PARTS LIST**

PRINT DATE	PAGE	FILE CHANGE NO.
12-27-76	3	10653-77

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0060	19630503	9	A	U	752 TERM BSC KYBD 50HZ	N	REL	12-15-76		12-21-76			
ITEM NO.	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION	MC	TLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
050	01	51917052	0	1		PC MAGNET BAR							
051	01	51917053	0	1		PC MAGNET BAR							
052	01	51004063	7	100		PC ADHESIVE, AMBFR SYN ELASTOMER							
053	01	16042739	9		REF	PC GEOM DIST CORRECTION							
054	01	15010307	5		REF	PC ID EMBLEM, PRODUCT MEDIUM AL							
055	01	02199500	0		REF	PC AC/DC PWR INTERCONN DIAG							
056	01	02200824	1		REF	PC LOGIC DIAG LIAT MOD I							
057	01	02200946	2		REF	PC INTCONN DIAG SIGNAL							
						0050 TOTAL LINES							

BUILD ARC 440

### ASSEMBLY PARTS LIST

PRINT DATE 12-27-76 PAGE 1 FILE CHANGE NO. 10553-77

DIV.		ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE		
0860		15630504	7	A	U	752 TERM BSC KY80 50HZ	N	REL	12-15-76		12-21-76		
TRND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION	MC	TRD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	71452600	1	1		PC BEZEL 12IN CRT		P					
002	01	71452800	7	1		PC HOOD, TERMINAL (GOLD FINISH)		P					
003	01	71452900	5	1		PC PANEL, ACCESS (FINISH=GOLD)		P					
004	01	01402100	4	1		PC KEYBOARD ASSY (80 KEY)		N					
005	01	01402300	0	1		PC CABLE ASSY KY80 INTERNAL		A					
006	01	01402400	0	1		PC CABLE ASSY DC POWER		A					
008	01	71491930	5	1		PC BASE, TERMINAL (GOLD FINISH)		P					
011	01	01407633	9	1		PC PANEL ASSY REAR 50HZ		A					
012	01	01370905	4	1		PC VIDEO DISPLAY ASSY		G					
013	01	01407447	4	1		PC POWER SPLY ASSY		A					
014	01	51908902	3	1		PC ALARM AUDIBLE LUG FIG 2		P					
015	01	71455801	2	2		PC STANDOFF MALE/FEMALE 4-40 STL		P					
016	01	51858501	3	3		PC SCREW 10X1/2 TYPE A HEX HD		B					
017	01	10126403	4	8		PC WSHR NO.10 EXT TOOTH LK TYP A		B					
018	01	51858529	4	8		PC SCREW SELF TAPPING		B					
020	01	00860303	7	6		PC MSCR SELF-LKG HEX HD 6-32X3/8		B					
021	01	00860311	0	6		PC MSCR SELF LKG HEX HD 6/32X3/8		B					
022	01	10125606	3	2		PC WASHER FLT NO.8 STL CP		B					
023	01	01391105	6	2		PC GND WIRE ASSY 7.5 16GA		A					
024	01	10127153	4	2		PC SCRW MACH PH 1/4-20X1/2 CRSHC		B					
025	01	51858503	9	5		PC SCREW 3/4L SZ 10 HEX		B					

BUILD ARC 440

### ASSEMBLY PARTS LIST

PRINT DATE 12-27-76 PAGE 2 FILE CHANGE NO. 10553-77

DIV.		ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE		
0860		15630504	7	A	U	752 TERM BSC KY80 50HZ	N	REL	12-15-76		12-21-76		
TRND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION	MC	TRD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
026	01	95125301	2	AR		OZ LOC TITE SEALANT RED		B					
027	01	10125108	0	4		PC NUT HEX MCH 10-32 STL CP OR Z		B					
028	01	06300072	7	REF		PC GENEALOGY CHART		U					
029	01	51858801	1	4		PC BUMPER, RUBBER .300H SLF-STKG		B					
030	01	10125603	0	2		PC WASHER FLT NO.4 STL CP		B					
031	01	10126400	0	4		PC WSHR NO.4 EXT TOOTH LK TYP A		B					
032	01	10125103	1	2		PC NUT HEX MCH 4-40 STL CP OR ZP		B					
033	01	01407552	1	1		PC FRONT PANEL ASSY MOD 1		A					
034	01	71491845	5	1		PC PANEL BLANK, SWITCH (PLASTIC)		P					
035	01	71487100	1	1		PC SPACER PWR SPLY MTG PLATE		P					
036	01	71489000	1	1		PC SUPPORT LOGIC MODULE		P					
037	01	10125105	6	1		PC NUT HEX MCH 6-32 STL CP OR ZP		B					
038	01	10126401	8	1		PC WSHR NO.6 EXT TOOTH LK TYP A		B					
039	01	01407657	8	1		PC LOGIC MODULE ASSY		A					
041	01	00860309	4	2		PC MSCR HEX PLN SLF-LKG 6-32X1/4		B					
043	01	01391104	9	1		PC GND WIRE ASSY 4.5 16GA		G					
044	01	10126402	6	1		PC WSHR NO.8 EXT TOOTH LK TYP A		B					
046	01	71491949	5	1		PC LABEL POWER INTERCONN		P					
047	01	71492174	9	1		PC GROUND CLIP CRT		A					
048	01	51917054	2	1		PC MAGNET BAR		P					
049	01	51917051	8	1		PC MAGNET BAR		P					

BUILD ARC 440

**ASSEMBLY PARTS LIST**

PRINT DATE	PAGE	FILE CHANGE NO.
12-27-76	3	10653-17

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE	
0860		15630504		7	A	U	752 TERM BSC KY8D 50HZ		N	REL	12-15-76		12-21-76	
ITEM NO	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION		MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WE IN	WE OUT
050	01	51917052	6	1		PC MAGNET BAR			P					
051	01	51917053	4	1		PC MAGNET BAR			P					
052	01	51004063	7	100		PC ADHESIVE, AMBER SYN ELASTOMER			B					
053	01	16042739	9	REF		PC GEOM DIST CORRECTION			D					
054	01	15010307	5	1		PC ID EMBLEM, PRODUCT MEDIUM AL			P					
055	01	02199500	0	REF		PC AC/DC PWR INTERCONN DIAG			D					
056	01	02200824	1	REF		PC LOGIC DIAG LIAT MOD I			D					
057	01	02200946	2	REF		PC INTCONN DIAG SIGNAL			D					
0050 TOTAL LINES														

BUILD AHC 440				<b>ASSEMBLY PARTS LIST</b>				PRINT DATE	PAGE	FILE CHANGE NO.				
								12-27-76	1	10653-77				
DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860	13630505	A	U		752 TERM BSC KYBD W/CL 50M2		N	REL	12-15-76		12-21-76			
FOUND NO	LI	PART NUMBER	CD	REV.	QUANTITY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	71452600	1		1		PC BEZEL 12IN CRT	P						
002	01	71452800	7		1		PC HOOD, TERMINAL (GOLD FINISH)	P						
003	01	71452900	5		1		PC PANEL, ACCESS (FINISH=GOLD)	P						
004	01	61402100	4		1		PC KEYBOARD ASSY (80 KEY)	N						
005	01	61402300	0		1		PC CABLE ASSY KYRD INTERNAL	A						
006	01	61402400	8		1		PC CABLE ASSY DC POWER	A						
008	01	71491930	5		1		PC BASE, TERMINAL (GOLD-FINISH)	P						
011	01	61407633	9		1		PC PANEL ASSY REAR 50HZ	A						
012	01	61370905	4		1		PC VIDEO DISPLAY ASSY	G						
013	01	61407447	4		1		PC POWER SPLY ASSY	A						
014	01	51908902	3		1		PC ALARM AUDIBLE LUG FIG 2	P						
015	01	71455801	2		2		PC STANDOFF MALE/FEMALE 4-40 STL	P						
016	01	51858501	3		3		PC SCREW 10X1/2 TYPE A HEX HD	B						
017	01	10126403	4		8		PC WSHR NO.10 EXT TOOTH LK TYP A	B						
018	01	51858529	4		8		PC SCREW SELF TAPPING	B						
020	01	40860303	7		6		PC MSCR SELF-LKG HEX HD 6-32X3/8	B						
021	01	40860311	0		6		PC MSCR SELF LKG HEX HD 6/32X3/8	B						
022	01	10125606	3		2		PC WASHER FLT NO.8 STL CP	B						
023	01	61391105	6		2		PC GND WIRE ASSY 7.5 16GA	A						
024	01	10127153	4		2		PC SCRW MACH PH 1/4-20X1/2 CRSHC	B						
025	01	51858503	9		5		PC SCREW 3/4L SZ 10 HEX	B						


BUILD AHC 440				<b>ASSEMBLY PARTS LIST</b>				PRINT DATE	PAGE	FILE CHANGE NO.				
								12-27-76	2	10653-77				
DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860	13630505	A	U		752 TERM BSC KYBD W/CL 50M2		N	REL	12-15-76		12-21-76			
FOUND NO	LI	PART NUMBER	CD	REV.	QUANTITY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
026	01	95125301	2		AR		OZ LOC TITE SEALANT RED	B						
027	01	10125108	0		4		PC NUT HEX MCH 10-32 STL CP OR Z	B						
028	01	66300072	7		REF		PC GENEALOGY CHART	D						
029	01	51805801	1		4		PC BUMPER, RUBBER .300H DLF-STKG	B						
030	01	10125603	0		2		PC WASHER FLT NO.4 STL CP	B						
031	01	10126400	0		4		PC WSHR NO.4 EXT TOOTH LK TYP A	B						
032	01	10125103	1		2		PC NUT HEX MCH 6-40 STL CP OR ZP	B						
033	01	61407552	1		1		PC FRONT PANEL ASSY MOD 1	A						
034	01	71491845	5		1		PC PANEL BLANK, SWITCH (PLASTIC)	P						
035	01	71487100	1		1		PC SPACER PWR SPLY MTG PLATE	P						
036	01	71489000	1		1		PC SUPPORT LOGIC MODULE	P						
037	01	10125105	6		1		PC NUT HEX MCH 6-32 STL CP OR ZP	B						
038	01	10126401	8		1		PC WSHR NO.6 EXT TOOTH LK TYP A	B						
039	01	61407656	0		1		PC DC ENTRY PNL ASSY	A						
041	01	40860309	4		2		PC MSCR HEX PLN SLF-LKG 6-32X1/4	B						
043	01	61391104	9		1		PC GND WIRE ASSY 6.5 16GA	G						
044	01	10126402	6		1		PC WSHR NO.8 EXT TOOTH LK TYP A	B						
046	01	71491949	5		1		PC LABEL POWER INTERCONN	P						
047	01	71492174	9		1		PC GROUND CLIP CRT	A						
048	01	51917054	2		1		PC MAGNET BAR	P						
049	01	51917051	8		1		PC MAGNET BAR	P						

BUILD ARC 440

### ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
12-27-76	3	10653-77

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE	
0860		12638905		A		U	752 TERM BSC KYBD W/CL 50HZ		N	REL	12-15-76		12-21-76	
TP/IND NO	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION		MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
050	01	51917052	0	1		PC MAGNET BAR								
051	01	51917053	4	1		PC MAGNET BAR								
052	01	51004063	7	100		PC ADHESIVE, AMBER SYN ELASTOMER		B						
053	01	16042739	9	REF		PC GEOM DIST CORRECTION								
054	01	15010307	9	1		PC ID EMBLEM, PRODUCT MEDIUM AL		P						
055	01	02199500	0	REF		PC AC/DC PWR INTERCONN DIAG		D						
056	01	02200824	1	REF		PC LOGIC DIAG LIAT MOD I		D						
057	01	02200946	2	REF		PC INTCONN DIAG SIGNAL		D						
0050 TOTAL LINES														

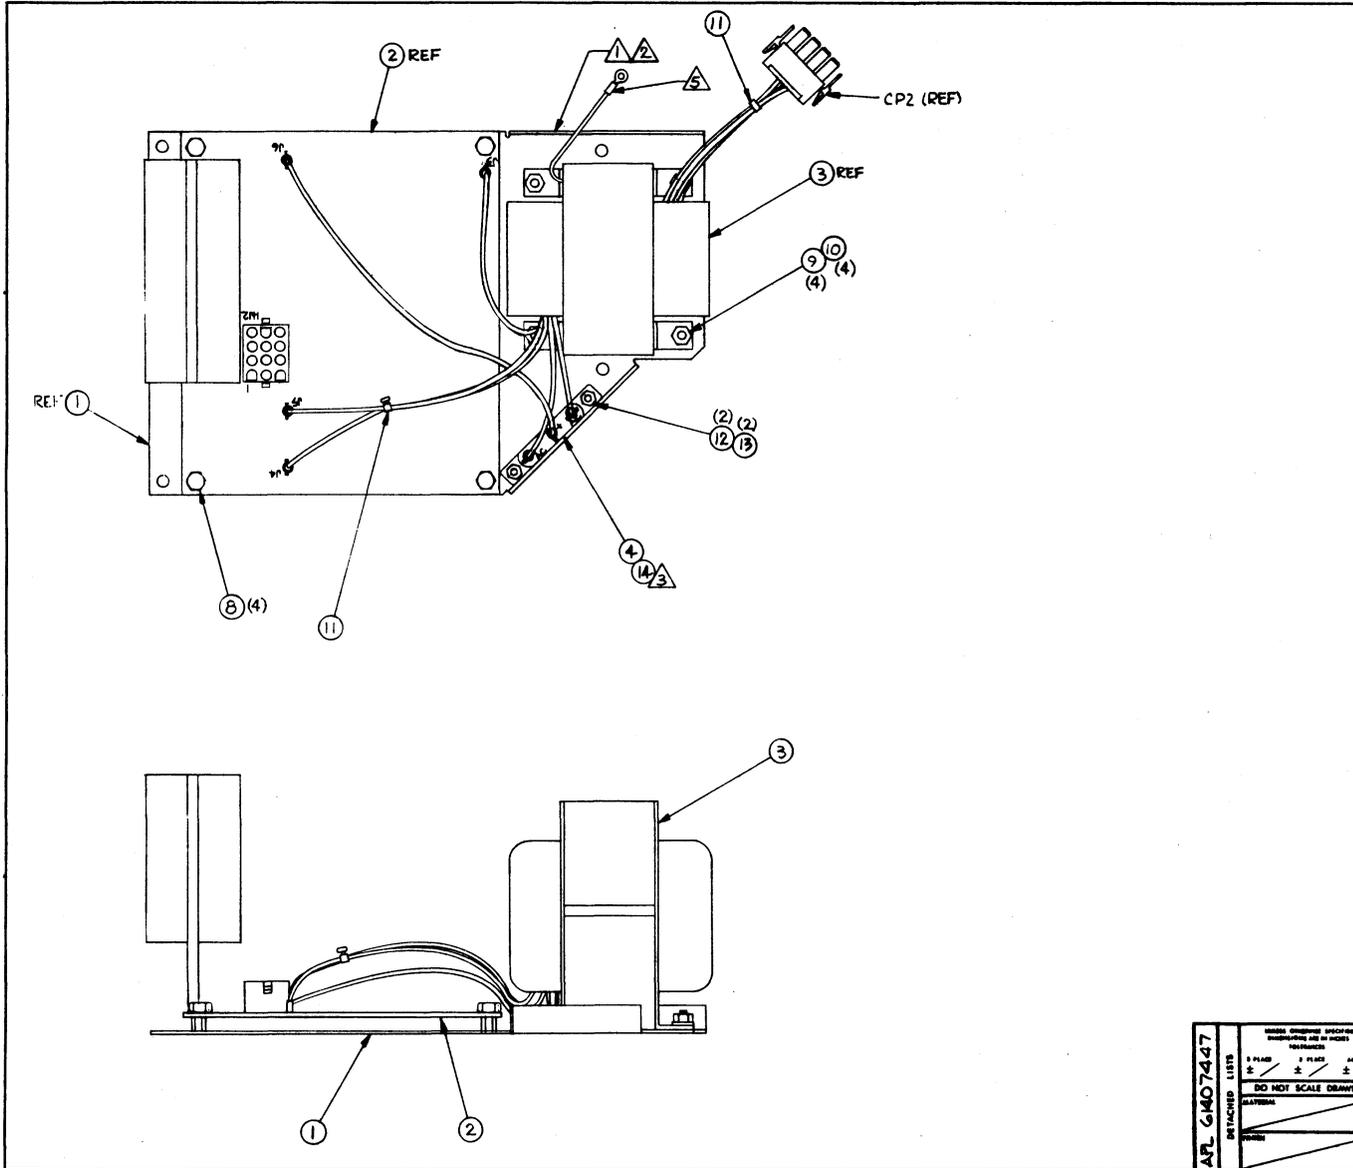

SHEET REVISION STATUS		REVISION RECORD				
REV	ECO	DESCRIPTION	DATE	CHKD	APP	
		RELEASED CLASS C	1/17/76			
01	C674	P/N 2 WAS 90436700	1/17/76			
02	C693	PL 6 DWG CHG PER ECO	3/17/76			
A	1153-37	RELEASED CLASS A	3/17/76			
B	CD 11547	REMOVED NOTE 4	3/17/76			
		DELETED P/N 5	3/17/76			

NOTES:

- ⚠ MARK "ASSY 61407447" ON SURFACE INDICATED PER CDC SPEC 10121508.
- ⚠ MARK SERIAL NO. "S/N" ON SURFACE INDICATED PER CDC STD 1.01.025 AND CDC SPEC 10121508.
- ⚠ APPLY FIND NO. 14 TO UNDERSIDE OF FIND NO. 4 BEFORE MOUNTING.
- ⚠ SAFETY GROUND : TO BE CONNECTED AT NEXT HIGHER ASSEMBLY.

61407447 DETACHED LISTS	2 PLACED    3 PLACED    4 PLACED    5 PLACED ±            ±            ±            ±		PART USED ON <b>CCSBIA</b>	TITLE <b>POWER SUPPLY ASSEMBLY</b>
	DO NOT SCALE DRAWING		DWG NO. 2-6-76	CODE IDENT 15920
	CRED ENGR MFC APPR	DATE 2-6-76 3-5-76 3-5-76 3-5-76	DRAWING NO <b>61407447</b>	DRAWN BY 15429200
	SCALE 1/1		SHEET / OF /	15429200

BUILD ARC 230


### ASSEMBLY PARTS LIST

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION			MC	STATUS	PRINT DATE	PAGE	FILE CHANGE NO.			
0860		61407447		A	B	U	POWER SPLY ASSY			A	REL	05-10-76	1	00011547			
T/FIND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION					MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/M	WK IN	WK OUT
001	01	71487300	7	1		PC	CHASSIS (PWR SPLY)					P					
002	01	90460538	3	1		PC	CD ASSY 6APD-0 PWR SPLY					G					
003	01	51915300	1	1		PC	TRANSFORMER (PWR SPLY)					P					
004	01	51785200	U	1		PC	RECTIFIER FULLWAVE 50MIV 15A					P					
006	01	62121104	J	2		PC	TERM RECP FSTN 16-14 AWC BLU					B					
007	01	93464222	A	750		FT	WIR 16GA STD RED 300V JL PVC					W					
008	01	00860303	7	4		PC	MSCR SELF-LKG HEX HD 6-32X3/8					B					
009	01	10125105	6	4		PC	NUT HEX MCH 6-32 STL CP OR ZP					B					
010	01	09040202	5	4		PC	WASHER LOCK DISHED TOOTH NO.6					B					
011	01	94277400	1	1		PC	STRAP CABLE TIE TYPE 1					P					
011	02	94277400	1	2		PC	STRAP CABLE TIE TYPE 1					P	11547	11547		7621	7621
012	01	10126400	U	2		PC	WSHR NO.4 EXT TOOTH LK TYP A					B					
013	01	10125103	1	2		PC	NUT HEX MCH 4-40 STL CP OR ZP					B					
014	01	51003962	1	AR		OZ	PASTE, HEAT XFR CMPD NON-COND					H					
015	01	61405800	6	REF		PC	W/L POWER SUPPLY ASSY					D					
016	01	16039400	3	REF		PC	POWER SUPPLY SPEC					D					
0016 TOTAL LINES																	



BUILD ARC 210										ASSEMBLY PARTS LIST				PRINT DATE	PAGE	FILE CHANGE NO.	
										CD ASSY 6AFD-0 PWR SPLY				09-09-76	1	00011709	
DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION					MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860	90460538	3	B	U						G	REL	03-18-76	CC5B1A	09-08-76			
TRFND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION					MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	90436600	2	1		PC	PW-RN	5CKD-0	(POWER SUPPLY)	P							
002	01	95592600	1	1		PC	IC	LM305	8PIN VOLTAGE RGLTR	P							
003	01	51608714	5	1		PC	RES	FXD	WW 50 OHM 5W 5P	P							
004	01	95596538	9	2		PC	RES	FXD	.3 OHM 5W	P							
005	01	24500035	1	1		PC	RES	COMP	68 OHM 1/4W 5P	P							
006	01	24500025	2	2		PC	RES	COMP	27 OHM 1/4W 5P	P							
007	01	24500067	4	1		PC	RES	COMP	1.5K OHM 1/4W 5P	P							
008	01	94360348	0	1		PC	RES	FXD	FILM 3160 OHM 1/4W 1P	P							
009	01	24507125	3	1		PC	RES	FXD	COMP 100 OHM 1W 5P	P							
010	01	94360324	1	1		PC	RES	FXD	FILM 1780 OHM 1/4W 1P	P							
011	01	94360444	7	1		PC	RES	FXD	FILM 28.7KOHM 1/4W 1P	P							
012	01	24500090	6	1		PC	RES	COMP	13K OHM 1/4W 5P	P							
015	01	24507132	9	1		PC	RES	FXD	COMP 200 OHM 1W 5P	P							
016	01	24507167	5	2		PC	RES	FXD	COMP 1.5K OHM 1W 5P	P							
017	01	95577003	7	3		PC	CAP	14000	UF 15V	P							
018	01	95597404	3	3		PC	CAP	FXD	7500 HF 35VDC	P							
019	01	24504333	6	5		PC	CAP	FXD	TANT 2.2UF 20P 35VDCW	P							
020	01	51839108	1	2		PC	CAP	FXD	CER 47PF 100V 10P	P							
021	01	24504358	3	1		PC	CAP	FXD	TANT 150UF 20P	P							
022	01	51610400	4	4		PC	DIO	RECT	SIL 200V 25 MA	P							
024	01	15151403	8	1		PC	IC	UA7800	+12 9570 POS V RGLTR	P							

BUILD ARC 210										ASSEMBLY PARTS LIST				PRINT DATE	PAGE	FILE CHANGE NO.	
										CD ASSY 6AFD-0 PWR SPLY				09-09-76	2	00011709	
DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION					MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860	90460538	3	B	U						G	REL	03-18-76	CC5B1A	09-08-76			
TRFND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION					MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
025	01	15151402	3	1		PC	IC	UA7900	-12 356C NEG V RGLTR	P							
027	01	51906105	5	1		PC	CONN.	12PIN	PC MTD TIN FIG 4	P							
027	02	51906114	7	1		PC	CONN.	12PIN	PC MTD <del>GOLD</del> TIN FIG 4	P		11709	11709		7648	7648	
028	01	61405700	8	1		PC	HEAT	SINK	ASSY LIAT MUD 1	G							
029	01	10127175	7	3		PC	SCR	MCH	PAN PHL 4-40 X .438	B							
030	01	10125401	0	5		PC	WSHR	NO.4	SPG LOCK STL CP	B							
031	01	10125103	1	2		PC	NUT	HEX	MCH 4-40 STL CP OR ZP	B							
032	01	10127102	1	2		PC	MSCR	PAN	PHL 4-40X1/4 (TYP I)	B							
033	01	51906601	3	2		PC	MT	SINK,	SEMI FIG 3 ALUM BLK	P							
034	01	95594500	1	4		PC	FASTENER			P							
035	01	16006500	9	REF		PC	FABRICATION	SPECIFICATION		D							
036	01	10121508	5	REF		PC	MARKING	METHODS	(SILK-SC,ETC)	D							
037	01	90436500	4	REF		PC	SCH	DIAG	5CKD-0 POWER SUPPLY	D							
038	01	51903962	1	AR		OZ	PASTE,	HEAT	XFR CMPD NON-COND	B							
0035 TOTAL LINES																	

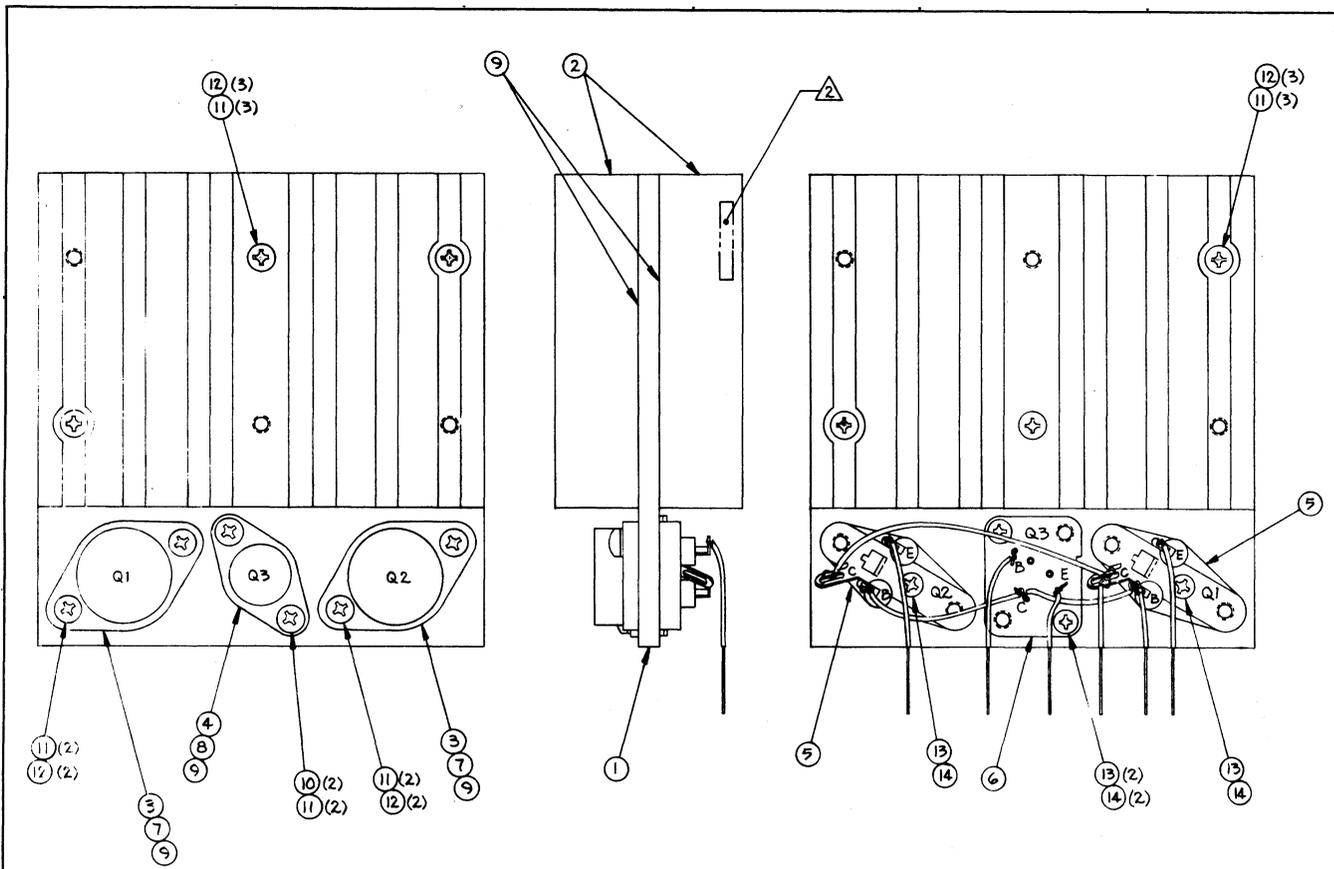

SHEET REVISION STATUS		REVISION RECORD					
REV	ECO	DESCRIPTION	DRY	DATE	CHKD	APP	
		RELEASED CLASS C	DAK	10/23/75			
A	10/53/77	RELEASED CLASS A		10/1/75			

NOTES:  
 1. REFERENCE DESIGNATIONS ARE SHOWN FOR REFERENCE ONLY AND MAY NOT APPEAR ON PART.  
 2. MARK "ASSY 61405700" IN AREA SHOWN PER CDC SPEC 10121508.

APL 61405700 DETACHED LISTS	3 PLACE ±		3 PLACE ±		ANGLES 10/1000001		TITLE <b>HEAT SINK ASSY</b>
	DO NOT SCALE DRAWING		CHKD	DAK	10-26-75		
	MATERIAL		ENGR	W. J. ...	10-23-75		
	FINISH		NYG	...	10-23-75		
APPR		S. H. ...		10-23-77		SCALE 2/1	NHA 90436700
EQUIP		CC543A				CODE BHT	D 61405700
DRAWING NO		15920		D		DRAWING NO	

BUILD ARC 230

### ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
01-06-76	1	10653-27

DIV.	ASSEMBLY NUMBER	CD	REV.	OWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860	61405700	8	A	U	HEAT SINK ASSY LIAT MOD 1	N	REL	12-31-75	CC581A-D	01-07-76			
ITEM NO	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION	MC	YTD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	71487000	3	1		PC BRKT-MTG(HEAT SINK)	P						
002	01	51915600	4	2		PC HEAT SINK	P						
003	01	94791000	6	2		PC XSTR NPN T03	P						
004	01	51770400	3	1		PC XSTR TO-66 PNP SIL	P						
005	01	51605400	4	2		PC SOCKET TRANSISTOR TO-3	P						
006	01	94835100	2	1		PC PWR SKT, XSTR PTS-4	P						
007	01	16798719	7	2		PC WASHER MICA TO-3 DISK	B						
008	01	16798720	5	1		PC WASHER MICA TO-66 DISK	B						
009	01	51003962	1	AR		OZ HEAT TRANSFER COMPOUND	B						
010	01	18607914	1	2		PC SCR, TPG PAN PHL 6-20X1/2 STL	B						
011	01	10126401	8	12		PC WASHER EXT TOOTH LOCK NO.6	B						
012	01	10127115	3	10		PC SCREW MACH 6-32X5/8 PAN HD	B						
013	01	10127102	1	4		PC SCREW MACH PAN HD 4-40X1/4 ST	B						
014	01	10126400	0	4		PC WASHER EXT TOOTH LOCK NO. 4	B						
015	01	65449556	3	1	167	FT WIR 16 GA SLD 1000V MIL W 76R	W						
016	01	61405600	0	REF		PC W/L HEAT SINK ASSY LIAT MOD 1	D						
						0014 TOTAL LINES							

DWN	DAK	10-16-75	CONTROL DATA	TITLE	W/L HEAT SINK ASSY	PREFIX	DOCUMENT NO	REV
CHKD	<i>[Signature]</i>	10-23-75				WL	61405600	A
ENG	<i>[Signature]</i>	10-23-75		FIRST USED ON		NHA	61405700	SHEET 1 of 2
MFG	<i>[Signature]</i>	12-17-75						
APPR	<i>[Signature]</i>	12-31-75	CODE IDENT	CC543A				
			15920					

SHEET REVISION STATUS				REVISION RECORD				
REV	ECO	DESCRIPTION	DRFT	DATE	APP			
		RELEASED CLASS C		11/27/75	<i>[Signature]</i>			
A	A	10653-27 RELEASED CLASS A		12/31/75	M.C.T.			

NOTES:

- For find no. identification see APL 61405700.
- Destination end of wire to be connected at assy 90436700.
- Strip wire back even with heat sink bracket (approx. .60") as shown on drawing 61405700.

DETACHED LISTS

CONTROL DATA				CODE IDENT	SHEET	WL	DOCUMENT NO	REV	
				15920	2		61405600	A	
CONDUCTOR IDENT	FIND NO.	GAUGE (REF.)	COLOR (REF.)	LENGTH (APPROX)	ORIGIN	ACCESS FIND NO.	DESTINATION	ACCESS FIND NO.	REMARKS
1	15	16	2	3	Q2	C	Q1	C	
2	↑	↑	↑	1.5	Q1	C	SCKD-0		⚠
3	↑	↑	↑	1.5	Q2	E	SCKD-0		⚠
4	↑	↑	↑	1.5	Q2	B	Q3	C	
5	↑	↑	↑	1.5	Q3	C	Q1	B	
6	↑	↑	↑	1.5	Q3	B	SCKD-0		⚠
7	↑	↑	↑	1.0	Q3	E	↑		⚠
8	↓	↓	↓	1.0	Q1	B	↓		⚠
9	15	16	2	1.5	Q1	E	SCKD-0		⚠

DWN	D. King	11-15	CONTROL DATA	TITLE	W/L POWER SUPPLY	PREFIX	WL	DOCUMENT NO.	61405800	REV	B
CHKD	<i>R. Brantley</i>	10-27-75		FIRST USED ON	CC5B1A	NHA	61402700	SHEET	1 of 2		
ENG	<i>W. J. Kelly</i>	10-27-75									
MFG	<i>W. J. Kelly</i>	12-31-75									
APPR	<i>S. H. Moore</i>	12-31-75	CODE IDENT	15920							

SHEET REVISION STATUS					REVISION RECORD						
REV	ECO	DESCRIPTION	DRFT	DATE	APP	REV	ECO	DESCRIPTION	DRFT	DATE	APP
		RELEASED CLASS C		10/24/75	<i>WJ</i>						
A	A	10653-27 RELEASED CLASS A		12/1/75	<i>WJ</i>						
B	B	114-34 REMOVE COND. ID. 5		1/15/76	<i>WJ</i>						

NOTES:  
1. For Find Number Identification see Assembly 61402700

DETACHED LISTS

443180 REV. 8/71

PRINTED IN U.S.A.

CONTROL DATA				CODE IDENT	SHEET	WL	DOCUMENT NO.	REV	
				15920	2		61405800	B	
CONDUCTOR IDENT	FIND NO	GAUGE (REF)	COLOR (REF)	LENGTH (APPROX)	ORIGIN	ACCESS FIND NO.	DESTINATION	ACCESS FIND NO.	REMARKS
1	7	16	2	9.0	CR1	+	6	SCKD J6	6
2			2		T1			CR1 AC	
3			2		T1			CR1 AC	
4			0/2		T1			SCKD J3	
5									
6			8		T1			SCKD J4	
7			8		T1			SCKD J5	

443180 REV. 8/71

PRINTED IN U.S.A.

DWN	<i>[Signature]</i>	10/15/75	CONTROL DATA	TITLE	CABLE ASSY KYBD INTERNAL	PREFIX	A	DOCUMENT NO.	61402300	REV	B
CHKD	<i>[Signature]</i>	11/17/75		FIRST USED ON	CC5B1A	NHA	15629200	SHEET	1 of 4		
ENG	<i>[Signature]</i>	12-9-75		CODE IDENT	15920						
MFG	<i>[Signature]</i>	12-31-75									
APPR	<i>[Signature]</i>										

SHEET REVISION STATUS					REVISION RECORD				
4	3	2	1	REV	ECO	DESCRIPTION	DRFT	DATE	APP
						RELEASED CLASS C		11/17/75	<i>[Signature]</i>
				01	01	01	01	CS44	EQUIP. NO. WAS CC5B1A/B/D REVISED WIRE LENGTHS
				A	A	A	A	10653-27	RELEASED CLASS A
				A	A	B	B	CD11547	Revised per ECO


  

NOTES:

- Bulk identify with CDC part number.

APL 61402300
DETACHED LISTS

AA3180 REV. 4-8-71 PRINTED IN U.S.A.

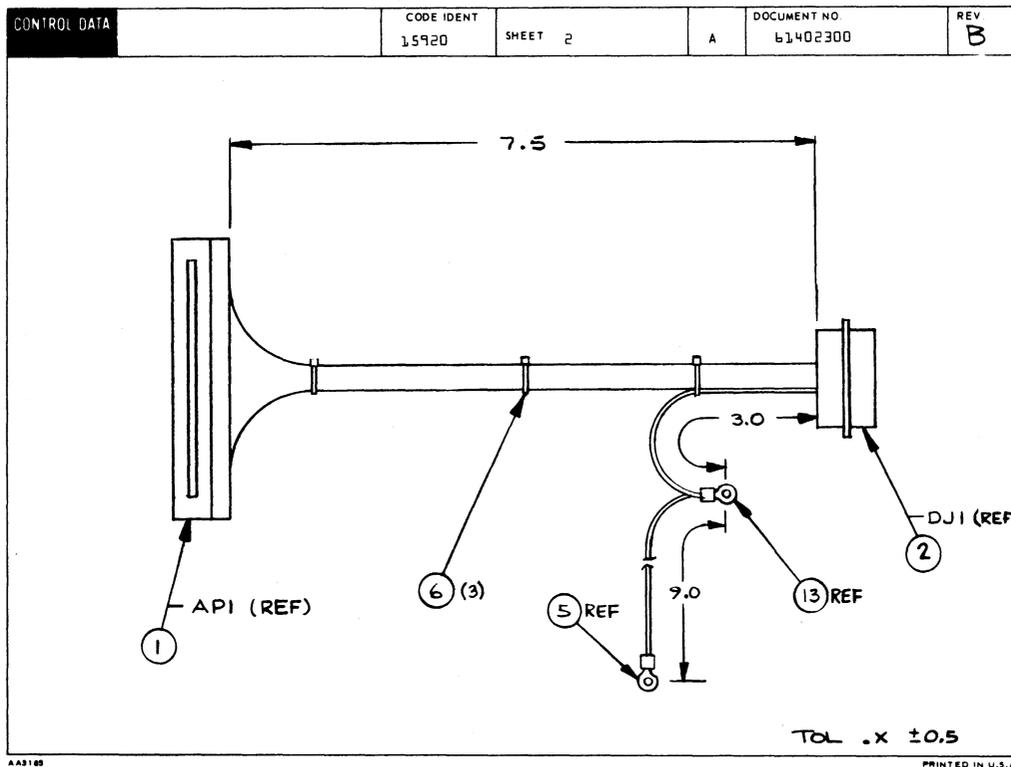





BUILD ARC 104

### ASSEMBLY PARTS LIST


PRINT DATE	PAGE	FILE CHANGE NO.
05-10-76	1	00011547

DIV.		ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE		
0860		61402300	0	B	A	CABLE ASSY KYBD INTERNAL		A	REL	12-31-75	CC5B1A-0	05-10-76		
TRFNO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION		MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	51652907	0	1		PC CONN, PC EDGE 22 POS 3.588W			P					
002	01	53397914	2	1		PC CONN, FEM 25POSN PLUG ALONE			P					
003	01	94219902	7	21		PC CONTACT+FLAG 26-22AWG STRIP			P					
004	01	53397917	5	22		PC CONTACT, STRIP SKT 20-24GA			P					
005	01	51797217	0	1		PC LUG, CRMP R TERM +22-18GA 10S			B					
006	01	94277400	1	2		PC STRAP CABLE TIE TYPE 1			P	11547	11547		7621	7621
006	02	94277400	1	3		PC STRAP CABLE TIE TYPE 1			P	11547			7621	
007	01	94277409	2	3		PC STRAP CABLE TIE TYPE 6			P		11547			7621
008	01	24548310	2	11 333	FT	WIR 24GA STRD WHT 300V UL PVC			W					
009	01	24548303	7	666	FT	WIR 24GA STRD RED 300V UL PVC			W					
010	01	24548301	1	1 333	FT	WIR 24GA STRD BLK 300V UL PVC			W					
011	01	24548307	8	666	FT	WIR 24GA STRD BLU 300V UL PVC			W					
012	01	93462555	9	1	FT	WIR 20GA STRD GRN 300V UL PVC			W					
013	01	51797204	8	1		PC LUG, CRMP R TERM +22-18GA 4SS			B					
0014 TOTAL LINES														

7-30

62957400 A

PART NO.	DIM. A	B (WIRE)		C (LUG)		D (LUG)	
		F/N	AWG	F/N	STUD SIZE	F/N	STUD SIZE
61391100	20.0±.5	1	18	2	3/8	3	*8/*10
01	2.5±.5	1	18	2	*8/*10	3	*6
02	21.0±.5	1	N/A	2	*10	3	*1/4
03	14.0±.5	1	18	2	*8/*10	2	*8/*10
04	4.5±.5	1	16	2	8,9,10	2	8,9,10
05	7.5±.5	1	16	2	8,9,10	2	8,9,10
06	9.5±.5	1	16	2	8,9,10	2	8,9,10
07	12.5±.5	1	16	2	8,9,10	2	8,9,10
08	5.0±.5	1	20	2	*6	3	SOCKET
09	4.0±.5	1	18	2	*6	2	*6
10	4.5±.5	1	16	2	8,9,10	2	*4

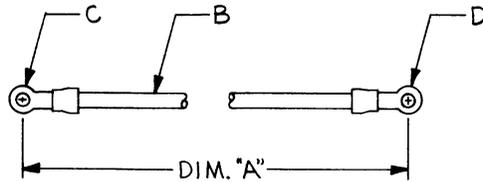

NOTES:

1. BULK IDENTIFY WITH CDC PART NUMBER AND REVISION LETTER.

SHEET REVISION STATUS				REVISION RECORD						
REV	ECO	DESCRIPTION	DRFT	DATE	CHKD	APP				
		RELEASED CLASS C		4/1/75		AKH				
01	C237	ADDED TABS 01 & 02	R	4-7-75	AKH	JES				
02	C276	ADDED TAB 03	R	4-30-75	R	JES				
A	10653-7	RELEASED CLASS A		5-14-75		MCT				
A	7701-14	ADD INT DIV LABEL		7/5/75		AGT				
B	109335	ADD TABS 04 THRU 07	M	1-7-76	R	JAN				
C	CD11189	TAB 05 DIMA WAS 20 DE. 8	RD	1/15/76	R	JES				
D	CD11226	ADD TAB 08	WRG	2/4/76	R	QLE				
E	CD11442	ADDED TAB 09	R	4/4/76	R	JES				
F	CD11761	P/L CHANGE ONLY	R	10/2/76	R	JES				
G	CD11821	ADDED TAB 10	R	11/6/76	R	LOP				

INTER-DIVISIONAL DOCUMENT  
This document is subject to change without prior notice. Users will receive copy only of the revised document.

APL 61391170 THRU APL 61391100	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES		CONTROL DATA		TITLE	
	3 PLACE ± / ±	2 PLACE ± / ±	ANGLES ± / ±	FIRST USED ON CC114A	GROUND WIRE ASSY	
DO NOT SCALE DRAWING			OWN DAK	3-6-75		
MATERIAL			CHKD E. J. ...	3/17/75		
FINISH			ENGR R. R. ...	3/17/75		
			MFG i. ...	5/4/75		
			APPR E. J. ...	5-3-75		
SCALE NONE		NWA 15618100	SHEET / OF /			

00116319 B

A

BUILD ARC 104

**ASSEMBLY PARTS LIST**

DIV.		ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860		61391105	6	G	C	GND WIRE ASSY 7.5 16GA	A	REL	05-14-75	CC114A	11-08-76			
TP/IND NO	LI	PART NUMBER	CD	REV.	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	93507555	6		625	FT	WIR 16GA STRD GRN 600V UL PVC	W						
001	02	52810015	9		625	FT	WIRE ELECT INSU 16GA GREEN	W		11761			7648	
002	01	51797236	0		2		PC LUG, CRMP R TFRM 16-14GA 10SS	B						
0003 TOTAL LINES														

BUILD ARC 104

**ASSEMBLY PARTS LIST**

DIV.		ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860		61391106	4	G	C	GND WIRE ASSY 9.5 16GA	G	REL	05-14-75	CC114A	11-08-76			
TP/IND NO	LI	PART NUMBER	CD	REV.	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	93507555	6		790	FT	WIR 16GA STRD GRN 600V UL PVC	W						
001	02	52810015	9		790	FT	WIRE ELECT INSU 16GA GREEN	W		11761	11761		7648	
002	01	51797236	0		2		PC LUG, CRMP R TFRM 16-14GA 10SS	B						
0003 TOTAL LINES														

BUILD ARC 104

**ASSEMBLY PARTS LIST**

DIV.		ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860		61391108	0	G	C	GND WIRE ASSY 5.0 20GA SOCKET	A	REL	05-14-75	CC114A	11-08-76			
TP/IND NO	LI	PART NUMBER	CD	REV.	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	93462555	9		500	FT	WIR 20GA STRD GRN 300V UL PVC	W						
002	01	51797200	6		1		PC LUG, CRMP R TFRM #22-18GA 6SS	B						
003	01	51654700	7		1		PC CONTACT RECPY ELEC 24=20 AWG	P						
0003 TOTAL LINES														

DWN	<i>[Signature]</i>	0-1278	CONTROL DATA	TITLE	CABLE ASSY DC POWER	PREFIX	A	DOCUMENT NO.	61402400	REV	C
CHKD	<i>[Signature]</i>	12-3-72		FIRST USED ON	CCSB1A	NHA	15629200	SHEET	1 of 3		
ENG	<i>[Signature]</i>	12-3-72	CODE IDENT	15920							
MFG	<i>[Signature]</i>	12-3-72									
APPR	<i>[Signature]</i>	12-3-72									


  

SHEET REVISION STATUS				REVISION RECORD				
3	2	1	REV	ECO	DESCRIPTION	DRFT	DATE	APP
					RELEASED CLASS C		12/1/72	<i>[Signature]</i>
			01	01	01	CE44		
					EQUIP. NO. WAS CCSB1A/B/K/D REVISED WIRE LENGTHS		11/24/72	<i>[Signature]</i>
			A	A	A	10853-27		
					RELEASED CLASS A		11/31/72	<i>[Signature]</i>
			B	B	B	CD11599		
					REV SHTS 1,2,3 & PL		MMJ 3-30-76	<i>[Signature]</i>
			B	C	C	CD11547		
					Revised per ECO		rt	<i>[Signature]</i>

NOTES:  
1. Bulk Identify with CDC Part Number.

APL 61402400
DETACHED LISTS

AA3180 REV. 8-71 PRINTED IN U.S.A.

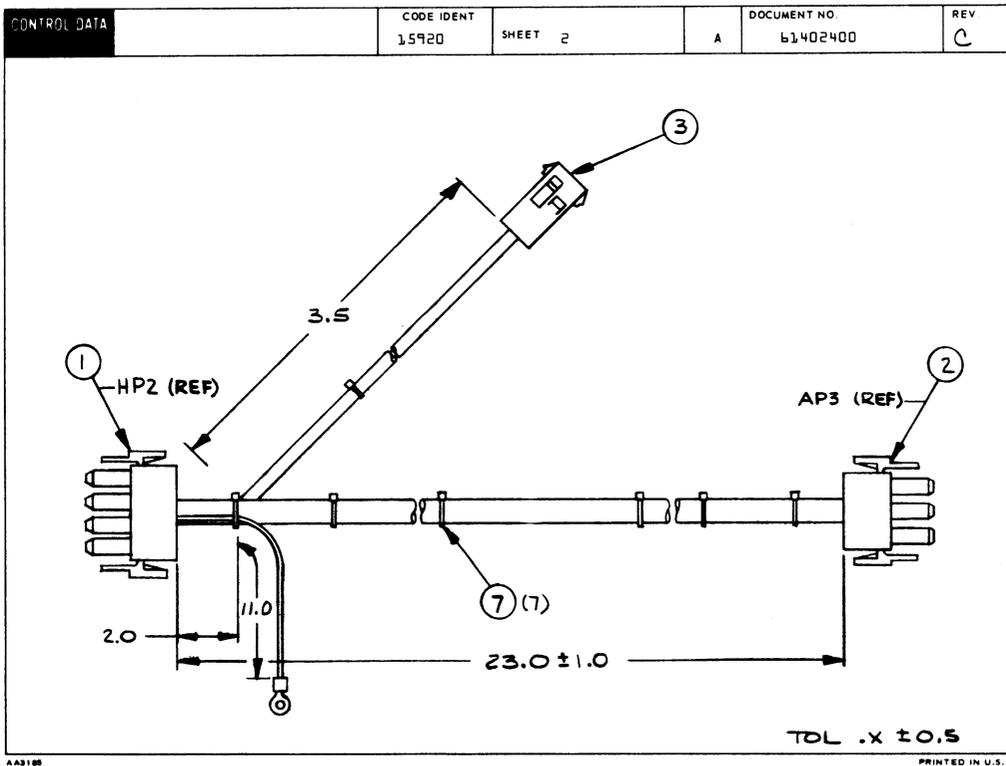

CONTROL DATA					CODE IDENT 15920	SHEET 3	WL	DOCUMENT NO 61402400	REV B
CONDUCTOR IDENT.	FIND NO	GAUGE (REF.)	COLOR (REF.)	LENGTH (APPROX)	ORIGIN	ACCESS FIND NO	DESTINATION	ACCESS FIND NO.	REMARKS
1	9	16	2	24.0	HP2	11	4 AP3	1 4	+5V
2	9	16	2	24.0	HP2	12	4 AP3	7 4	+5V
3	10	16	0	24.0	HP2	8	4 AP3	2 4	Ground
4	10	16	0	24.0	HP2	9	4 AP3	8 4	Ground
5	11	16	3	24.0	HP2	7	4 AP3	9 4	+12V
6	12	16	6	24.0	HP2	10	4 AP3	3 4	-12V
7	13	16	8	24.0	HP2	1	4 AP3	6 4	AC
8	10	16	0	24.0	HP2	4	4 AP3	5 4	Ground } TP
9	9	16	2	6.0	HP2	3	4 BP2	1 5	+24V
10	10	16	0	6.0	HP2	5	4 BP2	2 5	Ground
11	10	16	0	13.0	HP2	6	4 CE3	8	Ground

AA3183 REV. 8 71


PRINTED IN U.S.A.

BUILD ARC 104					ASSEMBLY PARTS LIST					PRINT DATE 05-10-76	PAGE 1	FILE CHANGE NO. 00011567	
DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860	61402400	B	C	A	CABLE ASSY DC POWER	A	REL	12-31-75	CC501A-D	05-10-76			
FIND NO	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	51906005	7	1		PC CONN PLUG 12 PIN	P						
002	01	51906004	U	1		PC CONN PLUG 9 PIN	P						
003	01	51905900	U	1		PC CONN RECPT 2 CONTACTS	P						
004	01	51906204	6	19		PC CONTACT, SKT 20-146A STRIP 6	P						
005	01	51905804	4	2		PC CONT, PIN 20-146A, 130VINS STR	P						
006	01	94277409	2	4		PC STRAP CABLE TIE TYPE 6	P		11547			7621	
007	01	94277400	1	6		PC STRAP CABLE TIE TYPE 1	P			11547		7621	
007	02	94277400	1	7		PC STRAP CABLE TIE TYPE 1	P		11547			7621	
008	01	51797236	U	1		PC LUG, CRMP R TERM 16-146A 105S	B						
009	01	93464222	4	4	500	FT WIR 166A STRD RED 300V UL PVC	W						
010	01	93464000	4	7	250	FT WIR 166A STRD BLK 300V UL PVC	W						
010	02	93464000	4	7	833	FT WIR 166A STRD BLK 300V UL PVC	W		11394	11394		7614	
011	01	93464333	4	2		FT WIR 166A STRD ORN 300V UL PVC	W						
012	01	93464666	4	2		FT WIR 166A STRD BLU 300V UL PVC	W						
013	01	93464888	2	2		FT WIR 166A STRD GRY 300V UL PVC	W						
0015 TOTAL LINES													

7-34

62957400 A

SHEET REVISION STATUS		REVISION RECORD					
REV	ECO	DESCRIPTION	DRFT	DATE	CHKD	APP	
A	10653-67	RELEASED CLASS A	/	10/1/76	/	RC7	
B	0011953	CHG LENGTH OF F/N 2	/	11/1/76	/	RC7	

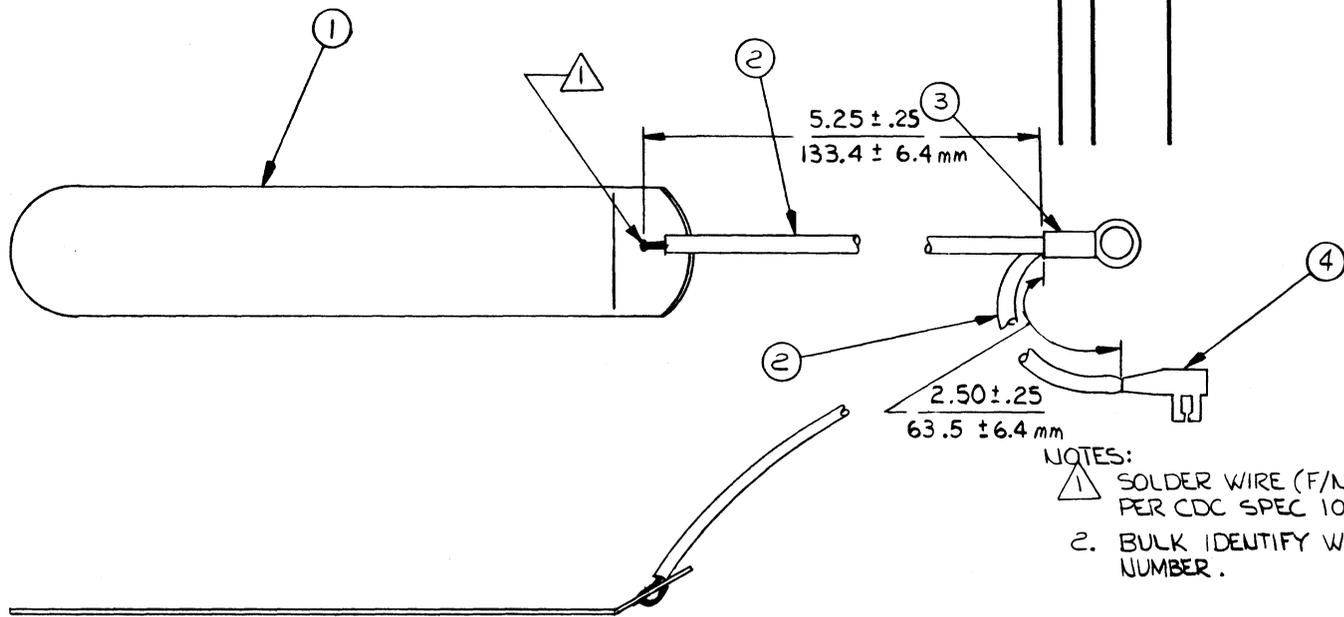

NOTES:  
 1. SOLDER WIRE (F/N 2) TO F/N 1 PER CDC SPEC 10120300.  
 2. BULK IDENTIFY WITH CDC PART NUMBER.

APL 71492174	UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN INCHES / mm TOLERANCES			CONTROL DATA		TITLE	
	3 PLACE ± /	2 PLACE ± /	ANGLES ± /	FIRST USED ON	CC5B1A		CRT GROUND CLIP ASSY
	DO NOT SCALE DRAWING			DWN	J. G. Roper	9/30/76	
	MATERIAL			CHKD	E. M. Lee	11/6/76	CODE IDENT 15920
FINISH			ENGR	J. G. Roper	10/1/76	DRAWING NO 71492174	
			MFG	J. G. Roper	10/1/76		
			APPR	E. M. Lee	10-18-76		
				SCALE	4/1	JWA61370902	SHEET / OF /

D  
C  
B  
A

A


BUILD ARC 104

**ASSEMBLY PARTS LIST**


PRINT DATE	PAGE	FILE CHANGE NO.
01-17-77	1	00011993

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0060	71492174	9	B	A	GROUND CLIP CRT	A	REL	10-19-76	CCSBIA	01-17-77			
ITEM NO.	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	71492216	8	1		PC CLIP, CRT GROUND (COPPER)	P						
002	01	93462555	9	750	FT	WIR 20GA STRD GRN 300V UL PVC W							
003	01	51797236	0	1		PC LUG, CRMP R TERM 16-14GA 105S	B						
004	01	94219903	5	1		PC CONTACT, FLAG 22-18AWG STRIP	P						
						0004 TOTAL LINES							

REV	ECO	DESCRIPTION	DATE	BY	CHKD	APP
1	06/5377	RELEASED CLASS A	7/9/76			

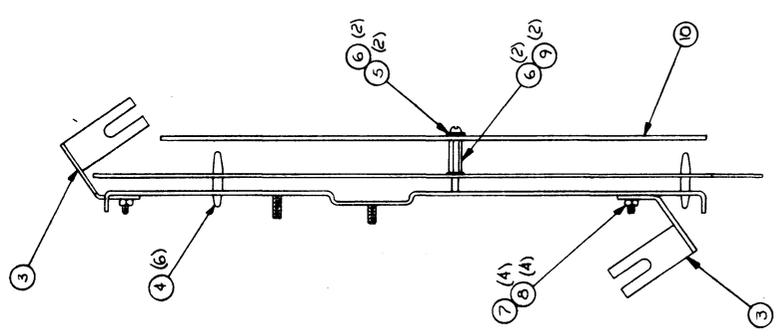

NOTES:  
 ▲ MARK ASSY 61407657 PER CDC SPEC. 021558.

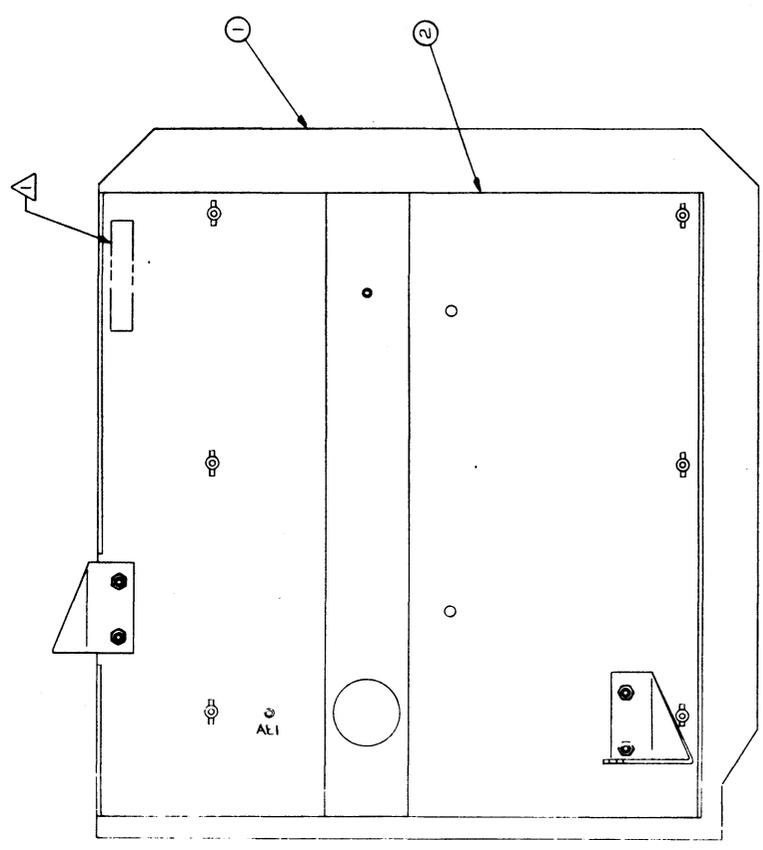


APL 61407657		DETACHED LISTS	
DESIGNED BY	CC-555	DATE	12-76
DRAWN BY	CC-555	DATE	12-76
CHECKED BY	CC-555	DATE	12-76
APPROVED BY	CC-555	DATE	12-76
MATERIAL	CC-555	DATE	12-76
FINISH	CC-555	DATE	12-76
TITLE		LOGIC MODULE ASSY	
FORM NO.	19920	REV.	D
CLASS. NO.	61407657	SCALE	1/1
WORK CENTER	NIH 156305X	SHEET	1 OF 1

BUILD ARC 230

### ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
12-22-76	1	10853-17

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860	61407657	B	A	0	LOGIC MODULE ASSY	A	REL	12-15-76		12-21-76			
TRND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	90460698	S	1		PC CD ASSY 6CUD-0 LOG MOD	A						
002	01	71485900	6	1		PC MOUNTING PLATF	P						
003	01	71488500	1	2		PC BRACKET MTG PLATE	P						
004	01	51777300	4	6		PC SPRT, CKT BD 3/16 NYL F16 1	P						
005	01	10127104	7	2		PC SCREW PAN HD 4-40X3/8 STFEL	B						
006	01	10126400	0	4		PC WSHR NO.4 EXT TOOTH LN TYP A	B						
007	01	10122901	1	4		PC NUT TWIN SELF LOCKING 6-32	B						
009	01	51875704	1	2		PC STD OFF, M-F HFX BRS 4-40X5/8	B						
010	01	71491029	9	1		PC SWIFLD (PWR ASSY)	P						
0000 TOTAL LINES													

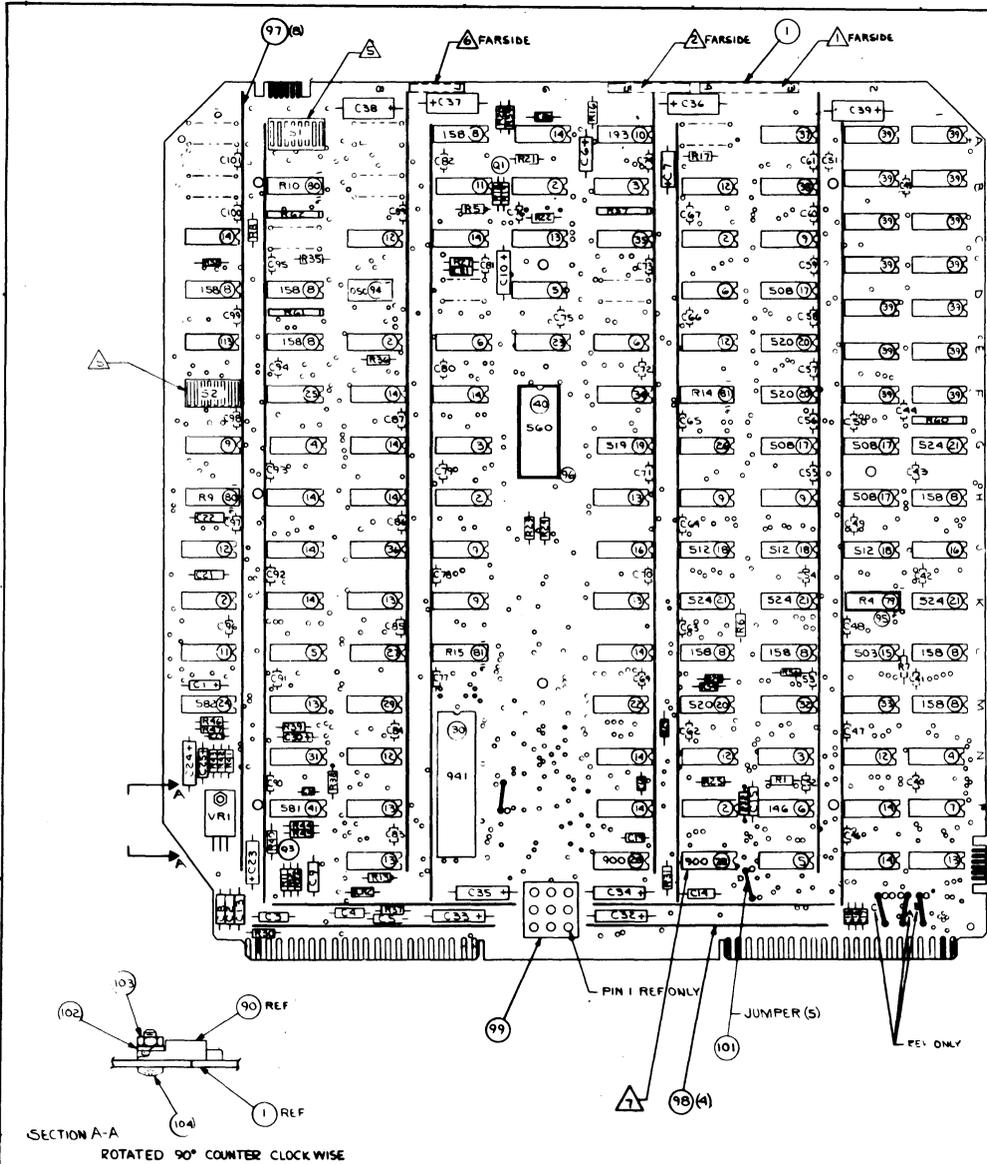

CROSS REFERENCE TABLE	
FIND NO.	REFERENCE DESIGNATION
45	Q1
46	Q3
49	C2, C3, C4, C5, C8, C14, C15, C21, C22
50	C24
51	C9, C13
52	C1, C6, C7, C23
53	C25
54	C10
55	C16, C17, C18, C19
56	C31, C40, C41, C42, C43, C44, C45, C46, C47, C48, C49, THRU 87, 89 THRU 101
57	C32, C33, C34, C35, C36, C37, C38, C39
58	C30
60	C27
66	R21
67	R27
68	R26, R30
69	R5, R6, R7, R8, R11, R12, R13, R25, R35, R36, R41, R45
70	R1, R37
71	R20
72	R18
73	R19, R22
74	R17
75	R31, R32
76	R23
77	R24
78	R16
79	R4
80	R9, R10
81	R14, R15
82	R38
83	R39
84	R40
85	R42
86	R43
87	R44
88	R46, R47
89	CR1, CR2, CR10
90	VR1
91	SI, S2

SHEET REVISION STATUS		REVISION RECORD				
REV	ECO	DESCRIPTION	DEPT	DATE	DRW	APP
A		RELEASED CLASS 1*	WJM	12-1-76		
B		PL CHANGE ONLY	MMG	4-12-77		

- NOTES:
- 1. APPLY ASSY NO., REV. LEVEL, AND LDC. CODE IN AREA SHOWN. MARK PER CDC SPEC 10121508. CHARACTER HEIGHT .12 (12PT) COLOR WHITE.
  - 2. MARK SERIAL NO. IN AREA SHOWN PER CDC STD 1.01 025 AND CDC SPEC 10121508. .12 HEIGHT. COLOR WHITE.
  - 3. CAPACITOR CBB NOT USED.
  - 4. FIND NUMBERS, ELEMENT IDENTIFIERS, AND REFERENCE DESIGNATIONS ARE FOR REFERENCE ONLY AND DO NOT APPEAR ON PART.
  - 5. SWITCH CONTACTS ARE CLOSED WHEN TOGGLE TOWARD TOP OF BOARD IS DEPRESSED.
  - 6. APPLY 6-CUD-0 IN AREA SHOWN. MARK PER CDC SPEC 10121508 CHARACTER HEIGHT .12 (12PT) COLOR WHITE.
  - 7. INSTALL 14 PIN IC 700 IN LEFT MOST POSITION.

CHANGE TABLE	
DELETIONS	ADDITIONS
	ADD WIRE:
	1) R5-14 TO R2-14
	2) R5-11 TO R4-1
	3) R4-2 TO A5-5
	4) R6-3 TO A7-11

APL 30460678 DETACHED LIST	ISSUE ORIGINATED SPECIFIED DIMENSIONS AND TOLERANCES	REV: 1 ISSUED ON: CC555-A	TITLE: P.C. CARD ASSY, 6CUD-0 (LOGIC MODULE)
	FILE: ± ± ± ±	DRW: WJ HERMAN	CODE SHEET: 15920
	DO NOT SCALE DRAWING	ENGR: [Signature]	DRAWING NO: 90460698
	MATERIAL:	CHKD: [Signature]	SCALE: NONE
	ENGR: [Signature]	DATE: 12-01-76	SHEET 1 OF 1

BUILD ARC 210

**ASSEMBLY PARTS LIST**

PRINT DATE 05-25-77 PAGE 1 FILE CHANGE NO. 00012170

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE				
060	90460698	S	R	U	CD ASSY 6CUD-0 LOG MOD	G	REL	12-15-76	CC555	05-25-77				
TRFIND NO	LI	PART NUMBER	CD	IN	QUANTITY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	90460533	4		1		PC PC #D 6A0D-0 REFRESH #D	P						
002	01	88924400	0		6		PC IC TYPE 7400 TTL QUAD 2-I/P	P		12170	12170		7740	
002	02	66299099	3		6		PC IC TTL QUAD 2-IN NAND	P					7740	
003	01	88898200	6		3		PC IC TYPE 7410 TTL 3I/P POS	P		12170	12170		7740	
003	02	66299100	4		3		PC IC TTL3 3I/P NAND PLASTIC	P					7740	
004	01	66299102	5		2		PC IC TTL DUAL 4-IN NAND	P						
005	01	88885500	4		3		PC IC TYPE 7402 TTL QUAD NOR GA	P		12170	12170		7740	
005	02	66299103	3		3		PC IC TTL QUAD 2-IN NOR	P					7740	
006	01	88924500	7		4		PC IC TYPE 7404 TTL HEX INVERTER	P		12170	12170		7740	
006	02	39389700	4		4		PC IC TTL QUAD 2 I/P 7404	P					7740	
007	01	88885700	0		1		PC IC TYPE 7406 TTL QUAD 2 I/P	P						
008	01	51761500	1		9		PC IC 74161/9316 158 TTL CNTR 6	P						
009	01	88886400	0		6		PC IC TYPE 74157 TTL QUAD 2I/P	P						
010	01	50254300	2		1		PC IC 74123 193 TTL 2 RETOR MVB	P						
011	01	96744155	1		2		PC IC TYPE 7406 TTL HEX INV	P						
012	01	88897000	1		7		PC IC TYPE 7408 TTL QUAD 2I/P	P						
013	01	96744172	0		8		PC IC 7432 218 TTL QUAD 2I4 OR	P						
014	01	88885400	7		15		PC IC TYPE 9024 TTL DUAL FLIP FO	P						
015	01	95814600	3		1		PC IC 74160/9310 503 TTL UP DEC	P						
016	01	66299110	0		2		PC IC TTL 1 OF 10 DECODEM	P						
017	01	66299111	0		4		PC IC TTL DUAL 4 TO 1 MUX	P						
018	01	52342700	3		3		PC IC 74191/9336 512 TTL 4B 8IN	P						
019	01	15104400	5		1		PC IC 74174 519 TTL 4-BIT D LTCH	P		12200-13				7727

BUILD ARC 210

**ASSEMBLY PARTS LIST**

PRINT DATE 05-25-77 PAGE 2 FILE CHANGE NO. 00012170

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE				
060	90460698	S	R	U	CD ASSY 6CUD-0 LOG MOD	G	REL	12-15-76	CC555	05-25-77				
TRFIND NO	LI	PART NUMBER	CD	IN	QUANTITY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
019	02	88882800	1		1		PC IC 74174 519 TTL 4BIT D LATCH	P		12200-13			7727	
020	01	15104500	2		3		PC IC 74175 520 TTL 4 BIT D LTCH	P						
021	01	15108600	0		4		PC IC 7485 524 TTL 4R MGTU CPTR	P						
022	01	88923600	0		1		PC IC TYPE 74164 TTL 8BIT	P						
023	01	88923700	4		1		PC IC TYPE 74165 TTL 8BIT	P						
024	01	15105700	7		1		PC IC 4024 582 TTL DL/V CONT MVB	P						
025	01	51861700	3		1		PC IC 2568IT 32X8 8P-ROM ASSY	G						
026	01	51861711	3		1		PC IC 2568IT 32X8 8P-ROM ASSY	V						
027	01	51861709	7		1		PC IC 2568IT 32X8 8P-ROM ASSY	V						
028	01	36186400	2		2		PC IC MC1488 900 DTL QD LN DRVR	P						
029	01	66299116	5		1		PC IC TTL QUAD LINE RECEIVER	P		12170	12170		7725	
029	02	36186500	9		1		PC IC MC1489 901 DTL QD LN RCVR	P					7725	
030	01	15125700	3		1		PC IC TR1602A 941 TTL ASYNC D/R	P						
031	01	88896100	0		1		PC IC TYPE 7414 TTL HEX SCH/TIGG	P						
032	01	51892308	1		1		PC IC 1024BIT 256X4 8P-ROM ASSY	V						
033	01	51892309	9		1		PC IC 1024BIT 256X4 8P-ROM ASSY	V						
034	01	51892310	7		1		PC IC 1024BIT 256X4 8P-ROM ASSY	V						
035	01	51892311	5		1		PC IC 1024BIT 256X4 8P-ROM ASSY	V						
036	01	51892315	6		1		PC IC 1024BIT 256X4 8P-ROM ASSY	V						
037	01	51892313	1		1		PC IC 1024BIT 256X4 8P-ROM ASSY	V						
038	01	51892314	9		1		PC IC 1024BIT 256X4 8P-ROM ASSY	V						

BUILD ARC 210

**ASSEMBLY PARTS LIST**

PRINT DATE	PAGE	FILE CHANGE NO.
05-25-77	3	0001210

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE	
0860		90460698		5	B	U	CD ASSY 6CUD-0 LOG MOD		6	REL	12-15-76	CC555	05-25-77	
TRND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION		MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
039	01	15140300	3	14		PC IC 2102-2 772A MOS 10248 RAM		P						
040	01	15144500	4	1		PC IC MCM6570 560 MOS CHAR GEN		P						
041	01	15105600	9	1		PC IC 4044 581 TTL PH/FREQ DETR		P						
045	01	51003059	6	1		PC XSTM DD1 104 EPITAX NPN SIL		P						
046	01	51887100	9	1		PC XSTM TO-18 LOW LVL NPN SIL		P						
049	01	51839147	9	9		PC CAP FXD CER .1UF 10P 100VDCW		P						
050	01	24504369	0	1		PC CAP FXD TANT 10UF 20P 15VDCW		P						
051	01	51839142	0	2		PC CAP FXD CER .033UF 100V 10P		P						
052	01	51879105	8	4		PC CAP FXD TANT 100UF 10P 6VDCW		P						
053	01	24504317	9	1		PC CAP FXD TANT .1UF 20P 35VDCW		P						
054	01	24504322	9	1		PC CAP FXD TANT 47UF 20P 6VDCW		P						
055	01	51839119	8	4		PC CAP FXD CER 390PF 10P 100VDCW		P						
056	01	51001119	0	62		PC CAP CER BY PASS .014UF 25WVDC		P						
057	01	51786437	7	8		PC CAP SOLID TANT 33UF 20P 15V		P						
058	01	24504312	0	1		PC CAP FXD TANT 6.8UF 20P 6WVDC		P						
060	01	94227216	2	1		PC CAP DIP MICA 39PF 1P 300VDCW		P						
066	01	24500055	9	1		PC RES COMP 470 OHM 1/4W 5P		P						
067	01	24500087	2	1		PC RES COMP 10K OHM 1/4W 5P		P						
068	01	24500039	3	2		PC RES COMP 100 OHM 1/4W 5P		P						
069	01	24500063	3	12		PC RES COMP 1K OHM 1/4W 5P		P						
070	01	24500079	9	2		PC RES COMP 4.7K OHM 1/4W 5P		P						

BUILD ARC 210

**ASSEMBLY PARTS LIST**

PRINT DATE	PAGE	FILE CHANGE NO.
05-25-77	4	0001210

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE	
0860		90460698		5	R	U	CD ASSY 6CUD-0 LOG MOD		6	REL	12-15-76	CC555	05-25-77	
TRND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION		MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
071	01	24500027	8	1		PC RES COMP 33 OHM 1/4W 5P		P						
072	01	24500036	9	1		PC RES COMP 75 OHM 1/4W 5P		P						
073	01	24500048	4	2		PC RES COMP 240 OHM 1/4W 5P		P						
074	01	24500081	5	1		PC RES COMP 5.6K OHM 1/4W 5P		P						
075	01	24500073	2	2		PC RES COMP 2.7K OHM 1/4W 5P		P						
076	01	17705903	7	1		PC RES FXD COMP 43K OHM .25W 5P		P						
077	01	24500098	9	1		PC RES COMP 30K OHM 1/4W 5P		P						
078	01	24500084	9	1		PC RES COMP 7.5K OHM 1/4W 5P		P						
079	01	62012900	7	1		PC RES MOD DUAL 56 OHMS 125MW		P						
080	01	62012906	4	2		PC RES MOD DUAL 1K OHMS 125MW		P						
081	01	62012920	5	2		PC RES MOD DUAL 4.7K OHM 125MW		P						
082	01	24500056	7	1		PC RES COMP 510 OHM 1/4W 5P		P						
083	01	24500077	3	1		PC RES COMP 3.9K OHM 1/4W 5P		P						
084	01	17705908	6	1		PC RES FXD COMP 68K OHM .25W 5P		P						
085	01	24500071	6	1		PC RES COMP 2.2K OHM 1/4W 5P		P						
086	01	24500047	6	1		PC RES COMP 220 OHM 1/4W 5P		P						
087	01	24500074	0	1		PC RES COMP 3K OHM 1/4W 5P		P						
088	01	94360292	0	2		PC RES FXD FILM 9090HMS 1/4W 1P		P						
089	01	51001239	6	3		PC DIO SWITCHING SIL IN3064		P						
090	01	15151500	4	1		PC IC UA7800+5 357A POS V RGLTR		P						
091	01	51862504	1	2		PC SW, PC BD TGL 8 IN-LINE SPST		P						

BUILD ARC 210

### ASSEMBLY PARTS LIST

PRINT DATE 05-25-77 PAGE 3 FILE CHANGE NO. 00012170

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860	90460698	S	B	U	CD ASSY 6CUD-0 LOG MON	G	REL	12-15-76	CC555	05-25-77			
TRND NO	LT	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
094	01	51904105	7	1		PC OSCILLATOR TTL DIP(6.745 MHZ)	P						
095	01	51848401	9	1		PC SOCKET, IC 16 POS DL-IN-LINE	P						
096	01	51848404	J	1		PC SOCKET, IC 24 POS DL-IN-LINE	P						
097	01	71486102	B	8		PC BUS, PWR 11.35LG W/POSTS CU	P						
098	01	71486101	U	4		PC BUS, PWR 3.6LG W/POSTS CU	P						
099	01	51906111	3	1		PC CONN, 9 PIN PC MTH GOLD FIG 3	P						
101	01	95642805	6	500		FT WIR SLD 24GA TINNED	W						
102	01	10125801	U	1		PC WSHM NO.4 SPG LOCK STL CP	B						
103	01	10125103	L	1		PC NUT HEX MCH 4-40 STL CP OR ZP	B						
104	01	92780084	7	1		PC WSH PAN SLT 4-40X5/16 SST	B						
105	01	16006500	9	REF		PC FABRICATION SPECIFICATION	D						
106	01	10121508	5	REF		PC MARKING METHODS (SILK-SC,ETC)	D						
107	01	16019500	4	REF		PC REQ/INSTALLATION OF EXT CKTS	D						
108	01	90460532	6	REF		PC SCH DIAG 6ARD-0 MET LOG BASIC	D						
109	01	24500075	7	4		PC RES COMP 3.3K OHM 1/4W 5P	P						
110	02	94375102	4	3		PC RES 8PIN NTWK 3.3K 3P 1/8W	P						
111	01	24500061	7	1		PC RES COMP 820 OHM 1/4W 5P	P						
112	01	24500059	1	1		PC RES COMP 680 OHM 1/4W 5P	P						
113	01	51892316	4	1		PC IC 1024BIT 256X4 RP-RUM ASSY	V						
114	01	94375109	9	1		PC RES 8PIN NTWK 1K 3P 1/8W	P						
115	01	52629949	0	1	500	FT WIR 30GA SLD WHT IUL KYNAP	W						

BUILD ARC 210

### ASSEMBLY PARTS LIST

PRINT DATE 05-25-77 PAGE 6 FILE CHANGE NO. 00012170

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860	90460698	S	R	U	CD ASSY 6CUD-0 LOG MON	G	REL	12-15-76	CC555	05-25-77			
TRND NO	LT	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
						107 TOTAL LINES							




MULD ARC 230

### ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
12-22-76	1	10653-77

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION			MC	STATUS	STATUS DATE		ENG. DESIG.	FILE DATE	
0860		61407656		0	A	0	DC ENTRY PNL ASSY			A	REL	12-15-76		QSE19502	12-21-76	
TP/IND NO	LI	PART NUMBER	CD	IN	QUANTITY	U/M	PART DESCRIPTION			MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	90460701	7		1		PC CD ASSY 6CVD-n LOG MOD			A						
002	01	71485900	6		1		PC MOUNTING PLATE			P						
003	01	71488500	1		2		PC BRACKET MTG PLATE			P						
004	01	51777300	8		6		PC SPRY, CKT BD 3/16 NYL FIG 1			P						
005	01	10127104	7		2		PC SCREW PAN HD 4-40X3/8 STEEL			B						
006	01	10126400	0		4		PC WSHR NO.4 EXT TOOTH LK TYP A			B						
007	01	10122901	1		4		PC NUT TWIN SELF LOCKING 6-32			B						
009	01	51875304	1		2		PC STD OFF, M-F HPX BRG 4-40X5/8			B						
010	01	71491P29	9		1		PC SHIELD (PWB ASSY)			P						
							0000 TOTAL LINES									

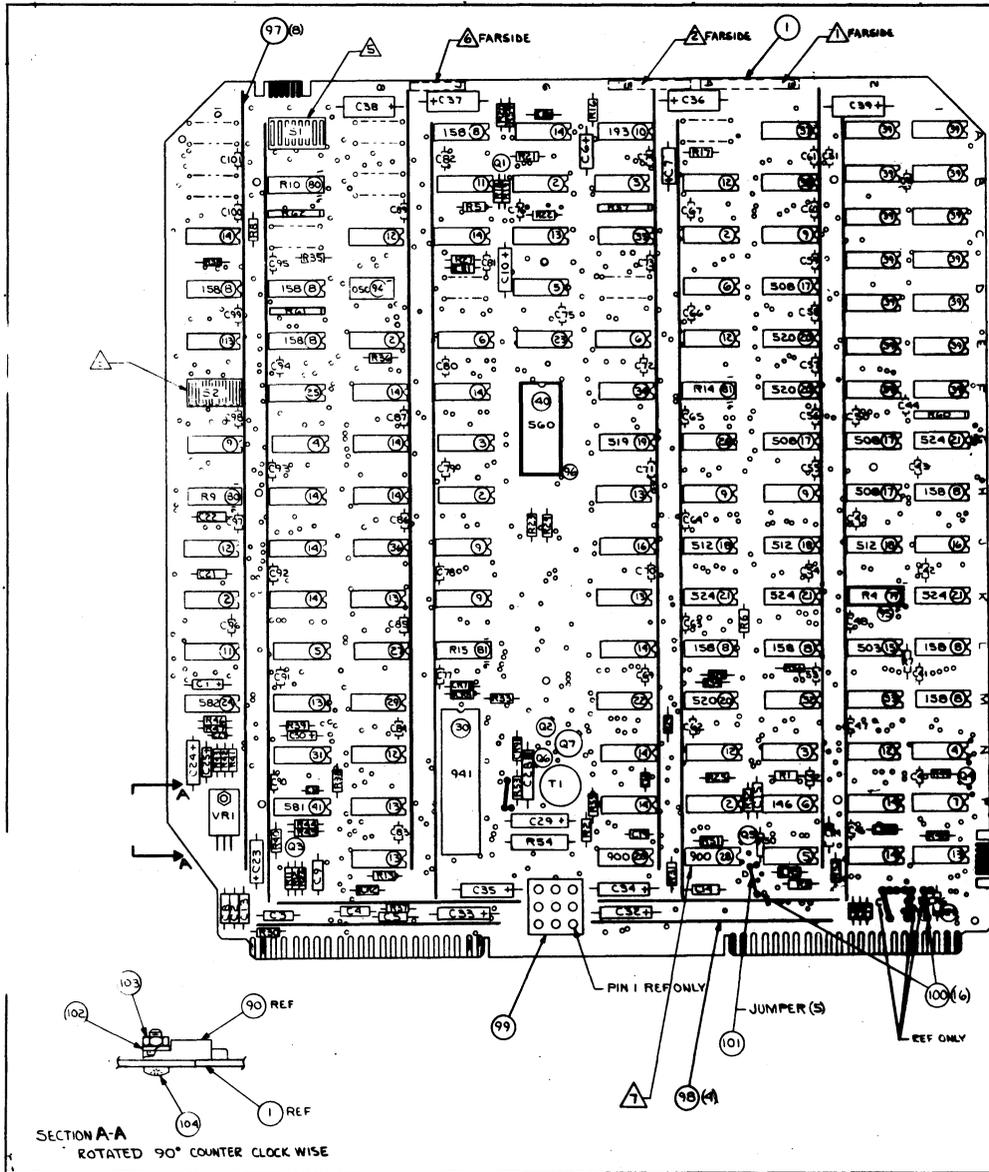

CROSS REFERENCE TABLE	
FIND NO.	REFERENCE DESIGNATION
42	Q7
43	Q2
44	Q6
45	Q1, Q4, Q5
46	Q3
47	C29
48	C28
49	C2, C3, C4, C5, C8, C14, C15, C21, C22
50	C24
51	C9, C13
52	C1, C6, C7, C23
53	C25
54	C10
55	C16, C17, C18, C19
56	C31, C40, C41, C42, C43, C49, C45, C46, C47, C48, C49, R48, R49, R51, R55
57	C32, C33, C34, C35, C36, C37, C38, C39
58	C30
60	C27
61	R54
62	R48, R49, R51, R55
63	R2, R3
64	R53
65	R33
66	R21, R52
67	R27, R50
68	R24, R30
69	R5, R6, R7, R8, R11, R12, R13, R23, R35, R36, R41, R45
70	R1, R37
71	R20
72	R18
73	R19, R22
74	R17
75	R31, R32
76	R23
77	R24
78	R16
79	R4
80	R9, R10
81	R14, R15
82	R38
83	R39
84	R40
85	R42
86	R43
87	R44
88	R46, R47
89	CR1, CR2, CR3, CR4, CR5, CR6, CR7, CR8, CR9, CR10
90	VR1
91	S1, S2
92	T1
93	AT-1

109	R28, R29, R34, R56
110	R57, R60, R61
111	R59
112	R58
114	R62

REV	REVISION RECORD		DATE	CHKD	APPD
	NO	DESCRIPTION			
A	1	RELEASED CLASS C	WJM	12-17-76	
B	1	RELEASED CLASS A		12/17/76	
		PL CHANGE ONLY		12-17-76	

- NOTES:
- ▲ APPLY ASSY NO., REV. LEVEL, AND LOC. CODE IN AREA SHOWN. MARK PER CDC SPEC 10121508. CHARACTER HEIGHT .12 (12PT) COLOR WHITE.
  - ▲ MARK SERIAL NO. IN AREA SHOWN PER CDC STD. 1.01.025 AND CDC SPEC 10121508. .12 HEIGHT, COLOR WHITE.
  - ▲ CAPACITOR C88 NOT USED.
  - 4. FIND NUMBERS, ELEMENT IDENTIFIERS, AND REFERENCE DESIGNATIONS ARE FOR REFERENCE ONLY AND DO NOT APPEAR ON PART.
  - ▲ SWITCH CONTACTS ARE CLOSED WHEN TOGGLE TOWARD TOP OF BOARD IS DEPRESSED.
  - ▲ APPLY 6CVD-0 IN AREA SHOWN. MARK PER CDC SPEC 10121508; CHARACTER HEIGHT .12 (12PT) COLOR WHITE.
  - ▲ INSTALL 14 PIN IC 900 IN LEFT MOST POSITION.

CHANGE TABLE	
DELETIONS	ADDITIONS
	ADD WIRE : 1) R5-14 TO R4-14 2) R5-1 TO R4-1 3) R4-2 TO A5-5 4) R4-3 TO A7-11

APL 50460101		ISSUE		TITLE	
3 PLACE	3 PLACE	ISSUE	CC555-C	PC CARD ASSY 6CVD-0 (LOGIC MODULE WITH CURRENT LOOP)	
DO NOT SCALE DRAWING	DO NOT SCALE DRAWING	DATE	12-17-76	CODE	15920
DATE	DATE	DESIGNER	WJHERMAN	DRAWING NO	90460701
DATE	DATE	CHKD		SCALE	NONE
DATE	DATE	APPD		SHEET	1 OF 1
DATE	DATE	APPROV			

6088  
6070  
90645741

BUILD ARC 210										ASSEMBLY PARTS LIST				PRINT DATE	PAGE	FILE CHANGE NO.			
0860 90460701 7 R U										CD ASSY 6CVD-0 LOG 40N				G	REL	12-15-76	CC555	04-19-77	00012170
DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE									
FOUND NO	LI	PART NUMBER	CD	REV.	QUANTITY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT					
001	01	90460533	4		1		PC PC HD 6A00-0 REFRESH HD	P											
002	01	88924400	0		6		PC IC TYPE 7400 TTL QUAD 2-I/P	P		12170	12170		7740	7740					
002	02	66299099	3		4		PC REPLACED BY 88924400 11690	P											
003	01	88898200	6		3		PC IC TYPE 7410 TTL 3I/P POS	P		12170	12170		7740	7740					
003	02	66299100	9		3		PC REPLACED BY 88898200 11590	P											
004	01	66299102	5		2		PC IC TTL DUAL 4-IN NAND	P											
005	01	88885500	4		3		PC IC TYPE 7402 TTL QUAD NOT GA	P		12170	12170		7740	7740					
005	02	66299103	3		3		PC REPLACED BY 88885500 11690	P											
006	01	88924500	7		4		PC IC TYPE 7404 TTL HEX INVERTER	P		12170	12170		7740	7740					
006	02	39389700	4		4		PC IC 7406 TTL QUAD 2 I/P	P											
007	01	88885700	0		1		PC IC TYPE 7408 TTL QUAD 2 I/P	P											
008	01	51761500	1		9		PC IC 74161/9316 158 TTL CNTR 6	P											
009	01	88886400	0		6		PC IC TYPE 74157 TTL QUAD 2I/P	P											
010	01	50254300	2		1		PC IC 74123 193 TTL 2 RETGR MVB	P											
011	01	96744155	1		2		PC IC TYPE 7405 TTL HEX INV	P											
012	01	88897000	1		7		PC IC TYPE 7409 TTL QUAD 2I/P	P											
013	01	96744172	0		8		PC IC 7432 214 TTL QUAD 2IN OR	P											
014	01	88885400	7		15		PC IC TYPE 9024 TTL DUAL FLIP FO	P											
015	01	95814600	3		1		PC IC 74160/9310 503 TTL UP DEC	P											
016	01	66299110	4		2		PC IC TTL 1 OF 16 DECODER	P											
017	01	66299111	0		4		PC IC TTL DUAL 4 TO 1 MUX	P											
018	01	52342700	3		3		PC IC 74191/9336 512 TTL 4R 3IN	P											
019	01	15104400	5		1		PC IC 74174 514 TTL 6-BIT D LATCH	P		12200-13			7727						

BUILD ARC 210										ASSEMBLY PARTS LIST				PRINT DATE	PAGE	FILE CHANGE NO.			
0860 90460701 7 R U										CD ASSY 6CVD-0 LOG 40N				G	REL	12-15-76	CC555	04-19-77	00012170
DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE									
FOUND NO	LI	PART NUMBER	CD	REV.	QUANTITY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT					
019	02	88882800	1		1		PC IC 74174 514 TTL 6BIT D LATCH	P		12200-13			7727						
020	01	15104500	2		3		PC IC 74175 521 TTL 4 BIT D LATCH	P											
021	01	15108600	0		4		PC IC 7485 524 TTL 4R 46NTU CPTR	P											
022	01	88923600	0		1		PC IC TYPE 74144 TTL 4BIT	P											
023	01	88923700	4		1		PC IC TYPE 74145 TTL 4BIT	P											
024	01	15105700	7		1		PC IC 4024 592 TTL DL/V CONT MVB	P											
025	01	51861706	3		1		PC IC 2568IT 32XB BP-ROM ASSY	G											
026	01	51861711	3		1		PC IC 2568IT 32XB BP-ROM ASSY	V											
027	01	51861709	7		1		PC IC 2568IT 32XB BP-ROM ASSY	V											
028	01	36186400	2		2		PC IC MC1489 910 DTL 90 LN DRVR	P											
029	01	66299116	5		1		PC IC TTL QUAD LINE RECEIVER	P		12170	12170		7740	7740					
029	02	36186500	4		1		PC IC MC1489 911 DTL 90 LN RCVR	P											
030	01	15125700	3		1		PC IC TR1602A 441 TTL ASYNC D/R	P											
031	01	88896100	0		1		PC IC TYPE 7414 TTL HEX SCH/TI06	P											
032	01	51892308	1		1		PC IC 1024BIT 256X4 BP-ROM ASSY	V											
033	01	51892309	4		1		PC IC 1024BIT 256X4 BP-ROM ASSY	V											
034	01	51892310	7		1		PC IC 1024BIT 256X4 BP-ROM ASSY	V											
035	01	51892311	5		1		PC IC 1024BIT 256X4 BP-ROM ASSY	V											
036	01	51892315	0		1		PC IC 1024BIT 256X4 BP-ROM ASSY	V											
037	01	51892313	1		1		PC IC 1024BIT 256X4 BP-ROM ASSY	V											
038	01	51892314	9		1		PC IC 1024BIT 256X4 BP-ROM ASSY	V											

BUILD ARC 210

**ASSEMBLY PARTS LIST**

PRINT DATE 04-19-77 PAGE 3 FILE CHANGE NO. 00012170

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE	
0060		90460701		7	R	D	CD ASSY 6CVD-0 LOG MOD		G	REL	12-15-76	CC555	04-19-77	
ITEM NO.	LT	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION		MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
039	01	15140300	3	14		PC	IC 2102-2 772A MOS 1024B RAM	P						
040	01	15144500	4	1		PC	IC MCW6570 560 MOS CHAR GEN	P						
041	01	15105600	9	1		PC	IC 4044 581 TTL P4/FREQ DETR	P						
042	01	51681100	7	1		PC	XSTR 2N5189 NPN SIL	P						
043	01	51003092	7	1		PC	XSTM 2N2222 HT SPEED NPN SIL	P						
044	01	51714000	0	1		PC	XSTM 2N2907 PNP SIL	P						
045	01	51003059	6	3		PC	XSTM DD1 LOW EPITAX NPN SIL	P						
046	01	51887100	9	1		PC	XSTM TO-18 LOW LVL NPN SIL	P						
047	01	24504373	2	1		PC	CAP FXD TANT 47UF 20P 15VDCW	P						
048	01	24506809	3	1		PC	CAP FXD MYL .022UF 10V 100V	P						
049	01	51839147	9	9		PC	CAP FXD CER .01UF 10P 100VDCW	P						
050	01	24504369	0	1		PC	CAP FXD TANT 10UF 20P 15VDCW	P						
051	01	51839142	0	2		PC	CAP FXD CER .033UF 100V 10P	P						
052	01	51879105	8	4		PC	CAP FXD TANT 100UF 10V 4VDCW	P						
053	01	24504317	9	1		PC	CAP FXD TANT .01UF 20P 35VDCW	P						
054	01	24504322	9	1		PC	CAP FXD TANT 47UF 20P 6VDCW	P						
055	01	51839119	8	4		PC	CAP FXD CER 330PF 10P 100VDCW	P						
056	01	51001119	0	62		PC	CAP CER BY PASS .01MFD 250VDC	P						
057	01	51786437	7	4		PC	CAP SOLID TANT 33UF 20P 15V	P						
058	01	24504312	0	1		PC	CAP FXD TANT .02UF 20P 6VDC	P						
060	01	94227216	2	1		PC	CAP DIP MICA 300PF 1P 300VDCW	P						

BUILD ARC 210

**ASSEMBLY PARTS LIST**

PRINT DATE 04-19-77 PAGE 4 FILE CHANGE NO. 00012170

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE	
0060		90460701		7	R	U	CD ASSY 6CVD-0 LOG MOD		G	REL	12-15-76	CC555	04-19-77	
ITEM NO.	LT	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION		MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
061	01	24504817	8	1		PC	RES FXD COMP 12 OHM 5P 2WATT	P						
062	01	24500045	8	4		PC	RES COMP 1.2K OHM 1/4W 5P	P						
063	01	24500051	8	2		PC	RES COMP 33 OHM 1/4W 5P	P						
064	01	24500043	5	1		PC	RES COMP 15 OHM 1/4W 5P	P						
065	01	17705914	4	1		PC	RES FXD COMP 0.12MEG .25W 5P	P						
066	01	24500055	9	2		PC	RES COMP 47 OHM 1/4W 5P	P						
067	01	24500097	2	2		PC	RES COMP 10K OHM 1/4W 5P	P						
068	01	24500039	3	2		PC	RES COMP 10K OHM 1/4W 5P	P						
069	01	24500063	3	12		PC	RES COMP 1K OHM 1/4W 5P	P						
070	01	24500079	9	2		PC	RES COMP 4.7K OHM 1/4W 5P	P						
071	01	24500027	8	1		PC	RES COMP 33 OHM 1/4W 5P	P						
072	01	24500036	9	1		PC	RES COMP 75 OHM 1/4W 5P	P						
073	01	24500048	4	2		PC	RES COMP 24 OHM 1/4W 5P	P						
074	01	24500081	5	1		PC	RES COMP 5.6K OHM 1/4W 5P	P						
075	01	24500073	2	2		PC	RES COMP 2.7K OHM 1/4W 5P	P						
076	01	17705903	7	1		PC	RES FXD COMP 43K OHM .25W 5P	P						
077	01	24500098	9	1		PC	RES COMP 30K OHM 1/4W 5P	P						
078	01	24500084	9	1		PC	RES COMP 7.5K OHM 1/4W 5P	P						
079	01	62012900	7	1		PC	RES MOD DUAL 56 OHMS 125MW	P						
080	01	62012906	4	2		PC	RES MOD DUAL 1K OHMS 125MW	P						
081	01	62012920	5	2		PC	RES MOD DUAL 4.7K OHM 125MW	P						

BUILD ARC 210

### ASSEMBLY PARTS LIST

PRINT DATE 04-19-77 PAGE 5 FILE CHANGE NO. 00012170


DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE	
0860		90460701		7	R	U	CD ASSY 6CVD-0 LOG MON		G	REL	12-15-76	CC555	04-19-77	
FOUND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION		MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
082	01	24500056	7	1		PC	RES COMP 510 OHM 1/4W 5P	P						
083	01	24500077	3	1		PC	RES COMP 3.9K OHM 1/4W 5P	P						
084	01	17705908	6	1		PC	RES FXD COMP 68K OHM .25W 5P	P						
085	01	24500071	6	1		PC	RES COMP 2.2K OHM 1/4W 5P	P						
086	01	24500047	6	1		PC	RES COMP 220 OHM 1/4W 5P	P						
087	01	24500074	0	1		PC	RES COMP 3K OHM 1/4W 5P	P						
088	01	94360292	0	2		PC	RES FXD FILM 9090HMS 1/4W 1P	P						
089	01	51001239	6	10		PC	DIO SWITCHING SIL 1N3064	P						
090	01	15151500	4	1		PC	IC UA7800+5 357A POS V RGLTR	P						
091	01	51862504	1	2		PC	SW, PC RD TGL 8 IN-LINE SPST	P						
092	01	30001000	6	1		PC	PULSF TRANSFORMER	P						
093	01	51825700	1	1		PC	OPTICAL ISOLATOR	P						
094	01	51904105	7	1		PC	OSCILLATOR TTL NTP(4.745 MHZ)	P						
095	01	51848401	9	1		PC	SOCKET, IC 16 POS DL-IN-LINE	P						
096	01	51848404	3	1		PC	SOCKET, IC 24 POS DL-IN-LINE	P						
097	01	71486102	8	9		PC	RUS, PWR 11.35LG W/POSTS CU	P						
098	01	71486101	8	4		PC	RUS, PWR 3.0LG W/POSTS CU	P						
099	01	51906111	3	1		PC	CONN, 9 PIN PC 4TH GOLD FIG 3	P						
100	01	65832100	5	15		PC	SOCKET MINI SPRING	P						
101	01	95642805	6	500		FT	WIR SLD 24GA TINNED	W						
102	01	10125901	7	1		PC	WSHM NO.4 SPR LOCK STL CP	B						

BUILD ARC 210

### ASSEMBLY PARTS LIST

PRINT DATE 04-19-77 PAGE 6 FILE CHANGE NO. 00012170

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE	
0860		90460701		7	R	U	CD ASSY 6CVD-0 LOG MON		G	REL	12-15-76	CC555	04-19-77	
FOUND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION		MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
103	01	10125103	1	1		PC	NUT HEX MCH 4-40 STL CP OR ZP	B						
104	01	92780084	7	1		PC	MSCK PAN SLT 4-40X5/16 SST	B						
105	01	16006500	9	REF		PC	FABRICATION SPECIFICATION	D						
106	01	10121508	5	REF		PC	MARKING METHODS (SILK-SC+ETC)	D						
107	01	16019500	4	REF		PC	REQ/INSTALLATION OF EXT CKTS	D						
108	01	90460532	6	REF		PC	SCH DIAG 6A-D-0 NET LOG BASIC	D						
109	01	24500075	7	4		PC	RES COMP 3.3K OHM 1/4W 5P	P						
110	01	94375102	4	3		PC	RES RPIN NT-K 3.3K 3P 1/8W	P						
111	01	24500061	7	1		PC	RES COMP 820 OHM 1/4W 5P	P						
112	01	24500059	1	1		PC	RES COMP 680 OHM 1/4W 5P	P						
113	01	51892316	4	1		PC	IC 1024BIT 25FX4 RP-RUM ASSY	V						
114	01	94375109	9	1		PC	RES RPIN NT-K 1K 3P 1/8W	P						
115	01	52629949	0	1	500	FT	WIR 30GA SLD WHITE	W						
0120 TOTAL LINES														

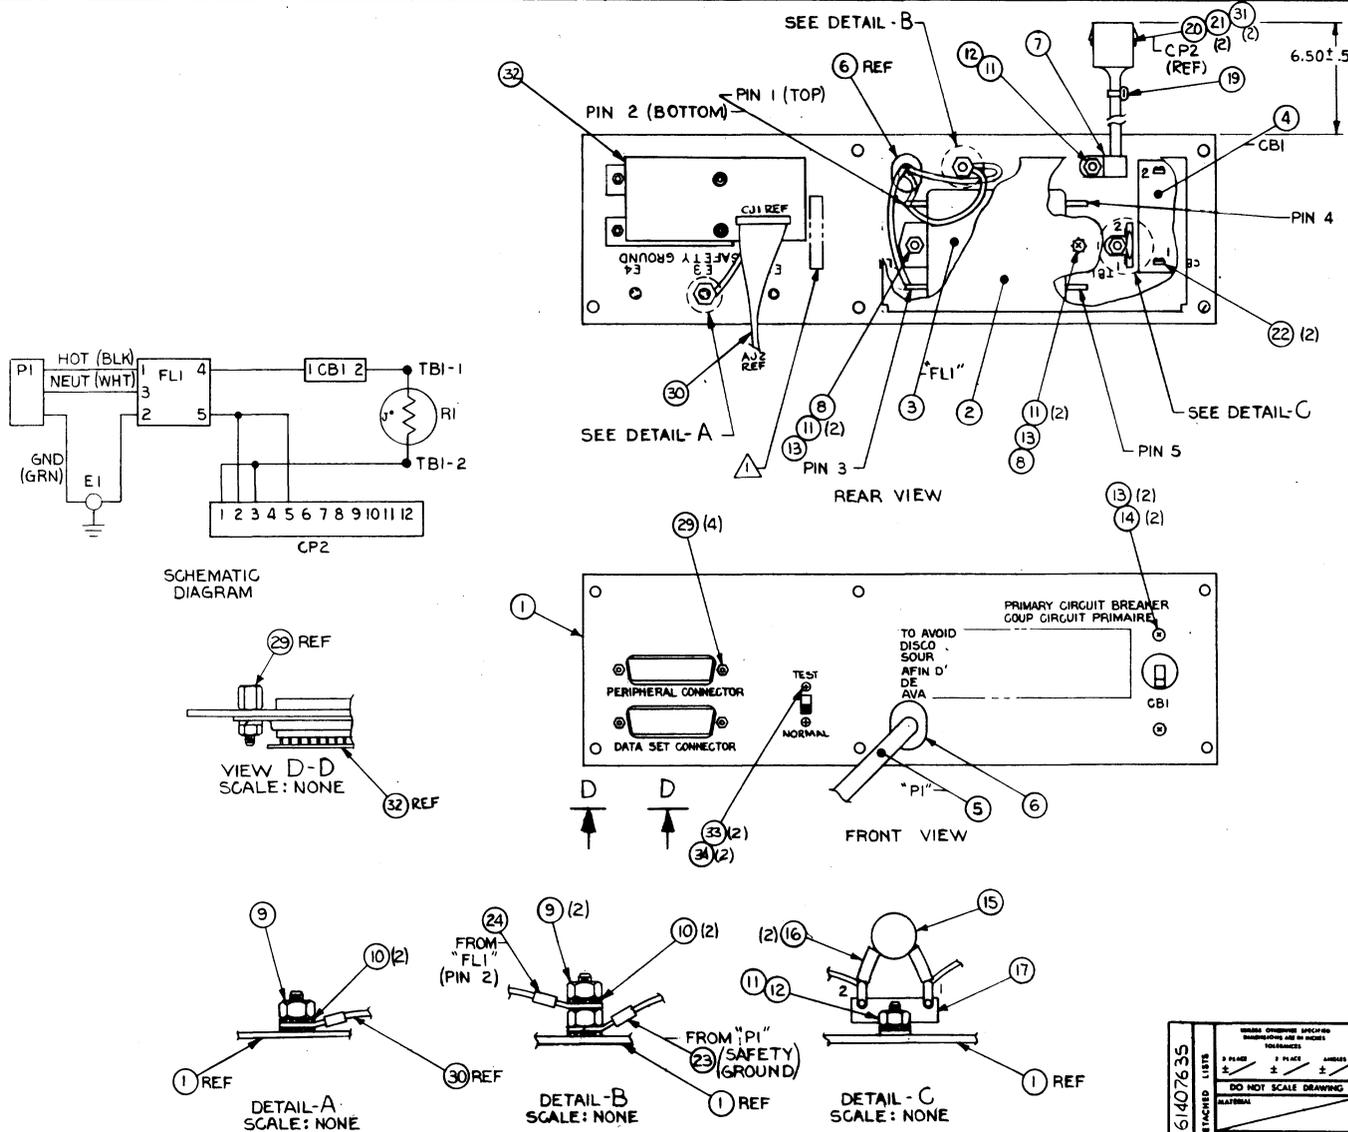

SHEET REVISION STATUS		REVISION RECORD				
REV	ECO	DESCRIPTION	DATE	CHKD	APP	
A	10/53/77	RELEASED CLASS A				

NOTES:

1. MARK "ASSY 61407635" IN AREA SHOWN PER CDC SPEC 10121508.

2. REFERENCE DESIGNATIONS ARE SHOWN FOR REF ONLY AND MAY NOT APPEAR ON PART.

APL 61407635 DETACHED LISTS	ISSUE ORIGINATOR SPECIFIED ORIGINATING OFFICE		FIRST ISSUE ON		CC555		TITLE	
	REVISIONS		DATE		BY		REAR PANEL ASSY 60 HZ	
	DO NOT SCALE DRAWING		DWN		L.S. / B.H.		CODE BSH	
	MATERIAL		ENGR		MFG		15920 D 61407635	
SCALE		APP		SCALE		RMA 156305A		

BUILD ARC 104

### ASSEMBLY PARTS LIST

PRINT DATE 12-22-76 PAGE 1 FILE CHANGE NO. 10653-77

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE				
0860	61407635	4	A	A	CABLE, INTENSITY	A	REL	12-15-76		12-21-76				
FOUND NO.	LI	PART NUMBER	CD	REV.	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	71492220	0		1		PC REAR PANEL 60HZ	P						
002	01	71491951	1		1		PC COVER AC ENTRY PANEL	P						
003	01	51899703	6		1		PC FILTER, RFI 5A 115-275V SLD	P						
004	01	95587003	5		1		PC CB S-P 65VDC 3AMP	P						
005	01	51899900	8		1		PC CORD, 3 WIRE PWR IUL 9FT GRA	P						
006	01	36158909	6		1		PC BUSHING, STRAIN-REL BLK NYL	R						
007	01	51776603	6		1		PC CLAMP, CRL (4) 3/16DIA NOM	B						
008	01	36053423	4		2		PC STANDOFF, HEX CFS 6-32X2.500	P						
009	01	10125108	0		3		PC NUT HEX MCH 1/4-32 STL CP OR Z	B						
010	01	10126403	4		4		PC WSHR NO.10 EXT TOOTH LK TYP A	R						
011	01	10126401	8		6		PC WSHR NO.6 EXT TOOTH LK TYP A	R						
012	01	10125105	6		2		PC NUT HEX MCH 6-32 STL CP OR ZP	R						
013	01	10127111	2		4		PC WSCR PAN PHL 4-32X1/4 (TYP I)	B						
014	01	10126103	0		2		PC WSHR NO.6 INTL TOOTH LOCK STL	R						
015	01	51908602	9		1		PC THMS. DISC 2.5 OHM 10P 14MW	P						
016	01	51797414	3		147		FT TRG, INS .066DIA T/W NAT TEF	R						
017	01	36085800	5		1		PC LUG TERMINAL STRIP	P						
018	01	01407630	5		REF		PC W/L REAR PNL 60HZ	D						
019	01	94277400	1		1		PC STRAP CABLE TIE TYPE 1	R						
020	01	51905405	9		1		PC CONN RECEPT 12 CONTACTS	P						
021	01	51906200	4		2		PC CONTACT, SKT 20-14GA STRIP T	P						

BUILD ARC 104


### ASSEMBLY PARTS LIST

PRINT DATE 12-22-76 PAGE 2 FILE CHANGE NO. 10653-77

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE				
0860	61407635	4	A	A	CABLE, INTENSITY	A	REL	12-15-76		12-21-76				
FOUND NO.	LI	PART NUMBER	CD	REV.	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
022	01	17973606	1		2		PC TERM CRIMP TYPE INSUL 17-12GA	P						
023	01	51797236	0		1		PC LUG, CRIMP R TERM 16-14GA 10SS	R						
024	01	51797217	0		1		PC LUG, CRIMP R TERM #22-18GA 10S	R						
025	01	24528617	4		500		FT TRG, INSUL NO.6 BLK UL PVC	R						
026	01	93464444	4		1917		FT WIR 16GA STRD YEL 300V UL PVC W	W						
027	01	93463444	5		500		FT WIR 18GA STRD YEL 300V UL PVC W	W						
028	01	93463555	8		250		FT WIR 18GA STRD GRN 300V UL PVC W	W						
029	01	9428924	6		4		PC LKG DEVICE, CONN TYP 4 #/TYP3	P						
030	01	61407631	3		1		PC CABLE ASSY REAR PNL MONITOR	A						
031	01	51906201	2		2		PC CONTACT, SKT 20-14GA STRIP T	P						
032	01	90460495	1		1		PC CD ASSY 6CTD-0	A						
033	01	10126101	4		2		PC INT TOOTH LK WSHR #4	R						
034	01	10127101	3		2		PC SCREW 4-40X.127	B						
							6034 TOTAL LINES							





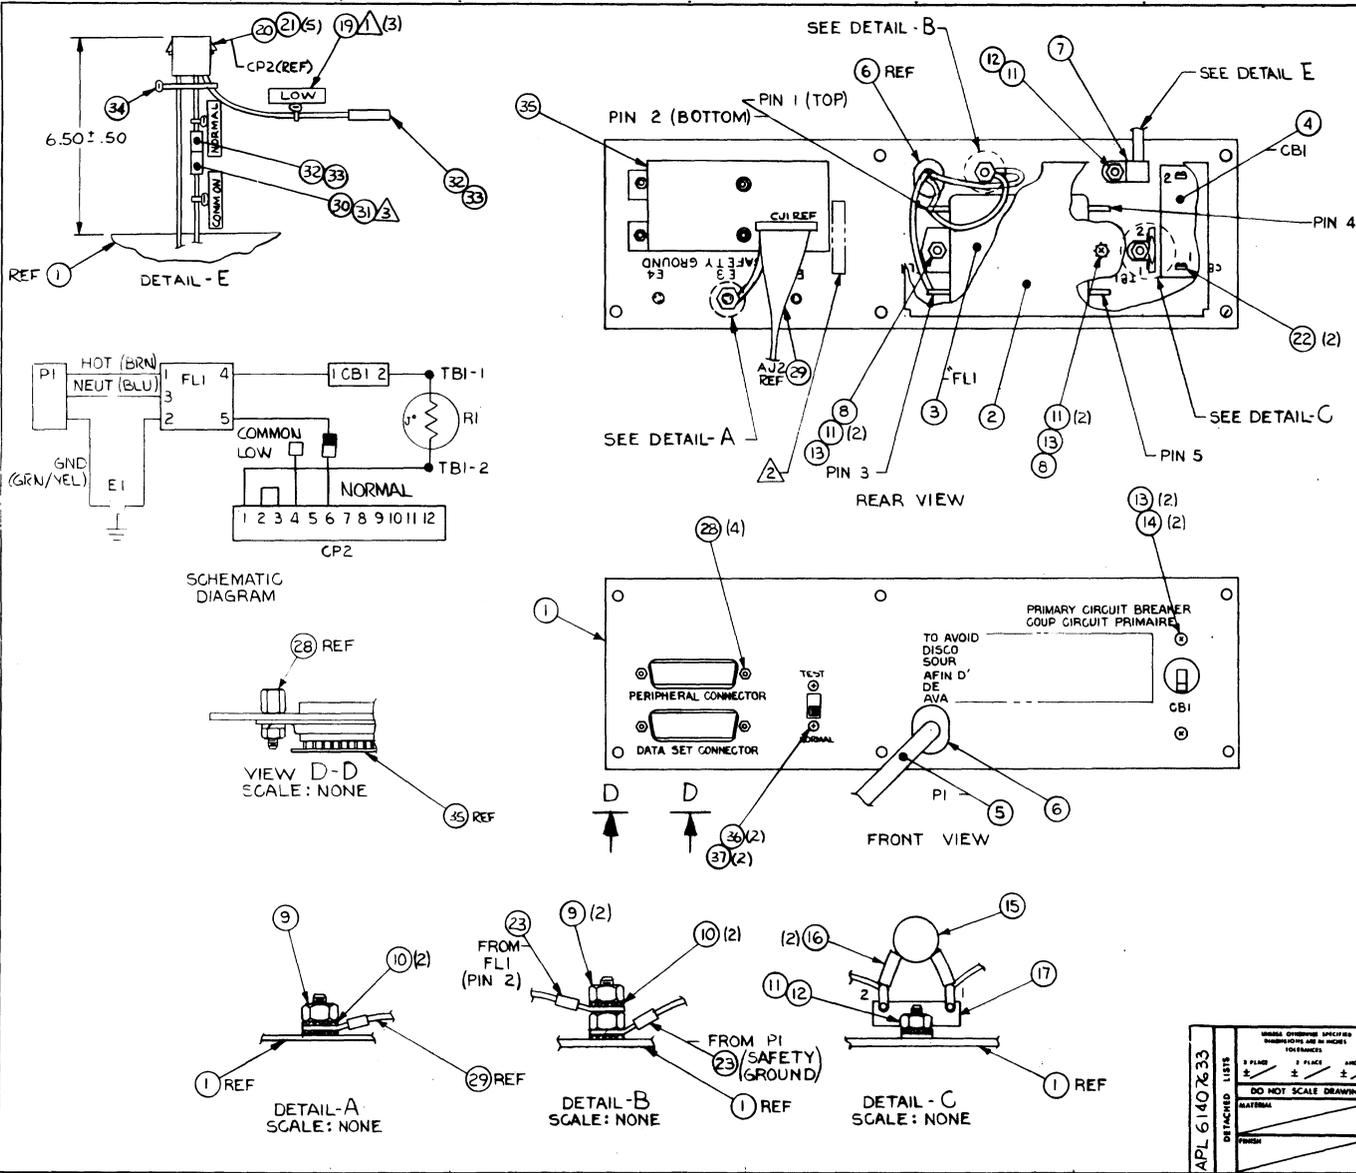

SHEET REVISION STATUS		REVISION RECORD					
REV	ECO	DESCRIPTION	DRFT	DATE	CHKD	APP	
A	15653-77	RELEASED CLASS					

- NOTES:**
- 1. APPLY LABEL TO CABLE PER DRAWING 82191061, METHOD 6. MARK AS SHOWN.
  - 2. MARK "ASSY 61407633" IN AREA SHOWN PER CDC SPEC 10121508.
  - 3. FACTORY SETTING COMMON LEADS TO NORMAL.
  - 4. REFERENCE DESIGNATIONS ARE SHOWN FOR REF ONLY AND MAY NOT APPEAR ON PART.

APL 61407633 DETACHED LISTS	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES		FIRST LABD ON		CCSSS		TITLE REAR PANEL ASSY 50 HZ	
	3 PLACE	2 PLACE	ANGLES	DRWN	12/14/74	CODE IDENT	15920	DRAWING NO 61407633
	DO NOT SCALE DRAWING			CHKD		EMGR		
				MFG		APPB		
			SCALE		NNA 1563053X		SHEET / OF /	

BUILD ARC 230

**ASSEMBLY PARTS LIST**

PRINT DATE	PAGE	FILE CHANGE NO.
12-27-76	1	10653-17

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860	61407633	Y	A	U	PANEL ASSY REAR 50HZ	A	REL	12-15-76		12-21-76			
FOUND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	71492221	H	1		PC REAR PNL 50HZ	P						
002	01	71491951	I	1		PC COVER AC ENTRY PANEL	P						
003	01	51899703	B	1		PC FILTER, RFI SA 115-275V SLD	P						
004	01	95587002	7	1		PC CB S-P 250VDC 2.0 AMP	P						
005	01	71446500	4	1		PC CBL ASSY (AC PWR) WIRE MPEP50HZ	G						
006	01	36158910	4	1		PC BUSHING, STRAIN-REL BLK NYL	B						
007	01	51776603	B	1		PC CLAMP, CBL (4) 3/16DIA NUM	B						
008	01	36053423	4	2		PC STANDOFF, HEX CFS 6-32X2.500	P						
009	01	10125100	U	3		PC NUT HEX MCH 10-32 STL CP OR Z	B						
010	01	10126403	4	4		PC WSHR NO.10 EXT TOOTH LK TYP A	B						
011	01	10126401	B	6		PC WSHR NO.6 EXT TOOTH LK TYP A	B						
012	01	10125105	B	2		PC NUT HEX MCH 6-32 STL CP OR CP	B						
013	01	10127111	2	4		PC MSCR PAN PHL 6-32X1/4 (TYP I)	B						
014	01	10126103	U	2		PC WSHR NO.6 INTL TOOTH LOCK STL	B						
015	01	51908602	Y	1		PC THMS, DISC 2.5 OHM 10M 14MM	P						
016	01	51797414	J	167		FT TBG, INS .066DIA T/W NAT TEF	B						
017	01	36085800	B	1		PC LUG TERMINAL STRIP	P						
018	01	61407632	I	REF		PC W/L REAR PNL	D						
019	01	94277409	Z	3		PC STRAP CABLE TIE TYPE 6	B						
020	01	51905905	Y	1		PC CONN RECPT 12 CONTACTS	P						
021	01	51906200	4	5		PC CONTACT, SKT 20-14GA ST-IP T	P						

BUILD ARC 230

**ASSEMBLY PARTS LIST**

PRINT DATE	PAGE	FILE CHANGE NO.
12-27-76	2	10653-17

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860	61407633	Y	A	U	PANEL ASSY REAR 50HZ	A	REL	12-15-76		12-21-76			
FOUND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
022	01	17973606	I	2		PC TERM CHIMP TYPE INSUL 1A-12GA	P						
023	01	51797217	U	2		PC LUG, CRMP R TERM #22-18GA 10S	B						
024	01	24528617	4	500		FT TBG, INSUL NO.6 BLK UL PVC	B						
025	01	93464444	4	250		FT WIR 16GA STRD YEL 300V UL PVC	W						
026	01	93463444	B	250		FT WIR 18GA STRD YEL 300V UL PVC	W						
027	01	93463555	B	250		FT WIR 18GA STRD GRN 300V UL PVC	W						
028	01	94288024	B	4		PC LKG DEVICE, CONN TYP 4 W/TYP3	P						
029	01	61407631	J	1		PC CABLE ASSY REAR PNL MOUNTOR	A						
030	01	93948009	I	1		PC CONNECTOR 1 PIN HOUSING	P						
031	01	62021406	4	1		PC CONTACT PIN 20-14 AWG 80ASS	P						
032	01	93947010	U	2		PC CONN 1 SKT HOUSING	P						
033	01	62021509	B	2		PC CONT SKT 20-14GA PB CBF STRIP	P						
034	01	94277400	I	1		PC STRAP CABLE TIE TYPE 1	B						
035	01	90460695	I	1		PC CD ASSY 6CTD-0	A						
036	01	10127101	J	2		PC SCREW 4-40X.187	B						
037	01	10126101	4	2		PC INT TOOTH LK WSHR #4	B						
						0037 TOTAL LINES							



DWN	TRAUTMAN	12-9-76	CONTROL DATA	TITLE	W/L REAR PANEL ASSY 50HZ	PREFIX	WL	DOCUMENT NO.	61407632	REV.	A
CHKD	<i>E. M. M...</i>	11/17/76		FIRST USED ON	CC55	NHA	61407633	SHEET	1 of 2		
ENG	<i>E. M. M...</i>	11/17/76									
MFG	<i>E. M. M...</i>	11/17/76									
APPR	<i>E. M. M...</i>	12-10-76	CODE IDENT	15920							

SHEET REVISION STATUS					REVISION RECORD						
REV	ECO	DESCRIPTION	DRFT	DATE	APP	REV	ECO	DESCRIPTION	DRFT	DATE	APP
		RELEASED CLASS "C"									
A	A	10653-77 RELEASED CLASS A		12/15/76	M.C.T.						

NOTES:


- For find no. identification see APL 61407633.
-  Common connected to normal for input voltage range of 216V to 266V. Common connected to low for input voltage range of 198V to 246V. Factory setting common connected to normal.

DETACHED LISTS

AA3180 REV. 8 71 PRINTED IN U.S.A.

CONTROL DATA					CODE IDENT	SHEET	WL	DOCUMENT NO.	REV.
					15920	2		61407632	A
CONDUCTOR IDENT.	FIND NO.	GAUGE (REF.)	COLOR (REF.)	LENGTH (APPROX)	ORIGIN	ACCESS FIND NO.	DESTINATION	ACCESS FIND NO.	REMARKS
1	5		1		P1		FL1	1 24	PWR CORD {HOT}
2	5		6		P1		FL1	3 24	PWR CORD {NEUT}
3	5		5/4		P1		E1	23	PWR CORD {GND}
4	25	16	4	3	FL1	4 24	CB1	1 22	HOT TO C.B.
5	25	16	4	3	CB1	2 22	TB1	1	HOT FROM C.B.
6	25	16	4	8	TB1	2	CP2	1 20,21	HOT FROM THERMISTOR
7	25	16	4	8	FL1	5 24	COMMON	30,31	NEUTRAL TO NORMAL/LOW JUMPER 
8	25	16	4	4	NORMAL	32,33	CP2	6 20,21	NEUTRAL {NORMAL JUMPER} 
9	25	16	4	4	LOW	32,33	CP2	4 20,21	NEUTRAL {LOW JUMPER} 
10	26	18	4	3	CP2	2 20,21	CP2	3 20,21	JUMPER
11	27	18	5	3	FL1	2 24	E1	23	GROUND

AA3183 REV. 8 71 PRINTED IN U.S.A.

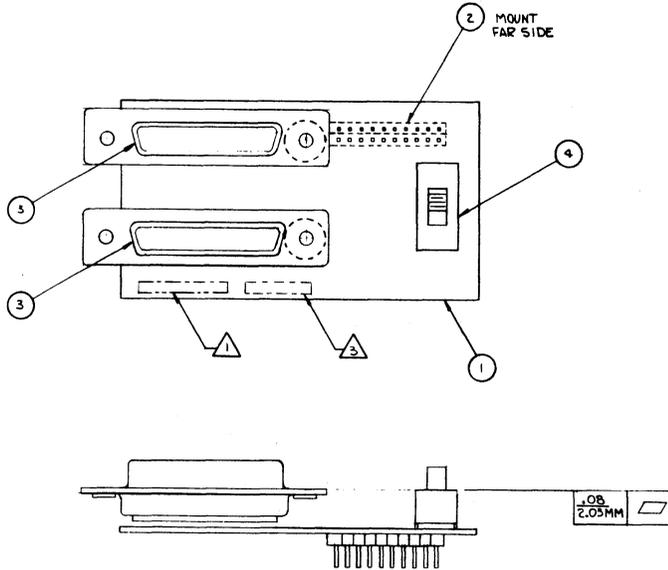

SHEET REVISION STATUS		REVISION RECORD				
REV	ECO	DESCRIPTION	DRPT	DATE	CHKD	APP
-	-	RELEASED CLASS 'C'	WJM	1122-76		
A	145377	RELEASED CLASS 'A'		11/5/76		

NOTES:

1. APPLY ASSY. NO, REV, LEVEL, AND LOC. CODE IN AREA SHOWN. MARK PER IDC SPEC 1012150B; CHARACTER HEIGHT .12 (12 PT) COLOR, WHITE.
2. REFERENCE DESIGNATIONS AND FIND NUMBERS ARE FOR REFERENCE ONLY AND DO NOT APPEAR ON PART.
3. MARK SERIAL NO. IN AREA SHOWN PER C' C STD. 1.01.025 AND CDC SPEC 10121-08 .12 HEIGHT, COLOR WHITE.

APL 90460695	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES		TOLERANCES		INSTR. 100		TITLE	
	FINISH	APPROV	DATE	CHKD	DATE	CHKD	DATE	15920
	DO NOT SCALE DRAWING	OWN	W. NEWMAN	1122-76	DRAWING NO		90460695	
	MATERIAL	CHKD	12/1/76	CODE IDENT		D		SCALE 2/1
DATE	12/1/76	PART		CC 555-A		SHEET		
12/1/76	12/1/76	LEAD IN		1122-76		1 OF 1		
12/1/76	12/1/76	DRAWN		W. NEWMAN		1122-76		
12/1/76	12/1/76	MFG		12/1/76		1122-76		
12/1/76	12/1/76	APP		12/1/76		1122-76		
12/1/76	12/1/76	MECH		12/1/76		1122-76		

BUILD ARC 210

### ASSEMBLY PARTS LIST

PRINT DATE 12-22-76 PAGE 1 FILE CHANGE NO. 10653-77

DIV.		ASSEMBLY NUMBER		REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE		
0860		90460695		1	D	CD ASSY ACTD-0		A	REL	12-15-76	CC555	12-21-76		
LINE NO.	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION		MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WE IN	WE OUT
001	01	90460694	4	1		PC PW RD 6CTD-0		P						
002	01	76379306	4	2		PC HEADFR, 10PIN STRAIGHT PCR		P						
003	01	53397014	2	2		PC CONN, FEM 25POSN PLUG ALONE		P						
004	01	51630010	0	1		PC SWITCH SLIDE		P						
005	01	62037500	6	24		PC CONTACT SOC P.C. ITT		P						
006	01	16006500	9	REF		PC FABRICATION SPECIFICATION		D						
007	01	90460693	6	REF		PC SCH DIAG 6CTD-0		D						
						0007 TOTAL LINES								



WUILD ARC 440

### ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO
05-04-76	1	10653-83

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE
0868		61A02100		A	A	U	KEYBOARD ASSY (80 KEY)		N	REL	02-13-76	CC501A-D	05-04-76
TPRD NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	71453200	4	1		PC BASE KEYBOARD		P					
002	01	71486900	5	1		PC COVER KEYBOARD		P					
003	01	51915401	7	1		PC KEYBOARD 80 KEY		P					
004	01	00860303	7	6		PC MSCR SELF-LK6 HEX HD 8-32X3/8	B						
005	01	10125605	5	10		PC WSHR NO.6 TYP A PLAIN STL CP	B						
006	01	00860304	5	4		PC MSCR SELF-LK6 HEX HD 8-32X1/2	B						
007	01	61370500	3	1		PC CABLE ASSY (KEYBOARD-EXTERNAL)	A						
008	01	24565003	1	1		PC CLAMP, 5/16 DIA CABLE BLK NYLO	B						
009	01	18607908	3	1		PC SCR, TP6 IND/HEX 8-18x1/2 STL	B						
010	01	51805801	1	4		PC BUMPER, RUBBER .300H 2LF-STK6	P						
							0010 TOTAL LINES						

DWN	D. Wells	10/1/74	CONTROL DATA	TITLE	PREFIX	DOCUMENT NO.	REV.
CHKD	<i>[Signature]</i>	10/4/74		CABLE ASSY KEYBOARD EXTERNAL	A	61370500	F
ENG	<i>[Signature]</i>	10/4/74		FIRST USED ON	NHA	61370100	SHEET 1 of 4
MFG	<i>[Signature]</i>	10/3/75	CODE IDENT	CC614/CC6B1			
APPR	<i>[Signature]</i>	10-30-75	15920				

SHEET REVISION STATUS				REVISION RECORD					
4	3	2	1	REV	ECO	DESCRIPTION	DRFT	DATE	APP
-						RELEASED CLASS "C"		10-14-74	<i>[Signature]</i>
-	01	01	01	01	C039	REVISED CONN VIEW ADDED COND IDENT NO. 18	<i>[Signature]</i>	11-8-74	<i>[Signature]</i>
02	02	02	02	02	C221	ADDED COND IDENT 19 ADDED F/N 11 & 12	<i>[Signature]</i>	3-27-75	<i>[Signature]</i>
A	A	A	A	A	10653-1	RELEASED CLASS A		7-24-75	<i>[Signature]</i>
A	B	A	B	B	10908	REVISED PER ECO	<i>[Signature]</i>	8/4/75	<i>[Signature]</i>
A	B	C	C	C	CD10952	ADDED DIM 5.00 ± .25	<i>[Signature]</i>	9/13/75	<i>[Signature]</i>
C	C	C	C	C	9401-15	ADD INT DIV LABEL		10/14/75	<i>[Signature]</i>
C	C	C	C	C	9401-16	ADD INT DIV LABEL AA5722		10/13/75	<i>[Signature]</i>
D	D	D	D	D	CD11438	REVISED PER ECO	<i>[Signature]</i>	4-2-76	<i>[Signature]</i>
D	D	E	E	E	CD11547	Revised per ECO	<i>[Signature]</i>	6/1/76	<i>[Signature]</i>
D	D	F	F	F	CD11616	REVISED PER ECO	J.M.	8-19-76	<i>[Signature]</i>

**INTERNAL DOCUMENT**


This document is subject to change without prior notice. Users will receive copy only of the revised document.

NOTES:

- ⚠ Bulk identify with CDC Part Number.
- ⚠ Put extra wires in F/N 12 and mount under cable tie as shown.
- ⚠ Tie wraps and screws included with connector hood.

APL 61370500  
 DETACHED LISTS

AA318C REV. 8 71 PRINTED IN U.S.A.

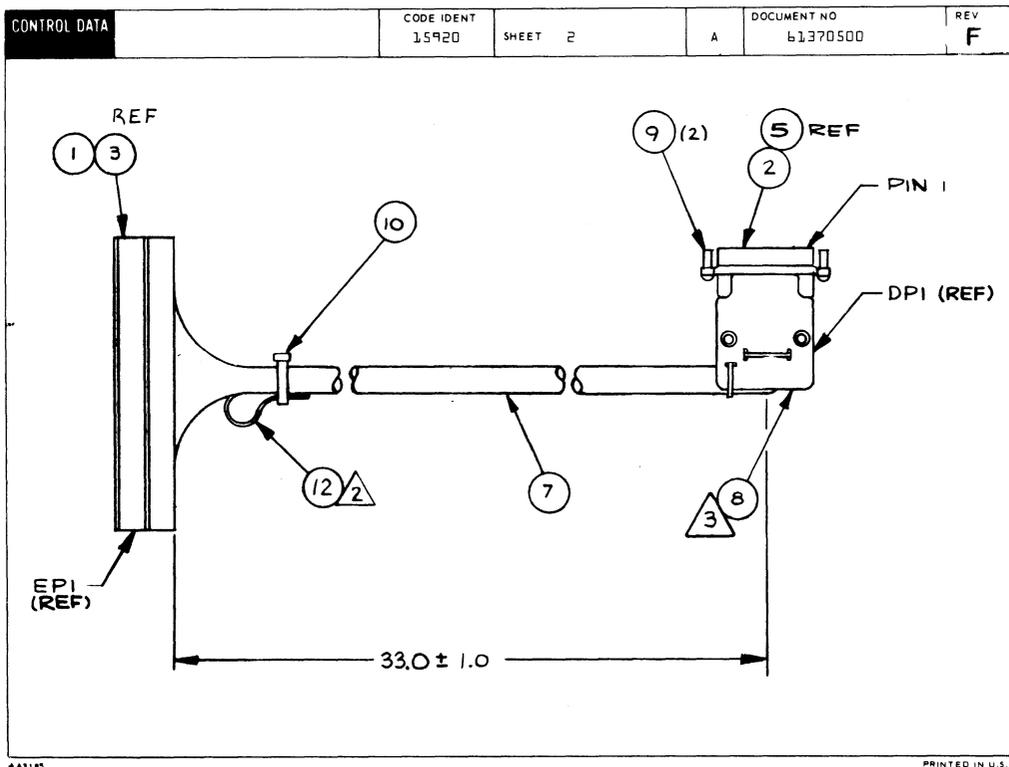





BUILD ARC 104

**ASSEMBLY PARTS LIST**


PRINT DATE	PAGE	FILE CHANGE NO.
08-10-76	1	00011516

DIV.		ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE		
0860		61370500	3	F	A	CABLE ASSY (KEYBOARD-EXTERNAL)	A	REL	04-24-75	LIAI	08-09-76		
TP/IND NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	51652907	0	1		PC CONN, PC EDGE 22 POS 3.488W	P						
002	01	53397814	4	1		PC CONN, MALE 25POSN PLUG ALONE	P						
003	01	94219902	7	22		PC CONTACT, FLAG 26-22AWG STRIP	P						
004	01	53397818	5	18		PC CONTACT, STRIP PINS 26-10GA	P			11438			7624
005	01	53397817	7	4		PC CONTACT, STRIP PINS 20-24GA	P			11438			7624
005	02	53397817	7	22		PC CONTACT, STRIP PINS 20-24GA	P		11438			7624	
006	01	94277409	2	3		PC STRAP CABLE TIE TYPE 6	P			11547			7621
007	01	51908500	5	3		FT CBL, SMLD FIG 1 25 CNUCY 300V	W						
008	01	51908402	4	1		PC CONN HOOD, .430/.390 CBL DIA	P						
009	01	94288021	2	2		PC LKG DEVICE, CONNECTOR TYP 3M	P						
010	01	94277400	1	2		PC STRAP CABLE TIE TYPE 1	P			11547A	11547A		7621
010	02	94277400	1	5		PC STRAP CABLE TIE TYPE 1	P		11547A	11616		7621	7633
010	03	94277400	1	1		PC STRAP CABLE TIE TYPE 1	P		11616			7633	
011	01	24528610	9	300		FT TUBING INS SZ 13 BLACK	B						
012	01	51758103	9	250		FT INS SIV+CLR, PVC HEAT SHRINK	B						
						0015 TOTAL LINES							

7-64

62957400 A

SHEET REVISION STATUS		REVISION RECORD					
REV	ECO	DESCRIPTION	DEPT	DATE	CHKD	APP	
A	1065360	RELEASED CLASS A		7-31-76			

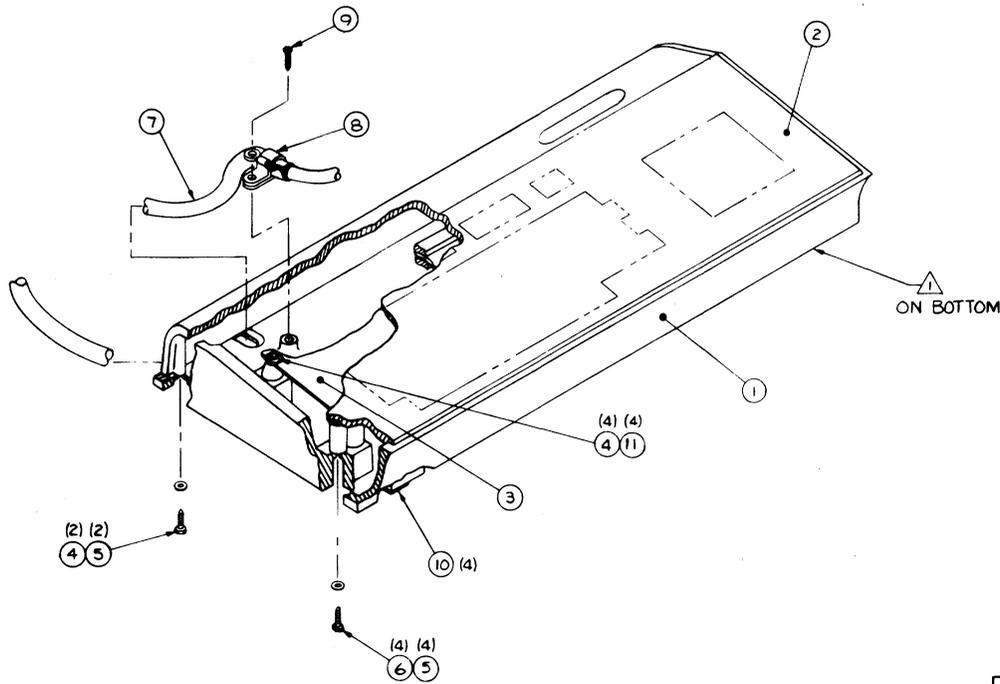

NOTES:  
 ▲ MARK ASSY 61407539 PER CDC SPEC 1012150B.

APL 61407539 DETACHED LISTS	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES		CONTROL DATA		TITLE	
	TOLERANCES		PART NUMBER	CC5B2B	KEYBOARD ASSEMBLY 80 KEY (SHIELDED)	
	FINISH		DATE	7-14-76	CODE IDENT	15920
	DRIVEN BY	D. WELLS	DRAWING NO.	0	61407539	
DO NOT SCALE DRAWING	CHECKED BY	ENGINEER	APPROVED	APPROVED	SCALE	NHA 15621921 SHEET / OF /
MATERIAL	APPROVED	APPROVED	APPROVED	APPROVED	SCALE	


BUILD ARC 440

### ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
08-04-76	1	10653-60

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE		ENG. RESP.		FILE DATE	
0860		61407530		A		D	KEYBOARD ASSY ROKEY (SHIELD)		N	REL	07-30-76		CC5028		08-04-76	
ITEM NO	LI	PART NUMBER		CD	QUANTITY	U/M	PART DESCRIPTION		MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT	
001	01	71491940	4		1		PC BASE KYBD SHIELDED		P							
002	01	71492009	7		1		PC COVER KEYBOARD MET(SHIELDED)		P							
003	01	51915401	7		1		PC KEYBOARD 80 KEY		P							
004	01	00860303	7		6		PC MSCR SELF-LKG HEX HD 6-32X3/8		B							
005	01	10125605	5		6		PC WSHR NO.6 TYP A PLAIN STL CP		B							
006	01	00860304	5		4		PC MSCR SELF-LKG HEX HD 6-32X1/2		B							
007	01	61407510	0		1		PC CABLE ASSY KEYBOARD EXTERNAL		A							
008	01	51917070	8		1		PC CLAMP TUBE		P							
009	01	10667908	3		1		PC SCR, TP8 IND/HEX 8-10X1/2 STL		B							
010	01	51805001	1		4		PC BUMPER RUBBER .300H SLP-STKS		P							
011	01	09040202	5		4		PC WASHER LOCK DISHED TOOTH NO.6		B							
0011 TOTAL LINES																



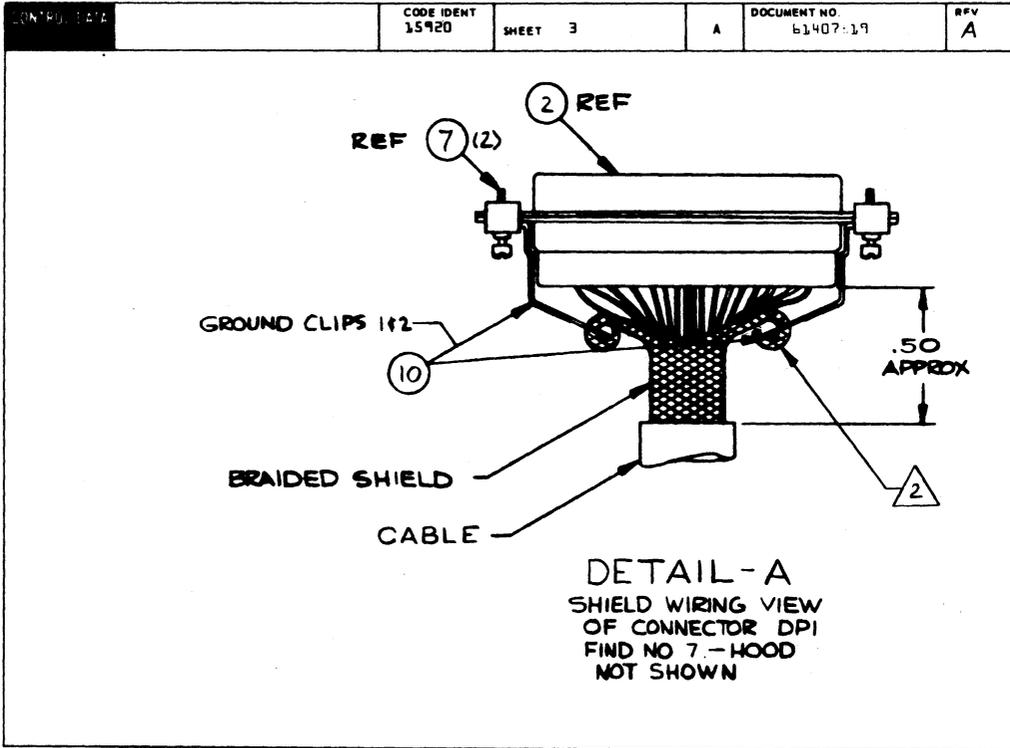

AA3195

PRINTED IN U.S.A.




BUILD ARC 104

### ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
08-05-76	1	10683-60

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE			
0860	61607519	0	A	A	CABLE ASSY KEYBOARD EXTERNAL	A	RFL	07-28-76	CC681D	08-05-76			
TP/IMP NO	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	51652907	0	1		PC CONN, PC EDGE 22 POS 3.988W	P						
002	01	53397814	4	1		PC CONN, MALE 25POSN PLUG ALONE	P						
003	01	94219902	7	22		PC CONTACT, FLAG 26-22AWG STRIP	P						
004	01	53397817	7	22		PC CONTACT, STRIP PINS 20-24GA	P						
005	01	51908501	3	3		FT CBL, SHLD FIG 2 25 CNCT 300V	W						
006	01	51908402	4	1		PC CONN HOOD, .430/.390 CBL DIA	P						
007	01	94288021	2	2		PC LKG DEVICE, CONNECTOR TYP 3M	P						
008	01	94277400	1	2		PC STRAP CABLE TIE TYPE 1	P						
009	01	51758103	9	250		FT INS SLV+CLR,PVC HEAT SHRINK	B						
010	01	71491967	7	2		PC CLIP, GROUND (COPPER/TIN PL)	P						
011	01	51797259	2	1		PC LUG, CRMP R TERM 12-10GA RES	B						
						0011 TOTAL LINES							

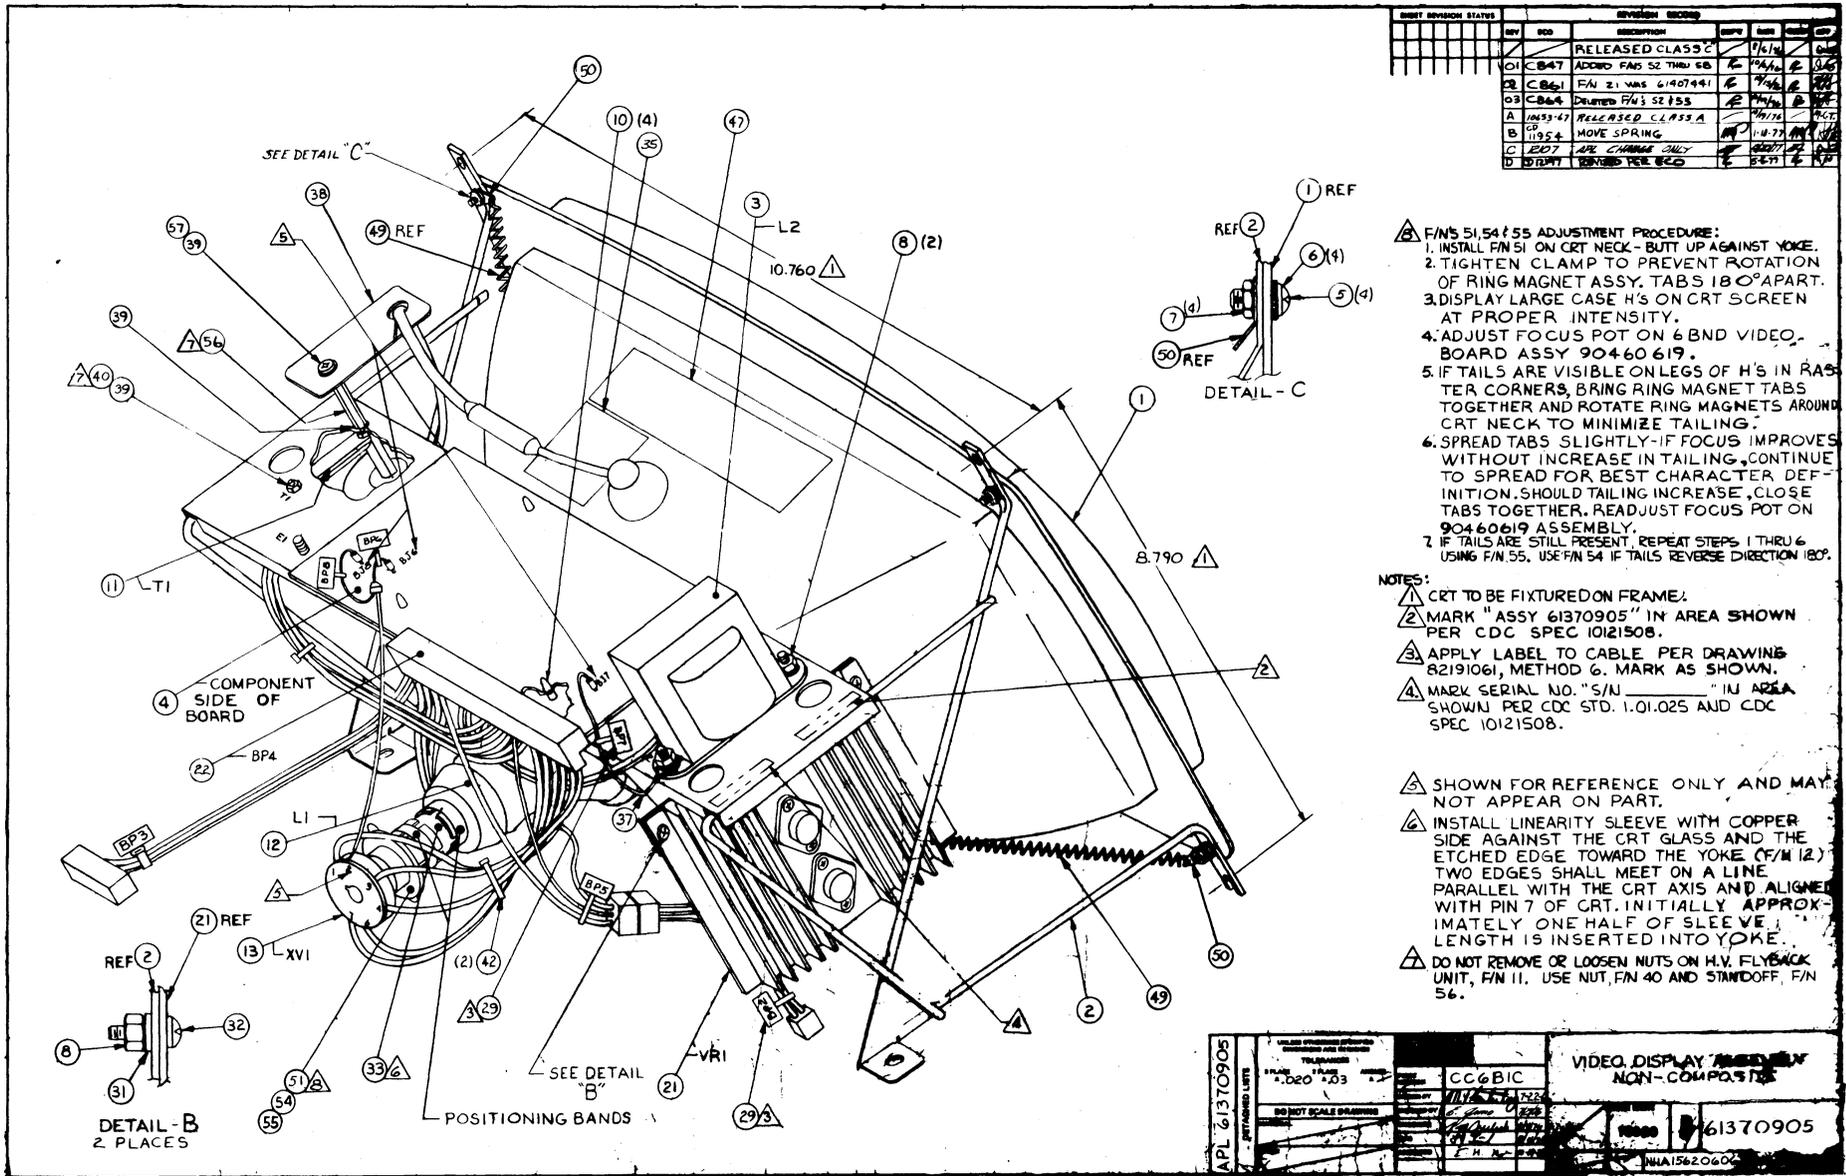

REVISED REVISION STATUS		REVISION RECORD			
REV	NO	DESCRIPTION	DATE	BY	CHK
		RELEASED CLASS 2	1/1/74		
01	C 847	ADDED FAS 52 THRU 60	1/1/74		
02	C 841	FAN 2, WMS 6107441	1/1/74		
03	C 846	DELIVERED FAS 52 155	1/1/74		
A	11953-47	RELEASED CLASS A	1/1/74		
B	11954	MOVE SPRING	1/1/74		
C	12077	ARE CHANGE ONLY	1/1/74		
D	12078	REMOVED PER ECG	1/1/74		

- F/N 51, 54 & 55 ADJUSTMENT PROCEDURE:**
1. INSTALL F/N 51 ON CRT NECK - BUTT UP AGAINST YOKE.
  2. TIGHTEN CLAMP TO PREVENT ROTATION OF RING MAGNET ASSY. TABS 180° APART.
  3. DISPLAY LARGE CASE H'S ON CRT SCREEN AT PROPER INTENSITY.
  4. ADJUST FOCUS POT ON 6 BND VIDEO BOARD ASSY 90460619.
  5. IF TAILS ARE VISIBLE ON LEGS OF H'S IN RASTER CORNERS, BRING RING MAGNET TABS TOGETHER AND ROTATE RING MAGNETS AROUND CRT NECK TO MINIMIZE TAILING.
  6. SPREAD TABS SLIGHTLY - IF FOCUS IMPROVES WITHOUT INCREASE IN TAILING, CONTINUE TO SPREAD FOR BEST CHARACTER DEFINITION. SHOULD TAILING INCREASE, CLOSE TABS TOGETHER. READJUST FOCUS POT ON 90460619 ASSEMBLY.
  7. IF TAILS ARE STILL PRESENT, REPEAT STEPS 1 THRU 6 USING F/N 55. USE F/N 54 IF TAILS REVERSE DIRECTION 180°.

## NOTES:

1. CRT TO BE FIXTURED ON FRAME.
2. MARK "ASSY 61370905" IN AREA SHOWN PER CDC SPEC 10121508.
3. APPLY LABEL TO CABLE PER DRAWING 82191061, METHOD G. MARK AS SHOWN.
4. MARK SERIAL NO. "S/N" IN AREA SHOWN PER CDC STD. 1.01.025 AND CDC SPEC 10121508.
5. SHOWN FOR REFERENCE ONLY AND MAY NOT APPEAR ON PART.
6. INSTALL LINEARITY SLEEVE WITH COPPER SIDE AGAINST THE CRT GLASS AND THE ETCHED EDGE TOWARD THE YOKE (F/N 12). TWO EDGES SHALL MEET ON A LINE PARALLEL WITH THE CRT AXIS AND ALIGNED WITH PIN 7 OF CRT. INITIALLY APPROXIMATELY ONE HALF OF SLEEVE LENGTH IS INSERTED INTO YOKE.
7. DO NOT REMOVE OR LOOSEN NUTS ON H.V. FLYBACK UNIT, F/N 11. USE NUT, F/N 40 AND STANDOFF, F/N 56.

APL 61370905	ISSUED FOR THE USE OF THE USER	CC6BIC	VIDEO DISPLAY ASSEMBLY NON-COMPACT
ISSUED DATE	TOLERANCE	DATE	61370905
ISSUED BY	SCALE	BY	
ISSUED FOR	DO NOT SCALE DRAWING	CHKD	
ISSUED TO		APP'D	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	
ISSUED BY		BY	
ISSUED FOR		DATE	
ISSUED TO		BY	
ISSUED BY		DATE	
ISSUED FOR		BY	
ISSUED TO		DATE	

BUILD ARC 440

**ASSEMBLY PARTS LIST**

PRINT DATE 04-18-77 PAGE 1 FILE NUMBER 0012197

QTY	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE		
0860			VIDEO DISPLAY ASSY	0	REL	10-19-76	CC681C	04-18-77		
QTY	REV.	DWG.	DESCRIPTION	MC	STATUS	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	51907303	5 1 PC CRT 12IN PHOS P4 GLOSS-MIN 60	P						
002	01	71456300	4 1 PC FRAME VIDEO DISPLAY	P						
003	01	61407419	3 1 PC CHOKE ASSY	A						
004	01	90460619	1 1 PC CD ASSY 68ND-0 (N/COMP VIDEO)	A						
005	01	10127122	9 4 PC SCREW MACH 8-32 X 3/8 PAN HD	B						
006	01	10126402	6 4 PC WSHR NO.8 EXT TOOTH LK TYP A	B						
007	01	10122902	9 4 PC NUT TWIN SELF LOCKING 8-32	B						
008	01	10122901	1 4 PC NUT TWIN SELF LOCKING 6-32	B						
010	01	51777314	9 1 PC SPRT, CKT BD 3/16 NYL FIG 2	P		12197	12197		7717	7717
010	02	51777314	9 4 PC SPRT, CKT BD 3/16 NYL FIG 2	P						
011	01	61407417	7 1 PC REPLACED BY 61407695 12107	A						
011	02	61407695	8 1 PC HIGH VOLTAGE TRANSFORMER ASSY	A		12107	12107		7715	7715
012	01	61407418	5 1 PC YOKE ASSY	A						
013	01	61407540	6 1 PC CRT CAP ASSY	A						
021	01	61407617	2 1 PC REGULATOR ASSY +14V	A						
022	01	61407420	1 1 PC CABLE ASSY VIDEO DISPLAY	A						
028	01	61378200	2 REF PC W/L VIDEO DISPLAY	D						
029	01	94277409	2 2 PC STRAP CABLE TIE TYPE 6	B						
030	01	16035100	3 REF PC RASTER SCAN CRT DISPLAY	D						
031	01	10125605	5 2 PC WSHR NO.6 TYP A PLAIN STL CP	B						
032	01	10127113	8 2 PC WSKN PAN PHL 6-32x3/8 (TYP I)	B						
033	01	71468100	4 1 PC SLEEVE LINEARITY CONTROL	B						


BUILD ARC 440

**ASSEMBLY PARTS LIST**

PRINT DATE 04-18-77 PAGE 2 FILE NUMBER 0012197

QTY	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE		
0860			VIDEO DISPLAY ASSY	0	REL	10-19-76	CC681C	04-18-77		
QTY	REV.	DWG.	DESCRIPTION	MC	STATUS	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
035	01	51916874	4 1 PC PLATE, DANGER VINYL WHT/RED	P						
037	01	61391108	0 1 PC GND WIRE ASSY 5.0 20GA SOCKET	A		11954	11954		7707	7707
037	02	61391111	4 1 PC GND WIRE ASSY 3.0 20GA SKT	A						
038	01	71492087	3 1 PC INSULATOR, MOD PAPER UL	P						
039	01	10126101	4 3 PC INT TOOTH LK WSHR #4	B						
040	01	10125103	1 1 PC NUT HEX MCH 4-40 STL CP OR ZP	B						
042	01	94277400	1 2 PC STRAP CABLE TIE TYPE 1	B						
047	01	71479201	7 1 PC LABEL, MON ADJ W/INTENSITY	P						
049	01	71491984	2 1 PC SPRING-EXT CRT GROUND	P						
050	01	51817102	0 1 PC LUG, R SLD TERM NO 4 FIG 1	B		11954	11954		7707	7707
050	02	51817102	0 2 PC LUG, R SLD TERM NO 4 FIG 1	B						
051	01	51917060	9 500 PC MAGNET, RING 10GAUSS YOKE/CRT	P						
054	01	51917061	7 150 PC MAGNET, RING 14GAUSS YOKE/CRT	P						
055	01	51917062	5 350 PC MAGNET, RING 18GAUSS YOKE/CRT	P						
056	01	51673824	2 1 PC SPACFR, HEX ALUM 4-40x1.250	P						
057	01	10127104	7 1 PC SCREW PAN HD 4-40x3/8 STEEL	B						
058	01	62200937	1 REF PC SCHEMATIC, VIDEO DISPLAY	D						
0039 TOTAL LINES										

7-72

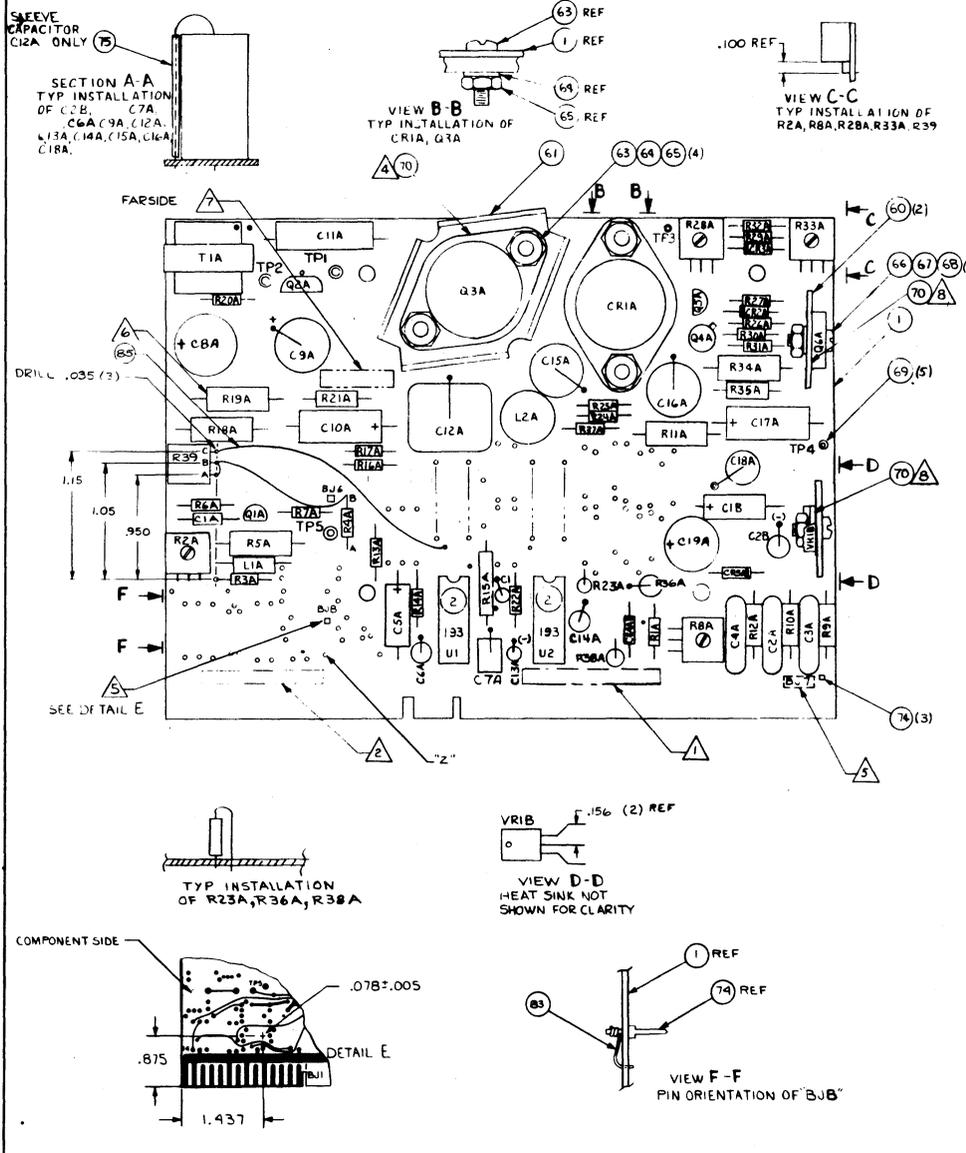

FIND NO	REFERENCE DESIGNATION
3	R1A
4	R2A
5	R3A, R8A
6	R28A
7	R5A
8	R7A
9	R8A
10	R8A, R12A
11	R10A
12	R11A
13	R13A
14	R14A
15	R15A
16	R16A, R17A
17	R18A
18	R19A
19	R20A
20	R21A
21	R22A, R23A
22	R26A
23	R27A
24	R28A
25	R30A
26	R31A, R32A
27	R33A
28	R34A
29	R35A
30	R36A
31	R24A, R25A
32	C1A
33	C2A, C3A, C4A
34	C5A
35	C6A, C14A
36	C8A
37	C9A
38	C10A
39	C11A
40	C12A
41	C13A
42	C15A, C16A
43	C17A
44	C18A
45	C19A
46	R37A
47	C18, C20
48	C21A
49	R22A, R23A
50	C24A, C25A
51	C1A
52	C2A
53	C3A
54	C4A
55	C5A
56	C6A
57	T1A
58	L1A
59	L2A
62	VR1B
76	R38A
77	C7A
79	C1
80	R4A
81	R39

CHANGE TABLE	
DELETIONS	ADDITIONS
1. CUT FOIL AT R24-B TO FEED-THRU (CS).	1. DRILL HOLE SEE DETAIL E FOR SIZE AND MEASUREMENT.
	2. ADD PIN AND WIRE. SEE VIEW F FOR ORIENTATION. WRAP 2 TURNS OF F/N83 AROUND F/N74. INSERT OTHER END F/N83 IN FEED-THRU ABOVE PIN 5, BU(55). HOLE MARKED "2" 3) DRILL (3) .035 HOLES IN AREA SHOWN.
	ADD WIRE: 1) R39-A4 B TO R24-B 2) R39-C TO BUJ-21

- NOTES:
- APPLY ASSY. NO. REV LEVEL AND LOC CODE IN AREA SHOWN. MARK PER CDC SPEC. 10121508. CHARACTER HEIGHT .12 (12PT) COLOR WHITE.
  - SERIAL NO. PER CDC STD. 1-01-025. APPLY SER. NO. "24" IN AREA SHOWN. HEIGHT .12 (12PT) COLOR WHITE.
  - FIND NUMBERS, REFERENCE DESIGNATIONS AND EQUIPMENT IDENTIFIERS ARE FOR REFERENCE ONLY AND DO NOT APPEAR ON PART.
  - APPLY HEAT TRANSFER COMPOUND FIND NO. (70) BETWEEN Q3A FIND NO. (53) AND HEAT SINK FIND NO. (63) AS REQUIRED.
  - APPLY BUJ8-BUB IN AREA SHOWN. MARK PER CDC SPEC. 10121508. CHARACTER HEIGHT .12 (12 PT.) COLOR WHITE.
  - R18A (FIND NO. 18) TO BE MOUNTED SO THAT A MINIMUM OF .25 INCH AIR SPACE EXISTS BETWEEN RESISTOR AND CIRCUIT BOARD.
  - APPLY CARD TYPE "6BND-C" IN AREA SHOWN. PER CDC SPEC 10121508 CHARACTER HEIGHT .12 (12 PT.) COLOR WHITE.
  - APPLY HEAT TRANSFER COMPOUND FIND NO. (70) BETWEEN VR1B FIND NO. (82) AND HEAT SINK FIND NO. (83). NOTE: COMPOUND IS APPLIED TO SIDE OF SINK WHICH IS OPPOSITE TO SIDE SHOWING MANUFACTURER'S NUMBER.
  - REWORK PER CDC SPEC 16019 500.
  - APPLY F/N (82) BETWEEN F/N(81) AND F/N(81).

REV	QCD	DESCRIPTION	REVISION	
			DATE	BY
1		RELEASED CLASS C	9-2-72	W. J. N.
A	10653-47	RELEASED CLASS A	9-9-72	W. J. N.
B	ED1747	PC CHANGE ONLY	10-26-72	DA

TITLE <b>PC CARD ASSY 6BND-C (COMPOSITE VIDEO)</b>		PART NO. <b>90460619</b>
DRAWN BY M. TAUER 5/19-72		CHECKED BY J. J. N. 5/19-72
DO NOT SCALE DRAWING		DATE 5/19/72
TOLERANCES UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES		SCALE 10:1

62957400 A

BUILD ARC 210

**ASSEMBLY PARTS LIST**

PRINT DATE 12-07-76 PAGE 1 FILE CHANGE NO. 0011747A

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION			MC	STATUS	STATUS DATE		ENG. RESP.	FILE DATE	
0860		90460619		1	B	U	CD ASSY 6BND-0 (N/COMP VIEWED)			A	REL	10-19-76		QSE19502	12-07-76	
ITEM NO.	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION				MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	90421300	6	1		PC	PW	RD	TV	MON	MULTI-USE	P				
002	01	50254300	2	2		PC	IC	74123	193	TYL	2	RETOR	MVB	P		
003	01	17705916	9	1		PC	RES	FXD	COMP	0.15	MEG	.75W	5P	P		
004	01	51785502	9	1		PC	RES	VAR	MINAT	200	OHM	.5W		P		
005	01	24500031	0	2		PC	RES	FXD	COMP	47	OHM	1/4W	5P	P		
006	01	24500079	9	1		PC	RES	COMP	4.7K	OHM	1/4W	5P	P			
007	01	24507161	8	1		PC	RES	FXD	COMP	820	OHM	1W	5P	P		
008	01	24500047	6	1		PC	RES	COMP	220	OHM	1/4W	5P	P			
009	01	51785513	6	1		PC	RES	VAR	MINAT	2	MEG	OHMS	.5W	P		
010	01	17720504	4	2		PC	RES	FXD	COMP	47000	OHM	.5W	5P	P		
011	01	24500163	1	1		PC	RES	FXD	COMP	1K0HM	1/2W	5P		P		
012	01	24507106	3	1		PC	RES	FXD	COMP	16	OHM	1W	5P	P		
013	01	24500063	3	1		PC	RES	COMP	1K	OHM	1/4W	5P		P		
014	01	17705902	9	1		PC	RES	FXD	COMP	39K	OHM	.25W	5P	P		
015	01	94360384	5	1		PC	RES	FXD	FILM	7500	OHM	1/4W	1P	P		
016	01	24500054	2	2		PC	RES	COMP	430	OHM	1/4W	5P		P		
017	01	24565717	6	1		PC	RES	FXD	WW	1.20HMS	2W	5P		P		
018	01	24538225	4	1		PC	RES	FXD	WW	820HM	3W	5P		P		
019	01	24500073	2	1		PC	RES	COMP	2.7K	OHM	1/4W	5P		P		
020	01	24500103	7	1		PC	RES	FXD	COMP	3.3	OHMS	1/2W	5P	P		
021	01	17705904	5	2		PC	RES	FXD	COMP	47K	OHM	.25W	5P	P		

BUILD ARC 210

**ASSEMBLY PARTS LIST**

PRINT DATE 12-07-76 PAGE 2 FILE CHANGE NO. 0011747A

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION			MC	STATUS	STATUS DATE		ENG. RESP.	FILE DATE	
0860		90460619		1	B	U	CD ASSY 6BND-0 (N/COMP VIEWED)			A	REL	10-19-76		QSE19502	12-07-76	
ITEM NO.	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION				MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
022	01	24500070	8	1		PC	RES	COMP	2K	OHM	1/4W	5P		P		
023	01	24500056	7	1		PC	RES	COMP	510	OHM	1/4W	5P		P		
024	01	51785506	0	1		PC	RES	VAR	MINAT	10K	OHMS	.5W		P		
025	01	17705915	1	1		PC	RES	FXD	COMP	0.13	MEG	.75W	5P	P		
026	01	24500043	5	2		PC	RES	COMP	150	OHM	1/4W	5P		P		
027	01	51785500	3	1		PC	RES	VAR	MINAT	100	OHM	.5W		P		
028	01	24507152	7	1		PC	RES	FXD	COMP	5.6	OHM	1W	5P	P		
029	01	24500153	2	1		PC	RES	FXD	COMP	3900HM	1/2W	5P		P		
030	01	24507183	2	1		PC	RES	FXD	COMP	4.8K	OHM	1W	5P	P		
031	01	24500071	6	2		PC	RES	COMP	2.2K	OHM	1/4W	5P		P		
032	01	24501769	4	1		PC	CAP	FXD	CER	150PF	20P	100VDCW		P		
033	01	51908000	6	3		PC	CAP	.01UF	20P	1500V	SPARK	GAP		P		
034	01	24504363	3	1		PC	CAP	FXD	TANT	4.7UF	20P	15VDCW		P		
035	01	24506807	7	2		PC	CAP	FXD	MYL	.01UF	10P	100VDCW		P		
036	01	95691133	3	1		PC	CAP	ELECT	270UF	25V	-10+100P			P		
037	01	51868700	9	1		PC	CAP	FXD	50UF	-10+75P	50VDCW			P		
038	01	24505275	8	1		PC	CAP	FXD	TANT	150UF	10P	6VDCW		P		
039	01	24506835	8	1		PC	CAP	FXD	MYL	.033	MFD	400V	10P	P		
040	01	36137146	1	1		PC	CAP	FXD	MYL	10UF	10P	100VDC		P		
041	01	24504361	7	1		PC	CAP	FXD	TANT	2.2UF	20P	15VDCW		P		
042	01	24506817	6	2		PC	CAP	FXD	MYL	.47UF	10P	100VDCW		P		

BUILD ARC 210

**ASSEMBLY PARTS LIST**

BUILD ARC 210										PRINT DATE		PAGE		FILE CHANGE NO.	
0860										12-07-76		3		0011747A	
DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE					
0860	90460619	1	B	D	CD ASSY 68ND-0 (N/COMP VIDEO)	A	REL	10-19-76	QSE19502	12-07-76					
TP/IND NO	LI	PART NUMBER	CD	REV.	QUANTITY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT	
043	01	51879110	8		1		PC CAP FXD TANT 470UF 10P 6VDCW	P							
044	01	36180733	2		1		PC CAP MYL 0.33 MFD 400V9C 20P	P							
045	01	95691153	1		1		PC CAP ELECT 68UF 60V -10+100P	P							
046	01	24500091	4		1		PC RES COMP 15K OHM 1/4W 5P	P							
047	01	24504333	6		2		PC CAP FXD TANT 2.2UF 20P 35VDCW	P							
048	01	51908200	2		1		PC DIO GERMN HI VOLT 320V 7A	P							
049	01	51001239	6		2		PC DIO SWITCHING SIL 1N3064	P							
050	01	95637305	4		2		PC DIO SIL 1N4005 600PIV 1,1V/1A	P							
051	01	51907600	4		1		PC XSTR TO-92 NPN SIL PLASTIC	P							
052	01	51908100	4		1		PC XSTR SI NPN	P							
053	01	51907100	5		1		PC XSTR TO-3 GERMN POWER PNP	P							
054	01	51003059	6		1		PC XSTR DD1 106 EPITAX NPN SIL	P							
055	01	51906900	9		1		PC XSTR TO-92 NPN SIL	P							
056	01	95590500	5		1		PC XSTR POWER NPN SIL	P							
057	01	51907900	8		1		PC XFMR, STEP-DOWN 5/1 10V 15MA	P							
058	01	94233926	8		1		PC INDUCTOR 15MICRO HEN	P							
059	01	51907500	6		1		PC COIL VAR 7-42MICRO HEN	P							
060	01	51906602	1		2		PC HT SINK, SEMI FIG 3 ALUM BLK	P							
061	01	51911000	1		1		PC HEAT SINK	P							
062	01	15151500	4		1		PC IC U47800+5 357A POS V RGLTR	P							
063	01	92780162	1		4		PC SCREW MACH RD HD 6/32X3/8 SST	B							

BUILD ARC 210

**ASSEMBLY PARTS LIST**

BUILD ARC 210										PRINT DATE		PAGE		FILE CHANGE NO.	
0860										12-07-76		4		0011747A	
DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE					
0860	90460619	1	B	D	CD ASSY 68ND-0 (N/COMP VIDEO)	A	REL	10-19-76	QSE19502	12-07-76					
TP/IND NO	LI	PART NUMBER	CD	REV.	QUANTITY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT	
064	01	10126401	8		4		PC WSHR NO.6 EXT TOOTH LA TYP A	B							
065	01	10125105	6		4		PC NUT HEX MCH 6-32 STL CP OR ZP	B							
066	01	10127104	7		2		PC SCREW PAN HD 4-40X3/8 STEEL	B							
067	01	10126400	0		2		PC WSHR NO.4 EXT TOOTH LA TYP A	B							
068	01	10125103	1		2		PC NUT HEX MCH 4-40 STL CP OR ZP	B							
069	01	51776406	4		5		PC TERM STUD TURRET .084 1/16	P							
070	01	51003962	1		AR		OZ PASTE, HEAT XFR CMPD NON-COND	B							
071	01	16006500	9		REF		PC FABRICATION SPECIFICATION	D							
072	01	10121508	5		REF		PC MARKING METHODS (SILK=SC,ETC)	D							
073	01	90460618	3		REF		PC SCH DIAG 68ND (N/COMP VIDEO)	D							
074	01	51912300	4		3		PC PIN, TERM PC HTG .031X.062	P							
075	01	51797420	0		200	FT	FT T86, INS .034DIA T/W NAT TEF	B							
076	01	17720531	7		1		PC RES FXD COMP 0.62 MEG 1/2W 5P	P							
077	01	24521113	1		1		PC CAP FXD MYL .01UF 5P 100VDCW	P							
078	01	62200937	1		REF		PC SCHEMATIC, VIDEO DISPLAY	D							
079	01	51839147	9		1		PC CAP FXD CER .1UF 10P 100VDCW	P							
080	01	24500095	5		1		PC RES COMP 22K OHM 1/4W 5P	P							
081	01	51785508	6		1		PC RES VAR MINAT 50K OHM 2/P .5W	P							
081	02	51785509	4		1		PC RES VAR MINAT 100K OHMS .5W	P	11747A	11747A		7702			
082	01	51006067	6		AR		OZ ADHESIVE, SILIC	B							
083	01	24501801	5		083	FT	FT WIRE BUSS 22GA SOLID CU TP	W							

BUILD ARC 210


### ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
12-07-76	5	0011747A

DIV.		ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE		
0860		90460619	1	B	D	CD ASSY 68ND-0 (N/COMP VIDEO)	A	REL	10-19-76	05E19502	12-07-76		
TRND NO	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION	MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/M	WK IN	WK OUT
084	01	16019500	4	REF		PC REQ/INSTALLATION OF EXT CKTS	D						
085	01	52629949	0	400	FT	WIR 300A SLD WHITE	M						
						0086 TOTAL LINES							

7-76

62957400 A

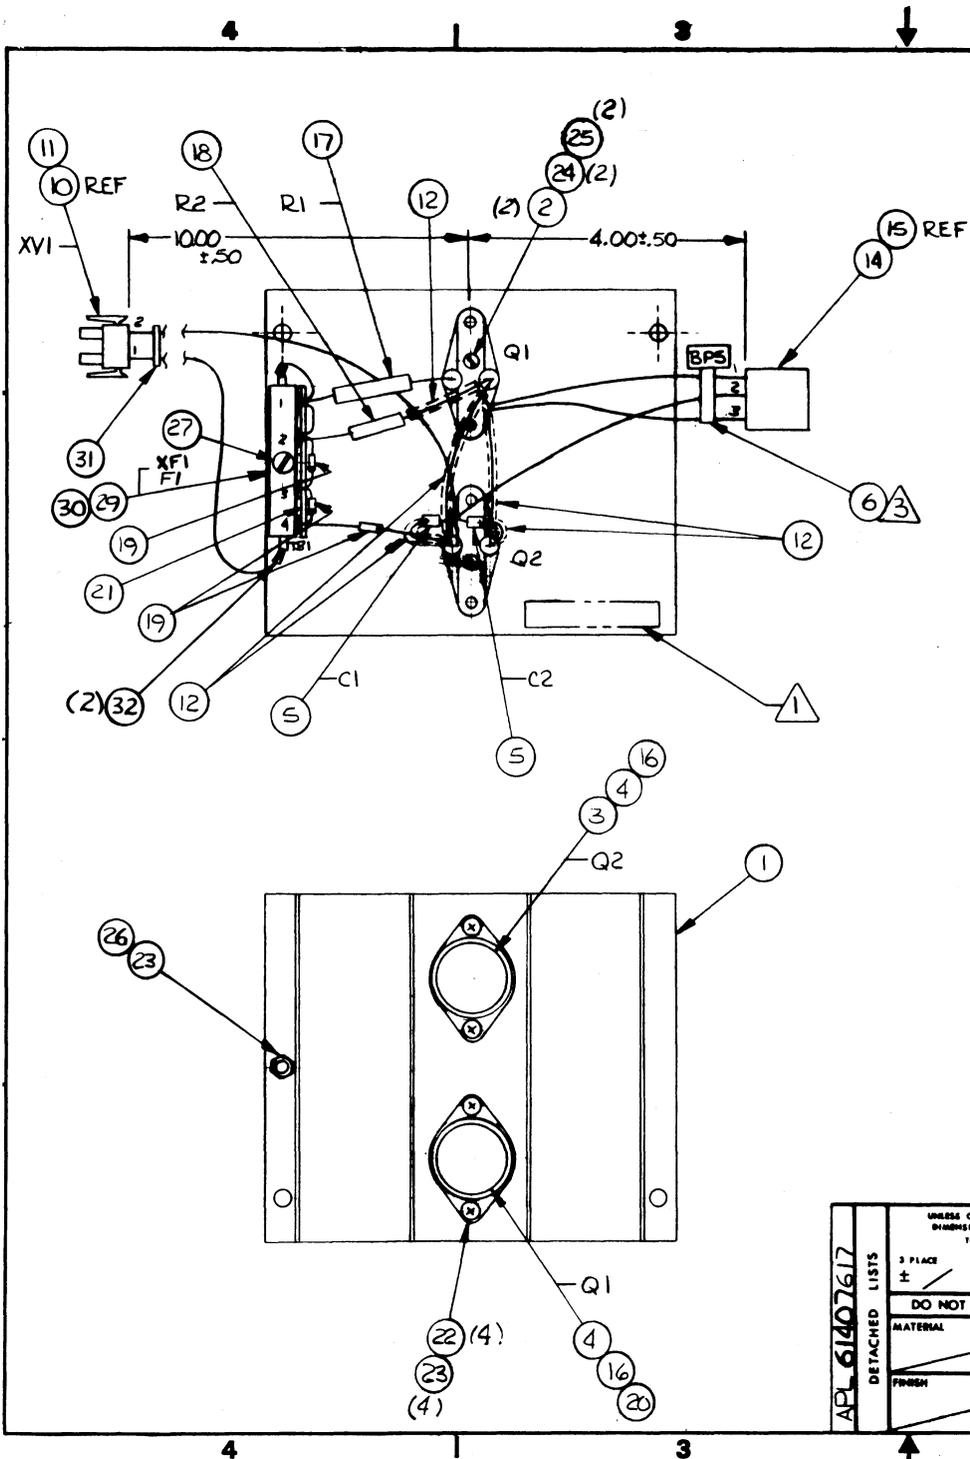

SHEET REVISION STATUS				REVISION RECORD			
REV	ECO	DESCRIPTION	DRFT	DATE	CHKD	APP	
A	10653-47	RELEASED CLASS A		10-19-76		ACT	

NOTES:

- ① MARK "ASSY 61407617" IN AREA SHOWN PER CDC SPEC 1021508.
- 2. REFERENCE DESIGNATIONS ARE SHOWN FOR REFERENCE ONLY AND MAY NOT APPEAR ON PART.
- ③ APPLY LABEL TO CABLE PER CDC DWG 82191061, (METHOD 6). MARK AS SHOWN.

APL 61407617	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES			FIRST USED ON: CC6B1C		TITLE: REGULATOR ASSY (+15 VOLTS)	
	± / ± / ±	± / ± / ±	± / ± / ±	DO NOT SCALE DRAWING	DWN: D. Barber	10/11/76	
	MATERIAL			ENGR: E. Jones	10/12/76	CODE IDENT: 15920	
	FINISH			MFG: J. E. Johnson	10/14/76	DRAWING NO: 61407617	
				APPR: S. H. Lee	10-15-76	SCALE: NONE	
			NHA61370905		SHEET: / OF: /		

D  
C  
B  
A

61407617

BUILD ARC 230

**ASSEMBLY PARTS LIST**

PRINT DATE 10-26-76 PAGE 1 FILE CHANGE NO. 10653-67

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE		ENG. RESP.	FILE DATE		
0860		61407617		2	A	C	REGULATOR ASSY +15V		A	REL	10-19-76		CC6B1C	10-25-76		
T	FIND NO	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION			MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01		51906303	6	1		PC	HT SINK, SEMI FIG 5 ALUM BLK	P							
002	01		51605400	4	2		PC	SOCKET TRANSISTOR TO-3	P							
003	01		15130504	2	1		PC	IC UA7806+15 35SE POS V RGLTR	P							
004	01		51003962	1	AR		07	PASTE, HEAT XFR CMPD NON-COND	B							
005	01		24504333	6	2		PC	CAP FXD TANT 2.2UF 20P 35VDCW	P							
006	01		94277409	2	1		PC	STRAP CARLE TIE TYPE 6	B							
007	01		61407618	0	REF		PC	W/L	D							
008	01		93463000	5	1	250	FT	WIR T8GA STRD BLK 300V 1/4 PVC	W							
009	01		93463222	5	1	625	FT	WIR T8GA STRD RED 300V 1/4 PVC	W							
010	01		51906200	4	2		PC	CONTACT, SKT 20-14GA STRIP T	P							
011	01		51906000	8	1		PC	CONN PLUG 2 PIN	P							
012	01		51797420	0	400		FT	TBG, INS .034DIA T/W MAT TEF	B							
013	01		24501801	5	375		FT	WIRF BUSS 22GA SOLID CU TP	W							
014	01		51905901	8	1		PC	CONN RECPT 3 CONTACTS	P							
015	01		51906204	6	3		PC	CONTACT, SKT 20-14GA STRIP 6	P							
016	01		16798719	7	2		PC	WSHR, MICA INSUL TO-3 FIG 4	B							
017	01		95596544	7	1		PC	RES FXD WW .51 OHM 5W 5P	P							
018	01		95596503	3	1		PC	RES FXD WW 4.7 OHM 5W 5P	P							
019	01		95637304	7	3		PC	DIO SIL 1N4004 400PIV 1.1V/1A	P							
020	01		58018602	1	1		PC	XSTD 2N4901 POWER PNP STL	P							
021	01		51828014	4	1		PC	TERMINAL STRIP 4PIN P TVPF	B							

BUILD ARC 230

**ASSEMBLY PARTS LIST**

PRINT DATE 10-26-76 PAGE 2 FILE CHANGE NO. 10653-67

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE		ENG. RESP.	FILE DATE		
0860		61407617		2	A	C	REGULATOR ASSY +15V		A	REL	10-19-76		CC6B1C	10-25-76		
T	FIND NO	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION			MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
022	01		10127115	3	4		PC	MSCR PAN PHL 4-32X5/8 (TYP I)	B							
023	01		10126401	8	5		PC	WSHR NO.4 EXT TOOTH LK TYP A	B							
024	01		10127102	1	2		PC	MSCR PAN PHL 4-40X1/4 (TYP I)	B							
025	01		10126400	0	2		PC	WSHR NO.4 EXT TOOTH LK TYP A	B							
026	01		10125105	6	1		PC	NUT HEX MCH 6-32 STL CP OR ZP	R							
027	01		10127113	8	1		PC	MSCR PAN PHL 4-32X3/8 (TYP I)	B							
028	01		62200812	6	REF		PC	SCH DIAG REGULATOR ASSY +15V	D							
029	01		51785402	2	1		PC	FUSF BLOCK 125VAC 10A 31G	P							
030	01		24512922	6	1		PC	FUSF FAST 250V 11/2AMP	P							
031	01		94277400	1	1		PC	STRAP CARLE TIE TYPE 1	B							
032	01		95643212	4	2		PC	CONN QUICK 22-18 AWG FIG 2	P							
0037 TOTAL LINES																





DWN	D. GARNER	CONTROL DATA	TITLE	CABLE ASS'Y-YOKE	PREFIX	DOCUMENT NO	REV
CHKD					A	61407418	B
ENG			FIRST USED ON		NHA	61370900	SHEET 1 of 2
MFG			CODE IDENT	CC6B) A&B			
APPR			15920				


  

SHEET REVISION STATUS				REVISION RECORD					
REV	ECO	DESCRIPTION	DRFT	DATE	APP				
2	1								
A	A	A	10653-26	RELEASED CLASS A		12/31/75	M.C.T.		
B	B	B	CD 11413	REV SH 2 PER ECO					

NOTES:

1. Bulk identify with CDC part number and revision letter.

PL 61407418  
DETACHED LISTS

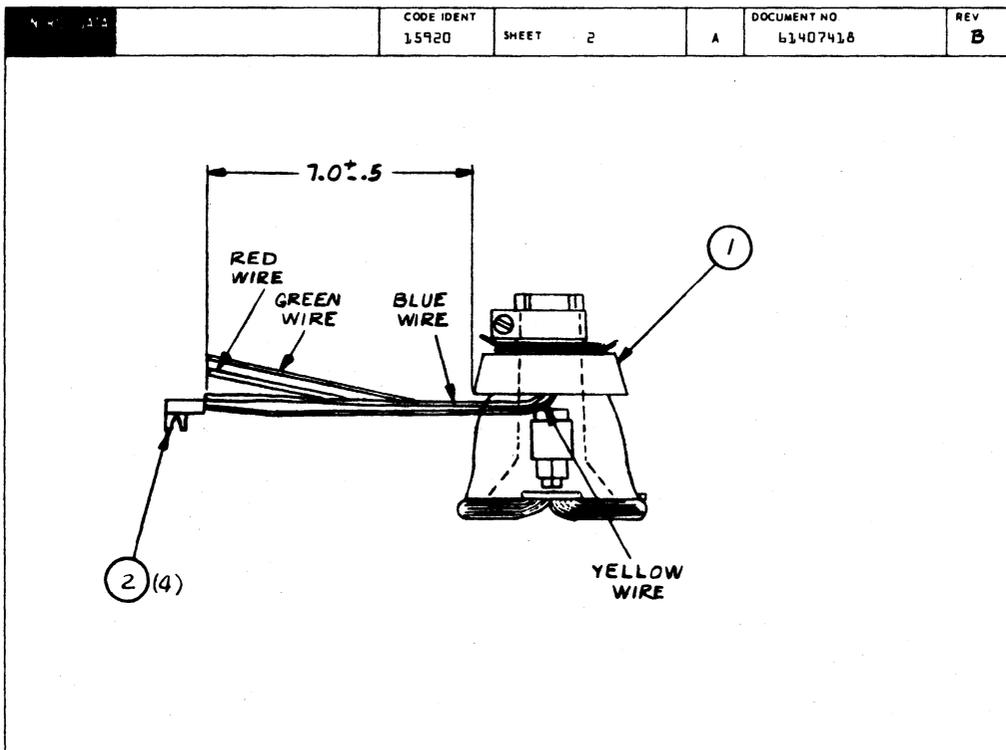

BUILD ARC 230

### ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
03-15-76	1	00011413

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE	
0000		61087410		S	R	A	YOKE ASSY		A	REL	12-30-75	CC601A/B	03-15-76	
TRND NO.	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION		MC	YLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	51907000	7	1		PC YOKE DEFL ASSY		P						
002	01	94210003	5	4		PC CONTACT FLAG 22-18AWG STRIP		P						
0000 TOTAL LINES														





DWN	R. Trautman	11-8-74	CONTROL DATA	TITLE	W/L VIDEO DISPLAY	PREFIX	WL	DOCUMENT NO.	61378200	REV	D
CHKD				FIRST USED ON	CC614	NHA	61370900	SHEET 1 of 3			
ENG				CODE IDENT	15920						
MFG											
APPR											

SHEET REVISION STATUS				REVISION RECORD						
3	2	1	REV	ECO	DESCRIPTION	DRFT	DATE	APP		
					RELEASED CLASS "C"		12-2-74	C.P.A.		
	01	01	01	CD110	CHG WIRE LENGTHS ON COND IDENT 21-23	W.M. 1-9-75	1-14-75	Dub		
	02	02	02	C146	REVISED PER ECO	R.T. 2-12-75	2/14/75	D.B.		
	03	03	03	C227	ADDED REMARKS TO WL	M.P. 4-2-75	4-2-75			
	04	04	04	C282	CHG'D WIRE LENGTHS	M.P. 5-6-75	5-6-75	P.S.		
	05	05	05	C338	ADDED COND IDENT 27, 28	M.P. 6-4-75	6/4/75	P.S.		
	A	A	A	10653-B	RELEASED CLASS A		6/13/75	P.C.T.		
	B	B	B	CD10996	WL CHG ONLY	J.M. 9-25-75		Dub		
	C	C	C	CD11000	WL CHG ONLY	N.M.D. 11-12-75		C.P.A.		
	D	D	D	GD11226	REVISED PER ECO	W.M. 11-12-75	3/6/76	Dub		
	D	D	D	CD940124	ADD INT DIV LABEL 5722	W.M. 11-12-75	8/26/76	P.C.T.		

**INT'D DIVISIONAL DOCUMENT**

This document is subject to change without prior notice. Users will receive copy only of the revised document.

NOTES:  
1. For Find Number Identification, See APL 61370900.

DETACHED LISTS

AA3180 REV. 8/71

PRINTED IN U.S.A.

CONTROL DATA				CODE IDENT	SHEET	WL	DOCUMENT NO.	REV	
				15920	2		61378200	D	
CONDUCTOR IDENT	FIND NO	GAUGE (REF)	COLOR (REF)	LENGTH (APPROX)	ORIGIN	ACCESS FIND NO.	DESTINATION	ACCESS FIND NO.	REMARKS
1	13				XVL	7	BP4	1	
2	13				XVL	3	BP4	20	
3	13				XVL	6	BP4	4	
4	13				XVL	2	BP6		CONTACT POST
5	13				XVL	1	BP4	2	
6	13				XVL	4	BP4	15	FIL. GND
7	3				L2	1	BP4	7	VERT PEAKING COIL
8	3				L2	2	BP4	6	VERT PEAKING COIL
9	12				L1	GRN	BP4	9	VERT YOKE
10	12				L1	YEL	BP4	10	VERT YOKE
11	22								
12	22								
13	11				T1	5	BP4	13	-190V TAP
14	11				T1	7	BP4	14	HV GND
15	11				T1	1	BP4	16	+465V TAP
16	11				T1	3	BP4	17	PRIMARY, FLYBACK
17	11								PRIMARY, GND FLYBACK
18	12				L1	RED	BP4	18	HORZ YOKE
19	12				L1	BLU	BP4	19	HORZ YOKE


AA3183 REV. 8-70

PRINTED IN U.S.A.



DWN	D. Wells	12/2/75	CONTROL DATA	TITLE	CHOKER ASSY	PREFIX	A	DOCUMENT NO	61407419	REV	A		
CHKD	<i>[Signature]</i>	12/1/75		FIRST USED ON	CC6B1A-B	NHA	61370900	SHEET 1 of 2					
ENG	<i>[Signature]</i>	12/1/75		CODE IDENT	15920								
MFG	<i>[Signature]</i>	12/1/75											
APPR	<i>[Signature]</i>	12/1/75											
SHEET REVISION STATUS						REVISION RECORD							
						2	1	REV	ECO	DESCRIPTION	DRFT	DATE	APP
						A	A	A	10653-26	RELEASED CLASS A		12/31/75	P.C.T.
NOTES:													
Bulk identify with CDC part number and revision letter.													
										APL 61407419			
										DETACHED LISTS			

AA3180 REV. 8 71 PRINTED IN U.S.A.

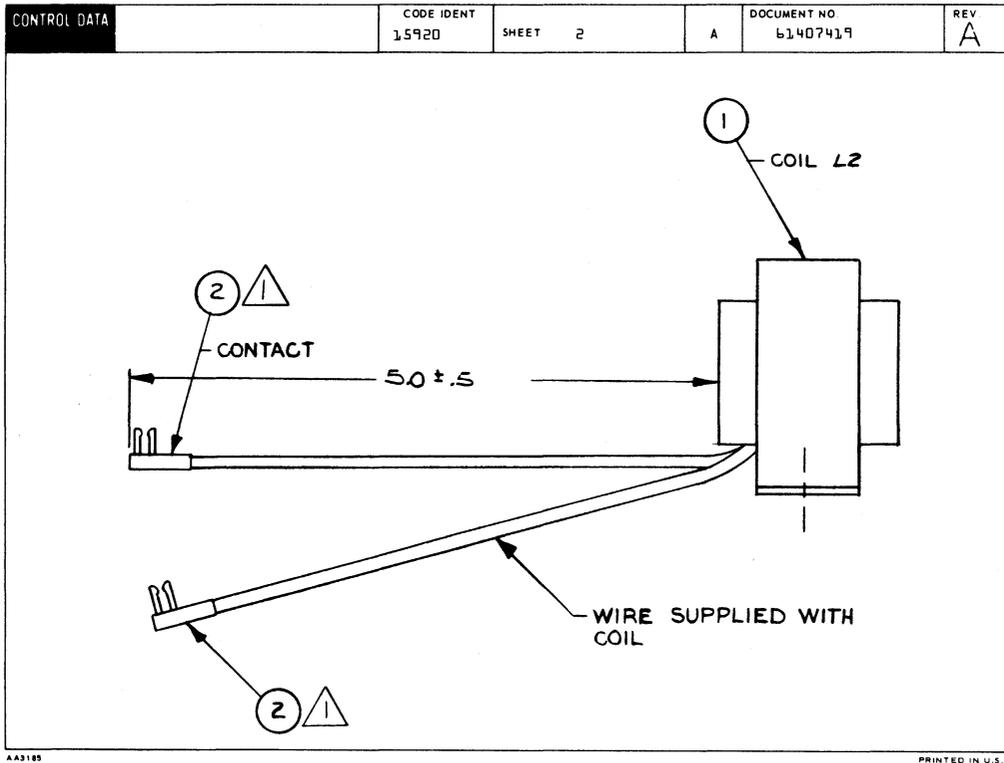



BUILD ARC 230

# ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
12-30-75	1	10653-26

DIV.	ASSEMBLY NUMBER	CD	REV.	DWG.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. DESP.	FILE DATE			
0860	61407419	3	A	A	CHOKE ASSY	A	REL	12-10-75	CC681A/B	12-30-75			
FOUND NO.	LI	PART NUMBER	CD	QUANTITY	U/M	PART DESCRIPTION	MC	VLD	ECO. NO. IN	ECO. NO. OUT	S/N	WK IN	WK OUT
001	01	51906800	1	1		PC COIL 320 MILLIHENRY							
002	01	94219903	5	2		PC CONTACT, FLAG 22-18AWG STRIP							
						0002 TOTAL LINES							



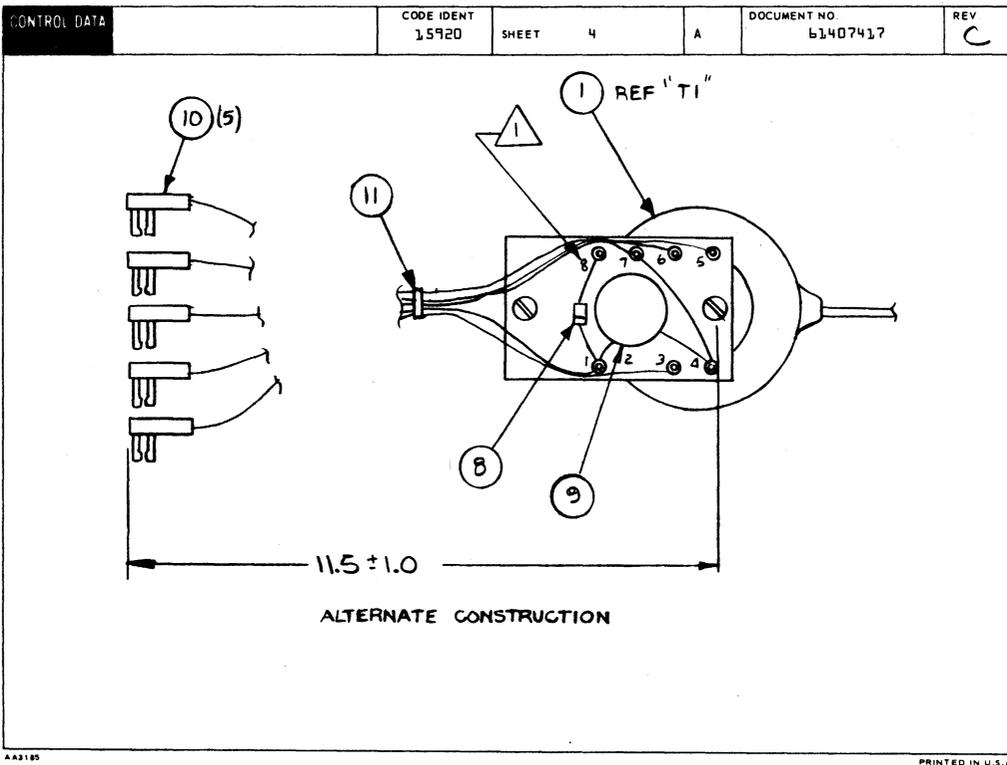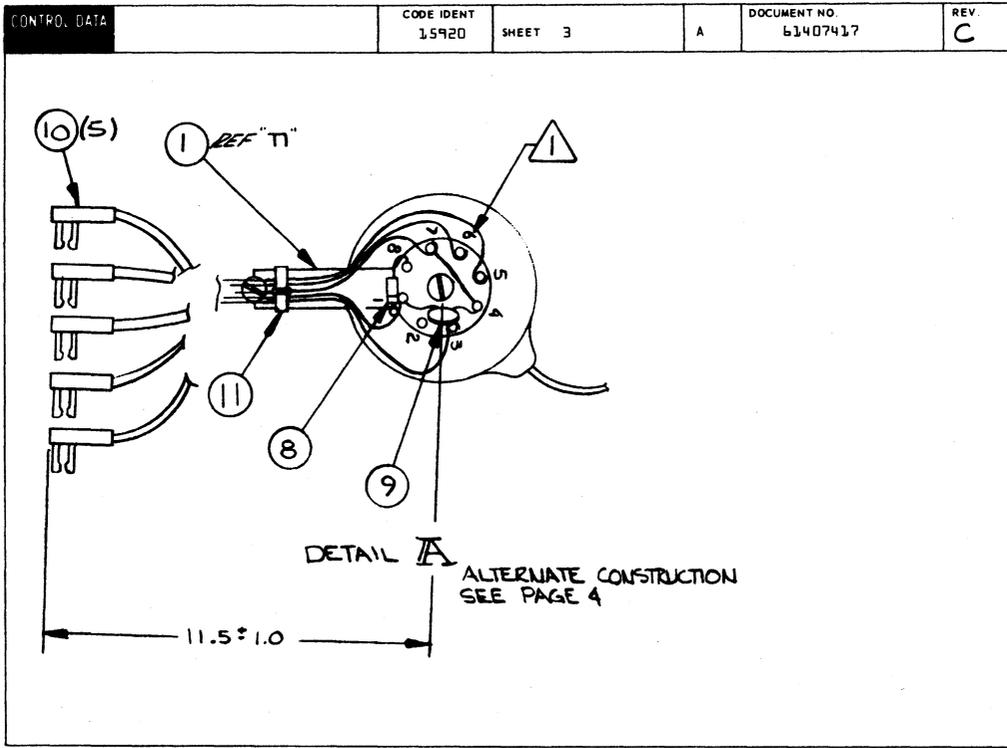










7-94

62957400 A

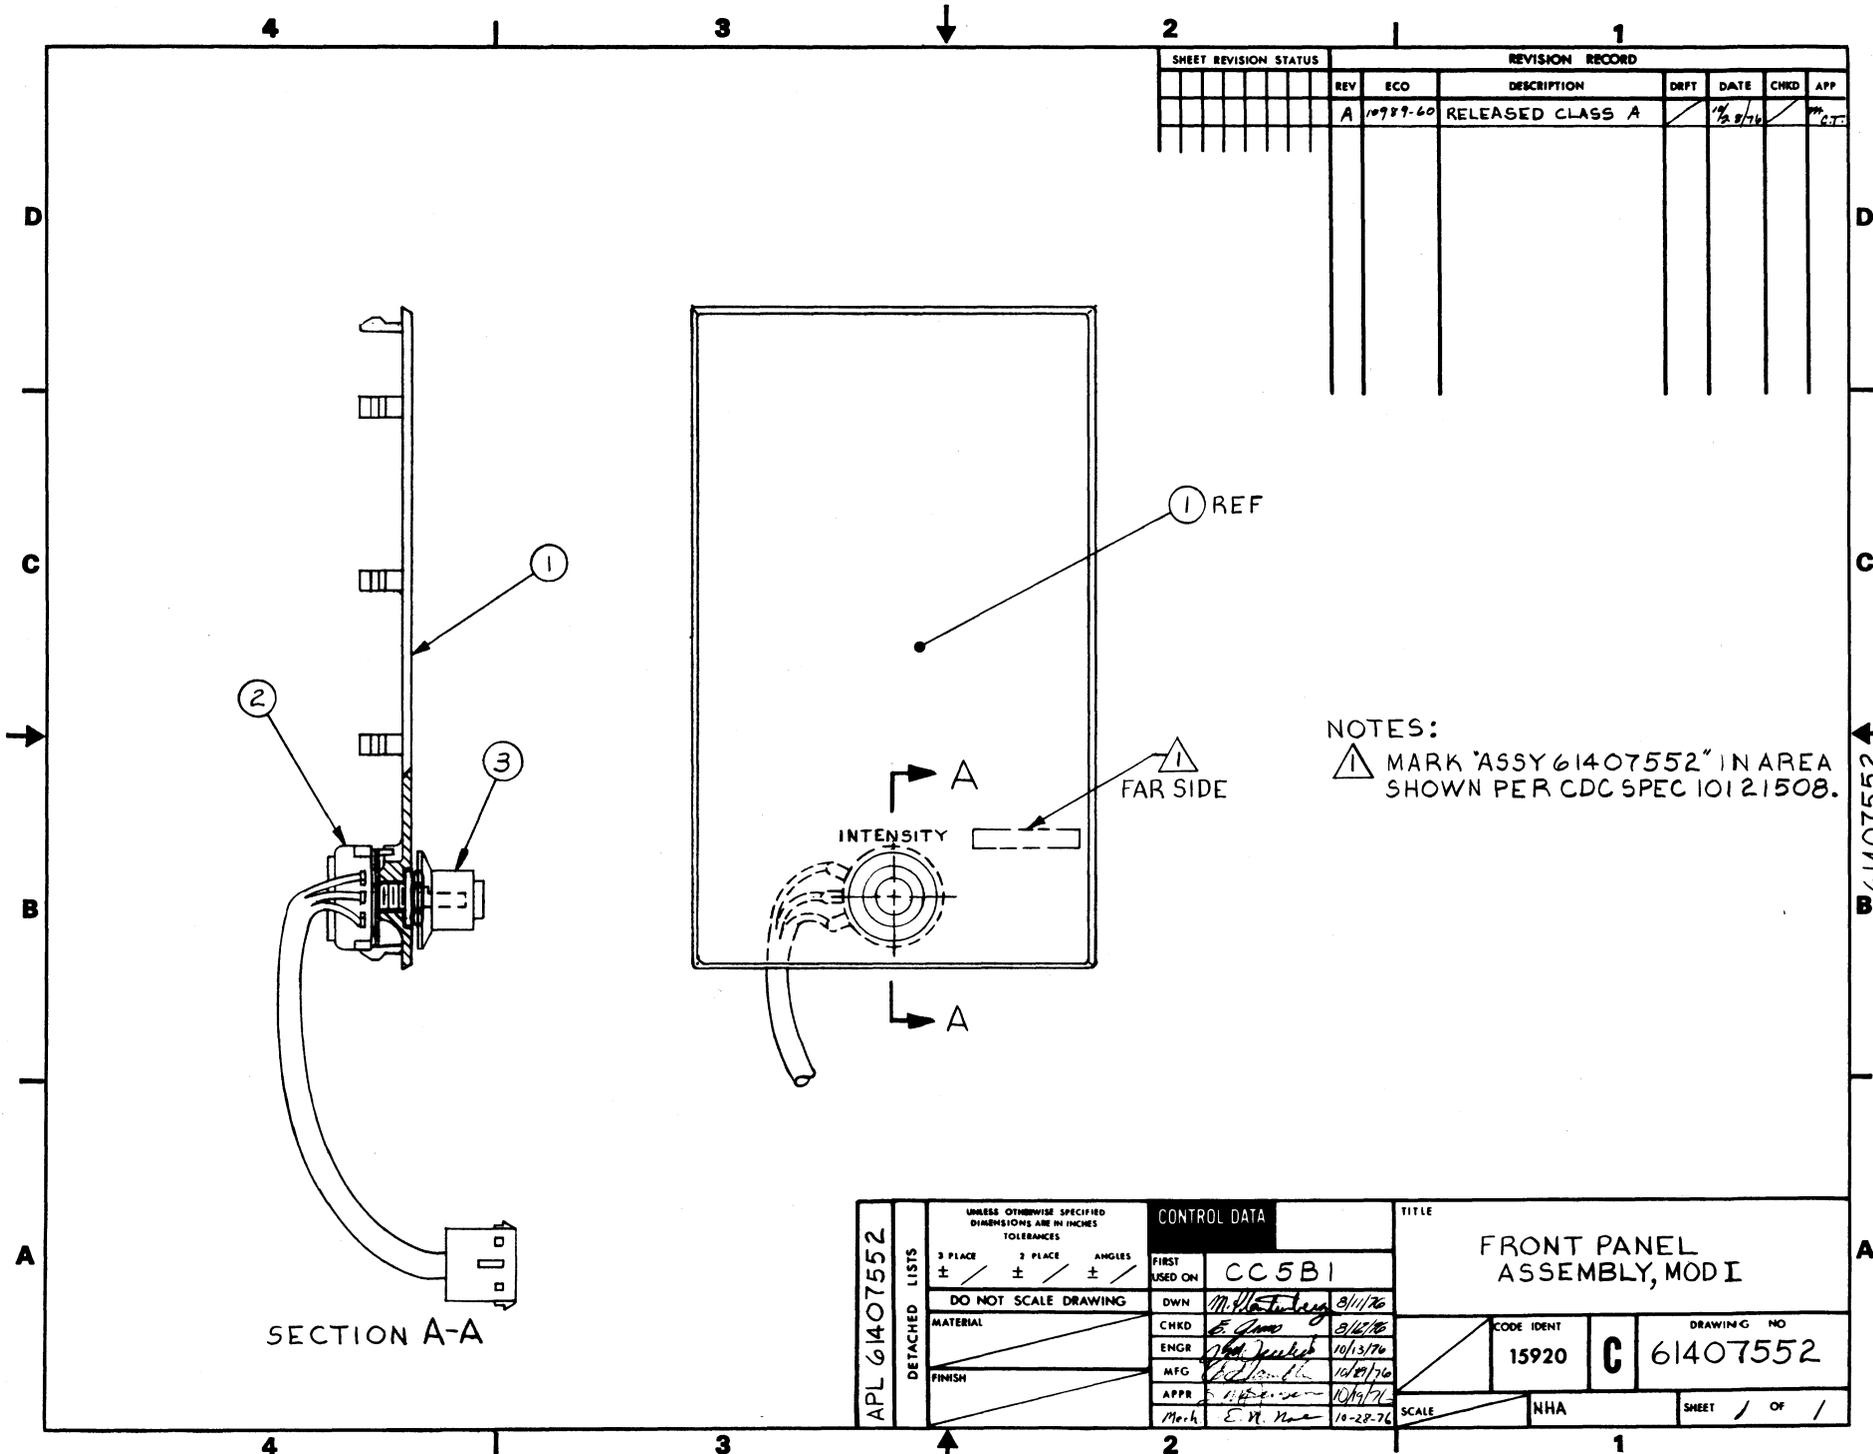

SHEET REVISION STATUS				REVISION RECORD				
REV	ECO	DESCRIPTION	DEPT	DATE	CHKD	APP		
A	10789-60	RELEASED CLASS A		10/28/76				

NOTES:  
 ▲ MARK 'ASSY 61407552' IN AREA SHOWN PER CDC SPEC 10121508.

APL 61407552	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES		CONTROL DATA		TITLE	
	TOLERANCES		FIRST USED ON	FRONT PANEL ASSEMBLY, MOD I		
	3 PLACE ± / ± / ±	2 PLACE ± / ± / ±	CC 5 B 1			
	DO NOT SCALE DRAWING		DWN			
			CHKD			
MATERIAL		ENGR	CODE IDENT			
		MFG	15920			
FINISH		APPR	DRAWING NO			
		SCALE	C 61407552			
		DATE	SHEET / OF /			
		10-28-76	1			

61407552

BUILD ARC 230

# ASSEMBLY PARTS LIST

PRINT DATE	PAGE	FILE CHANGE NO.
11-09-76	1	10000-60

DIV.		ASSEMBLY NUMBER		CD	REV.	DWG.	DESCRIPTION		MC	STATUS	STATUS DATE	ENG. RESP.	FILE DATE	
0860		61407552		1	A	C	FRONT PANEL ASSY MOD 1		A	REL	10-28-76	CCSB1	11-09-76	
P/NO	LI	PART NUMBER	CD	QTY	U/M	PART DESCRIPTION		MC	YLD	ECC. NO. IN	ECC. NO. OUT	S/N	WK IN	WK OUT
001	01	71491844	B	1		PC PANEL INDICATOR BLANK		P						
002	01	61375200	S	1		PC CABLE ASSY (INTENSITY CONT)		G						
003	01	51915101	J	1		PC KNOB, P-0 SKIRTED/INSERT PLN		P						
000: TOTAL LINES														

DWN	D. Wells	10/8/74	CONTROL DATA	TITLE	INTENSITY CONTROL CABLE ASSY	PREFIX	DOCUMENT NO	REV
CHKD	<i>[Signature]</i>	11/2/74				A	61375200	B
ENG	<i>[Signature]</i>	11/14/74		FIRST USED ON	CCG14/CC681	NHA	61370600	SHEET 1 of 3
MFG	<i>[Signature]</i>	2/23/75	CODE IDENT					
APPR	<i>[Signature]</i>	4-11-77	15920					

SHEET REVISION STATUS				REVISION RECORD				
3	2	1	REV	ECO	DESCRIPTION	DRFT	DATE	APP
					RELEASED CLASS "C"		10-14-74	<i>[Signature]</i>
		01	01	01	CO39	ADDED PIN NOS TO POT	11-8-74	<i>[Signature]</i>
		02	01	02	CO110	CHG LENGTH AT 6.0 TO 15.0	1-14-75	<i>[Signature]</i>
		03	03	03	C212	ADDED FIN G ADDED FIN VIEW OF CONN	3-27-75	<i>[Signature]</i>
		A	A	A	10653-1	RELEASED CLASS A	11-24-75	M.C.T.
		A	A	A	9401-14	ADD INT DIV LABEL	2-3-75	M.C.T.
		A	B	B	CD11547	Revised per ECO	6/4	<i>[Signature]</i>


**INTER-DIVISIONAL DOCUMENT**  
 This document is subject to change without prior notice. Users will receive only one copy of the revised document.

NOTES:  
 1. Apply label to cable per drawing 82191061, Method b. Mark as shown.  
 2. Bulk identify with CDC Part number.

APL 61375200  
DETACHED LISTS

AA3180 REV. 8-71

PRINTED IN U.S.A.

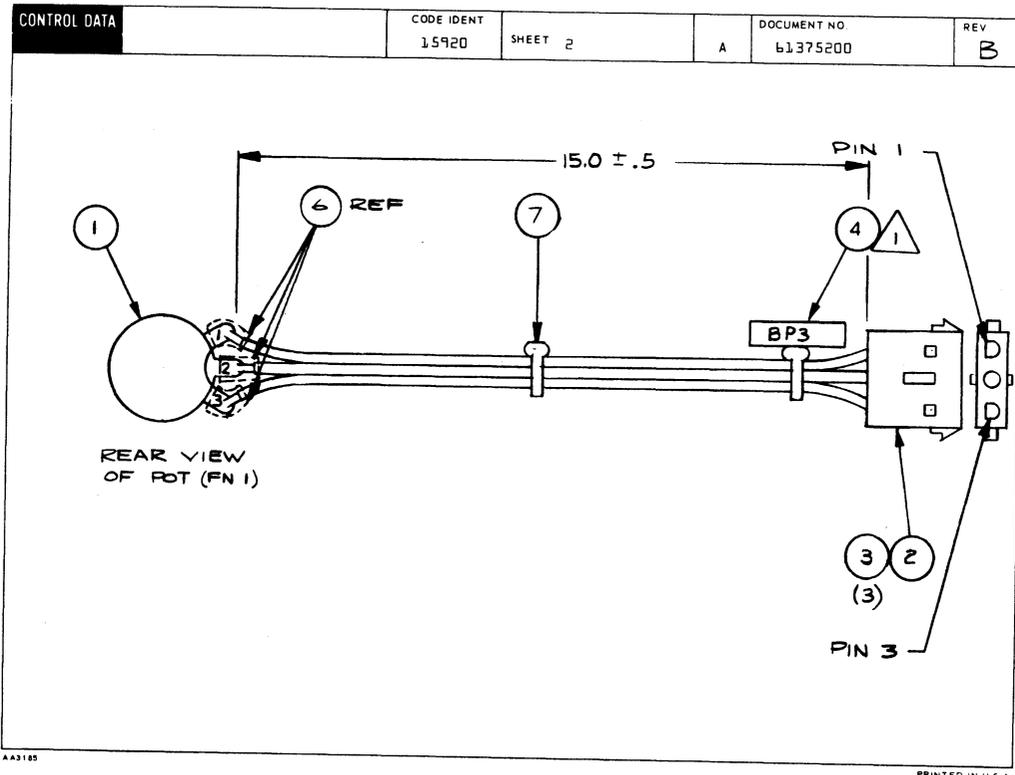


AA3185

PRINTED IN U.S.A.





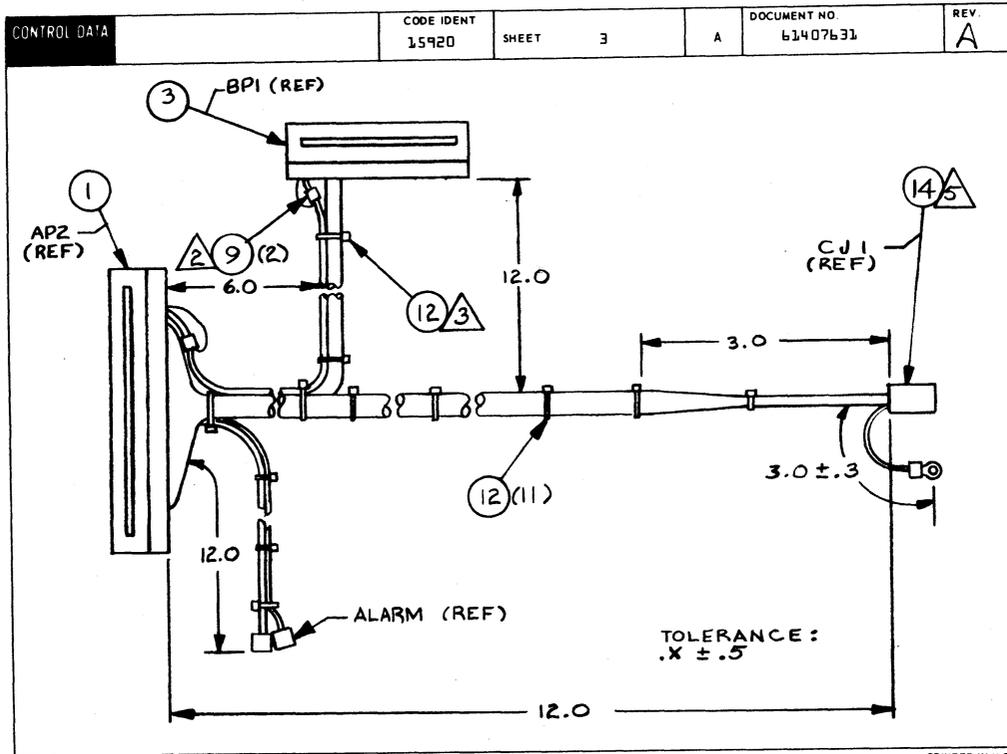

<b>CONTROL DATA</b>				CODE IDENT 15920	SHEET 4	WL	DOCUMENT NO. 61407631	REV. A	
CONDUCTOR IDENT.	FIND NO.	GAUGE (REF.)	COLOR (REF.)	LENGTH (APPROX)	ORIGIN	ACCESS FIND NO.	DESTINATION	ACCESS FIND NO.	REMARKS
1	7	24		18.0	AP2	4	2-b,9 BPI	12	2-b,9 Video
2	9	24	0	6.0	AP2	5	2 BPI	13	2 Ground Shield
3	17	24	9	18.0	AP2	8	2 BPI	6	2 H-Sync
4	17	24	0	18.0	AP2	21	16 BPI	5	2 Ground } TWPR
5	17	24	0	18.0	CRIMP TWO WIRES IN ABOVE PIN		BPI	9	2 Ground
6	17	24	9	18.0	AP2	9	2 BPI	10	2 V-Sync } TWPR
7	10	24	2	12.0	AP2	22	2 Alarm	{+}	5 =5V
8	8	24	9	12.0	AP2	3	2 Alarm	{-}	5 Ring Bell
9									
10	8	24	9	12.0	AP2	7	2 CJ1	13	15 Ptr Rcv Data
11	8	24	9	12.0	AP2	19	2 CJ1	14	15 Data Rate Sel
12	8	24	9	12.0	AP2	20	2 CJ1	17	15 Ptr Dsr/Co
13	11	24	5	6.0	CJ1	19	15 CE2		4 Ptr Protective Gnd
14	8	24	9	12.0	AP2	13	2 CJ1	02	15 Cts
15	8	24	9	12.0	AP2	12	2 CJ1	03	15 Co
16	8	24	9	12.0	AP2	10	2 CJ1	01	15 Dtr
17	8	24	9	12.0	AP2	15	2 CJ1	04	15 Dsr
18	8	24	9	12.0	AP2	14	2 CJ1	07	15 Rcv Data
19	8	24	9	12.0	AP2	16	2 CJ1	05	15 Tx Data
20	8	24	9	12.0	AP2	6	2 CJ1	06	15 Rts

AA3185 REV. 8/71 PRINTED IN U.S.A.





DWN	TRAUTMAN	12-3-76	CONTROL DATA	TITLE	752 Display Term.	PREFIX	DOCUMENT NO.	REV
CHKD	<i>[Signature]</i>	12/12/76				SPL	66300077 thru 66300082	D
ENG	<i>[Signature]</i>	12/12/76		FIRST USED ON	CC555A Thru CC555F			SHEET 1 of 4
MFG	<i>[Signature]</i>	12/12/76	CODE IDENT					
APPR	<i>[Signature]</i>	12/12/76	15920					

SHEET REVISION STATUS				REVISION RECORD							
4	3	2	1	REV	ECO	DESCRIPTION	DRFT	DATE	APP		
						Released Class "C"					
				A	A	A	A	10653-77	RELEASED CLASS A	12/15/76	<i>[Signature]</i>
				B	A	A	B	12096	F/N 22 WAS 61907657 F/N 23 WAS 61907658	9/27/77	<i>[Signature]</i>
				B	C	A	C	12107	F/N 9 WAS 61907617	9/27/77	<i>[Signature]</i>
				D	D	A	D	CD 12153	F/N 8 WAS 90460619 ADDED F/N 24	5/6/77	<i>[Signature]</i>

NOTES: SEE SHEET 2 FOR EQUIPMENT/TAB CROSS REFERENCE.

DETACHED LISTS

PRINTED IN U.S.A.

CONTROL DATA	CODE IDENT	SHEET	PREFIX	DOCUMENT NO.	REV
	15920	2	SPL	66300077	A

EQUIPMENT	SPL P/N
CC555A	66300077
CC555B	66300078
CC555C	66300079
CC555D	66300080
CC555E	66300081
CC555F	66300082



DWN	G. CURRAN	10/17/71	CONTROL DATA	TITLE	PREFIX	DOCUMENT NO.	REV.
CHKD				SPL PRINTER, SERIAL, THERMAL 60 Hz	SP	66294800	C
ENG	R. P. ...	10/17/71		FIRST USED ON			
MFG	R. P. ...	10/17/71		CL114			
APPR	R. P. ...	10/17/71	CODE IDENT			SHEET 1 of 2	
E2	B. T. ...	10/17/71	15920				

SHEET REVISION STATUS				REVISION RECORD						
REV	ECO	DESCRIPTION	DRFT	DATE	APP					
2	1									
A	A	10842-26	RELEASED CLASS A	-	10/15/71	M.G.T.				
B	B	CD113/1	REVISED PER ECO	6	3/17/72					
C	C	CD12225	REVISED PER ECO	6	6/21/77	BA				

NOTES:  
On site spare parts list for 60 Hz printer (CDC Dwg 519093xx) with Parity-Switch selectable.

DETACHED LISTS

AA3180 REV. 8/71

PRINTED IN U.S.A.

CONTROL DATA			SPARE PARTS LIST OF CL114				CODE IDENT	15920	SHEET	2 of 2	PL	DOCUMENT NO.	66294800	REV.	C
FIND NO.	PART IDENTIFICATION	QUANTITY REQUIRED							UNIT OF MEAS	NOMENCLATURE OR DESCRIPTION	SPECIFICATIONS, NOTES, OR MATERIAL				
	66295666	1								Board Plug-In (Signal)					
	66295602	1								Board Plug-In (Control)					
	66295667	1								Frame Final Assy. (Prntr Mech. Par Sw with Logic Bds)					
	66295604	1								Power Supply (60 Hz)					

DWN	G. Church	10-7-75	CONTROL DATA	TITLE	PREFIX	DOCUMENT NO.	REV
CHKD				SPL PRINTER, SERIAL, THERMAL 50 Hz	SP	66294700	C
ENG	H. Church	10/14/75		FIRST USED ON			
MEG	R. Peterson	10-15-75		CL114			
APPR	R. Peterson	10/14/75	CODE IDENT			SHEET 1 of 2	
ES	B.F. Day	10/14/75	15920				

SHEET REVISION STATUS										REVISION RECORD				
1	2	REV	ECO	DESCRIPTION	DRFT	DATE	APP							
	A	A	10092-26	RELEASED CLASS A	-	10/14-75	DK-T.							
	B	B	CD11311	REVISED PER ECO	R	2/12/76	DK							
	C	C	CD12225	REVISED PER ECO	R	6/21/77	DK							

NOTES:  
On site spare parts list for 50 Hz printer (CDC Dwg 519093xx) with Parity-Switch selectable.

DETACHED LISTS

AA3180 REV. 8-71


PRINTED IN U.S.A.

CONTROL DATA		SPARE PARTS LIST FOR CL114			CODE IDENT	SHEET	PL	DOCUMENT NO.	REV.
					15920	2 of 2	PL	66294700	C

FIND NO.	PART IDENTIFICATION	QUANTITY REQUIRED					UNIT OF MEAS	NOMENCLATURE OR DESCRIPTION	SPECIFICATIONS, NOTES, OR MATERIAL
	66295666	1						Board Plug-In (Signal)	
	66295602	1						Board Plug-In (Control)	
	66295667	1						Frame Final Assy.	{Pntr Mech. Par Sw with logic bds.}
	66295605	1						Power Supply (50 Hz)	



 This section title page is included to maintain format compatibility for this type of manual.



# CODES AND CHARACTER SETS

A

Appendix A contains character sets and symbol code listings and dot matrix symbol formations.


The display keyboard alphanumeric character set, dot matrix formations with octal codes, and control code dot matrix formations are shown in table A-1, figure A-1, and figure A-2 respectively.

TABLE A-1. DISPLAY KEYBOARD ALPHANUMERIC CHARACTER SET

UPPERCASE SYMBOLS	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z		
LOWERCASE SYMBOLS ♦	a b c d e f g h i j k l m n o p q r s t u v w x y z		
NUMERALS	0 1 2 3 4 5 6 7 8 9		
CHARACTER	NAME	CHARACTER	NAME
	Space (Nonprinting)	;	Semicolon
!	Exclamation Point	<	Less Than
"	Quotation Marks (Diaeresis)	=	Equals
#	Number Sign	>	Greater Than
\$	Dollar Sign	?	Question Mark
%	Percent	@	Commercial At
&	Ampersand	[	Opening Bracket
'	Apostrophe (Acute Accent)	\	Reverse Slant
(	Opening Parenthesis	]	Closing Bracket
)	Closing Parenthesis	^	Circumflex
*	Asterisk	—	Underline
+	Plus	♦	Vertical Line
,	Comma (Cedilla)	♦ `	Grave Accent
-	Hyphen (Minus)	♦ {	Opening Brace
.	Period (Decimal Point)	♦ }	Closing Brace
/	Slant	♦ ~	Equivalent or Similar
:	Colon	■	Parity Error (Rubout)


♦ These characters are not available for keyboard entry when the display's 96/64 character set switch is in 64 position.

00849-2

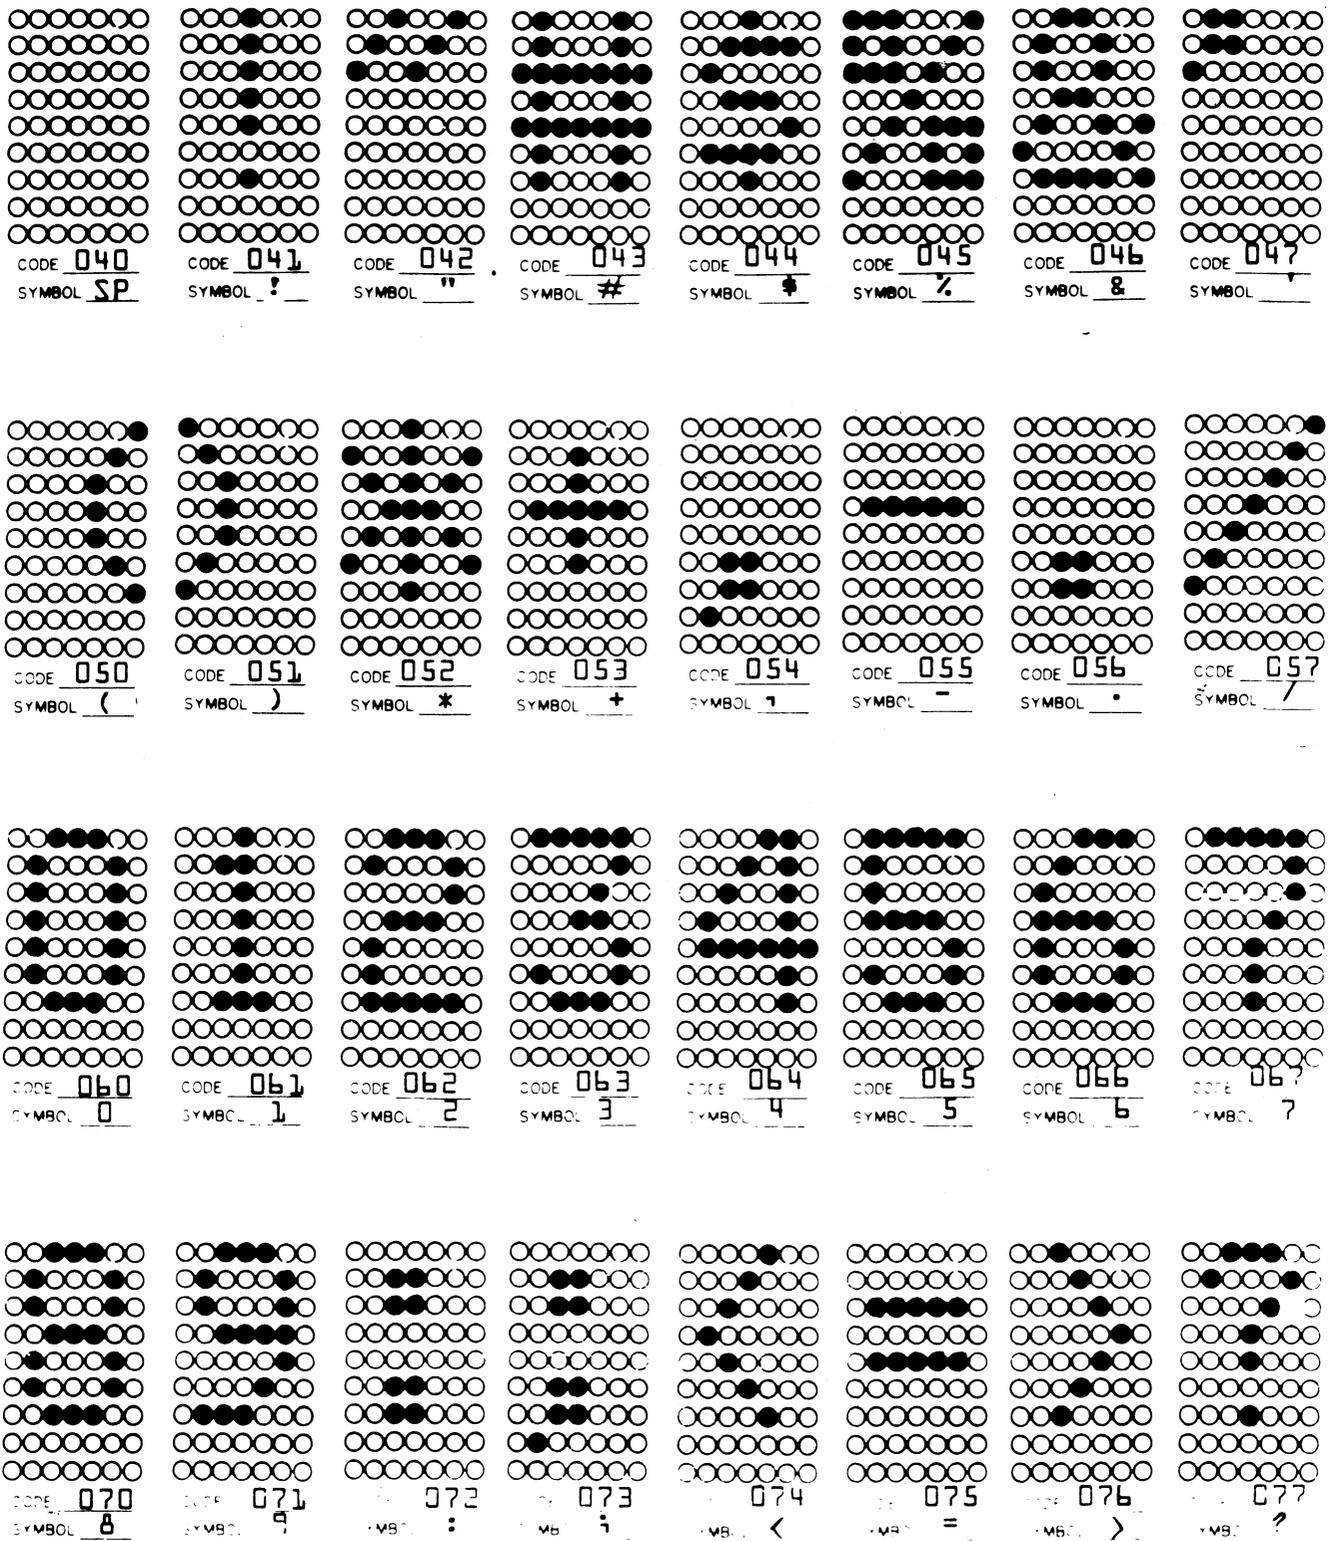





02001

Figure A-1. Alphanumeric Dot Matrix Formations and Octal Codes (Sheet 1 of 3)

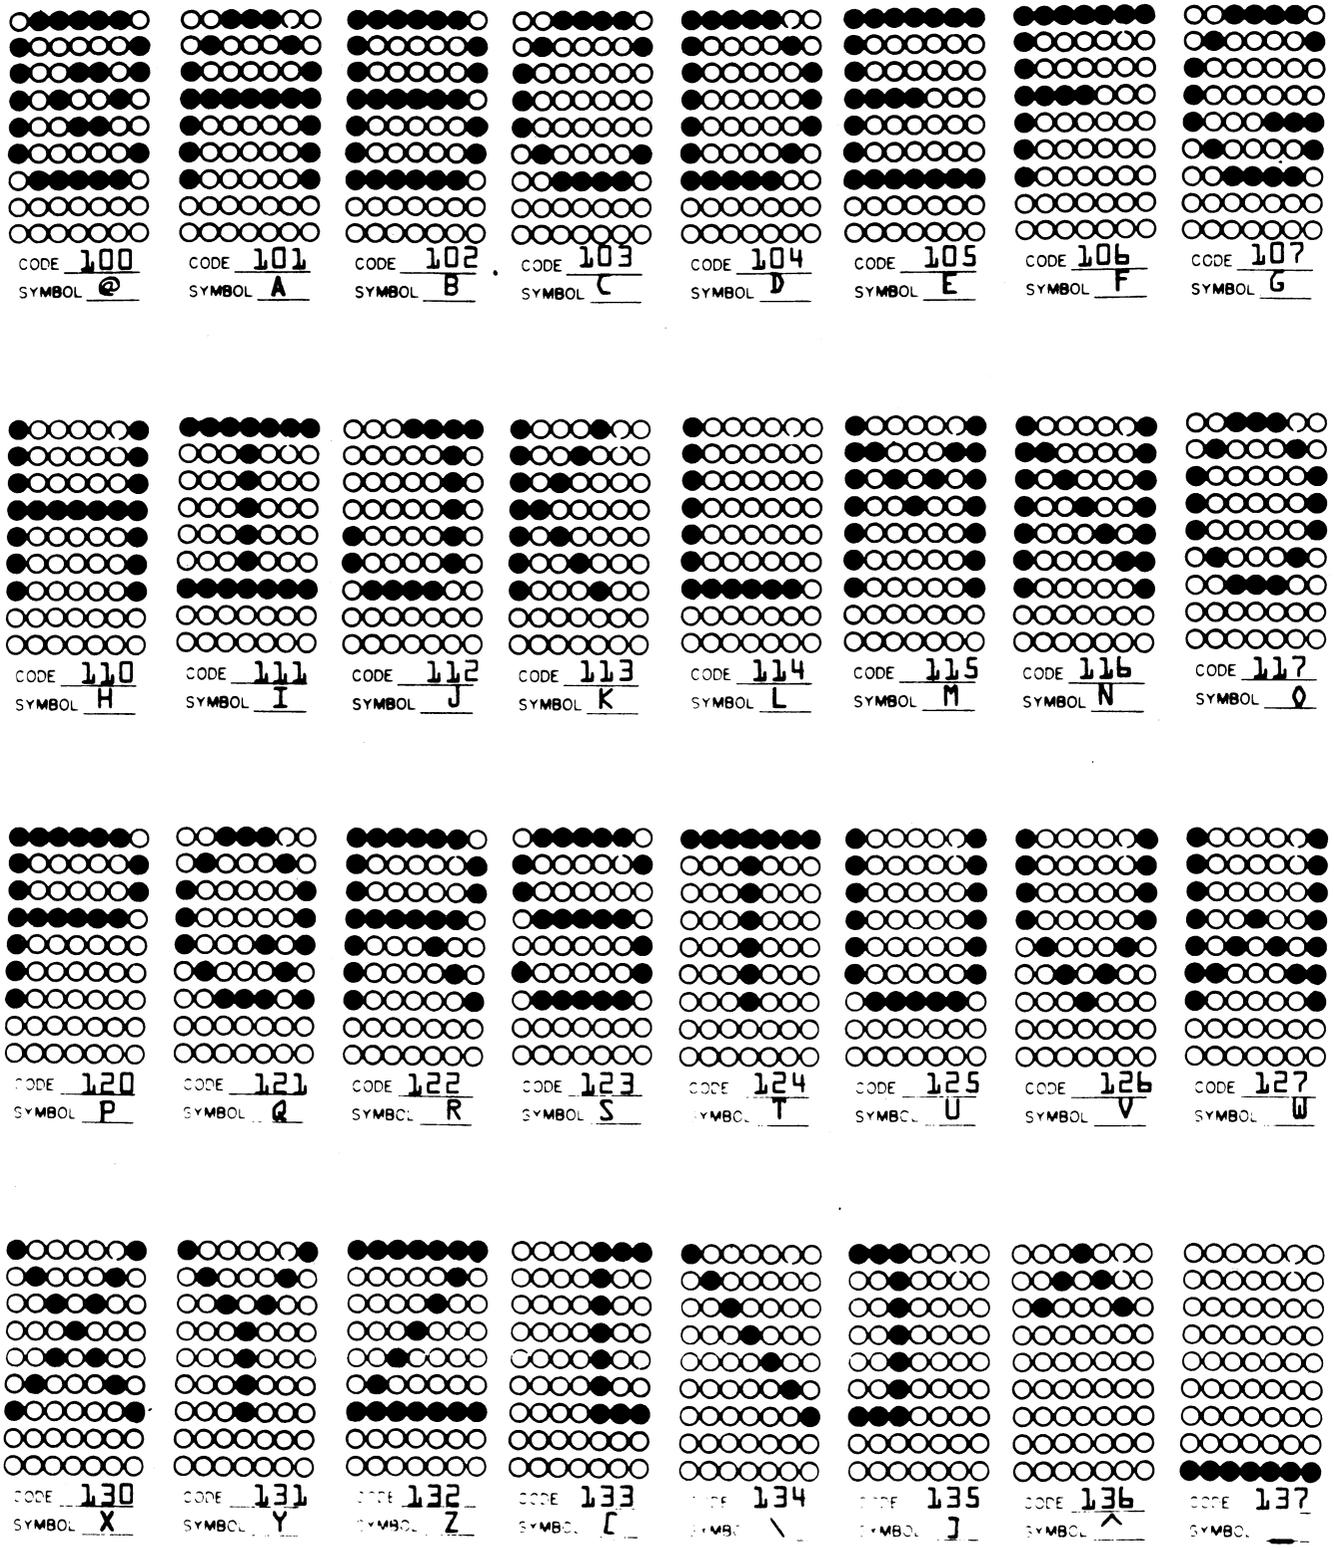

02003

Figure A-1. Alphanumeric Dot Matrix Formations and Octal Codes (Sheet 2 of 2)

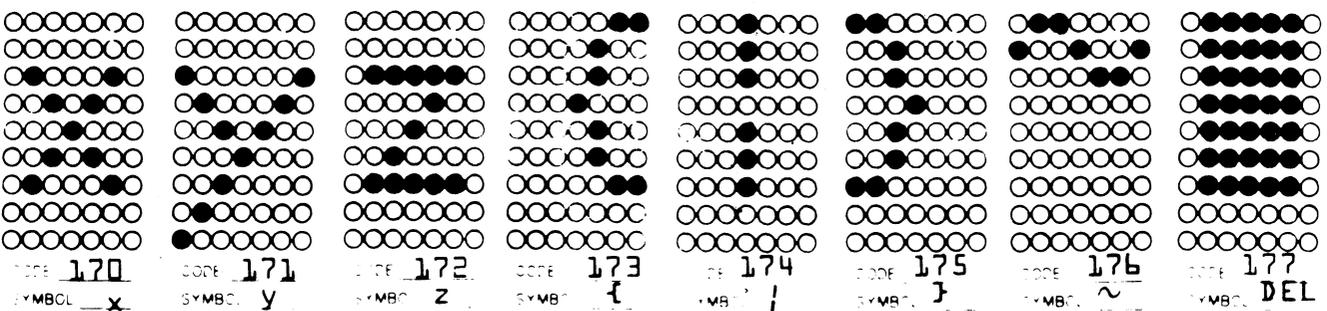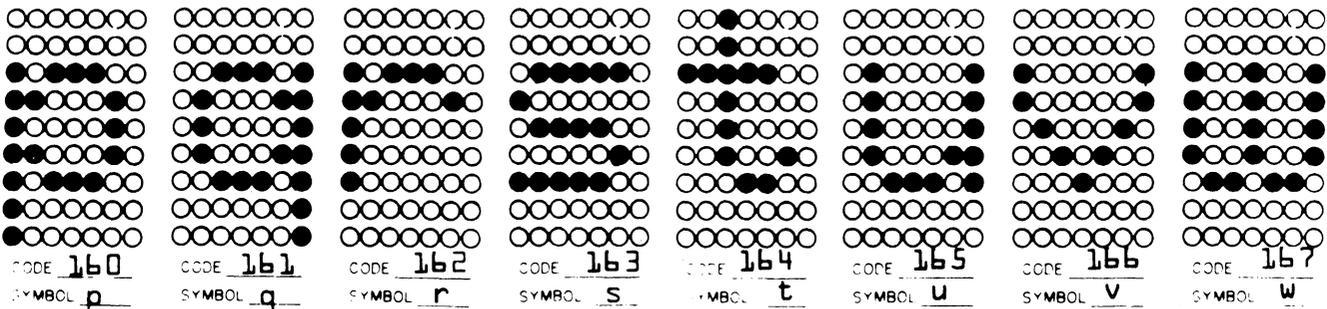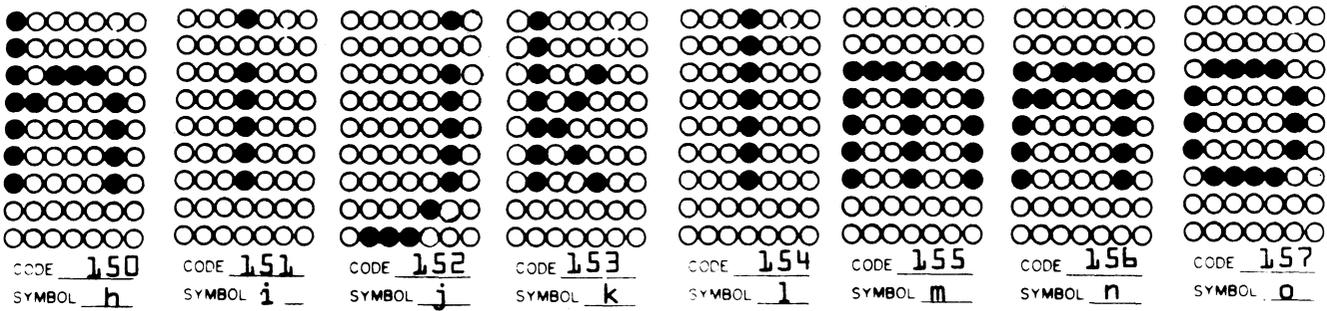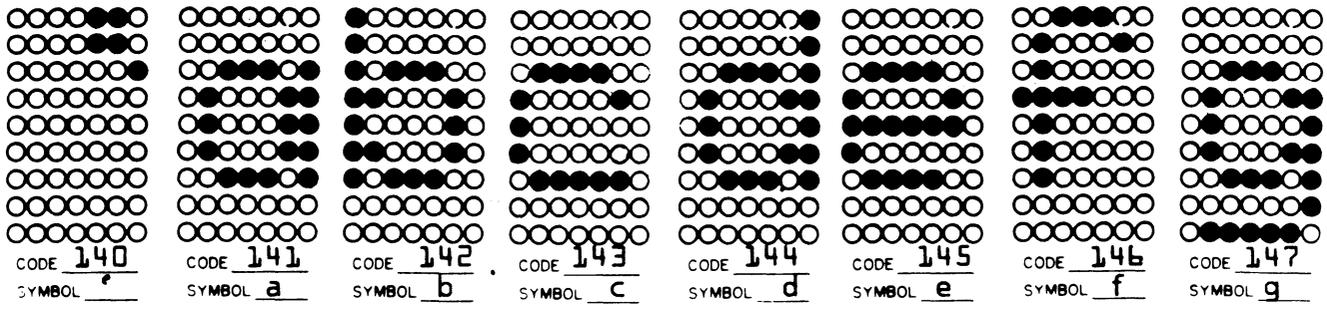

02002

Figure A-1. Alphanumeric Dot Matrix Formations and Octal Codes (Sheet 3 of 3)



NOTE: ASCII delete code (DEL) is listed with preceding alphanumeric codes (see 177g).

Figure A-2. Control Code Dot Matrix Formations and Octal Codes

The nonimpact printer character set and character repertoire and the impact printer character repertoire are shown in table A-2, figure A-3, and figure A-4 respectively.

TABLE A-2. NONIMPACT ALPHANUMERIC CHARACTER SET

UPPERCASE SYMBOLS	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z		
LOWERCASE SYMBOLS ♦	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z		
NUMERALS	0 1 2 3 4 5 6 7 8 9		
CHARACTER	NAME	CHARACTER	NAME
	Space (Nonprinting)	;	Semicolon
!	Exclamation Point	<	Less Than
"	Quotation Marks (Diaeresis)	=	Equals
#	Number Sign	>	Greater Than
\$	Dollar Sign	?	Question Mark
%	Percent	@	Commercial At
&	Ampersand	[	Opening Bracket
'	Apostrophe (Acute Accent)	\	Reverse Slant
(	Opening Parenthesis	]	Closing Bracket
)	Closing Parenthesis	♦♦ ↑	Up Arrow
♦ *	Asterisk	♦♦ ←	Left Arrow
+	Plus	`	Grave Accent
,	Comma (Cedilla)	{	Opening Brace
-	Hyphen (Minus)		Vertical Line
.	Period (Decimal Point)	}	Closing Brace
/	Slant	~	Equivalent (Overline)
:	Colon	♦♦	Space for Parity Error
♦ Characters differing slightly from those of display character set.			
♦♦ Characters completely different from those in display character set.			

00849-3

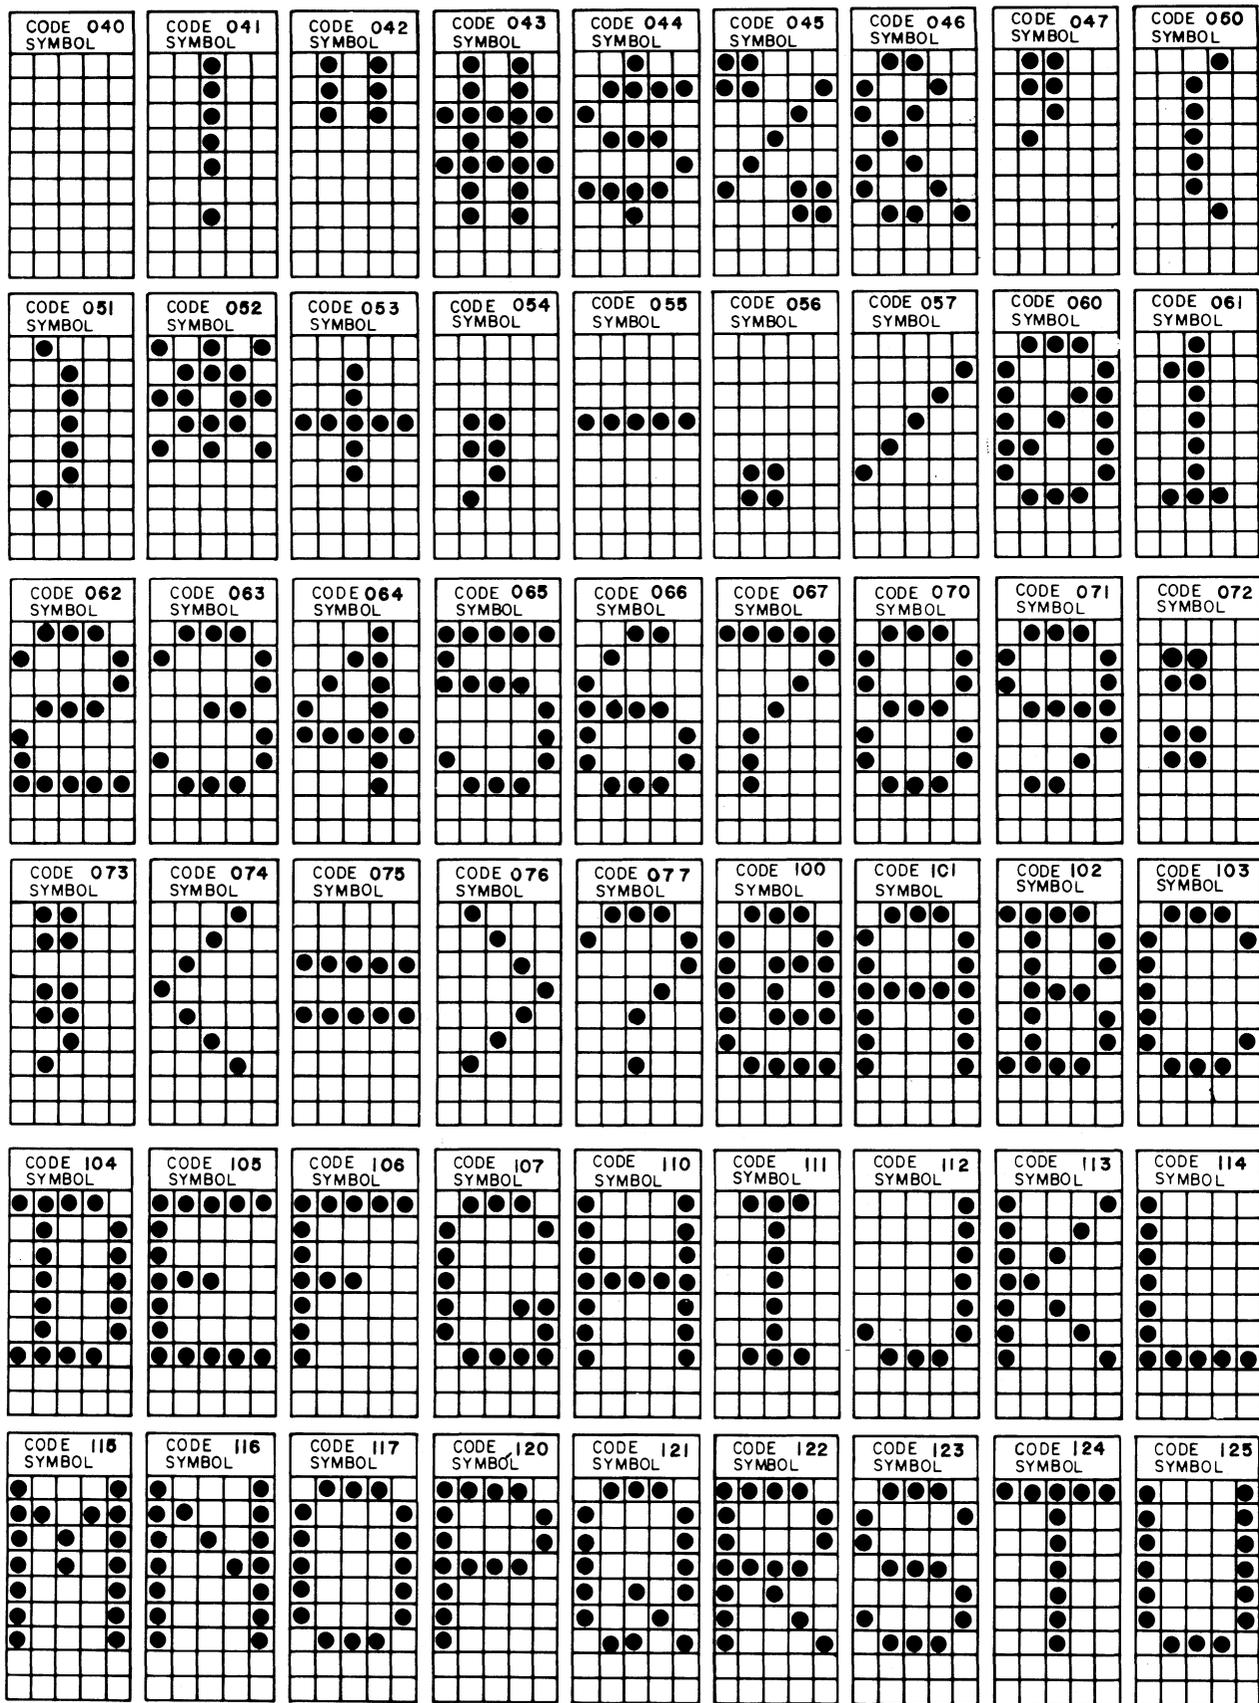


Figure A-3. Nonimpact Printer Character Repertoire (Sheet 1 of 2)

CODE 126 SYMBOL	CODE 127 SYMBOL	CODE 130 SYMBOL	CODE 131 SYMBOL	CODE 132 SYMBOL	CODE 133 SYMBOL	CODE 134 SYMBOL	CODE 135 SYMBOL	CODE 136 SYMBOL
CODE 137 SYMBOL	CODE 140 SYMBOL	CODE 141 SYMBOL	CODE 142 SYMBOL	CODE 143 SYMBOL	CODE 144 SYMBOL	CODE 145 SYMBOL	CODE 146 SYMBOL	CODE 147 SYMBOL
CODE 150 SYMBOL	CODE 151 SYMBOL	CODE 152 SYMBOL	CODE 153 SYMBOL	CODE 154 SYMBOL	CODE 155 SYMBOL	CODE 156 SYMBOL	CODE 157 SYMBOL	CODE 160 SYMBOL
CODE 161 SYMBOL	CODE 162 SYMBOL	CODE 163 SYMBOL	CODE 164 SYMBOL	CODE 165 SYMBOL	CODE 166 SYMBOL	CODE 167 SYMBOL	CODE 170 SYMBOL	CODE 171 SYMBOL
CODE 172 SYMBOL	CODE 173 SYMBOL	CODE 174 SYMBOL	CODE 175 SYMBOL	CODE 176 SYMBOL	CODE 177 SYMBOL	CODE SYMBOL	CODE SYMBOL	CODE SYMBOL
CODE SYMBOL BACK SPACE	CODE SYMBOL LINE FEED	CODE SYMBOL CARRIAGE RETURN	CODE SYMBOL					
PRINTER MECHANISM CONTROL CODES. NO CHARACTER PRINTED.								

Figure A-3. Nonimpact Printer Character Repertoire (Sheet 2 of 2)

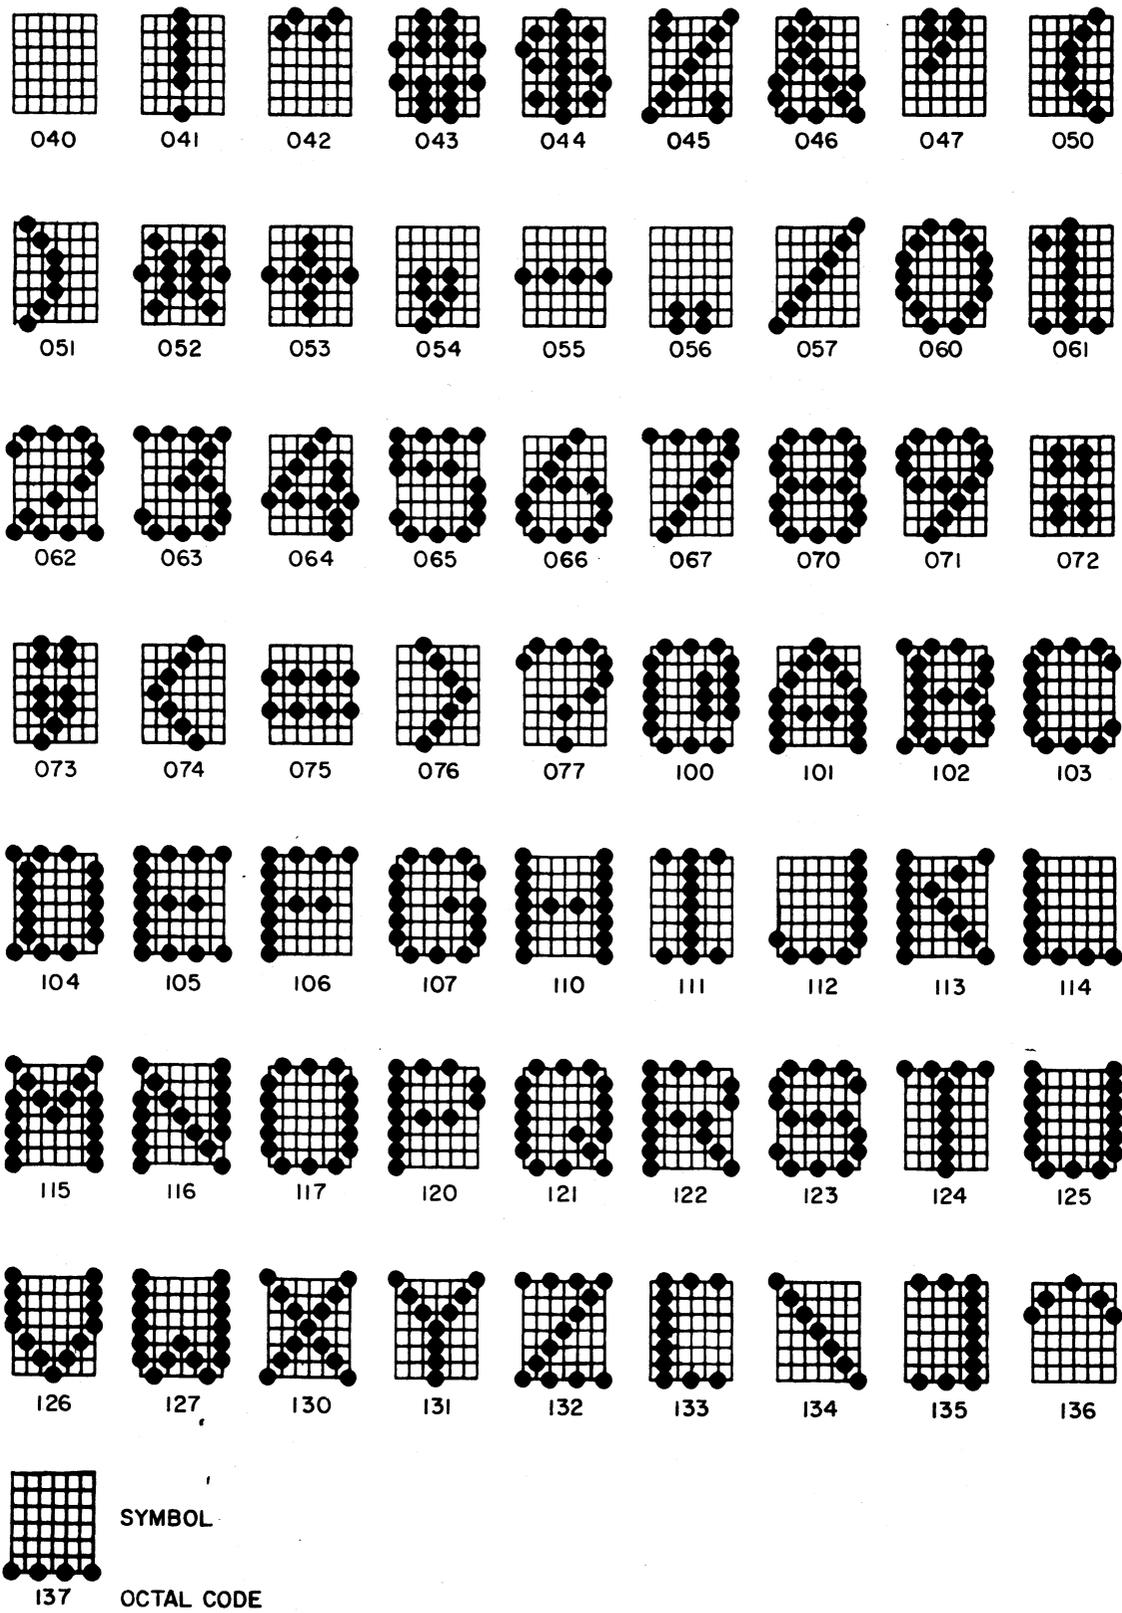


Figure A-4. Impact Printer Character Repertoire (Sheet 1 of 2)

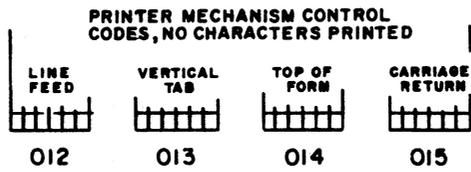
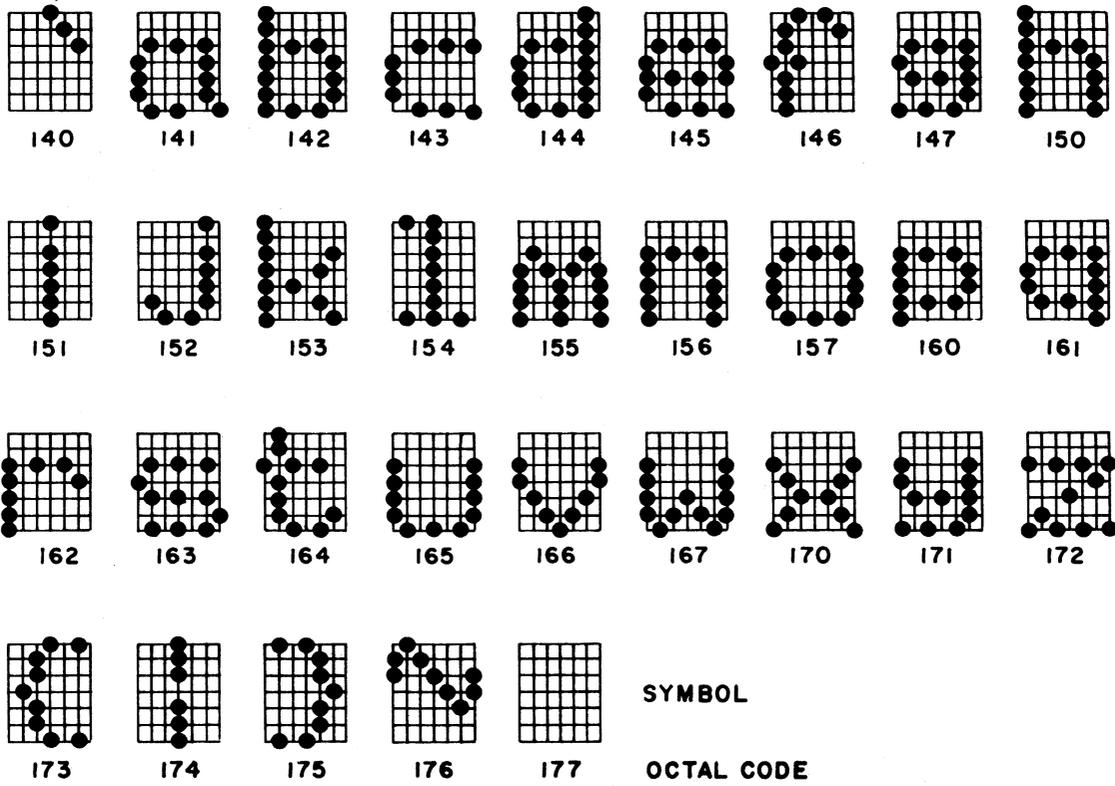


Figure A-4. Impact Printer Character Repertoire (Sheet 2 of 2)

---

This appendix contains MOS circuit handling precautions.

Integrated circuits consisting of MOS (metal-oxide semiconductor) elements are susceptible to unrepairable damage if exposed to excessive static electricity. Since such excess charge can be easily built up on and carried by the person servicing the equipment which contains MOS circuits, certain MOS circuit handling precautions must be followed. The terminal subsystem contains a variety of MOS circuits throughout (ROM chips, receiver/transmitter chips, static shift register, etc.) so, rather than identify each of the many MOS circuits for special handling, it is safest to follow MOS circuit handling precautions at all times when performing installation, checkout, or any maintenance. The precautions to observe are as follows.

- 1) Never insert, install, remove, replace, or otherwise connect/disconnect any circuit(s) within the terminal subsystem with primary power applied to any of the cabinets and/or equipments within the subsystem. Power off for the cabinet being worked on is not sufficient. An interface adapter module, powered within another cabinet, may be supplying signals to the bus or backplane of the cabinet in which you are installing/removing a MOS circuit. This may be sufficient to damage the MOS circuits upon initial contact with the powered circuit.

### WARNING

When observing static grounding precautions, do not touch powered-on electrical equipment and chassis frame at the same time.

- 2) Before touching, grasping, or handling any circuit, connector, cable, or bus/backplane - always touch hand(s) to an exposed portion of the associated chassis frame to equalize potentials (bleed off any possible static charge from your hands onto the ground-level chassis).
- 3) Especially in dry ambient air, any movement may cause static electricity build-up due to friction. In the case of shuffling one's feet across a dry carpet, such charge may be quite high and may easily jump from a cable connector being held onto the pins being mated to on an equipment. This could damage the MOS circuits within the equipment. Thus, the chassis frame must always be touched immediately before connecting any cable to it.

- 4) When removing, replacing, or otherwise handling any assembly/module which contains MOS circuits, do not touch circuit paths or conductors if at all possible. Do not carry a MOS circuit assembly across a room while touching its circuits.
- 5) When a module is out of its chassis, if it is to lay somewhere where it may be touched, if it is to be carried to some other location, or if it is to be shipped, always try to keep it in a special conductive bag or other approved MOS circuits protective container/wrapping.

CONTENTS  
for

82-Key Typewriter Keyboard

	<u>Page</u>
GENERAL DESCRIPTION.....	C-1
THEORY OF OPERATION.....	C-2
CONTROLWARE CONFIGURATOR, GENEALOGY, TOP LEVEL ASSEMBLY, and CABLE ASSEMBLY	
Equipments: CA150A.....	C-10
CA150B.....	C-14
CA150C.....	C-22
CA150D.....	C-26
SPARE PARTS	
Equipments: CA150A}	
CA150C}.....	C-31
CA150B}	
CA150D}.....	C-34



This appendix describes the 82-key Typewriter Style Keyboard. It is one of three detachable keyboards available with the 752 display terminal subsystem. The other two detachable keyboards, the 80-Key ISO and the 80-Key FTZ licensed units are described elsewhere in this manual.

Because of the many similarities between the 82-Key Typewriter Keyboard and the 80-Key ISO (International Organization for Standardization) keyboards, this appendix will be used in conjunction with the existing manual content. Contained herein will be information which should be used to describe the 82-Key Typewriter Style Keyboard only, and that which is not covered in the manual. Deletions may also be indicated. Here follows the arrangement of this appendix:

#### GENERAL DESCRIPTION

- Keyboard Assembly
- Keyboard Features
- Operator-Control Features
- Features Summary List

#### THEORY OF OPERATION

- Keyboard Assembly
  - External Controls
  - Keyboard Data-Entry and Control Keys
  - Typomatic Keys (new addition to keyboard)

(Note: The three above subheadings are not specifically listed in the manual but are used to explain the 82-Key Typewriter Keyboard).

#### GENERAL DESCRIPTION

#### KEYBOARD FEATURES

The 82-Key Typewriter Keyboard of the terminal serves as both a terminal control and a data input unit for the terminal operator. The terminal control function of the 82-Key Typewriter Keyboard is discussed in this appendix. The keyboard uses a main cluster of 68 keys, similar in appearance to a standard teletypewriter keyboard, and a 14-key numeric entry cluster, to facilitate making numeric entries, located just to the right of the main key cluster. See figure C-1.

### CAUTION

Do not use a "lead" pencil to set switches under keyboard lift-off cover. Graphite dust from the pencil can cause an equipment malfunction.

### FEATURES SUMMARY LIST

Add the following items for the 82-Key Typewriter Keyboard to the "Features Summary List."

- 82-Key Typewriter Keyboard with a 68-key main cluster and 14 key numeric entry cluster
- Cursor controls: up, down, left, right and home
- Typomatic Keys - When the key is depressed and held, the repeat feature is activated without having to depress the Repeat Key

### THEORY OF OPERATION

#### KEYBOARD ASSEMBLY

Differences in operation of the 82-Key Typewriter Keyboard are described under these new headings:

- External Controls and Indicators
- Keyboard Data Entry and Control Keys
- Typomatic Keys

#### EXTERNAL CONTROLS

Those controls and indicators (external) previously mentioned under "Operator-Control Features" have a new location on the 82-Key Typewriter Keyboard. The only switch with any significant change is the 96/64 Switch.

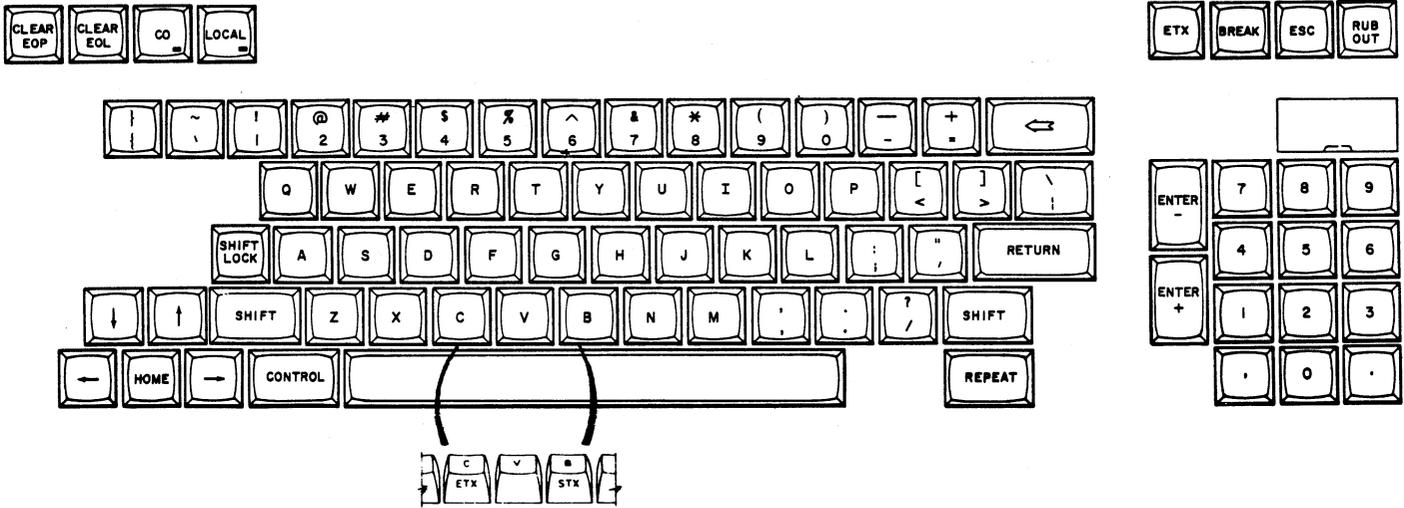



Figure C-1. 82-Key Typewriter Keyboard Layout

#### OPERATOR CONTROL FEATURES

The following list notes those switches which previously on the 80-Key Keyboard were located across the top of the keyboard and which on the 82-Key Typewriter Keyboard are all located under a lift-off cover, just above the numeric cluster. These switches are now two position rather than three position toggle switches. The list below names the switches as they appear left-to-right (also see figure C-2).

- 96/64 switch
- FULL/HALF DUPLEX switch
- 300/HIGH BAUD RATE switch
- 300/LOW BAUD RATE switch
- NO PARITY/ODD PARITY switch
- NO PARITY/EVEN PARITY switch
- PAGE/SCROLL switch

As noted earlier, the display terminal has external (operator) controls located on the keyboard and the front panel, and the rear panel. No change has occurred with the 82-Key Typewriter Keyboard external switches except for location on the keyboard. However, the change in function of the 96/64 switch is worth noting (see figure C-2).

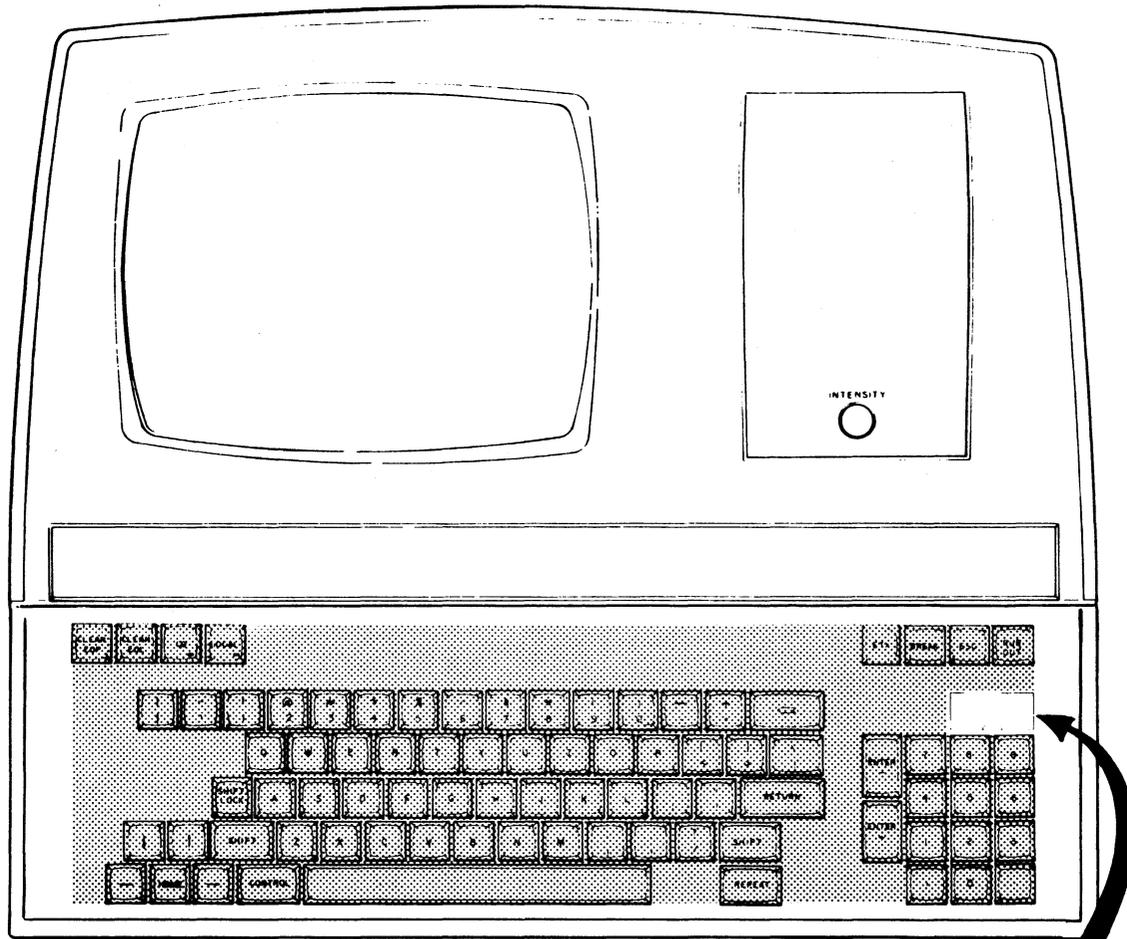

02450-3

**TOP**

64	NOT USED	HALF	HIGH	LOW	NO PAR ODD PAR	NO PAR EVEN PAR	PAGE	SCROLL
96		FULL						

(DECAL ON BACK OF LIFT-OFF COVER)


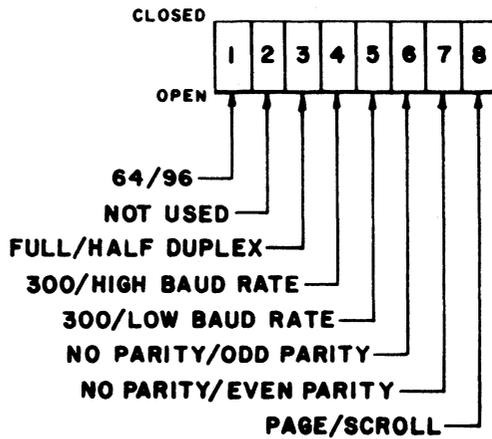


Figure C-2. 82-Key Typewriter Keyboard and Operator Control Features

# CDC 752 Terminal

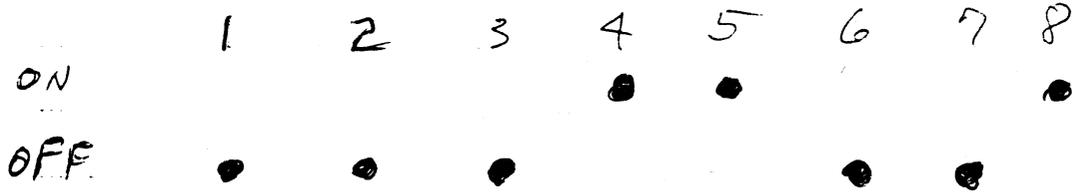

● = Pushed down

 
1200 BAUD for DI MCO modem Port

10 ON

8 OFF

7 ON

> 1200 BAUD



96/64 Switch

In addition to the existing information regarding the "96/64 Switch," the following will be added in discussing the 82-Key Typewriter Keyboard:

Also in the 64 position, symbols thus shown ( ^, }, {, \, and ! ) are not accessible via the keyboard. The positioning of the 96/64 switch does not affect received information.

With the switch in the 96 position, lowercase letters and symbols \ (grave accent), { (left brace), } (right brace), ! (vertical line), and ~ (swung dash) may be entered from the keyboard. In the 64 position, letters are uppercase regardless of SHIFT or SHIFT LOCK key use and the beforementioned symbols are replaced by:

- @ (commercial at) instead of grave accent
- [ (left bracket) instead of left brace
- ] (right bracket) instead of right brace
- \ (reverse slant) instead of vertical line
- ^ (caret) instead of swung dash

The association between key and generated symbols, however, is affected by the 96/64 switch under the keyboard lift-off cover. If the 96/64 switch is set to the 64 position, lowercase letters and the key symbols imprinted in yellow are disabled. Table C-1 shows the effect this has to the yellow symbol keys.

TABLE C-1. YELLOW SYMBOL GENERATION WITH 64-CHARACTER SELECTION

TYPEWRITER KEYBOARD	
Keys Actuated	Symbol Generated
	@
 + SHIFT or SHIFT LOCK	^
	\
 + SHIFT or SHIFT LOCK	\
	[
 + SHIFT or SHIFT LOCK	]

## KEYBOARD DATA-ENTRY AND CONTROL KEYS

Those keyboard data entry and control keys whose operation differs from those of the 80-Key Keyboard are as follows:

- CLEAR EOL Key
- STX (Control/B Key)
- ETX (Control/C Key)
- RETURN Key
- Cursor Down (↓) Key
- HOME Key

In addition, the LINE FEED Key is deleted when discussing the 82-Key Typewriter Keyboard.

Add the following key in the discussion of the 82-Key Typewriter Keyboard:

### CLEAR EOL Key

Pressing the CLEAR EOL Key clears all unprotected characters from the present cursor position to the end of the line containing the cursor. The cursor does not move.

Pressing the CLEAR EOL Key causes transmission of a SYN control function code and initiates the line clear operation.

### CONTROL Key

Under the heading "CONTROL Key", note the following paragraphs under the subheadings identified as "Fixed-Code Keys" and "Cursor Movement Keys."

Insert the following table for the 82-Key Typewriter Keyboard under the sub-heading "Fixed-Code Keys":

The following eight fixed code keys have codes that may also be accessed via actuation of the CONTROL key plus a character key:

<u>Fixed Code Key</u>	<u>ASCII Mnemonic</u>	<u>Equivalent</u>
CLEAR	CAN	CONTROL plus X
CLEAR EOL	SYN	CONTROL plus V
HOME	EM	CONTROL plus Y
↑	SUB	CONTROL plus Z
↓	LF	CONTROL plus J
→	NAK	CONTROL plus U
ENTER-	FS	CONTROL plus M
ENTER+	GS	CONTROL plus H

Use the following table for the 82-Key Typewriter Keyboard under the sub-heading "Cursor-Movement Keys":

<u>Keys</u>	<u>ASCII Mnemonic</u>	<u>Function</u>
RETURN	CR	Returns cursor to left margin
←	BS	Backspaces cursor
CLEAR	CAN	Clears display and resets cursor
CLEAR EOL	SYN	Clear to end of line
HOME	EM	Repositions cursor to home position
↑	SUB	Moves cursor up a line
↓	LF	Moves cursor down a line
→	NAK	Moves cursor forward
CONTROL plus V	SYN	Clears a line from cursor to end of line; cursor does not move
CONTROL plus N	SO	Initiates reduced intensity and advances cursor one space
CONTROL plus O	SI	Ends reduced intensity or blink (highlight) field and advances cursor one space
CONTROL plus W	ETB	Initiates blink and advances cursor one space

### STX (CONTROL/B Keys)\*

The STX key is an addition.

In block mode, using the CONTROL key in combination with the B key defines the starting point of a block data transfer and stores an STX code at the current cursor position. In half-duplex character mode, the STX code generated by the keys is stored and transmitted.

### ETX (CONTROL/C Keys)\*\*

In block mode, using the CONTROL key in combination with the C key defines the termination point for a block data transfer.

### RETURN Key

The RETURN Key on the 82-Key Typewriter Keyboard has the same function as the CARRIAGE RETURN Key on the 80-Key Keyboard.

### Cursor Positioning

Under the subheading "Cursor Positioning" add the following:

#### Cursor Down (↓)

This key functions the same as the Cursor Up Key, except that the cursor motion is downward. Displayed data is not affected. The code is LF.

### HOME Key

The HOME Key on the 82-Key Typewriter Keyboard has the same function as the RESET Key on the 80-Key Keyboard.

---

\*Front of keytop B to be engraved with STX.

\*\*Front of keytop C to be engraved with ETX.

## Typomatic Keys

When any encoded key is depressed and held, the repeat feature is activated without having to depress the REPEAT Key. The following legends will be Typomatic when depressed (see figure C-3).

- |                     |                           |
|---------------------|---------------------------|
| 1. _ (underline)    | 6. ↑                      |
| 2. - (hyphen)       | 7. X (upper & lower case) |
| 3. + (upper legend) | 8. /                      |
| 4. ←                | 9. ←                      |
| 5. ↓                | 10. →                     |

There shall be a 0.5 second delay from the time the key is depressed until it will repeat. If CONTROL is depressed along with these keys, they will not repeat.

Use this figure in conjunction with the Typomatic information.

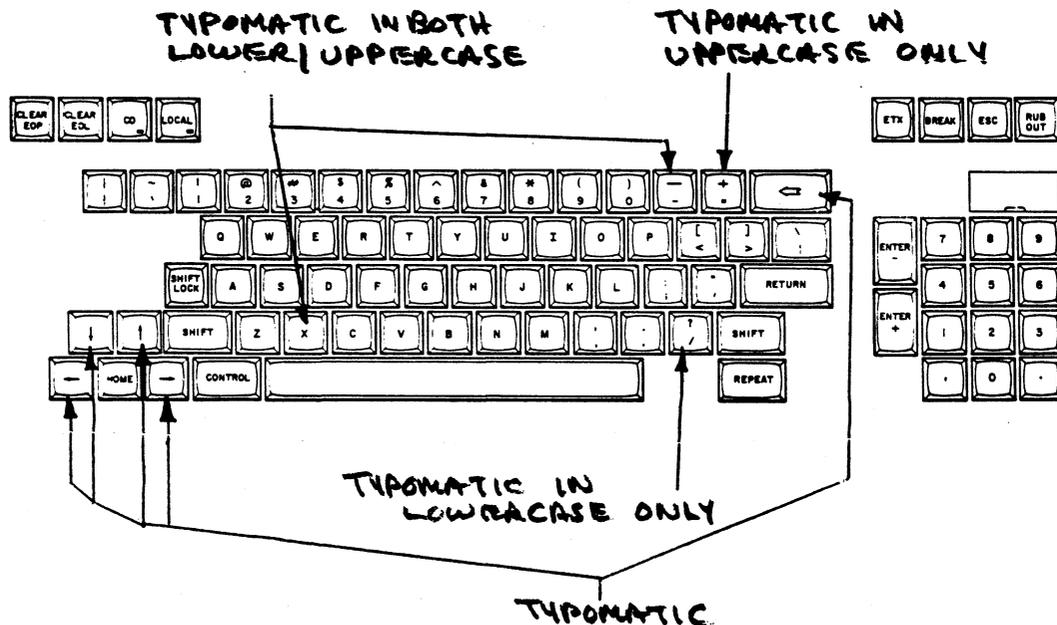


Figure C-3. 82-Key Typewriter Keyboard Typomatic Keys

### NOTE


When typomatic keys are pressed for more than one-half second, key symbol or function continually repeats until key is released. If control key is pressed in conjunction with a typomatic key, this repeat does not occur.

**EQUIPMENT/CONTROLWARE CONFIGURATOR**


CONTROL DATA CORPORATION <input checked="" type="checkbox"/> EQUIPMENT <input type="checkbox"/> CONTROLWARE		DESIGN ACTIVITY Data Systems Division Roseville 2401 N. Fairview AVE. St. Paul, MN 55113	DOCUMENT NO. 15920 EC 15630972 A																																																																																				
SPECIFICATION NO. 16042790	IDENTIFICATION NO. CA150 A	CODE IDENTIFICATION SHEET 1 OF 3 TITLE: 752 ISO KEYBOARD NUMERIC PAD	REV																																																																																				
CONFIGURATION		REVISION STATUS OF SHEETS	REVISIONS																																																																																				
<table border="1"> <thead> <tr> <th>REVISION</th> <th>ECO</th> <th>D/W EFFCT</th> <th>SERIES</th> <th>ECO</th> <th>D/W EFFCT</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> <th>7</th> <th>8</th> <th>9</th> <th>10</th> <th>REV</th> <th>ECO</th> <th>DESCRIPTION</th> <th>DATE</th> <th>APPD</th> </tr> </thead> <tbody> <tr> <td>01</td> <td>124943</td> <td></td> <td></td> <td>AA</td> <td></td> <td>5000-90</td> <td>RELEASED CLASS "B"</td> <td>11-17-77</td> <td>W/R</td> </tr> <tr> <td></td> <td>50179</td> <td>ADDED SPEC. NO. 6 REF. EC'S</td> <td>11-22-77</td> <td>W/R</td> </tr> <tr> <td></td> <td>A</td> <td>RELEASED CLASS A</td> <td>11-22-77</td> <td>W/R</td> </tr> </tbody> </table>	REVISION	ECO	D/W EFFCT	SERIES	ECO	D/W EFFCT	1	2	3	4	5	6	7	8	9	10	REV	ECO	DESCRIPTION	DATE	APPD	01	124943			AA													5000-90	RELEASED CLASS "B"	11-17-77	W/R																		50179	ADDED SPEC. NO. 6 REF. EC'S	11-22-77	W/R																		A	RELEASED CLASS A	11-22-77	W/R			
REVISION	ECO	D/W EFFCT	SERIES	ECO	D/W EFFCT	1	2	3	4	5	6	7	8	9	10	REV	ECO	DESCRIPTION	DATE	APPD																																																																			
01	124943			AA													5000-90	RELEASED CLASS "B"	11-17-77	W/R																																																																			
																	50179	ADDED SPEC. NO. 6 REF. EC'S	11-22-77	W/R																																																																			
																	A	RELEASED CLASS A	11-22-77	W/R																																																																			
1. TOP ASSEMBLY NO: 61402100 2. DESCRIPTION: This is a special purpose 80 key keyboard specifically designed to meet the 752 requirements for an ISO Layout Keyboard. The keyboard and its associated encoding electronics is enclosed in a free standing housing. The keyboard has a parallel interface to its controller. The keyboard has alphanumeric cursor control, CRT control and line control keys. The keyboard has a numeric pad with Enter Plus and Enter Minus keys. The cable length to the controller is 30 inches. 3. SUPPLEMENTAL ITEMS: None 4. EQUIPMENT MANUALS: 62957300																																																																																							
																		APL 15630972																																																																					
																		DETACHED LIST																																																																					
DESIGNER M. Todd	DATE 11/17/77	APPROVED <i>[Signature]</i>	DATE 11/22/77	APPROVED <i>[Signature]</i>	DATE 11/22/77	APPROVED <i>[Signature]</i>	DATE 11/22/77	APPROVED <i>[Signature]</i>	DATE 11/22/77	APPROVED <i>[Signature]</i>	DATE 11/22/77	APPROVED <i>[Signature]</i>	DATE 11/22/77	APPROVED <i>[Signature]</i>	DATE 11/22/77	APPROVED <i>[Signature]</i>	DATE 11/22/77	APPROVED <i>[Signature]</i>	DATE 11/22/77	APPROVED <i>[Signature]</i>																																																																			

**EQUIPMENT CONFIGURATOR**

CONTROL DATA CORPORATION		DESIGN ACTIVITY Data Systems Division Roseville 2401 N. Fairview Ave. St. Paul, MN 55113	DOCUMENT NO. 15920 EC 15630972 A
SPECIFICATION NO. 16042790	EQUIPMENT TYPE NO. CA150A	CODE IDENTIFICATION SHEET 2 OF 3 EQUIPMENT NOMENCLATURE 752 ISO KEYBOARD NUMERIC PAD	REV
5. SPARE PARTS LIST: 66290100 6. REFERENCE EC'S: 15630784 CC555G 15630785 CC555H 15630786 CC555J 15630787 CC555K 7. INPUT POWER CHARACTERISTICS: + 5 VOLTS D.C. @ .600 AMP -12 VOLTS D.C. @ .050 AMP 8. ENVIRONMENTAL CHARACTERISTICS: 40° F to 120° F 10% to 90% R.H. 9. GENERAL: 66300756			

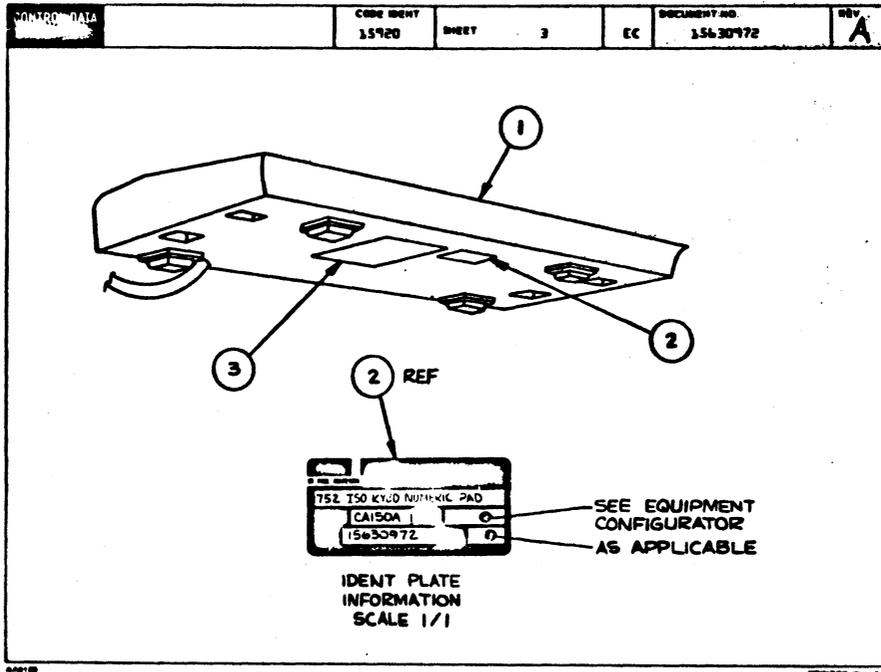

BUILD ARC 440		ASSEMBLY PARTS LIST				PROJ. DATE 01-02-78	PAGE 1	FILE CHANGE NO. 12490-73					
REV.	ASSEMBLY NUMBER	CD	REV.	QTY.	DESCRIPTION	EC	STATUS	STATUS DATE	REV. QTY.	FILE DATE			
00601	15630972-0	A	A		KYD NUM PAD 752 15n	N	OK	01-02-78	CA150A	01-02-78			
LINE	LI	PART NUMBER	CD	QTY.	U/S	PART DESCRIPTION	EC	YTD	REV. QTY. IN	REV. QTY. SHIP	QTY.	REV. IN	REV. SHIP
001	01	61402100-0		1		PC KEYBOARD ASSY (80 KEY)							
002	01	15101900-0		1		PC ID PLATE, EQUIP MEDIUM VINYL							
003	01	10124207-1		1		PC FORM FCO LOG							
						0003 TOTAL LINES							

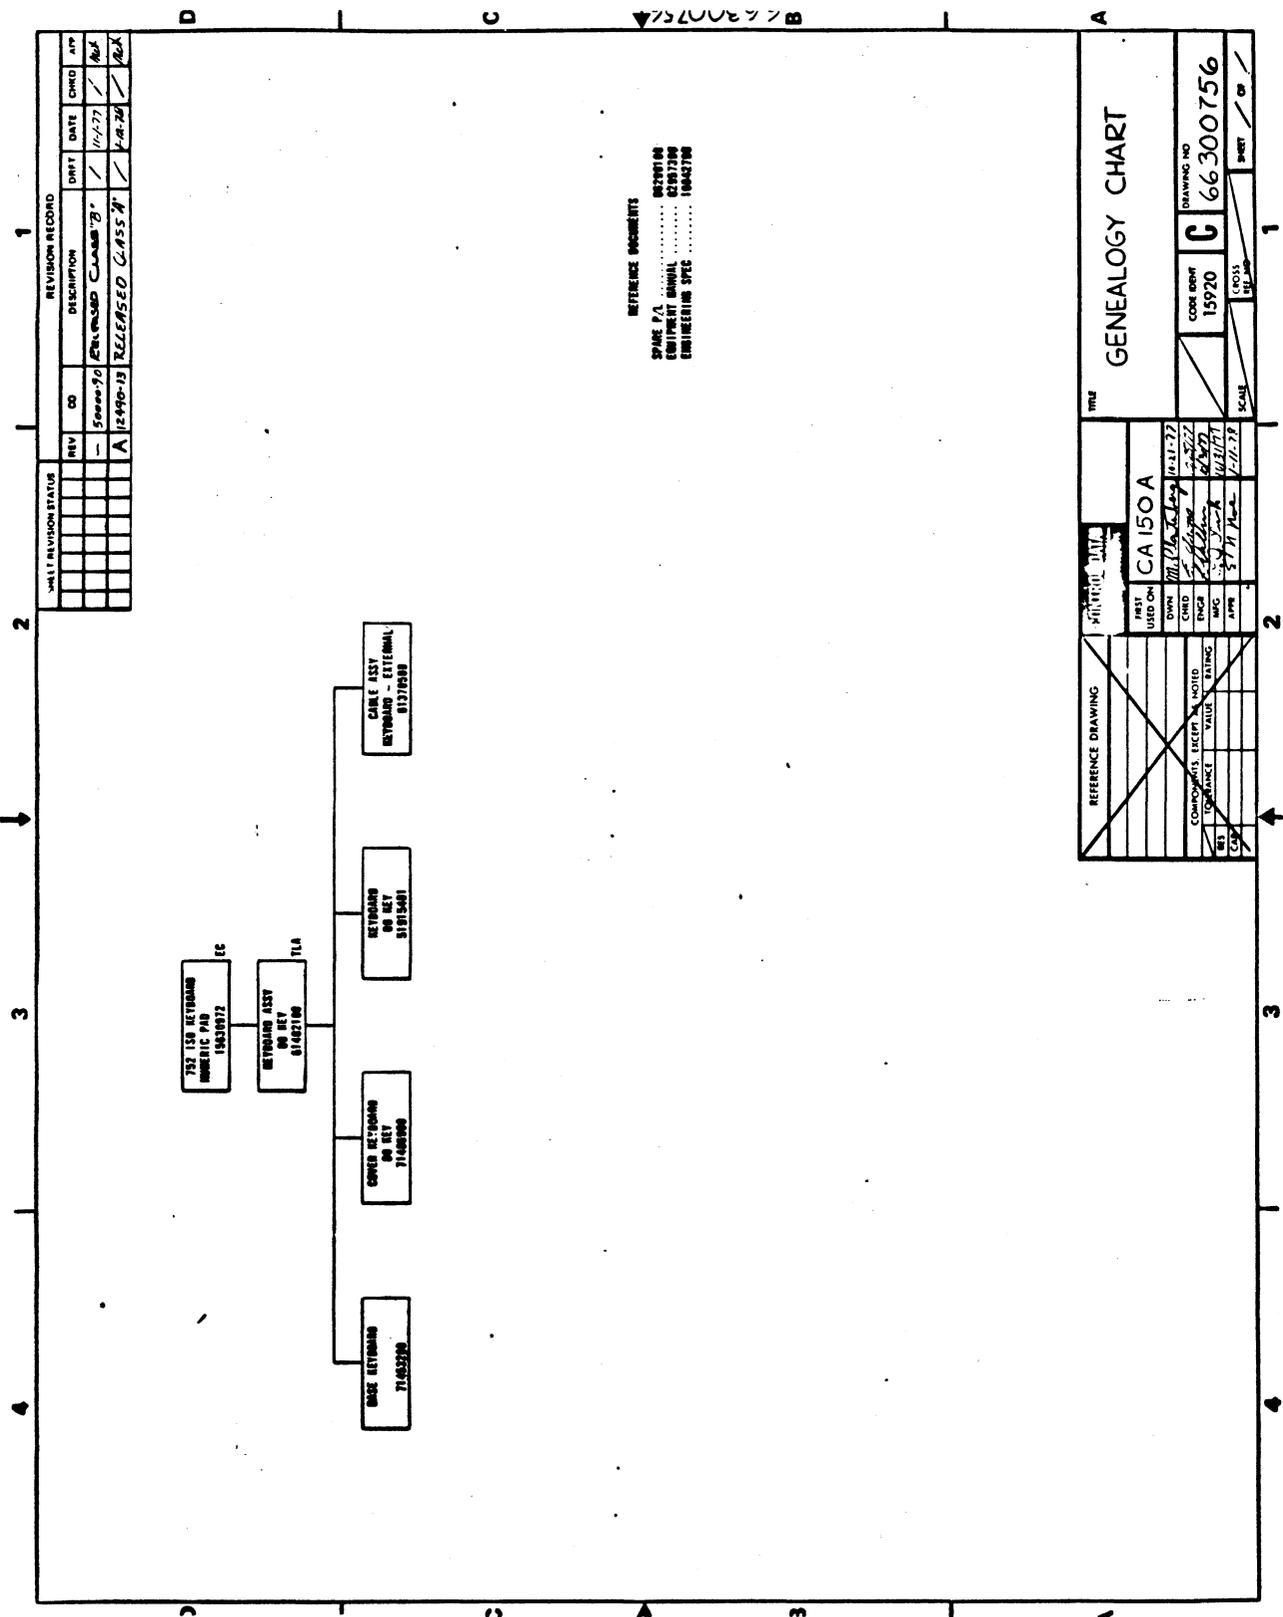

REFERENCE DOCUMENTS  
 SPARE P/L ..... 06298100  
 EQUIPMENT MANUAL ..... 02097200  
 ENGINEERING SPEC ..... 10042700

SHEET REVISION STATUS				REVISION RECORD			
REV	CD	DESCRIPTION	DMY	DATE	CHKD	APP	
1	A	RELEASED CLASS 'B'	✓	11/1/77	✓	RLX	
2	A	RELEASED CLASS 'A'	✓	1-1-78	✓	RLX	

REFERENCE DRAWING		TITLE	
<del>CA 150A</del>		CA 150A	
FIRST USED ON	OWN	DATE	BY
		10/11/77	
CHKD	ENGR	DATE	BY
		10/11/77	
COMPONENTS EXCEPT AS NOTED	VALUR	DATE	BY
REF. TO DRAWING	VALUR	DATE	BY
CHKD	APPR	DATE	BY
		1-11-78	
CODE BOOK		DRAWING NO	
15920		C 66300756	
SCALE		SHEET	
		1 OF 1	


BUILD ARC 230

**ASSEMBLY PARTS LIST**

PRINT DATE: 08-18-76  
 PAGE: 1  
 JAGGASU  
 TEL. 210


REV.	ASSEMBLY NUMBER	CD	REV.	DATE	DESCRIPTION	QC	STATUS	ISSUE DATE	ISS. DESP.	REV. NO.	REV. DATE		
000	6192128	0	0		KEYBOARD ASSY (80 KEY)	N	OK	08-18-76	CC9018-0		08-18-76		
LINE NO.	LT	PART NUMBER	CS	QUANTITY	U/O	PART DESCRIPTION	UC	TL0	COL. NO. 10	COL. NO. 09T	U/O	REV. NO.	REV. DATE
001	01	73453200	9	1		PC BASE KEYBOARD	P						
002	01	73486900	5	1		PC COVER KEYBOARD	P						
003	01	53015001	7	1		PC KEYBOARD 80 KEY	P						
004	01	09060303	7	0		PC WSCR SELF-LKG HEX HD 6-32X3/8	B						
005	01	10125005	5	10		PC WASHER FLY NO. 6 STL CP	B						
006	01	09060300	5	0		PC WSCR SELF-LKG HEX HD 6-32X1/2	B						
007	01	00370500	3	1		PC CABLE ASSY(KEYBOARD-EXTERNAL)	A						
008	01	20565003	1	1		PC CABLE CLAMP 0.312 DIA	B						
009	01	10007900	3	1		PC SCREW SELF TAPPING 8	P						
010	01	09065001	1	0		PC BUMPER SELF STICKING BLACK	P						
						0010 TOTAL LINES							



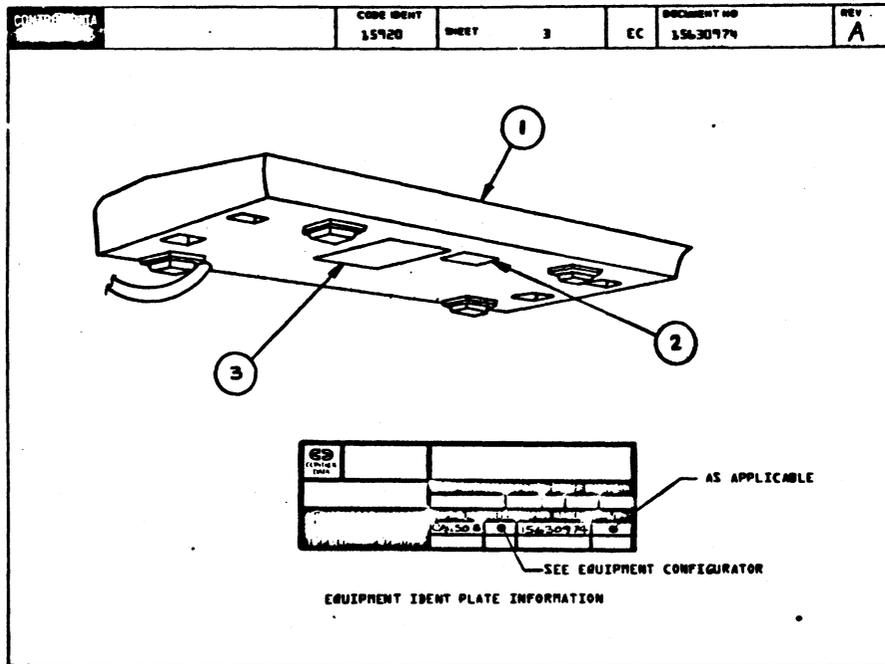

BUILD ARC 200		<b>ASSEMBLY PARTS LIST</b>				PRINT DATE	FIGS	FIG CHANGED BY					
						04-07-78	1	15630774-5040					
ORG	ASSEMBLY NUMBER	CD	REV	QTY	DESCRIPTION	EC	STATUS	STATUS DATE	ENGR. DESIG.	FILE DATE			
4000	15630774	2	A		KB2 TYPEWRITER NUM PAD 752	N	156	04-07-78	CA1530	04-07-78			
ITEM NO	LI	PART NUMBER	CD	QUANTITY	U/O	PART DESCRIPTION	EC	YLD	DCD. NO. IN	DCD. NO. SHP	U/O	USE IN	USE SHP
001	01	15630775	9	1		PC KB2 ASSY 82KEY (TLA)		G					
002	01	151018-0-3 51916703-0		1		PC ID PLATE, EQUIP MEDIUM VINYL UL LISTING ONLY		P					
003	01	10124207	1	1		PC FORM PCO LOG		D					
						0003 TOTAL LINES							

62957400B

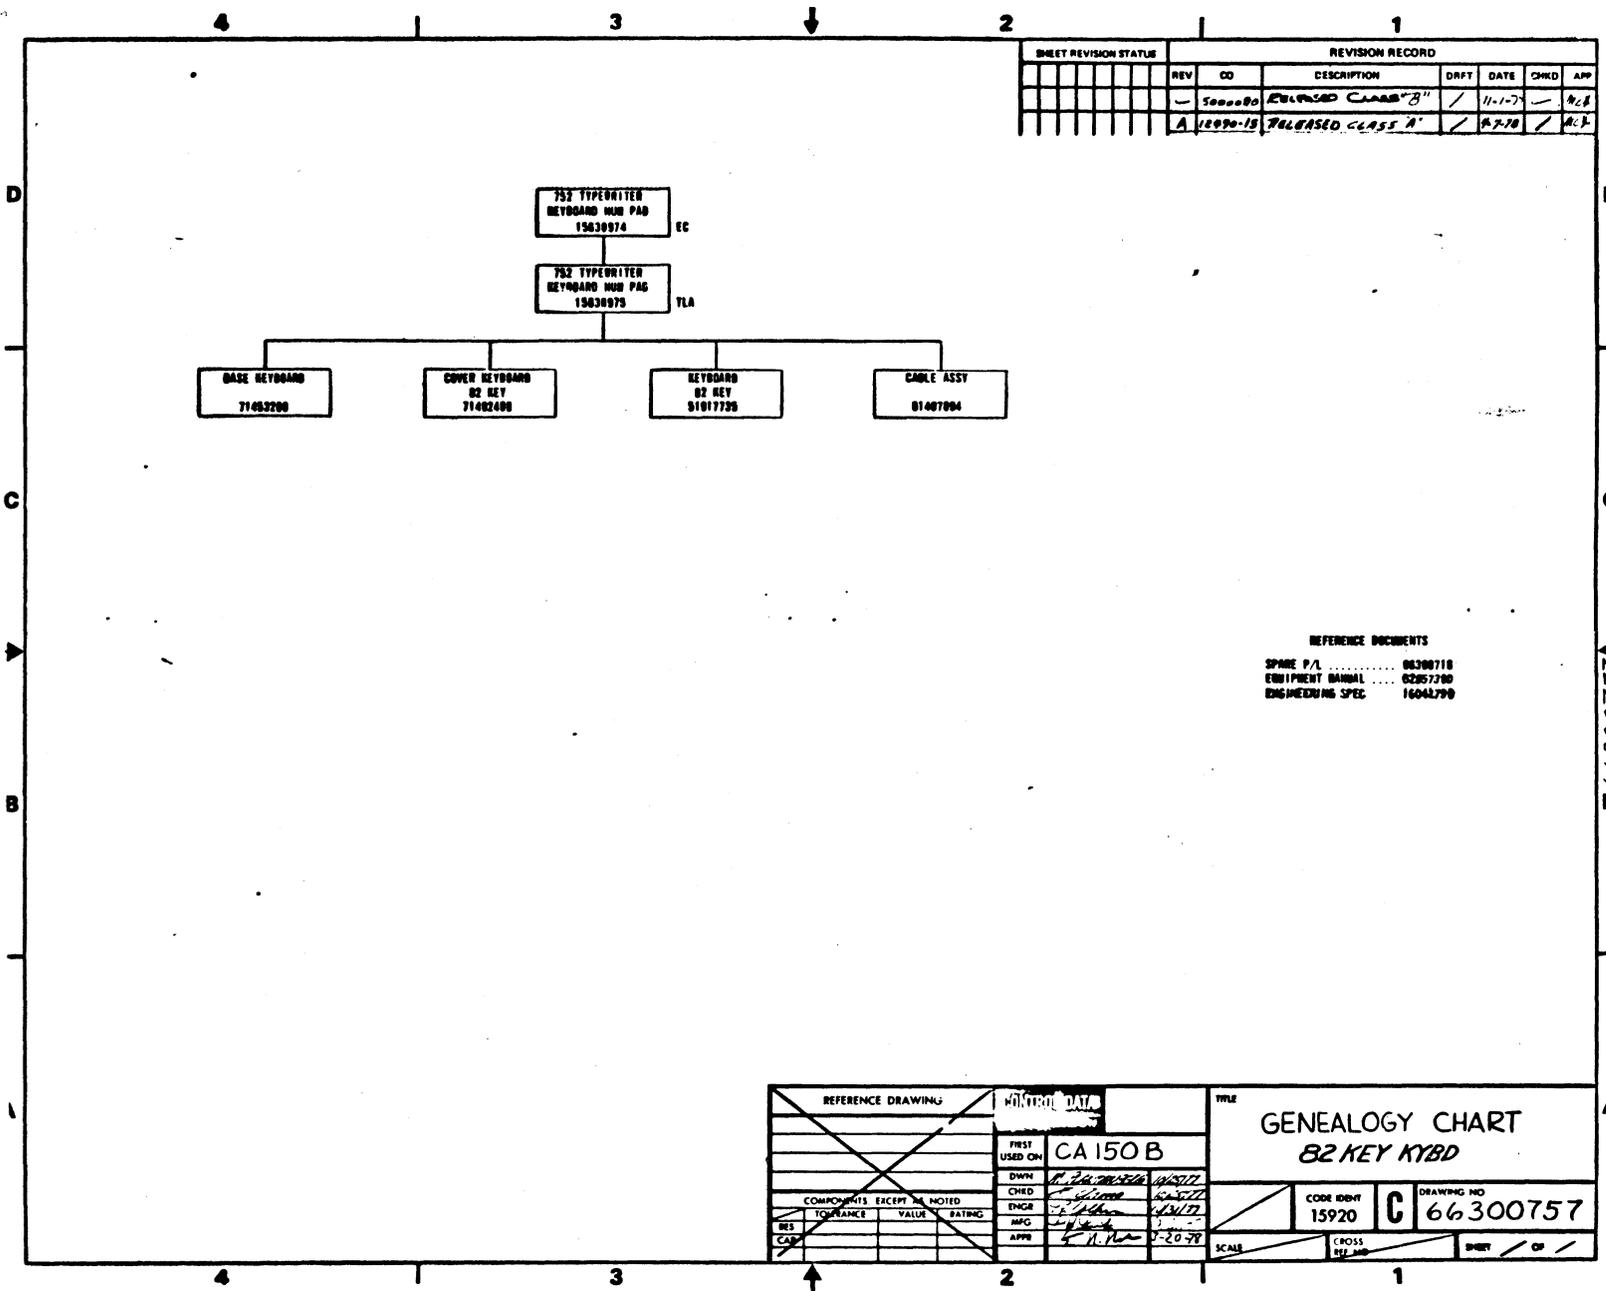

SHEET REVISION STATUS		REVISION RECORD					
REV	CO	DESCRIPTION	DRAFT	DATE	CHKD	APP	
~	5000000	RELEASED CLASS "B"	/	11-1-77	/	ACB	
A	10000-10	RELEASED CLASS "A"	/	12-7-78	/	ACB	

REFERENCE DOCUMENTS  
 SPARE P/L ..... 06300710  
 EQUIPMENT MANUAL ..... 02057200  
 ENGINEERING SPEC ..... 16042790

REFERENCE DRAWING	WORKING DATA	TITLE												
<table border="1"> <tr> <td>FIRST USED ON</td> <td>CA 150 B</td> </tr> <tr> <td>DWNN</td> <td>11-2-77</td> </tr> <tr> <td>CHRD</td> <td>11-2-77</td> </tr> <tr> <td>ENGR</td> <td>11-2-77</td> </tr> <tr> <td>APPR</td> <td>11-2-77</td> </tr> </table>		FIRST USED ON	CA 150 B	DWNN	11-2-77	CHRD	11-2-77	ENGR	11-2-77	APPR	11-2-77	<b>GENEALOGY CHART</b> <b>82 KEY KYBD</b>		
		FIRST USED ON	CA 150 B											
DWNN	11-2-77													
CHRD	11-2-77													
ENGR	11-2-77													
APPR	11-2-77													
<table border="1"> <tr> <td>CODE IDENT</td> <td>DRAWING NO</td> </tr> <tr> <td>15920</td> <td>66300757</td> </tr> </table>		CODE IDENT	DRAWING NO	15920	66300757	<table border="1"> <tr> <td>SCALE</td> <td>CROSS REF NO</td> <td>SHEET</td> <td>OF</td> </tr> <tr> <td></td> <td></td> <td>1</td> <td>1</td> </tr> </table>	SCALE	CROSS REF NO	SHEET	OF			1	1
CODE IDENT	DRAWING NO													
15920	66300757													
SCALE	CROSS REF NO	SHEET	OF											
		1	1											

C-16



BUILD ARC 230

**ASSEMBLY PARTS LIST**

PART DATE	PAGE	TLS CHANGE NO.
04-07-78	1	0000000

QTY	ASSEMBLY NUMBER	CD	REV.	QTY.	DESCRIPTION	MC	STATUS	STATUS DATE	ENG. DESK.	FILE DATE			
U000	15530975	4	A	D	KYBD ASSY 82KEY (TLA)	0	ENG	04-07-78	CA150B	04-07-78			
U000	LI	PART NUMBER	CD	QTY	U/S	PART DESCRIPTION	MC	U/S	ECO. NO. IN	ECO. NO. OUT	L/T	USE IN	USE OUT
U01	01	71453200	9	1		PC BASE, KEYBOARD (GOLD FINISH)	P						
U02	01	71492408	8	1		PC COVER KYBD 82 KEY	P						
U03	01	51917735	6	1		PC KEYBOARD SELECTRIC	P						
U04	01	00960303	7	6		PC MSCR SLF-LKG HEX 6-32X3/8	B						
U05	01	10125605	5	6		PC WSHR NO.5 TYP A PLAIN STL CP	B						
U06	01	00860304	5	4		PC MSCR SLF-LKG HEX 6-32X1/2	B						
U07	01	61407894	7	1		PC CABLE ASSY KYBD EXT	A						
U08	01	51917070	8	1		PC CLAMP, TUBE SIZE 6 (ALUM)	P						
U09	01	18607908	3	1		PC SCR, TPG IND/HEX 8-18X1/2 STL	B						
U10	01	51805801	1	4		PC BUMPER, RUBBER .300M SLF-STK	P						
U11	01	09040202	5	4		PC WASHER LOCK DISHED TOOTH NO.6	B						
U12	01	71492101	4	1		PC PLUG, SWITCH (PLASTIC/BLK)	P						
U13	01	71492421	4	1		PC LABEL COVER SWITCH	P						
						0013 TOTAL LINES							

62957400B

C-18

DWN	<i>R. Thompson</i>	10247	CONTROL DATA CORPORATION	TITLE	CABLE ASSY KEYBOARD EXTERNAL	PREFIX	DOCUMENT NO.	REV
CHKD	<i>R. Thompson</i>	10247		FIRST USED ON	CA150 B	A	61407894	A
ENG	<i>R. Thompson</i>	10247				NHA	15630975	SHEET 1 of 5
MFG	<i>R. Thompson</i>	10247						
APPR	<i>S. H. Lee</i>	8-20-78	CODE IDENT	15920				

SHEET REVISION STATUS					REVISION RECORD						
	5	4	3	2	1	REV	ECO	DESCRIPTION	DRFT	DATE	APP
							5000-90	RELEASED CLASS "B"	/	11-77	<i>MEP</i>
						A	12490-15	RELEASED CLASS "A"	/	4-7-78	<i>MEP</i>


  

NOTES

- △ APPLY LABEL TO CABLE PER DRAWING 82191061 - METHOD 5. MARK AS SHOWN.
- △ FOLD BACK UNUSED WIRES AND ADD SHRINK SLEEVING TO END OF WIRES.
- △ MARK WITH WHITE DOT TO IDENTIFY PIN 2 LOCATION.


APL 61407894  
DETACHED LISTS

PRINTED IN U.S.A.

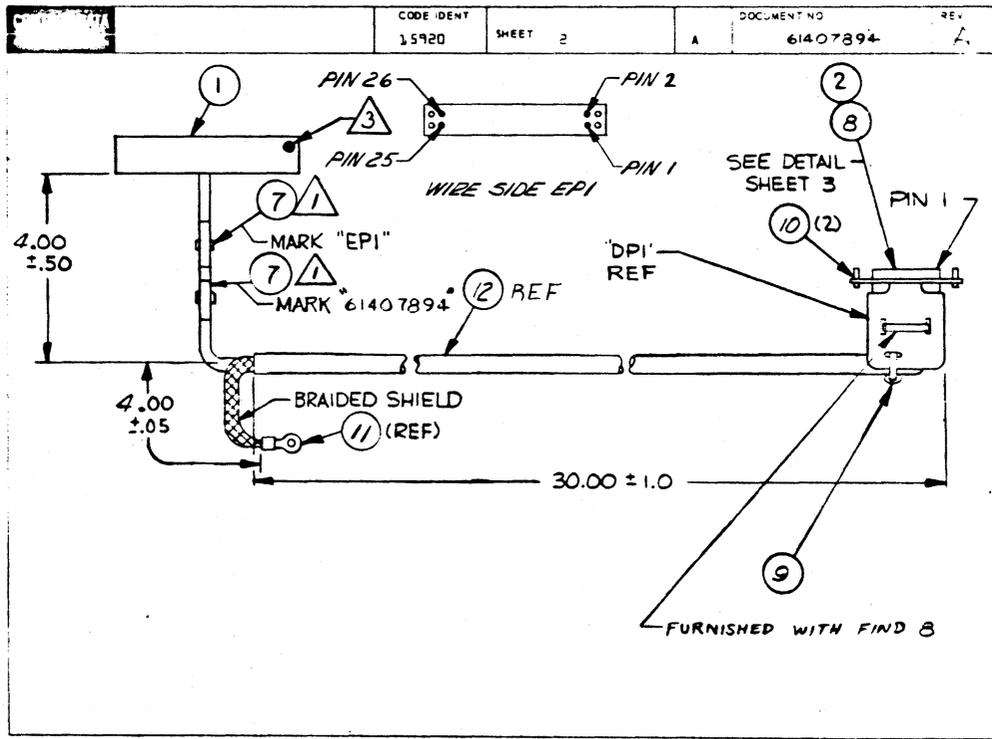

62957400B

C-19

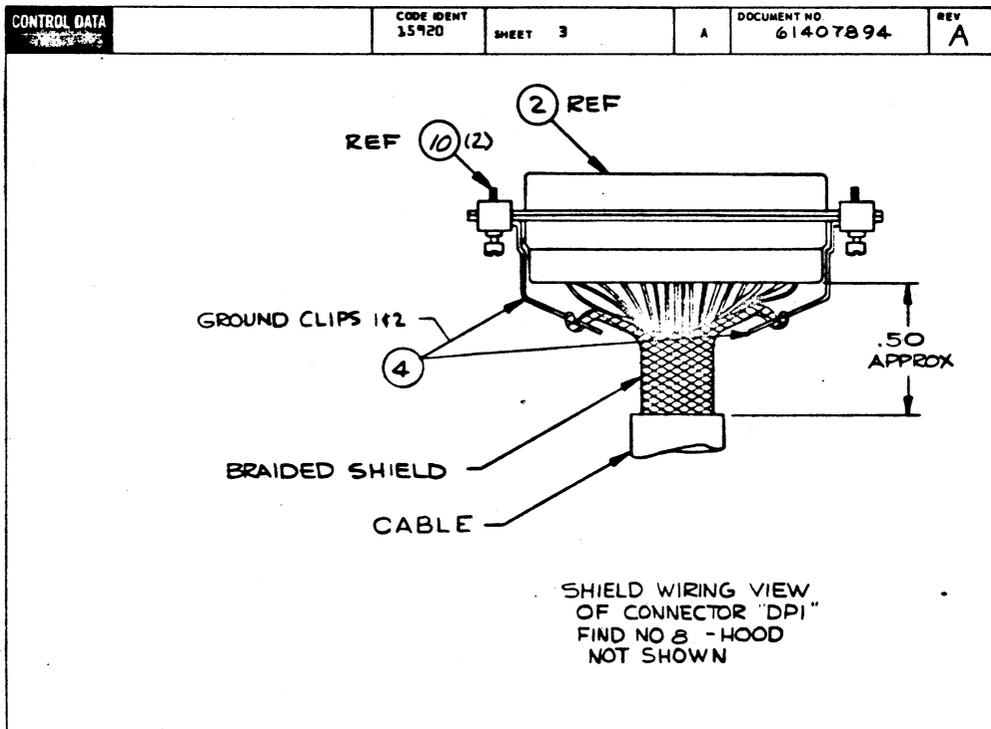

CONTROL DATA				CODE IDENT	SHEET	WL	DOCUMENT NO.	REV			
CORPORATION				15920	4		61407894	A			
CONDUCTOR IDENT	FIND NO	GAUGE (REF)	COLOR (REF)	LENGTH (APPROX)	ORIGIN		ACCESS FIND NO	DESTINATION		ACCESS FIND NO	REMARKS
1	12	26	970	36.0	DP1	1	5	EP1	21	3	C-0. LED
2	12	26	5	36.0	DP1	2	5	EP1	19	3	SW6 - PAGE/SCROLL
3	12	26	6	36.0	DP1	3	5	EP1	5	3	KYBD DATA 2 <sup>6</sup>
4	12	26	7	36.0	DP1	4	5	EP1	6	3	KYBD DATA 2 <sup>5</sup>
5	12	26	8	36.0	DP1	5	5	EP1	7	3	KYBD DATA 2 <sup>4</sup>
6	12	26	9	36.0	DP1	6	5	EP1	8	3	KYBD DATA 2 <sup>3</sup>
7	12	26	90	36.0	DP1	7	5	EP1	9	3	KYBD DATA 2 <sup>2</sup>
8	12	26	91	36.0	DP1	8	5	EP1	10	3	KYBD DATA 2 <sup>1</sup>
9	12	26	92	36.0	DP1	9	5	EP1	11	3	KYBD DATA 2 <sup>0</sup>
10	12	26	93	36.0	DP1	10	5	EP1	3	3	DATA READY
11	12	26	94	36.0	DP1	11	5	EP1	22	3	KEY 4 ON LINE
12	12	26	95	36.0	DP1	12	5	EP1	14	3	SW3 - FULL/HALF
13	12	26	96	36.0	DP1	13	5	EP1	2	3	BREAK
14	12	26	910	36.0	DP1	14	5	EP1	15	3	SW4 - HIGH RATE
15	12	24	4	36.0	DP1	15	5	EP1	16	3	SW5 - LOW RATE
16	12	26	920	36.0	DP1	16	5	EP1	17	3	SW6 - ODD PARITY
17	12	26	930	36.0	DP1	17	5	EP1	18	3	SW7 - EVEN PARITY
18	12	26	940	36.0	DP1	18	5	OPEN			NOT USED  SW1
19	12	26	96	36.0	DP1	19	5	OPEN			NOT USED  SW2
20	12	26	950	36.0	DP1	20	5	EP1	20	3	FRAME GROUND

C-20

62957400B




**EQUIPMENT/CONTROLWARE CONFIGURATOR**

<b>CONTROL DATA CORPORATION</b>		<input checked="" type="checkbox"/> EQUIPMENT <input type="checkbox"/> CONTROLWARE		DESIGN ACTIVITY Data Systems Division Roseville 2401 N. Fairview Ave. St. Paul, MN 55113	DOCUMENT NO. 15920 EC 15630973 A
SPECIFICATION NO. 16042790	IDENTIFICATION NO. CA150C	CODE IDENTIFIER SHEET 1 OF 3 REV TITLE: 752 ISO KEYBOARD-NUMERIC PAD, FTZ			
CONFIGURATION S/N EFFTY SERIES ECO S/N EFFTY				REVISION STATUS OF SHEETS 1 2 3 4 5 6 7 8 9 10	
#1 1547013 101				A A A	
REVISIONS REV ECO DESCRIPTION DATE APPD					
01 1547013 ADDED SPEC. NO. 4 REF. EC'S				11-22-74	
02 1547013 RELEASED CLASS A				12-18-74	
1. TOP ASSEMBLY NO: 61407539					
2. DESCRIPTION: This is a special purpose 80 key keyboard specifically designed to meet the 752 requirements for an ISO layout keyboard that will be used with a FTZ terminal. The keyboard and its associated encoding electronics is enclosed in a free standing housing. The keyboard has a parallel interface to its controller. The keyboard has alphanumeric-cursor control, CRT control and line control keys. The keyboard has a numeric pad with Enter Plus and Enter Minus keys. The cable length to the controller is 30 inches. This keyboard will be FTZ listed.					
3. SUPPLEMENTAL ITEMS: None					
4. EQUIPMENT MANUALS: 62957300					
API 15630973 DETACHED LIST					
DESIGNED BY H. Todd	DATE 11/22/74	APPROVED BY [Signature]	DATE 11/22/74	DESIGNED BY J. Russell	DATE 11/22/74


**EQUIPMENT CONFIGURATOR**

<b>CONTROL DATA CORPORATION</b>		DESIGN ACTIVITY Data Systems Division Roseville		DOCUMENT NO. 15920 EC 15630973 A
SPECIFICATION NO. 16042790	EQUIPMENT TYPE NO. CA150C	CODE IDENTIFIER SHEET 2 OF 3 REV EQUIPMENT NOMENCLATURE 752 ISO KEYBOARD-NUMERIC PAD, FTZ		
5. SPARE PARTS LIST: 66290100				
6. REFERENCE ECS: 15630964 CC555G 15630965 CC555H 15630966 CC555J 15630967 CC555K				
7. INPUT POWER CHARACTERISTICS: + 5 VOLTS D.C. @ .600 AMP -12 VOLTS D.C. @ .050 AMP				
8. ENVIRONMENTAL CHARACTERISTICS: 40°F to 120°F 10% to 90% R.H.				
9. GENEALOGY: 66300758				

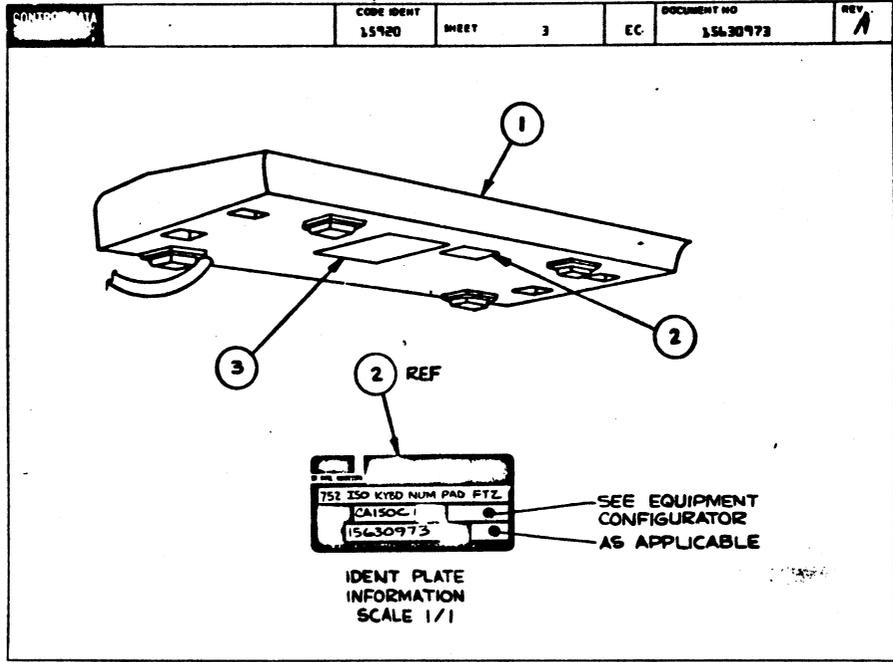

SHIELD ARC 440										ASSEMBLY PARTS LIST										FORM DATE	PAGE	FIG CHANGE NO.
																				01-13-70	1	01-13-70
REV.	ASSEMBLY NUMBER	CP	REV.	QTY.	DESCRIPTION	UC	STATUS	STATUS DATE	ENCL. GROUP	FIG. DATE	REV.	QTY.	DESCRIPTION	UC	STATUS	STATUS DATE	ENCL. GROUP	FIG. DATE				
0000	15430973	A	A		KYBD NUMFRIC PAD FTZ 752 150	N	REV	01-13-70	CA150C	01-13-70												
001	01	61407539	A	1	PC KEYBOARD ASSY BKKEY (SHIELD)																	
002	01	15101000	A	1	PC ID PLATE, EQUIP MEDIUM VINYL																	
003	01	10124267	A	1	PC FORM FCO LOG																	
					0003 TOTAL LINES																	

62957400B

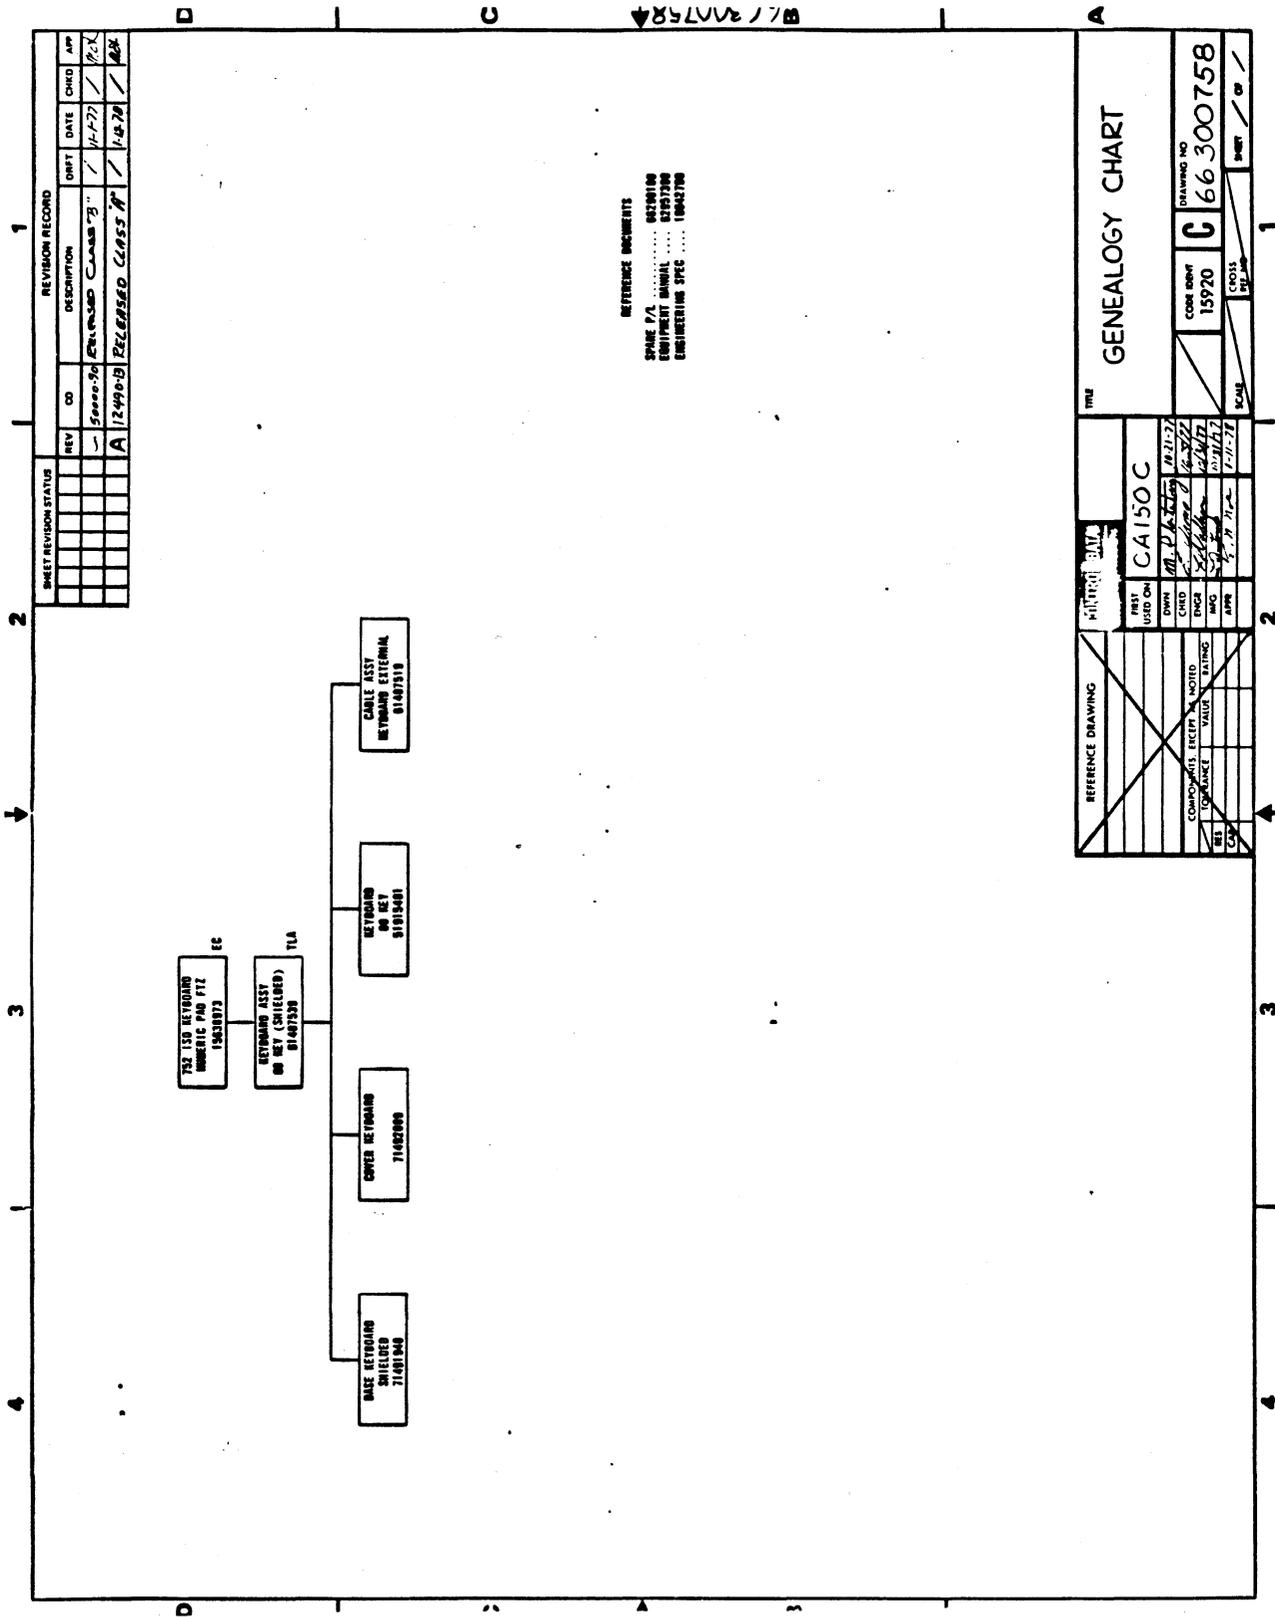

SHEET REVISION STATUS				REVISION RECORD			
REV	CD	DESCRIPTION	ORFT	DATE	CHKD	APP	
1	5000-50	RELEASED CLASS B	/	1-1-77	/	PK	
2	A	RELEASED CLASS A	/	1-8-78	/	AK	

REFERENCE DOCUMENTS  
 SCALE P.C. .... DESIGNING  
 EQUIPMENT MANUAL ..... ESTATING  
 ENGINEERING SPEC ..... (ENGL278)

REFERENCE DRAWING		TITLE																	
<table border="1"> <tr> <td>COMP. DATE</td> <td>18-21-77</td> </tr> <tr> <td>CHKD</td> <td>18-21-77</td> </tr> <tr> <td>ENGR</td> <td>18-21-77</td> </tr> <tr> <td>APP</td> <td>18-21-77</td> </tr> </table>		COMP. DATE	18-21-77	CHKD	18-21-77	ENGR	18-21-77	APP	18-21-77	CA150C									
		COMP. DATE	18-21-77																
CHKD	18-21-77																		
ENGR	18-21-77																		
APP	18-21-77																		
<table border="1"> <tr> <td>COMP. DATE</td> <td>18-21-77</td> </tr> <tr> <td>CHKD</td> <td>18-21-77</td> </tr> <tr> <td>ENGR</td> <td>18-21-77</td> </tr> <tr> <td>APP</td> <td>18-21-77</td> </tr> </table>		COMP. DATE	18-21-77	CHKD	18-21-77	ENGR	18-21-77	APP	18-21-77	<table border="1"> <tr> <td>CODE BOOK</td> <td>15920</td> <td>DRAWING NO</td> <td>66300758</td> </tr> <tr> <td>SCALE</td> <td>CROSS</td> <td>SHEET</td> <td>08</td> </tr> </table>		CODE BOOK	15920	DRAWING NO	66300758	SCALE	CROSS	SHEET	08
COMP. DATE	18-21-77																		
CHKD	18-21-77																		
ENGR	18-21-77																		
APP	18-21-77																		
CODE BOOK	15920	DRAWING NO	66300758																
SCALE	CROSS	SHEET	08																

GENEALOGY CHART

**ASSEMBLY PARTS LIST**

KEYBOARD ASSY (80 KEY) SHIELDED

DATE: 7-18-76  
 80 10653-60  
 7-30-76

86 101

ASSEMBLY NUMBER: 61A07539 A


TRANSACTION CODES:  
 1. QUOTE AND PART NUMBER  
 2. QUOTE AND PART NUMBER AND QUANTITY  
 3. QUOTE AND PART NUMBER AND QUANTITY AND UNIT  
 4. QUOTE AND PART NUMBER AND QUANTITY AND UNIT AND PRICE

5. QUOTE AND PART NUMBER AND QUANTITY AND UNIT AND PRICE AND CURRENT STATUS  
 6. QUOTE AND PART NUMBER AND QUANTITY AND UNIT AND PRICE AND CURRENT STATUS AND UNIT  
 7. QUOTE AND PART NUMBER AND QUANTITY AND UNIT AND PRICE AND CURRENT STATUS AND UNIT AND PRICE  
 8. QUOTE AND PART NUMBER AND QUANTITY AND UNIT AND PRICE AND CURRENT STATUS AND UNIT AND PRICE AND UNIT

CC5828

QTY	UNIT	ASSEMBLY NUMBER	DESCRIPTION	QTY	UNIT	ASSEMBLY NUMBER	DESCRIPTION	QTY	UNIT	ASSEMBLY NUMBER	DESCRIPTION
2	00101	714919A04	BASE KYBD (SHIELDED)								
2	00201	71492009	COVER KYBD (SHIELDED)								
2	00301	519154017	KEYBOARD 80 KEY								
2	00A01	005603037	MSCR SELF-LKG HEX HD 6-32								
2	00501	101256055	WSHR FLT NO. 6 STL CP								
2	00601	008603045	MSCR SELF-LKG HEX HD 1/2								
2	00701	61A07519	CABLE ASSY (KYBD-EXTERNAL)								
2	00801	51917070	CLAMP TUBE								
2	00901	186079083	SCREW SELF TAPPING 8								
2	01001	518058011	BUMPER SELF STICKING BK								
2	01101	090A02025	WISHER								



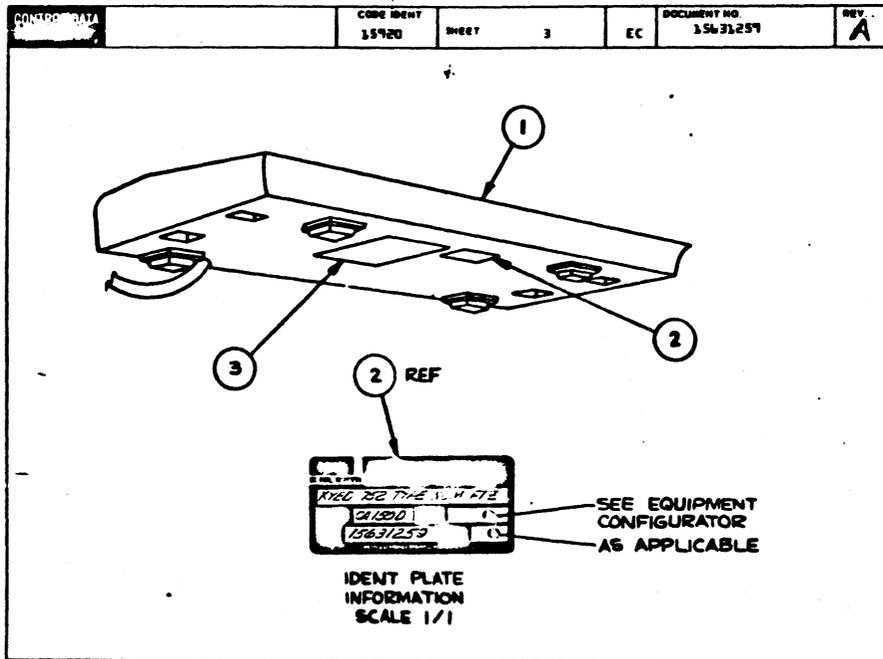

BUILD ARC 200										<b>ASSEMBLY PARTS LIST</b>										PRINT DATE	ISSUE	FILE CHANGE NO.
																				09-09-78	1	15631257
QTY	ASSEMBLY NUMBER	CP	REV.	ENG.	DESCRIPTION	EC	STATUS	STATUS DATE		ENL. DESC.		DATE		DATE		DATE						
0000	15631257	7	A		KYBD 732 TYPE NUM PTZ	N	ENG	09-09-78	09-09-78	09-09-78	09-09-78	09-09-78	09-09-78	09-09-78	09-09-78	09-09-78	09-09-78					
PROD NO	PART NUMBER	CP	QTY	U/O	PART DESCRIPTION	REV	YLD	SCA	REV	SCA	REV	SCA	REV	SCA	REV	SCA	REV					
001	01	15631259	8	1	PC KYBD ASSY 02 KEY SHIELDED		N															
002	01	15101800	9	1	PC ID PLATE, EQUIP MEDIUM VINYL		P															
003	01	10124207	1	1	PC FORM FCS LOG		D															
					0003 TOTAL LINES																	


62957400B



02210912

REV	DATE	BY	CHKD	DESCRIPTION
1				ISSUED FOR PRODUCTION
2				REVISIONS
3				
4				
5				
6				
7				
8				
9				
10				

NOTES:  
 ▲ MARK "KEY" / "SILVER" PER CDC SPEC. FOR 1508.

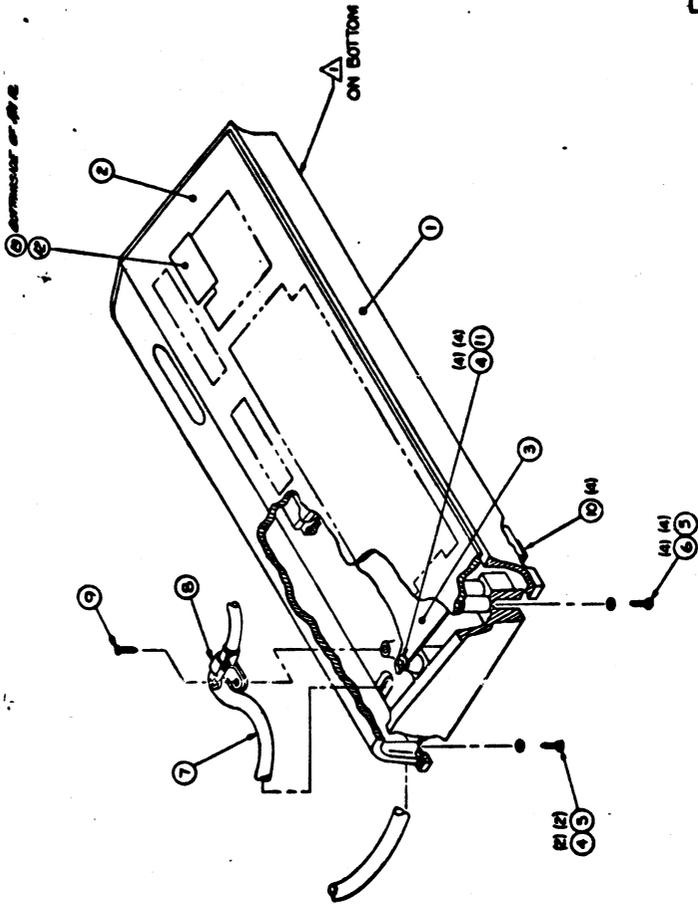

02210912

REV	DATE	BY	CHKD	DESCRIPTION
1				ISSUED FOR PRODUCTION
2				REVISIONS
3				
4				
5				
6				
7				
8				
9				
10				

KEYBOARD ASSEMBLY  
 8 KEY (SILVER)

1980 0 1508/1260

BUILD ARC 440

**ASSEMBLY PARTS LIST**

PART DATE		PAGE		PREPARED BY									
01-07-78		1		IRP/2791-80									
REV.	ASSEMBLY NUMBER	CD	REV.	QTY.	DESCRIPTION	REV.	STATUS	STATUS DATE	ENGR. DESIG.	DATE			
000	15631240	S	A	0	KYBD ASSY 82 KEY SHIELDED	N	ACC	01-07-78	CA1300	01-07-78			
PROD. NO.	U	PART NUMBER	CD	QUANTITY	U/A	PART DESCRIPTION	REV.	PLD	DOC. NO. IN	DOC. NO. OUT	S/N	REV IN	REV OUT
001	01	71491940	A	1		PC BASE, KYBD ISHIELDED*		P					
002	01	71492400	B	1		PC COVER KYBD 82 KEY		P					
003	01	51017735	A	1		PC KEYBOARD SELECTRIC		P					
004	01	00860203	7	6		PC NSCR SLP-LKS MEX 6-32X3/8		B					
005	01	10125605	B	6		PC WSHR NO.6 TYP A PLAIN STL CP		B					
006	01	00860304	B	4		PC NSCR SLP-LKS MEX 6-32X1/2		B					
007	01	61407890	7	1		PC CABLE ASSY KYBD EXI		A					
008	01	51017070	B	1		PC CLAMP, TUBE SIZE 6 (ALUM)		P					
009	01	10607000	3	1		PC SCR, TPO IND/MEX 6-16X1/2 STL		B					
010	01	51008001	1	4		PC BUMPER, RUBBER .300M SLP-BTK0		B					
011	01	00048202	B	4		PC WASHER LOCK DISHED TOOTH NO.6		B					
012	01	71492101	A	1		PC PLUG, SWITCH (PLASTIC/BLK)		P					
013	01	71492401	A	1		PC LABEL COVER SWITCH		P					
						0013 TOTAL LINES							



CONTROL DATA		CODE IDENT	SHEET	SPL	DOCUMENT NO.	REV.								
		15920	3		66290100	J								
P/NO	PART IDENTIFICATION	QUANTITY REQUIRED									UNIT OF MEAS	NOMENCLATURE OR DESCRIPTION	SPECIFICATIONS, NOTES, OR MATERIAL	
		00	01	02	03	04	05	06	07	08				09
1	51908902	1	1	1	1	1	1	1	1	1	1	SONALERT		
2	52899703	1	1	1	1	1	1	1	1	1	1	FILTER, RFI, REAR PANEL		
3	51915101	1	1	1	1	1	1	1	1	1	1	KNOB, PLAIN		
4	51777300	6	6	6	6	6	6	6	6	6	6	SUPPORT LOGIC CARD (PLASTIC)		
5	61375200	1	1	1	1	1	1	1	1	1	1	CABLE ASSY, INTENSITY CONT		
6	51907303	1	1	1	1	1	1	1	1	1	1	CRT, 12 INCH		
7	61407419	1	1	1	1	1	1	1	1	1	1	CHOKE ASSY, DISPLAY		
8	90460619	1	1	1	1	1	1	1	1	1	1	PC CARD, DISPLAY, 6BMP		
9	61407695	1	1	1	1	1	1	1	1	1	1	TRANSFORMER, HV, DISPLAY ASSY		
10	61407418	1	1	1	1	1	1	1	1	1	1	YOKE ASSY, DISPLAY		
11	61407857	1	1	1	1	1	1	1	1	1	1	CAP ASSY, CRT		
12	24512922	1	1	1	1	1	1	1	1	1	1	Fuse 1.5 Amp		
13	15330504	1	1	1	1	1	1	1	1	1	1	IC CHIP VOLT REG		
14	95637304	1	1	1	1	1	1	1	1	1	1	DIODE, VOLT REG		
15	58018602	1	1	1	1	1	1	1	1	1	1	TRANSISTOR, VOLT REG		
16														
17	90460536	1	1	1	1	1	1	1	1	1	1	PC CARD, P/S, 6AFB-D	See chart on sht 2 for Series Code effectivity 	
18	51915300	1	1	1	1	1	1	1	1	1	1	TRANSFORMER, P/S		
19	51705200	1	1	1	1	1	1	1	1	1	1	RECTIFIER, P/S		
20	95587003	1		1	1		1		1		1	CKT BRKR, 60HZ R PANEL		

CONTROL DATA		CODE IDENT	SHEET	SPL	DOCUMENT NO.	REV.								
		15920	4		66290100	J								
P/NO	PART IDENTIFICATION	QUANTITY REQUIRED									UNIT OF MEAS	NOMENCLATURE OR DESCRIPTION	SPECIFICATIONS, NOTES, OR MATERIAL	
		00	01	02	03	04	05	06	07	08				09
21	95587002		1		1		1		1		1	CKT BRKR, 50HZ, R PANEL		
22	90460534	1	1	1	1							LOGIC PC ASSY 6ABD-D		
23	90460535					1	1	1	1			LOGIC PC ASSY 6ACB-D		
24	90460536								1	1		LOGIC PC ASSY 6ABD-D		
25	90460537											LOGIC PC ASSY 6AEB-D		
26	51915400	1	1			1	1			1	1	KEYBOARD, BASIC, 67 KEY		
27	51915401			1	1				1	1		KEYBOARD, EXP, 60 KEY		
28	51917050	1	1	1	1	1	1	1	1	1	1	Magnet 1.5 Gauss		
29	51917051	1	1	1	1	1	1	1	1	1	1	Magnet 2.0 Gauss		
30	51917052	1	1	1	1	1	1	1	1	1	1	Magnet 3.0 Gauss		
31	51004063	1	1	1	1	1	1	1	1	1	OZ	Adhesive		
32														
33														
34	51777314	4	4	4	4	4	4	4	4	4	4	Sprt Ckt Bd 3/16 Nylon		
35	51908602	1	1	1	1	1	1	1	1	1	1	Thms Disc 2.5 ohm		
36	90460822	1	1	1	1	1	1	1	1	1	1	PC Card, P/S 7BK9	See chart on sht 2 for Series Code effectivity 	
37	51915301	1	1	1	1	1	1	1	1	1	1	Transformer, P/S		

CONTROL DATA			CODE IDENT		SHEET		SPL		DOCUMENT NO.		REV	
			15920		5				66290300		J	
FIND NO.	PART IDENTIFICATION	QUANTITY REQUIRED								UNIT OF MEAS	NOMENCLATURE OR DESCRIPTION	SPECIFICATIONS, NOTES, OR MATERIAL
		10	11	12	13	14	15	16				
1	51908902	1	1	1	1	1	1	1			SIGNALERT	
2	51899703	1	1	1	1	1	1	1			FILTER, RFI, REAR PANEL	
3	51915101	1	1	1	1	1	1	1			KNOB, PLAIN	
4	51777300	6	6	6	6	6	6	6			SUPPORT, LOGIC CARD (PLASTIC)	
5	61375200	1	1	1	1	1	1	1			CABLE ASSY-INTENSITY CONT	
6	51907303	1	1	1	1	1	1	1			CRT, 12 INCH	
7	61407419	1	1	1	1	1	1	1			CHOKE ASSY, DISPLAY	
8	90460619	1	1	1	1	1	1	1			PC CARD, DISPLAY, 6BND	
9	61407695	1	1	1	1	1	1	1			TRANSFORMER, HI V, DISPLAY ASSY	
10	61407416	1	1	1	1	1	1	1			YOKE ASSY, DISPLAY	
11	61407857	1	1	1	1	1	1	1			CAP ASSY, CRT	
12	24512922	1	1	1	1	1	1	1			FUSE 1.5 AMP	
13	15130504	1	1	1	1	1	1	1			IC CHIP VOLT REG	
14	95637304	3	3	3	3	3	3	3			DIODE, VOLT REG	
15	58016602	1	1	1	1	1	1	1			TRANSISTOR, VOLT REG	
16												
17	90460536	1	1	1	1	1	1	1			PC CARD, P/S, 6AFB-D	See chart on sht 2 for Series Code effectivity 
18	51915300	1	1	1	1	1	1	1			TRANSFORMER, P/S	
19	51785200	1	1	1	1	1	1	1			RECTIFIER, P/S	
20	95587003	1		1	1	1	1	1			CRT, BRKR, 60HZ, R PANEL	

CONTROL DATA			CODE IDENT		SHEET		SPL		DOCUMENT NO.		REV	
			15920		6				66290300		J	
FIND NO.	PART IDENTIFICATION	QUANTITY REQUIRED								UNIT OF MEAS	NOMENCLATURE OR DESCRIPTION	SPECIFICATIONS, NOTES, OR MATERIAL
		10	11	12	13	14	15	16				
21	95587002		1	1	1	1	1	1			CKT BRKR, 50 HZ, R PANEL	
22	90460534							1			LOGIC PC ASSY 6ABD-D	
23	90460535										LOGIC PC ASSY 6ACD-D	
24	90460536	1	1								LOGIC PC ASSY 6ADD-D	
25	90460537			1	1	1	1				LOGIC PC ASSY 6AED-D	
26	51915400			1	1						KEYBOARD, BASIC, 67 KEY	
27	51915401	1	1			1	1	1			KEYBOARD, EXP, 80 KEY	
28	51917050	1	1	1	1	1	1				Magnet 1.5 Gauss	
29	51917051	1	1	1	1	1	1				Magnet 2.0 Gauss	
30	51917052	1	1	1	1	1	1				Magnet 3.0 Gauss	
31	51004063	1	1	1	1	1	1			OZ	Adhesive	
32	61407848							1			Yoke Assy, Display	
33	90460775							1			PC Card, Display, 7APD	
34	51777314	4	4	4	4	4	4	4			SPT CKT BD 3/16" NYLON	
35	51908602	1	1	1	1	1	1	1			THMS, DISC 2.5 OHM	
36	90460822	1	1	1	1	1	1	1			PC Card, P/S 78KB	See chart on sht 2 for Series Code effectivity 
37	51915301	1	1	1	1	1	1	1			Transformer, P/S	

62957400B

DRW	V. Bagley	3/78	TITLE	SPARE PARTS LIST. TYPEWRITER KEYBOARDS			PREFIX	DOCUMENT NO.	REV				
CHDR	V. Bagley	3/78		SPL	66300736/38			A					
ENG	V. Bagley	3/78	FIRST USED ON	CA148-B	CA150-B	CA151-B	SHEET 3 of 3						
MFG	V. Bagley	3/78	CA148-B	CA150-B	CA151-B								
APPR	V. Bagley	3/78	CODE IDENT										
SHEET REVISION STATUS				REVISION RECORD									
				3	2	1A	1	REV	ECO	DESCRIPTION	DRFT	DATE	APP
				A	A	A	A	A	12-9-75	RELEASED CLASS A	/	9-7-78	MeA
NOTES:													
1. USE SPL 66300736 FOR KEYBOARD 51917735, 83-KEY. USE SPL 66300737 FOR KEYBOARD 51917736, 78-KEY. USE SPL 66300738 FOR KEYBOARD 51917737, 104-KEY.													
2. TOP LEVEL ASSY - SEE SHEET 3A													
3. EQUIPMENT CONFIGURATOR - SEE SHEET 3A.													
												DETACHED LISTS	

TITLE	SPARE PARTS LIST, TYPEWRITER KEYBOARDS	PREFIX SPL	DOCUMENT NUMBER 66300736/38	SHEET 3A	REVISION A
<b>KEYBOARD 51917735, 83-KEY</b>					
Equipment No. CA150-B					
EC 15630974					
TLA 15630975					
Equipment No. CA150-B					
EC 15631259					
TLA 15631260					
<b>KEYBOARD 51917736, 78-KEY</b>					
Equipment No. CA151-B					
EC 15630939					
TLA 15630940					
Equipment No. CA151-B					
EC 15631261					
TLA 15631262					
<b>KEYBOARD 51917737, 104-KEY</b>					
Equipment No. CA148-B					
EC 15630934					
TLA 15630935					
Equipment No. CA148-B					
EC 15631257					
TLA 15631258					





# COMMENT SHEET

MANUAL TITLE 752 Keyboard Display Terminal Hardware Maintenance Manual  
(CC555-A through CC555-F)

PUBLICATION NO. 62957400 REVISION B

**FROM:** NAME: \_\_\_\_\_  
BUSINESS ADDRESS: \_\_\_\_\_

## COMMENTS:

This form is not intended to be used as an order blank. Your evaluation of this manual will be welcomed by Control Data Corporation. Any errors, suggested additions or deletions, or general comments may be made below. Please include page number references and fill in publication revision level as shown by the last entry on the Record of Revision page at the front of the manual. Customer engineers are urged to use the TAR.

CUT ALONG LINE

PRINTED IN U.S.A.

AA3419 REV. 11/69

NO POSTAGE STAMP NECESSARY IF MAILED IN U. S. A.

FOLD ON DOTTED LINES AND STAPLE

STAPLE

STAPLE


FOLD

FOLD

FIRST CLASS  
PERMIT NO. 8241  
MINNEAPOLIS, MINN.

**BUSINESS REPLY MAIL**  
NO POSTAGE STAMP NECESSARY IF MAILED IN U.S.A.


POSTAGE WILL BE PAID BY  
**CONTROL DATA CORPORATION**  
Technical Publications Department  
2401 North Fairview Avenue  
St. Paul, Minnesota 55113

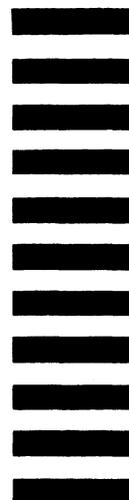

CUT ALONG LINE

FOLD

FOLD

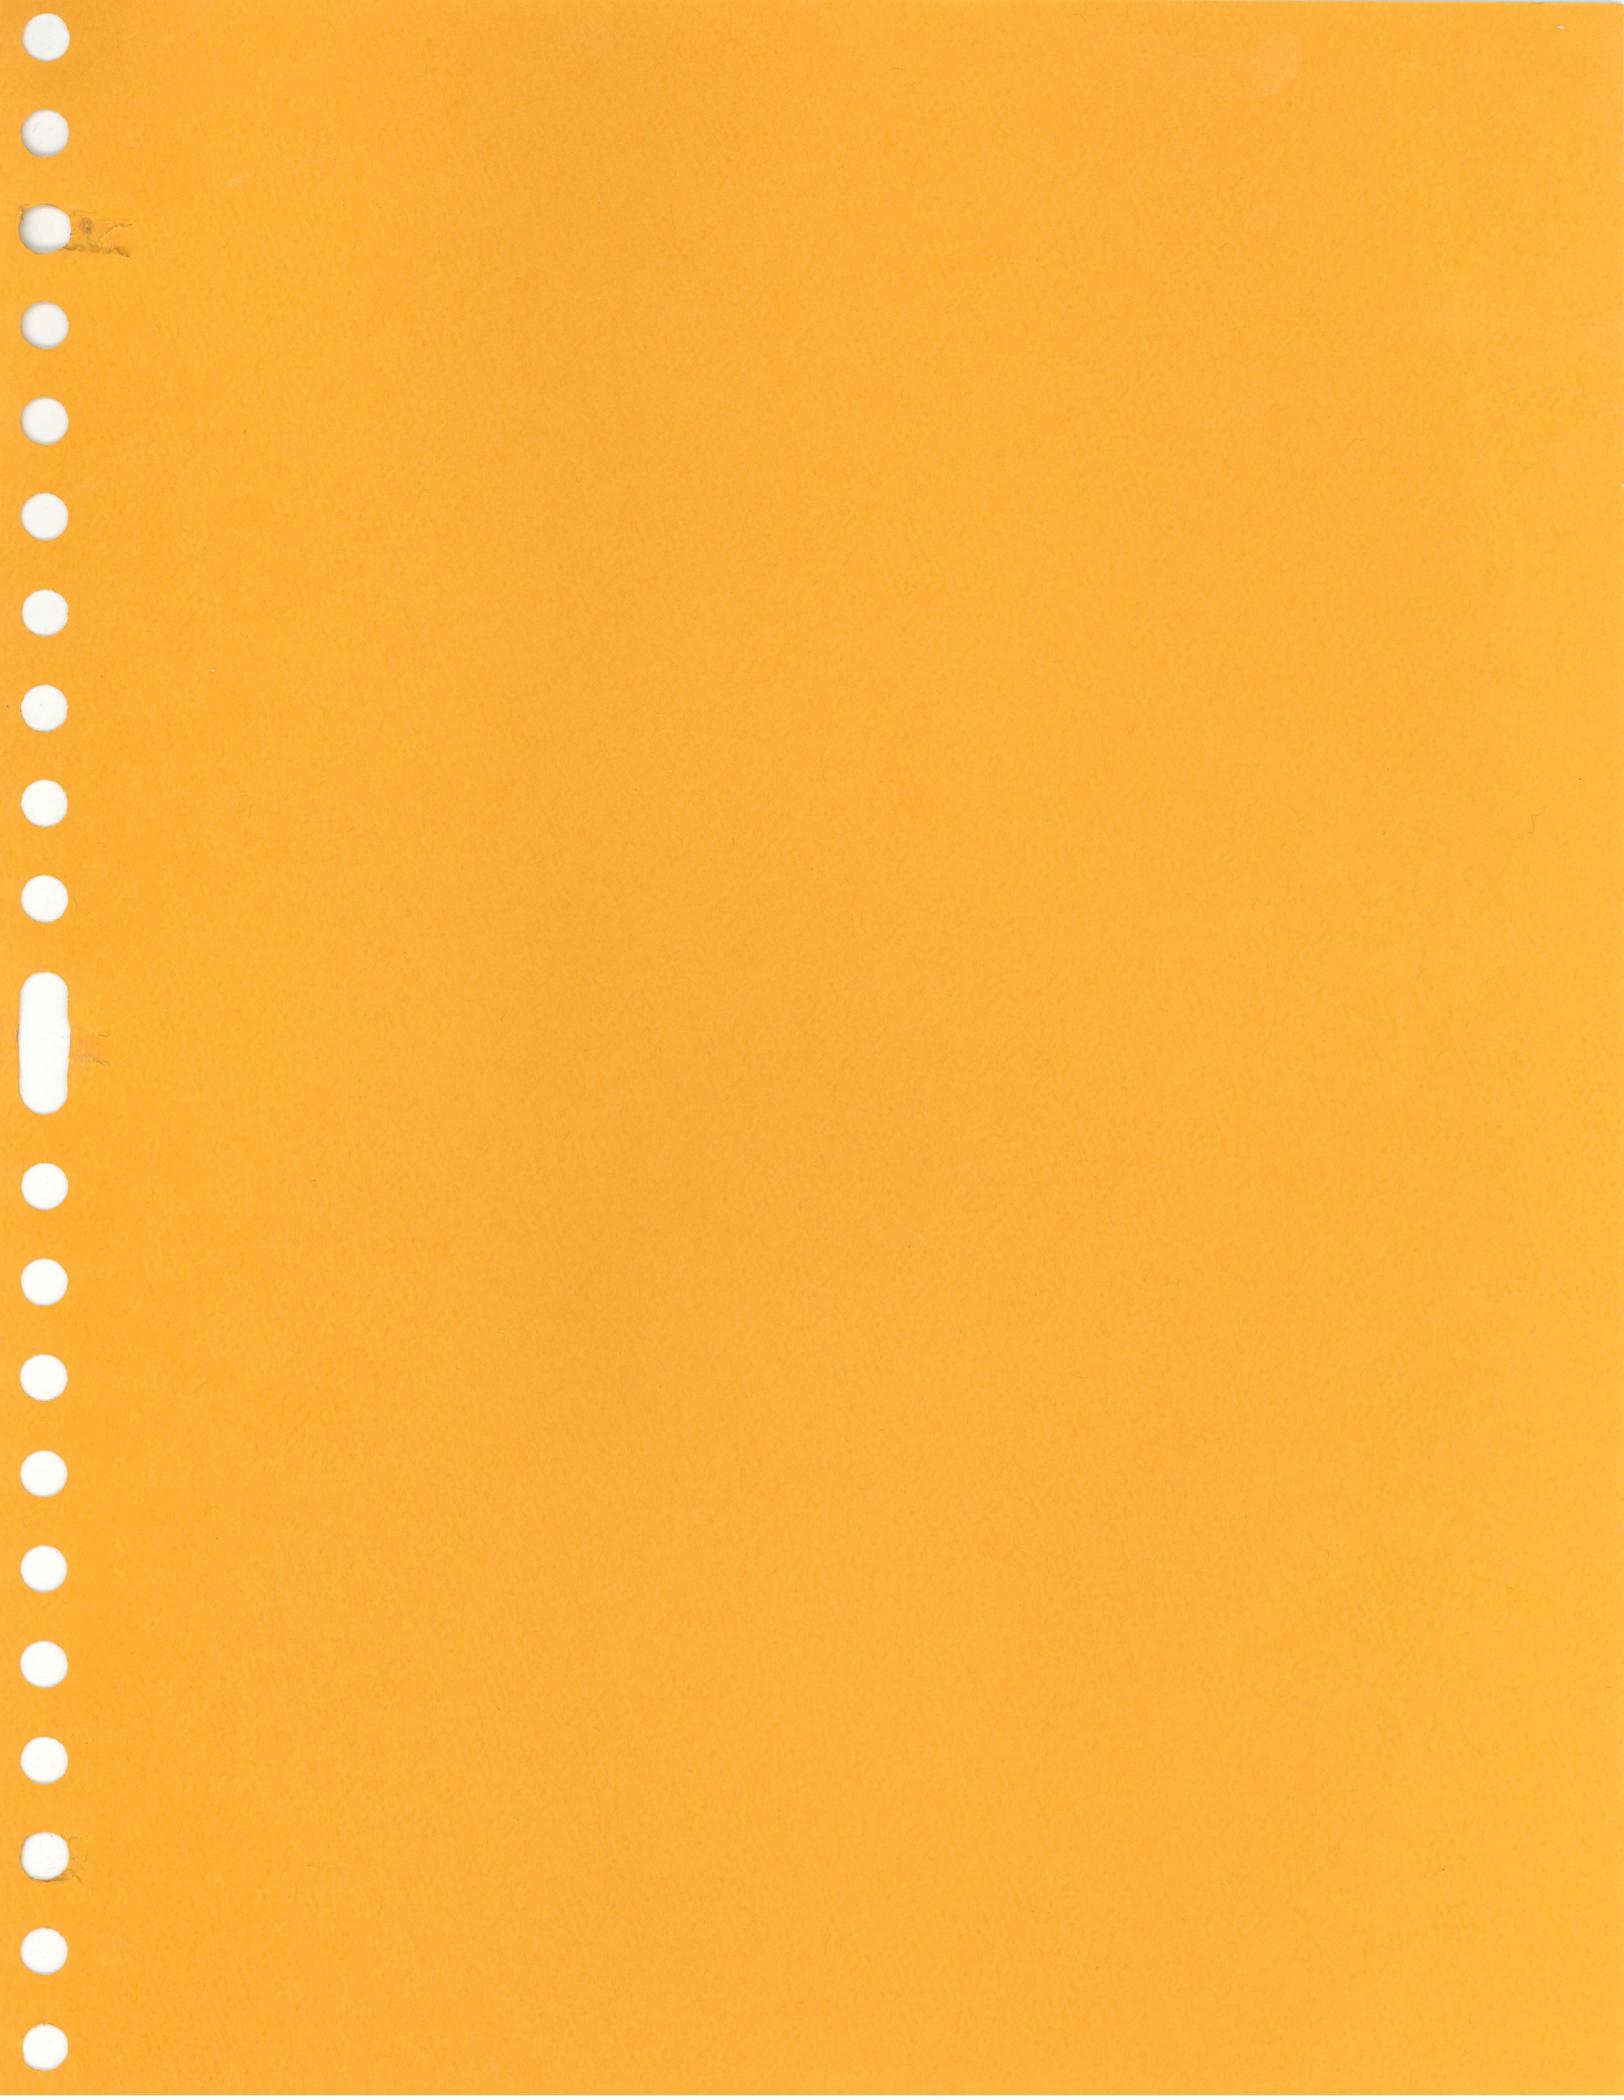

CORPORATE HEADQUARTERS, P.O. BOX 0, MINNEAPOLIS, MINN. 55440  
SALES OFFICES AND SERVICE CENTERS IN MAJOR CITIES THROUGHOUT THE WORLD

LITHO IN U.S.A.



CONTROL DATA CORPORATION